





Quick Start Guide

DF1050TW


Getting Started Commencer Empezando

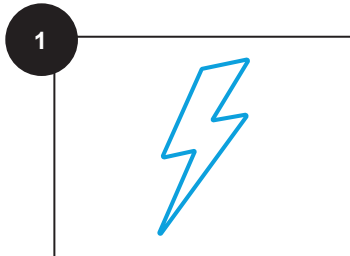

1
Connect Digital Photo Frame (DPF) to Power

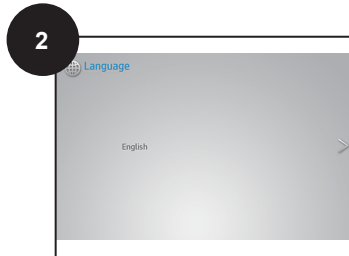


2
Startup Wizard begins:
Select Language

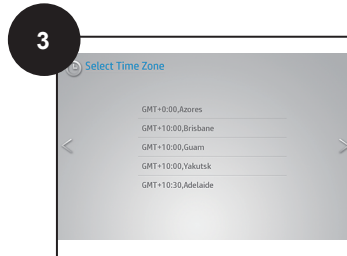

3
Select Time Zone




4a
Select Wi-Fi Network

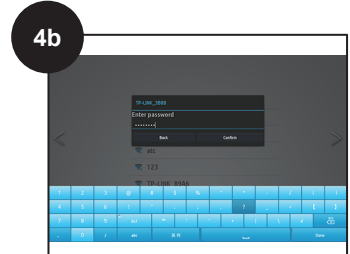


4b
(1) Enter password, (2) after 'Successful Connection' go to next screen



5a
Download 'HP Photo Frame' App via devices App store

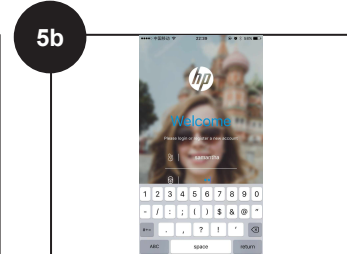


5b
Open App and register new account

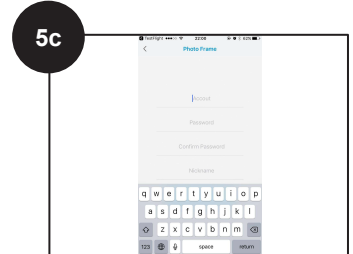


5c
Login to App. Go to next screen on DPF



6a
On App home screen tap '+ Frame' then Scan QR Code

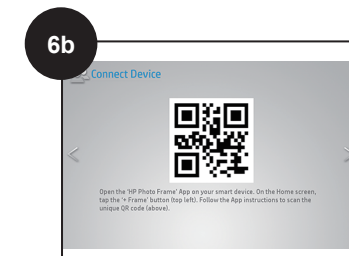


6b
Scan QR code on DPF screen using App

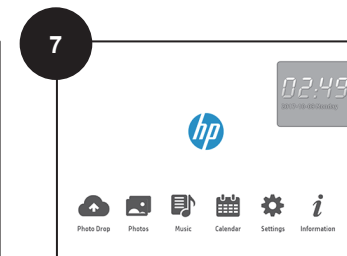

7
Go to next screen on DPF to complete Startup Wizard and enter Home Screen


Send Photos Wirelessly Envoyer des photos sans fil Enviar fotos sin cables

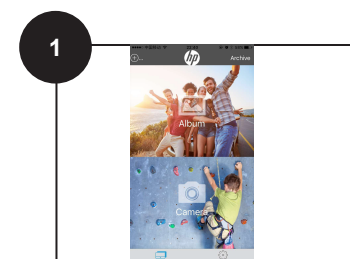

1
On App home screen tap 'Gallery'




2
Select up to 6 photos from your Gallery and tap 'Send'


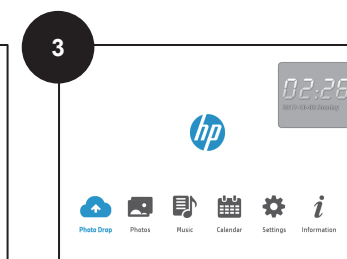


3
(1) On your DPF home screen tap on 'Photo Drop,' (2) photos sent from the App will appear here



Start a Slideshow Démarrer un diaporama Iniciar una presentación de diapositivas

-  Tap on a photo to view it full-screen
-  Tap anywhere on screen to reveal the options menu
-  Tap **'Play'** to begin Slideshow
-  Slideshow transitions according to **Options Menu > Settings** and photos within chosen folder

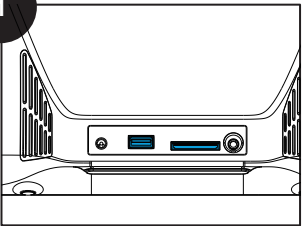
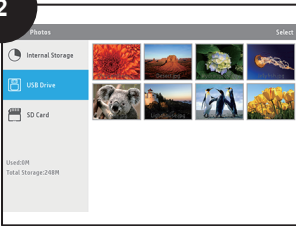
External Memory Device Photos Photos de périphérique de mémoire externe Fotos del Dispositivo de Memoria Externa

-  Insert external USB Drive / SD Card into media slots
-  (1) Go to **'Photos'**, (2) tap on device to view photos


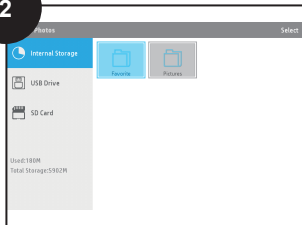
Create Desktop Calendar Créer un calendrier de bureau Crear calendario de escritorio

-  Tap on a full-screen photo to reveal options and tap **'Settings'**
-  (1) Enable **'Calendar'** by tapping on it, (2) Tap on **'Play'** to begin slideshow

Screensaver Économiseur d'écran Salvapantallas

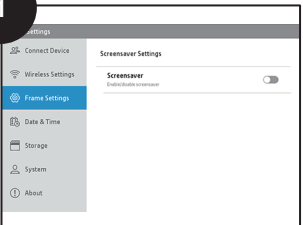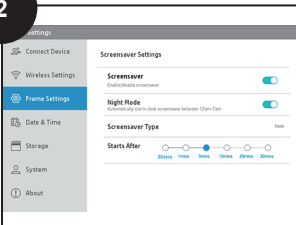-  Go to **Settings > Frame Settings > Screensavers**
-  Enable Screensaver and choose type and time that screensaver activates after

Add Favorites Ajouter des favoris Agregar favoritos

-  (1) Tap on a full-screen photo to reveal options menu, (2) tap **Favorite > Add to favorites**
-  Photo is added to favorites folder here: **Photos > Internal Storage > Favorites**

CUSTOMER SUPPORT

For support visit: www.hp.com/support
Toll-Free Number: 1-866-886-6878
Email: hpsupport@ideausa.com

*Your frame style and features may vary slightly from those pictured here.
[QSG_DF1050TW_001]*