





QWERTY Keyboard



Eco-Friendly Attributes



Update Facebook® Status



Add a Shortcut



Add Favorite Media



Add Favorite Contacts



Take a Picture/ Record a Video



LGusa.com/extravert



- 1. Proximity Sensor
- 2. Lock Key
- 3. Earpiece
- 4. Touch Screen
- 5. Back/Voice Commands/ Voice Memo Key
- 6. Send Key
- 7. Microphone
- 8. Power/End Key
- 9. 3.5mm Headset Jack
- 10. Camera Lens
- 11. Speaker

- 12. Volume Keys
- 13. Charging/Data Port
- 14. Camera/Video Key



- 5. Space/Social Networks Key
- 10. Clear & Back Key

LG Extravert<sup>™</sup> has several eco-friendly attributes. Its battery cell does not contain lead, cadmium, or mercury, and the battery cover is composed of 30% recycled post-consumer plastic.

In addition, the gift box is made of 76% postconsumer recycled paper; the in-box collateral is made of 60% post-consumer recycled paper; and both are printed with soy ink.

LG is also reducing paper consumption by forgoing the traditional printed manual in favor of a downloadable digital manual.



\*Phone hardware and packaging include recycled materials.

Extravert's large virtual dialing pad makes dialing phone numbers quick and easy.

- 1. From standby mode, touch 💽.
- 2. Dial the desired number and press \_\_\_\_\_, or touch Contacts > 🔍 (next to the desired contact).

| Ƴ 1XIIII     | ÷ (          | IIII) 6:26pm  |
|--------------|--------------|---------------|
| 🔁 Ann Jo     |              |               |
| 9995         | ones         |               |
|              |              |               |
| 1 2          | <b>2</b> ABC | 3 DEF         |
| <b>4</b> GHI | 5 JKL        | <b>6</b> MNO  |
| 7 PQRS       | <b>8</b> TUV | 9 wxyz        |
| * +          | 0            | # 💷           |
| CALL         |              | ×             |
| More         | Save         | Speaker<br>On |



When you need to communicate quickly and privately, send a text message using Extravert's QWERTY keyboard.

- 1. From standby mode and with the keyboard open, press
- 2. Enter a name, phone number, or email address, or touch **1** to access your contact list.
- 3. Touch Add Text and enter a message.
- 4. Touch Done.
- 5. You can add media to your message by touching **Add Attachment**. When you're ready, touch **Send**.



| Ψ1X∭    | ¢      | 6:26pm |
|---------|--------|--------|
| Picture |        | <br>   |
| Video   |        |        |
| Sound   |        |        |
| _       |        | _      |
|         | Cancel |        |

Your favorite social networks are just a touch away with Extravert. Check and update your Facebook, MySpace™, and Twitter® accounts right from your phone!

- 1. From standby mode and with the keyboard open, press (space).
- 2. Touch Facebook Status.
- 3. Enter a status update and touch **Done**.
- 4. Touch Send.
- 5. You will receive a text message with instructions on how to link your phone to your Facebook account for future updates. Touch **View Now**.





Extravert lets you add up to 10 favorite contacts for quick and easy calling and messaging.

- 1. From standby mode, touch 😭.
- 2. Touch +.
- 3. Touch the name of a contact you'd like to add as a Favorite. Touch additional names to add them.
- 4. When you're finished adding contacts, touch **Back**.
- 5. To access a Favorite, touch 술
- 6. Touch a contact and select an option (call, message, or view contact information).





Customize your Extravert's home screen with handy apps and widgets, and add up to 15 convenient shortcuts to the Shortcuts bar!

- 1. From standby mode, touch 😭
- 2. Touch Shortcuts.
- 3. Press and drag a widget to the home screen.
- 4. You can add or remove shortcuts in the bar by scrolling to the right and touching \*-.
- 5. Touch a shortcut to select it or unselect it.
- 6. Touch Set.
- 7. To remove a shortcut from the home screen, press and hold it and then drag it to a.





Keep your favorite photos, videos, and music files close at hand on Extravert's Favorite Media home screen. You can add up to 12 media files!

- 1. From standby mode, swipe left to access the Favorite Media home screen.
- 2. Select a file type from the bottom of the screen.
- 3. Touch a file to select it. When you're finished, touch **Done**.
- Touch a file to view or listen to it. To send the file to a contact as a media message, touch and then drag a contact to the file.





Capture every moment with Extravert's 2 megapixel camera. Capture up to 60 minutes of video with the camcorder.

## Take a Picture

- 1. From standby mode, press
- 2. Rotate the phone to a horizontal position for a more traditional camera feel.
- 3. Touch to adjust the camera settings. When you're ready, press or touch .
- From here you may delete the photo, save it to My Pictures, set it as wallpaper or a contact ID, or send it to a friend.

## Record a Video

- 1. From standby mode, press and hold
- 2. Rotate the phone to a horizontal position.
- 3. Touch to adjust the camcorder settings. When you're ready, press
- 4. Press again or touch **b** to stop recording.





OPTIONAL ACCESSORIES



All materials in this guide including, without limitation, the design, the text, and any marks are the property of LG Electronics, inc. Copyright 92 COII LG Electronics, Inc. ALL RIGHT SECSERVE Literature<sup>11</sup> is a trademark of Varizon Wireless. The Bluetooth<sup>11</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, inc. and any use of such marks by LG Electronics Molesidormin, US A, Inc. is under license Other trademarks and herein are sold separately. All features, functionality, and other product specifications are subject to change.

