


Press and hold the MODE button for at least 10 seconds but not more than 15 seconds. The SERVICE icon extinguishes when the button is released. If the MODE button is released without waiting 10 seconds, the SERVICE icon will not extinguish and the service interval counter will not be reset.

N.B.

THE PROCEDURE TO RESET THE SERVICE ICON MAY ONLY BE PERFORMED WHEN THE VEHICLE IS STATIONARY (SPEED = 0 Km/h).

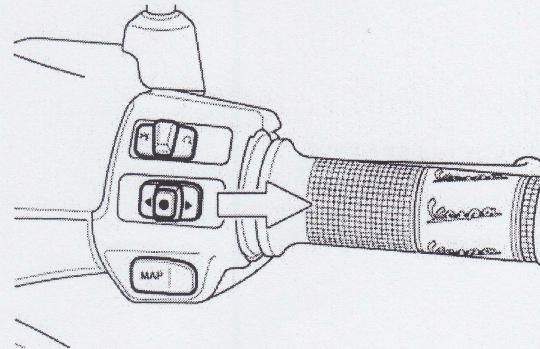

Maintenance chart

SCHEDULED MAINTENANCE TABLE

I: CHECK AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY.

C: CLEAN, R: REPLACE, A: ADJUST, L: LUBRICATE

(1) Diagnosis and system update: VMS (Vehicle Management System); Instrument panel; VMP (Vespa Multimedia Platform).

km x 1.000 (mi x 1,000)	1 (0.6)	5 (3.1)	10 (6.2)	15 (9.3)	20 (12.4)	25 (15.5)	30 (18.6)	EVERY 12 MONTH S	EVERY 24 MONTH S
Safety fasteners	I		I		I		I		
Centre stand		L	L	L	L	L	L	L	L
Accelerator control	I		I		I		I		
Traction battery diagnosis / update	I	I	I	I	I	I	I	I	I
Diagnosis / update with tool (1)	I	I	I	I	I	I	I	I	I
Electrical system and ancillary battery	I	I	I	I	I	I	I		
Braking system	I	I	I	I	I	I	I	I	I
Braking system - Adjusting the rear drum brake	A	A	A	A	A	A	A	A	A
Brake fluid	I	I	I	I	I	I	I	I	R
Hub oil	R		I		I		I	I	I
Headlight direction adjustment			I		I		I		
Brake pads	I	I	I	I	I	I	I	I	I
Tyre pressure and wear	I	I	I	I	I	I	I	I	I
Vehicle road test	I	I	I	I	I	I	I	I	I
Suspensions			I		I		I	I	I
Steering	A		I		I		I	I	I
Transmission			L		L		L	I	I
Labour time (minutes)	70	50	60	50	60	50	60	50	50

N.B.

AT EACH SCHEDULED MAINTENANCE MUST BE VERIFIED WITH THE DIAGNOSTIC TOOL IF THERE ARE ERRORS AND THE IF THE PARAMETERS ARE CORRECT. ENSURE THAT THE VEHICLE CALIBRATION IS UP TO DATE AFTER UPDATING THE DIAGNOSTIC TOOL.

CAUTION

AFTER THE PROVIDED MAINTENANCE PROGRAM IS INDICATED TO PROCEED WITH THE MAINTENANCE OF THE VEHICLE STARTING FROM THE SERVICE OF 5,000 Km (3,106 mi) OR 5 MONTHS.

Recommended products

Piaggio Group recommends the use of products from its Castrol official partner for the scheduled maintenance of its vehicles.

Only use lubricants and fluids which meet or exceed the performance characteristics specified.

This also applies when topping up only.



TABLE OF RECOMMENDED PRODUCTS

Product	Description	Specifications
Transmission oil 80W-90	Lubricant for gearboxes and transmissions.	SAE 80W-90; API GL-4
DOT 4 brake fluid	Synthetic brake fluid.	SAE J 1703; FMVSS 116; ISO 4925; CUNA NC 956 DOT4
Lithium-based grease	Lithium-based grease, suitable for various uses.	Yellow grease ISO L-X-BCHA 3 - DIN 51825 K3K -20
Water repellent spray grease	Water repellent pouring calcium spray grease.	R.I.D./A.D.R. 2 10°b) 2 R.I.Na. 2.42 - I.A.T.A. 2 - I.M.D.G. class 2 UN 1950 Page 9022 EM 25-89

Hub oil

Check

- Check the hub oil level with the following procedure:

- park the vehicle on level ground and place it on its stand;
- unscrew and remove the oil dipstick, wipe it with a clean cloth and then fit it back into place, tightening fully;

