


# MITSUBISHI

A1SD75M1/M2/M3, AD75M1/M2/M3 Positioning Module

User's Manual

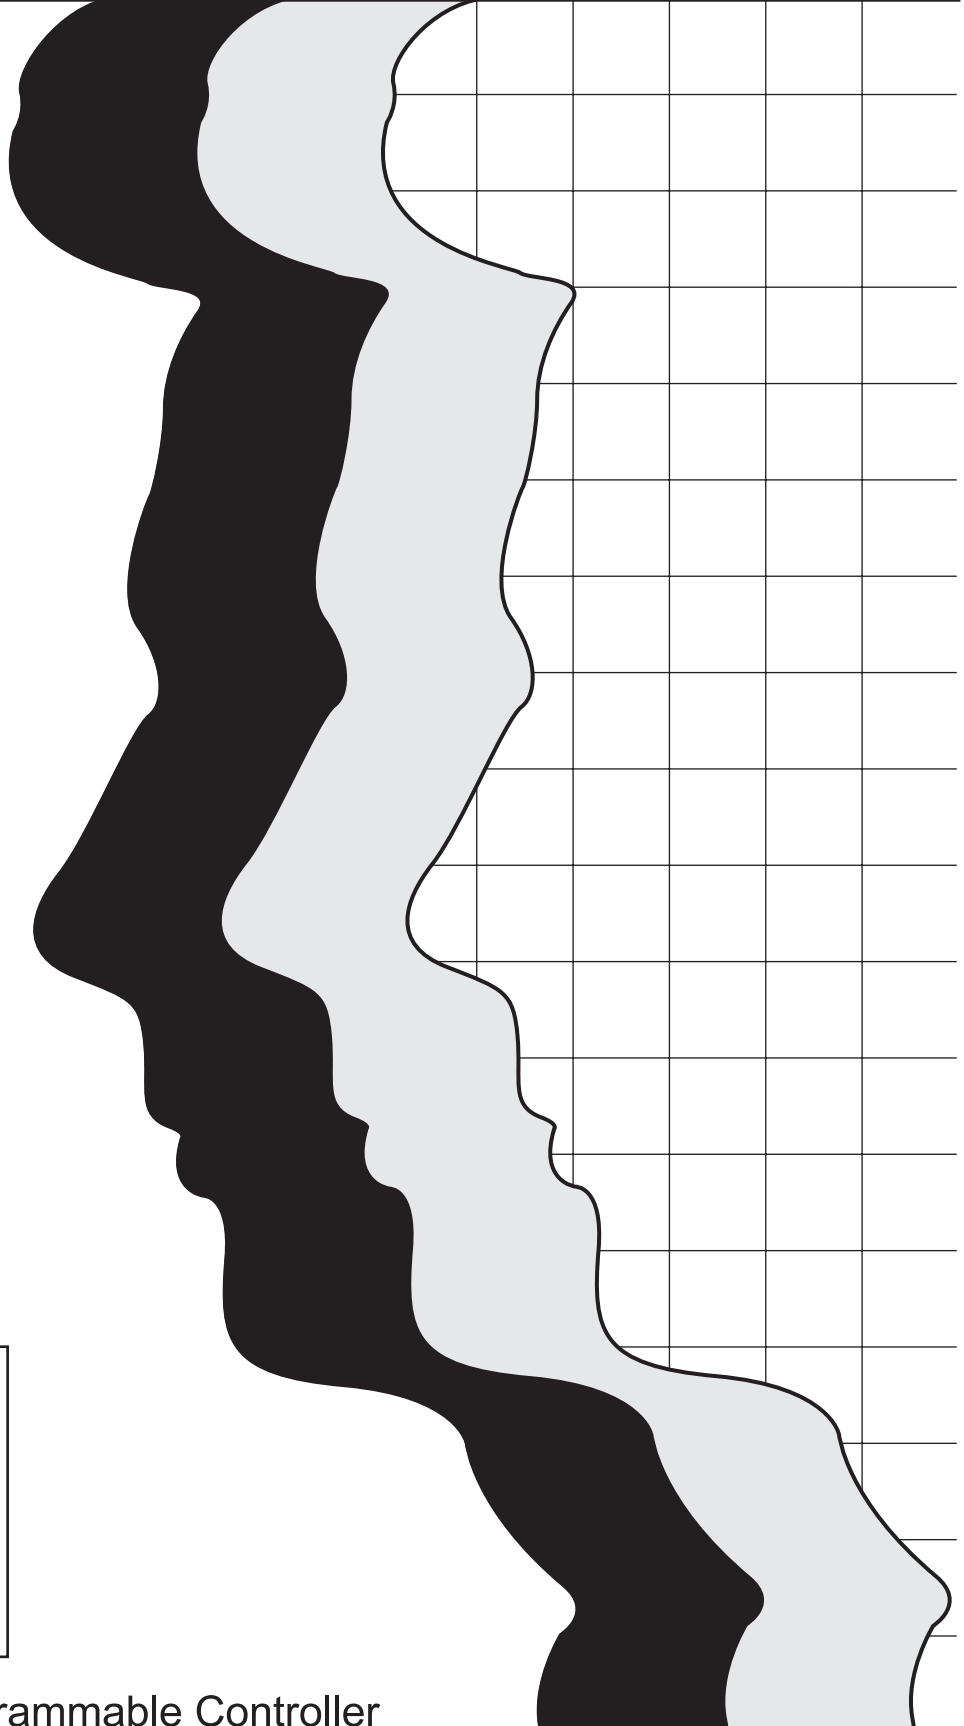

Mitsubishi Programmable Controller



## ● SAFETY PRECAUTIONS ●


(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

The precautions given in this manual are concerned with this product only. For the safety precautions of the programmable controller system, refer to the user's manual for the CPU module User's Manual.



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "**⚠CAUTION**" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

### [Design Precautions]

#### **⚠ WARNING**

- Provide a safety circuit outside the programmable controller so that the entire system will operate safely even when an external power supply error or programmable controller fault occurs.  
Failure to observe this could lead to accidents for incorrect outputs or malfunctioning.
  - (1) Configure an emergency stop circuit and interlock circuit such as a positioning upper limit/lower limit to prevent mechanical damage outside the programmable controller.
  - (2) The machine zero point return operation is controlled by the zero point return direction and zero point return speed data. Deceleration starts when the near-point dog turns ON. Thus, if the zero point return direction is incorrectly set, deceleration will not start and the machine will continue to travel. Configure an interlock circuit to prevent mechanical damage outside the programmable controller.
  - (3) When the module detects an error, normally deceleration stop or sudden stop will take place according to the parameter stop group settings.  
Set the parameters to the positioning system specifications.  
Make sure that the zero point return parameter and positioning data are within the parameter setting values.

## [Design Precautions]

### CAUTION

- Do not bundle or adjacently lay the control wire or communication cable with the main circuit or power wire.  
Separate these by 100mm or more.  
Failure to observe this could lead to malfunctioning caused by noise.

## [Mounting Precautions]

### CAUTION

- Use the programmable controller in an environment that meets the general specifications in the user's manual for the CPU module used.  
Using the programmable controller outside the general specification range environment could lead to electric shocks, fires, malfunctioning, product damage or deterioration.
- Always securely insert the module latches at the bottom of the module into the fixing holes on the base unit. (Always screw the AnS Series module onto the base unit with the specified torque.)  
Improper mounting of the module could lead to malfunctioning, faults or dropping.
- Securely connect the external device connection connector, SSCNET connection connector and peripheral device connection connector into the module connector until a click is heard.  
Improper connection could lead to a connection fault, and to incorrect inputs and outputs.
- When not connecting the external device, always install a cover on the connector section.  
Failure to observe this could lead to malfunctioning.

## [Wiring Precautions]

### WARNING

- Always confirm the terminal layout before connecting the wires to the module.
- Make sure that foreign matter such as cutting chips and wire scraps does not enter the module.  
Failure to observe this could lead to fires, faults or malfunctioning.

## [Startup/Maintenance Precautions]

### WARNING

- Switch off all phases of the externally supplied power used in the system before cleaning or tightening the screws.  
Failure to turn all phases OFF could lead to electric shocks.

## [Startup/Maintenance Precautions]

### CAUTION

- Never disassemble or modify the module.  
Failure to observe this could lead to trouble, malfunctioning, injuries or fires.
- Switch off all phases of the externally supplied power used in the system before installing or removing the module.  
Failure to turn all phases OFF could lead to module trouble or malfunctioning.
- Before starting test operation, set the parameter speed limit value to the slowest value, and make sure that operation can be stopped immediately if a hazardous state occurs.
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the module.  
Failure to do so may cause a failure or malfunctions of the module.

## [Precautions for use]

### CAUTION

- Note that when the reference axis speed is designated for interpolation operation, the speed of the partner axis (2nd axis) may be larger than the set speed (larger than the speed limit value).

## [Disposal Precautions]

### CAUTION

- When disposing of the product, handle it as industrial waste.

## • CONDITIONS OF USE FOR THE PRODUCT •

- (1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;
- i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
  - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.

- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.

("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi representative in your region.

REVISIONS

\* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Feb., 1997	IB (NA)-66715-A	Initial print
Feb., 1998	IB (NA)-66715-B	Complete review
Mar., 1999	IB (NA)-66715-C	<p><b>Additional Function</b></p> <p>Section 4.28 (Parameter Initialization), Section 4.29 (Adding Servo Monitor Items), Section 4.3.3(5) (Adjacent passing mode of interpolation operation during locus control), Section 4.6.2 (Restart when servo OFF changes to ON)</p> <p><b>Partial correction addition</b></p> <p>Chapter 1, Section 2.2, Section 4.1, Section 4.2.1, Section 4.2.9, Fig. 4.10, Section 4.4.2, Section 4.7.2, Section 4.7.4, Section 4.12.1, Section 4.13, Chapter 5, Section 5.1, Section 5.5, Section 5.5.2, Section 8.2.4, Section 8.2.7, Section 8.2.8, Section 8.2.9, Section 8.3.2 (Buffer memory: 873, 973, 1073), Section 8.4, Section 10.1, Section 12.2.2, Section 18.1.1, Appendix 2.2</p> <p><b>Additional Section</b></p> <p>Section 1.5 (Section 1.5 was altered to Section 1.6 and Section 1.6 to Section 1.7)</p>
Oct., 2003	IB (NA)-66715-D	Complete review
Feb., 2004	IB (NA)-66715-E	<p><b>Partial correction addition</b></p> <p>Section 5.6.2, Section 7.1.2, Section 14.1, Section 14.2.1, Appendix 7</p>
Aug., 2004	IB (NA)-66715-F	<p><b>Partial correction addition</b></p> <p>SAFETY INSTRUCTION, Section 4.3.1, Section 4.4.2, Section 5.6.2, Section 5.7.2, Section 8.2.6, Section 13.4, Section 14.2.1, Appendix 2.2, Appendix 7</p>
Jun., 2005	IB(NA)-66715-G	<p><b>Partial correction addition</b></p> <p>Section 5.1.2, Section 5.5, Section 5.6.2, Section 6.1, Section 6.5.6, Section 8.1.1, Section 8.2.5, Section 8.2.6, Section 8.3.1, Section 8.4, Section 9.1.2, Section 9.1.5, Section 9.2.6, Section 9.2.10, Section 10.3.9, Section 11.3.1, Section 12.2.1. Section 12.4.3, Section 12.4.4, Section 12.5.2, Section 12.7.1, Section 12.7.5, Section 14.1, Section 14.2.1</p>
Jul., 2006	IB(NA)-66715-H	<p><b>Partial correction addition</b></p> <p>Section 12.5.2, INDEX</p>

\* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Sep., 2007	IB(NA)-66715-I	<p data-bbox="639 302 847 331"><b>Partial correction</b></p> <p data-bbox="671 349 1390 524">Section 5.1.2, Section 5.6.1, Section 5.7.1, Section 6.5.3, Section 6.5.5, Section 9.1.2, Section 9.2.9, Section 9.2.10, Section 10.3.2, Section 10.5.1, Section 12.5.1, Section 12.5.2, Section 12.7.1., Section 12.7.2, Section 12.7.7, Section 14.3.2, Section 14.3.3, Section 14.3.4, Section 14.3.5, Section 14.3.6</p>
Sep., 2011	IB(NA)-66715-J	<p data-bbox="639 546 804 575"><b>New addition</b></p> <p data-bbox="671 595 1203 624">CONDITIONS OF USE FOR THE PRODUCT</p> <p data-bbox="639 642 847 672"><b>Partial correction</b></p> <p data-bbox="671 692 1385 1236">SAFETY PRECAUTIONS, INTRODUCTION, CONTENTS, ABOUT MANUALS, PRODUCT SPECIFICATIONS AND HANDLING, Section 1.2.1, Section 2.4.6, Section 3.1, Section 3.2, Section 3.5.1, Section 3.5.2, Section 3.5.4, Section 4.2.1, Section 4.3.1, Section 4.3.2, Section 4.5.1, Section 5.1.1, Section 5.2.1, Section 5.2.3, Section 5.2.7, Section 5.3, Section 5.5, Section 5.6.2, Section 6.2, Section 8.4, Section 9.1.2, Section 9.1.4, Section 9.1.5, Section 9.2.7, Section 9.2.9, Section 10.1.1, Section 10.1.2, Section 10.3.2, Section 10.3.3, Section 10.3.4, Section 10.3.5, Section 10.3.6, Section 10.3.7, Section 10.3.8, Section 10.4.1, Section 10.4.2, Section 10.5.2, Section 12.3.2, Section 12.3.3, Section 12.4.3, Section 12.4.5, Section 12.5.1, Section 12.5.3, Section 12.7.1, Section 14.1, Section 14.3, APPENDICES, Appendix 2.2, WARRANTY</p>

Japanese Manual Version SH-3607-O

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.



## INTRODUCTION

Thank you for purchasing the Mitsubishi general-purpose programmable controller MELSEC-A Series. Always read through this manual, and fully comprehend the functions and performance of the A Series programmable controller before starting use to ensure correct usage of this product.

When applying the program examples introduced in this manual to an actual system, ensure the applicability and confirm that they will not cause system control problems.

## CONTENTS

SAFETY INSTRUCTIONS.....	A-1
CONDITIONS OF USE FOR THE PRODUCT .....	A-4
REVISIONS .....	A-4
INTRODUCTION.....	A-6
CONTENTS.....	A-6
MANUALS .....	A-14
COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES .....	A-14
USING THIS MANUALS (1) .....	A-15
USING THIS MANUALS (2) .....	A-16
USING THIS MANUALS (3) .....	A-17
GENERIC TERMS AND ABBREVIATIONS .....	A-18
ENCLOSED PARTS .....	A-19

## SECTION 1 PRODUCT SPECIFICATIONS AND HANDLING

### 1. PRODUCT OUTLINE

1-1 to 1-20

1.1 Positioning control.....	1-2
1.1.1 Features of AD75 .....	1-2
1.1.2 Purpose and applications of positioning control.....	1-6
1.1.3 Mechanism of positioning control .....	1-8
1.1.4 Outline design of positioning system.....	1-10
1.1.5 Communicating signals between AD75 and each module .....	1-12
1.2 Flow of system operation .....	1-14
1.2.1 Flow of all processes.....	1-14
1.2.2 Outline of starting .....	1-16
1.2.3 Outline of stopping .....	1-18
1.2.4 Outline for restarting.....	1-19

### 2. SYSTEM CONFIGURATION

2-1 to 2-10

2.1 General image of system.....	2-2
2.2 List of configuration devices .....	2-4
2.3 Applicable system .....	2-6
2.4 Precautions for configuring system .....	2-7
2.4.1 Precautions for mounting base unit.....	2-7
2.4.2 Precautions according to module version .....	2-7
2.4.3 Precautions for using 3-axis module .....	2-8
2.4.4 Precautions for configuring absolute position detection system .....	2-8
2.4.5 Precautions for machine zero point return control in absolute position detection system .....	2-8
2.4.6 Precautions for using servo amplifier MR-J2-03B5 .....	2-9

2.4.7 Precautions for using servo amplifier MR-J2S-B .....	2-9
--	-----

<b>3. SPECIFICATIONS AND FUNCTIONS</b>	<b>3-1 to 3-20</b>
--	--------------------

3.1 General specifications .....	3-2
3.2 Performance specifications .....	3-3
3.3 List of functions .....	3-4
3.3.1 AD75 control functions .....	3-4
3.3.2 AD75 main functions .....	3-6
3.3.3 AD75 auxiliary functions and common functions .....	3-8
3.3.4 Combination of AD75 main functions and auxiliary functions .....	3-10
3.4 Specifications of input/output signals with programmable controller CPU .....	3-12
3.4.1 List of input/output signals with programmable controller CPU .....	3-12
3.4.2 Details of input signals (AD75 → Programmable controller CPU) .....	3-13
3.4.3 Details of output signals (Programmable controller CPU → AD75) .....	3-15
3.5 Specifications of interfaces with external devices .....	3-16
3.5.1 Electrical specifications of input signals .....	3-16
3.5.2 Signal layout for external device connection connector .....	3-17
3.5.3 List of input signal details .....	3-18
3.5.4 Interface internal circuit .....	3-19

<b>4. INSTALLATION, WIRING AND MAINTENANCE OF THE PRODUCT</b>	<b>4-1 to 4-20</b>
---	--------------------

4.1 Outline of installation, wiring and maintenance .....	4-2
4.1.1 Installation, wiring and maintenance procedures .....	4-2
4.1.2 Names of each part .....	4-3
4.1.3 Handling precautions .....	4-5
4.2 Installation .....	4-7
4.2.1 Precautions for installation .....	4-7
4.3 Wiring .....	4-8
4.3.1 Precautions for wiring .....	4-8
4.3.2 Wiring the external device connection connector pins .....	4-12
4.4 Confirming the installation and wiring .....	4-16
4.4.1 Items to confirm when installation and wiring are completed .....	4-16
4.4.2 Single module test .....	4-17
4.5 Maintenance .....	4-20
4.5.1 Precautions for maintenance .....	4-20
4.5.2 Disposal instructions .....	4-20

<b>5. DATA USED FOR POSITIONING CONTROL</b>	<b>5-1 to 5-184</b>
---	---------------------

5.1 Types of data .....	5-2
5.1.1 Parameters and data required for control .....	5-2
5.1.2 Setting items for positioning parameters .....	5-5
5.1.3 Setting items for zero point return parameters .....	5-7
5.1.4 Setting items for servo parameters .....	5-8
5.1.5 Setting items for positioning data .....	5-10
5.1.6 Setting items for start block data .....	5-12
5.1.7 Setting items for condition data .....	5-13

5.1.8 Types and roles of monitor data .....	5-14
5.1.9 Types and roles of control data .....	5-18
5.2 List of parameters .....	5-22
5.2.1 Basic parameters 1 .....	5-22
5.2.2 Basic parameters 2 .....	5-26
5.2.3 Detailed parameters 1 .....	5-28
5.2.4 Detailed parameters 2 .....	5-36
5.2.5 Zero point return basic parameters .....	5-45
5.2.6 Zero point return detailed parameters .....	5-52
5.2.7 Servo parameters for MR-H-B (MR-H-BN) .....	5-56
5.2.8 Servo parameters for MR-J-B .....	5-66
5.2.9 Servo parameters for MR-J2-B .....	5-76
5.2.10 Servo parameters for MR-J2S-B .....	5-86
5.2.11 Servo parameters for MR-J2-03B5 .....	5-102
5.3 List of positioning data .....	5-110
5.4 List of start block data .....	5-125
5.5 List of condition data .....	5-129
5.6 List of monitor data .....	5-134
5.6.1 System monitor data .....	5-134
5.6.2 Axis monitor data .....	5-144
5.7 List of control data .....	5-166
5.7.1 System control data .....	5-166
5.7.2 Axis control data .....	5-172

<b>6. SEQUENCE PROGRAM USED FOR POSITIONING CONTROL</b>	<b>6-1 to 6-38</b>
---	--------------------

6.1 Precautions for creating program .....	6-2
6.2 List of devices used .....	6-4
6.3 Creating a program .....	6-8
6.3.1 General configuration of program .....	6-8
6.3.2 Positioning control operation program .....	6-9
6.4 Positioning program examples .....	6-12
6.5 Program details .....	6-21
6.5.1 Initialization program .....	6-21
6.5.2 Start details setting program .....	6-22
6.5.3 Start program .....	6-23
6.5.4 Continuous operation interrupt program .....	6-31
6.5.5 Restart program .....	6-33
6.5.6 Stop program .....	6-36

<b>7. MEMORY CONFIGURATION AND DATA PROCESS</b>	<b>7-1 to 7-20</b>
---	--------------------

7.1 Configuration and roles of AD75 memory .....	7-2
7.1.1 Configuration and roles of AD75 memory .....	7-2
7.1.2 Buffer memory area configuration .....	7-5
7.2 Data transmission process .....	7-6

## SECTION 2 CONTROL DETAILS AND SETTING

### 8. ZERO POINT RETURN CONTROL 8-1 to 8-24

8.1 Outline of zero point return control .....	8-2
8.1.1 Two types of zero point return control .....	8-2
8.2 Machine zero point return .....	8-4
8.2.1 Outline of the machine zero point return operation .....	8-4
8.2.2 Machine zero point return method .....	8-5
8.2.3 Zero point return method (1): Near-point dog method .....	8-7
8.2.4 Zero point return method (2): Near-point dog method 2) .....	8-9
8.2.5 Zero point return method (3): Count method 1) .....	8-11
8.2.6 Zero point return method (4): Count method 2) .....	8-14
8.2.7 Zero point return method (5): Count method 3) .....	8-16
8.2.8 Zero point return method (6): Data setting method .....	8-18
8.3 High-speed zero point return .....	8-19
8.3.1 Outline of the high-speed zero point return operation .....	8-19
8.4 Positioning to the zero point .....	8-21

### 9. MAIN POSITIONING CONTROL 9-1 to 9-64

9.1 Outline of main positioning controls.....	9-2
9.1.1 Data required for main positioning control.....	9-3
9.1.2 Operation patterns of main positioning controls.....	9-4
9.1.3 Designating the positioning address.....	9-13
9.1.4 Confirming the current value.....	9-14
9.1.5 Control unit "degree" handling .....	9-16
9.1.6 Interpolation control.....	9-19
9.2 Setting the positioning data .....	9-22
9.2.1 Relation between each control and positioning data .....	9-22
9.2.2 1-axis linear control .....	9-23
9.2.3 2-axis linear interpolation control .....	9-25
9.2.4 1-axis fixed-dimension feed control .....	9-29
9.2.5 2-axis fixed-dimension feed control (interpolation) .....	9-31
9.2.6 2-axis circular interpolation control with auxiliary point designation .....	9-34
9.2.7 2-axis circular interpolation control with center point designation .....	9-40
9.2.8 Speed control .....	9-47
9.2.9 Speed/position changeover control .....	9-50
9.2.10 Current value change.....	9-57
9.2.11 JUMP command.....	9-62

### 10. ADVANCED POSITIONING CONTROL 10-1 to 10-24

10.1 Outline of advanced positioning control .....	10-2
10.1.1 Data required for advanced positioning control .....	10-3
10.1.2 "Start block data" and "condition data" configuration.....	10-4

10.2	Advanced positioning control execution procedure .....	10-6
10.3	Setting the start block data .....	10-7
10.3.1	Relation between various controls and start block data .....	10-7
10.3.2	Block start (normal start) .....	10-8
10.3.3	Condition start .....	10-10
10.3.4	Wait start.....	10-11
10.3.5	Simultaneous start .....	10-12
10.3.6	Stop.....	10-13
10.3.7	Repeated start (FOR loop) .....	10-14
10.3.8	Repeated start (FOR condition) .....	10-15
10.3.9	Restrictions when using the NEXT start.....	10-16
10.4	Setting the condition data .....	10-17
10.4.1	Relation between various controls and the condition data .....	10-17
10.4.2	Condition data setting examples .....	10-19
10.5	Start program for advanced positioning control .....	10-20
10.5.1	Starting advanced positioning control .....	10-20
10.5.2	Example of a start program for advanced positioning control .....	10-21

<b>11. MANUAL CONTROL</b>	<b>11-1 to 11-26</b>
---------------------------	----------------------

11.1	Outline of manual control .....	11-2
11.1.1	Two manual control methods.....	11-2
11.2	JOG operation.....	11-4
11.2.1	Outline of JOG operation .....	11-4
11.2.2	JOG operation execution procedure .....	11-7
11.2.3	Setting the required parameters for JOG operation.....	11-8
11.2.4	Creating start programs for JOG operation.....	11-10
11.2.5	JOG operation example .....	11-13
11.3	Manual pulse generator operation.....	11-17
11.3.1	Outline of manual pulse generator operation.....	11-17
11.3.2	Manual pulse generator operation execution procedure .....	11-21
11.3.3	Setting the required parameters for manual pulse generator operation .....	11-22
11.3.4	Creating a program to enable/disable the manual pulse generator operation.....	11-23

<b>12. CONTROL AUXILIARY FUNCTIONS</b>	<b>12-1 to 12-104</b>
--	-----------------------

12.1	Outline of auxiliary functions.....	12-2
12.1.1	Outline of auxiliary functions .....	12-2
12.2	Auxiliary functions specifically for machine zero point returns .....	12-4
12.2.1	Zero point return retry function .....	12-4
12.2.2	Zero point shift function .....	12-10
12.3	Functions for compensating the control .....	12-13
12.3.1	Backlash compensation function .....	12-13
12.3.2	Electronic gear function .....	12-15
12.3.3	Near pass mode function .....	12-20
12.3.4	Follow up processing function .....	12-24

12.4 Functions to limit the control .....	12-25
12.4.1 Speed limit function .....	12-25
12.4.2 Torque limit function .....	12-27
12.4.3 Software stroke limit function .....	12-30
12.4.4 Hardware stroke limit function .....	12-36
12.4.5 Servo ON/OFF function .....	12-38
12.5 Functions to change the control details .....	12-43
12.5.1 Speed change function .....	12-43
12.5.2 Override function .....	12-50
12.5.3 Acceleration/deceleration time change function .....	12-53
12.5.4 Torque change function .....	12-56
12.6 Absolute position restoration function .....	12-58
12.6.1 Outline of absolute position restoration function .....	12-58
12.6.2 Absolute position restoration mode switching function .....	12-65
12.7 Other functions .....	12-70
12.7.1 Step function .....	12-70
12.7.2 Skip function .....	12-75
12.7.3 M code output function .....	12-78
12.7.4 Teaching function .....	12-82
12.7.5 Command in-position function .....	12-92
12.7.6 Acceleration/deceleration processing function .....	12-95
12.7.7 Indirectly specification function .....	12-99

<b>13. COMMON FUNCTIONS</b>
-----------------------------

<b>13-1 to 13-12</b>
----------------------

13.1 Outline of common functions .....	13-2
13.2 Parameter initialization function .....	13-3
13.3 Execution data backup function .....	13-5
13.4 LED display function .....	13-7
13.5 Clock data function .....	13-11

<b>14. TROUBLESHOOTING</b>
----------------------------

<b>14-1 to 14-80</b>
----------------------

14.1 Error and warning details .....	14-2
14.2 List of errors .....	14-6
14.2.1 Errors detected by AD75 .....	14-6
14.2.2 Errors detected by MR-H-B (MR-H-BN) .....	14-26
14.2.3 Errors detected by MR-J-B .....	14-34
14.2.4 Errors detected by MR-J2-B .....	14-42
14.2.5 Errors detected by MR-J2S-B .....	14-50
14.2.6 Errors detected by MR-J2-03B5 .....	14-58
14.3 List of warnings .....	14-64
14.3.1 Warnings detected by AD75 .....	14-64
14.3.2 Warnings detected by MR-H-B (MR-H-BN) .....	14-70
14.3.3 Warnings detected by MR-J-B .....	14-72
14.3.4 Warnings detected by MR-J2-B .....	14-74
14.3.5 Warnings detected by MR-J2S-B .....	14-76
14.3.6 Warnings detected by MR-J2-03B5 .....	14-78

14.4 Start during error history ..... 14-80

APPENDICES	Appendix-1 to Appendix-62
------------	---------------------------

Appendix 1 External dimension drawing ..... Appendix-2

Appendix 2 Format sheets ..... Appendix-4

    Appendix 2.1 Positioning module operation chart ..... Appendix-4

    Appendix 2.2 Parameter setting value entry table ..... Appendix-6

    Appendix 2.3 Positioning data setting value entry table [data No. to ] ..... Appendix-26

Appendix 3 Positioning data (No. 1 to 100), List of buffer memory addresses ..... Appendix-27

Appendix 4 Comparisons with old versions of  
    A1SD75M1/A1SD75M2/A1SD75M3, and AD75M1/AD75M2/AD75M3 models ..... Appendix-30

Appendix 5 MELSEC Explanation of positioning terms ..... Appendix-32

Appendix 6 Positioning control troubleshooting ..... Appendix-48

Appendix 7 List of buffer memory addresses ..... Appendix-54

INDEX	Index-1 to Index-12
-------	---------------------

## MANUALS

The manuals related to this product are listed below.  
Please place an order as needed.

Related MANUALS
--------------------

Manual Name	Manual Number (Model Code)
AD75M1/M2/M3 Positioning Module User's Manual (Hardware) The AD75M1/M2/M3 positioning module performance specifications, input interface, names of each part and startup procedures, etc., are explained. (Enclosed with module)	IB-66735 (13J885)
A1SD75M1/M2/M3 Positioning Module User's Manual (Hardware) The A1SD75M1/M2/M3 positioning module performance specifications, input interface, names of each part and startup procedures, etc., are explained. (Enclosed with module)	IB-66734 (13J884)
Positioning module software package type SW11VD-AD75P Operating Manual The methods of creating data (parameters, positioning data, etc.), transmitting the data to the module, monitoring the positioning and testing, etc., using the above software package are explained. (Enclosed with each software package product)	IB-66714 (13J915)
GX Configurator-AP Version 1 Operating Manual The methods of creating data (parameters, positioning data, etc.), transmitting the data to the module, monitoring the positioning and testing, etc., using the above software package are explained. (sold separately) <sup>*1</sup>	IB-66900 (13J948)

\*1 The manual is included in the CD-ROM of the software package in a PDF-format file.

For users interested in buying the manual separately, a printed version is available. Please contact us with the manual number (model code) in the list above.

## COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES

### (1) Method of ensuring compliance

To ensure that Mitsubishi programmable controllers maintain EMC and Low Voltage Directives when incorporated into other machinery or equipment, certain measures may be necessary. Please refer to the manual included with the CPU module or base unit. The CE mark on the side of the programmable controller indicates compliance with EMC and Low Voltage Directives.

### (2) Additional measures

To ensure that this product maintains EMC and Low Voltage Directives, please refer to section 4.3.1 "Precautions for wiring"



## USING THIS MANUALS (1)

- The symbols used in this manual are shown below.

<table border="1"><tr><td>Pr.*</td></tr></table> .....	Pr.*	Symbol indicating positioning parameter, zero point return parameter and servo parameter item.
Pr.*		
<table border="1"><tr><td>Da.*</td></tr></table> .....	Da.*	Symbol indicating positioning data, start block data and condition data item.
Da.*		
<table border="1"><tr><td>Md.*</td></tr></table> .....	Md.*	Symbol indicating monitor data item.
Md.*		
<table border="1"><tr><td>Cd.*</td></tr></table> .....	Cd.*	Symbol indicating control data item.
Cd.*		

(A serial No. is inserted in the \* mark.)

- Indication of values in this manual

- The buffer memory address, error code and warning code are indicated in a decimal value.
- The X/Y device is indicated in a hexadecimal value.
- The setting data and monitor data is indicated in a decimal or hexadecimal value. An "H" attached at the end of the value indicates a hexadecimal value.


(Examples)

10	Decimal
10H	Hexadecimal

USING THIS MANUALS (2)

■ The methods for reading this manual are shown below.

1) → 2) → 3) → 4) → 5) → Test operation → 6) → Actual operation

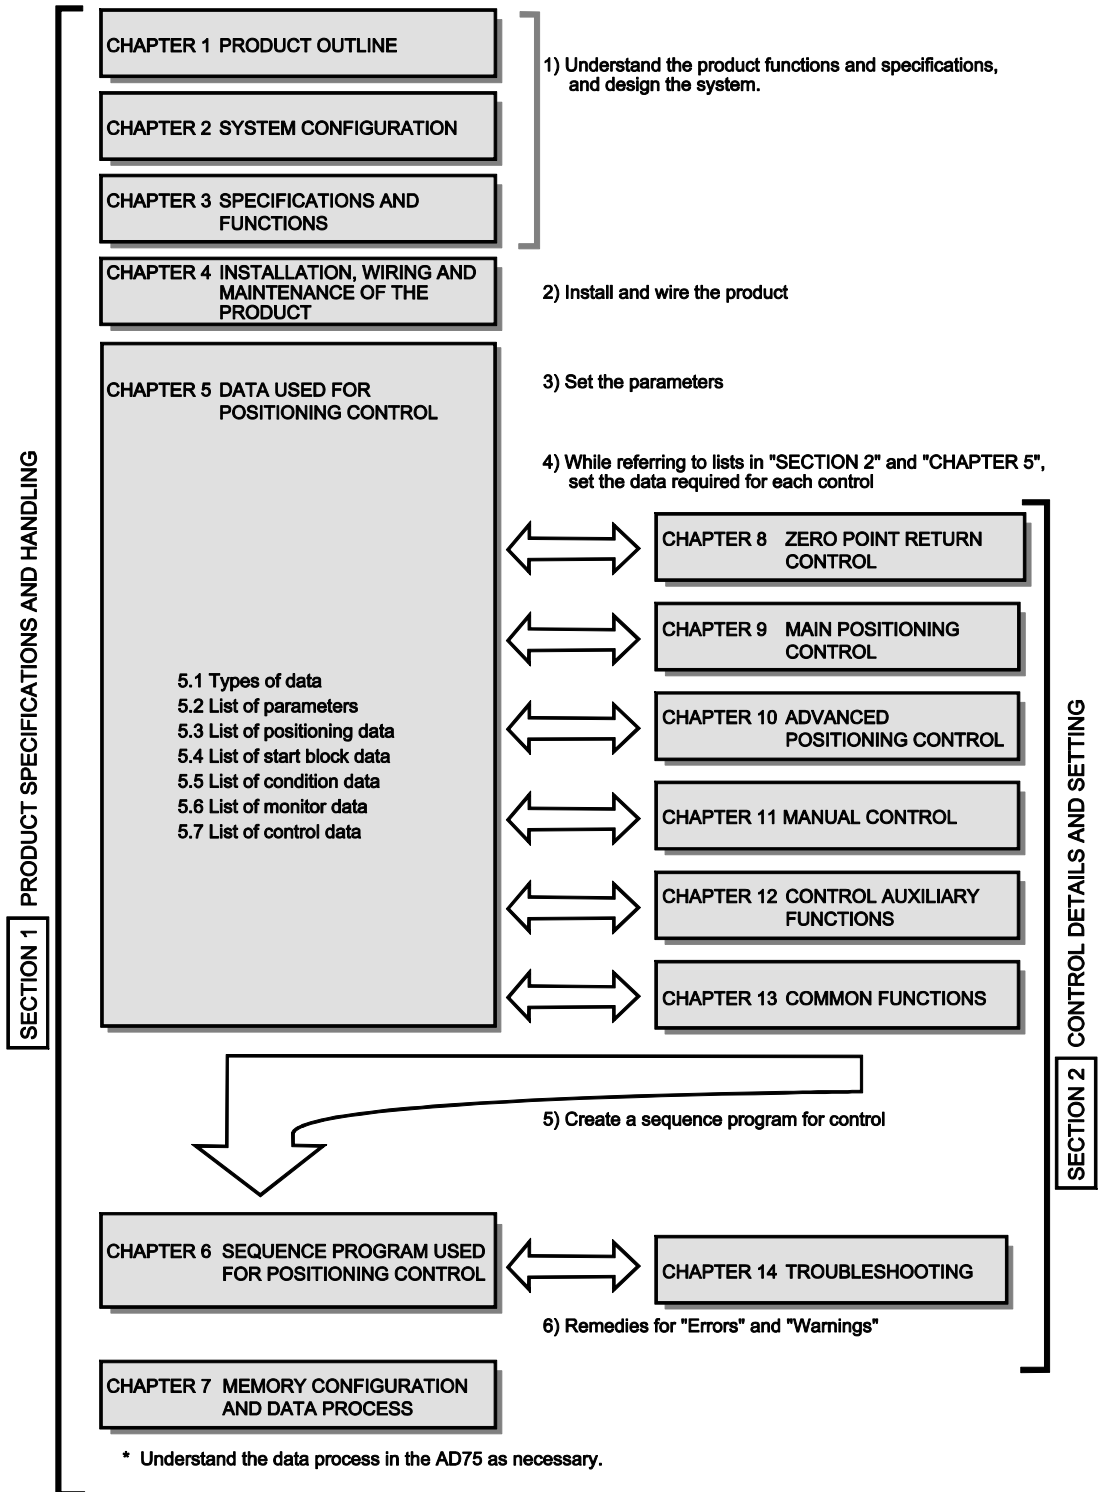

## USING THIS MANUALS (3)

■ The contents of each chapter are shown below.

### SECTION 1 PRODUCT SPECIFICATIONS AND HANDLING

1	PRODUCT OUTLINE	The basic contents for understanding positioning control using AD75 are described.	1	
2	SYSTEM CONFIGURATION	The devices required for positioning control using AD75 are described.	2	
3	SPECIFICATIONS AND FUNCTIONS	The AD75 functions and performance specifications, etc., are described.	3	
4	INSTALLATION, WIRING AND MAINTENANCE OF THE PRODUCT	The procedures for installing and wiring the AD75, the precautions and maintenance are described.	4	
5	DATA USED FOR POSITIONING CONTROL	The setting items, setting details and range, default values, and setting destination buffer memory address for the parameters and data required for positioning control are described.	5	Pr. Da. Md. Cd.
6	SEQUENCE PROGRAM USED FOR POSITIONING CONTROL	The sequence program required for positioning control is described. (Create an actual program using this program as a reference.)	6	
7	MEMORY CONFIGURATION AND DATA PROCESS	The AD75 memory configuration and data process are described. (Read this as required.)	7	

### SECTION 2 CONTROL DETAILS AND SETTING

8	ZERO POINT RETURN CONTROL	The details and settings for zero point return control are described.	8
9	MAIN POSITIONING CONTROL	The details and examples of settings for "Main positioning control" using the "Positioning data" are described.	9
10	ADVANCED POSITIONING CONTROL	The details and examples of settings for "Advanced positioning control" using the "Positioning data" are described.	10
11	MANUAL CONTROL	The settings and sequence programs required for JOG operation or manual pulse generator operation are described.	11
12	CONTROL AUXILIARY FUNCTIONS	The settings and sequence programs required for using the auxiliary functions are described.	12
13	COMMON FUNCTIONS	The settings and sequence programs required for using the common functions are described.	13
14	TROUBLESHOOTING	The errors and warnings detected by the AD75 and servo amplifier are described.	14
	APPENDICES	A glossary and list of buffer memory addresses are described. (Read this as required.)	APPENDICES

## GENERIC TERMS AND ABBREVIATIONS

Unless specially noted, the following generic terms and abbreviations are used in this manual.

Generic term/abbreviation	Details of generic term/abbreviation
Programmable controller CPU	Generic term for programmable controller CPU on which AD75 can be mounted.
AD75	Generic term for positioning module AD75M1, AD75M2, AD75M3, A1SD75M1, A1SD75M2, and A1SD75M3. The module type is described to indicate a specific module.
Peripheral device	Generic term for DOS/V personal computer that can run the following "AD75 Software Package".
AD75 software package	Generic term for "SW11VD-AD75P type positioning module software package" and "GX Configurator-AP Version 1 (SW0D5C-AD75P-E)."
SSCNET	Abbreviation for AD75 - servo amplifier high-speed serial communication "Servo System Controller NETWORK".
Servo amplifier (Servo)	Generic term for servo amplifier corresponding SSCNET connection.
Motor	Abbreviation for servomotor.
Position/speed command	Generic term for position command and speed command output from AD75 to servo amplifier. (A pulse train is converted into numerical data, and the result is output on SSCNET.)
Manual pulse generator	Abbreviation for manual pulse generator (prepared by user).
Data link system	Abbreviation for MELSECNET (II) and MELSECNET/B data link system.
Network system	Abbreviation for MELSECNET/10 network system.
I/F	Abbreviation for interface.
17-segment LED	17-segment display mounted on upper front of AD75.
DOS/V personal computer	IBM PC/AT <sup>®</sup> and compatible DOS/V compliant personal computer.
Personal computer	Generic term for DOS/V personal computer.
Workpiece	Generic term for moving body such as workpiece and tool, and for various control targets.
Axis 1, axis 2, axis 3	Indicates each axis connected to AD75.
1-axis, 2-axis, 3-axis	Indicates the number of axes. (Example: 2-axis = Indicates two axes such as axis 1 and axis 2, axis 2 and axis 3, and axis 3 and axis 1.)

ENCLOSED PARTS

The AD75 product configuration is shown below.

Part name	Quantity		
	A1SD75M1 AD75M1	A1SD75M2 AD75M2	A1SD75M3 AD75M3
External device connection connector (10136-3000VE, Sumitomo 3M Limited)	1	2	3
Connector cover (10336-56 F0-008, Sumitomo 3M Limited)	1	2	3
AD75	1		
A1SD75M1/M2/M3, AD75M1/M2/M3 Positioning Module User's Manual (Hardware)	1		



---

# SECTION 1

---

## PRODUCT SPECIFICATIONS AND HANDLING

SECTION 1 is configured for the following purposes (1) to (5).

- (1) To understand the outline of positioning control, and the AD75 specifications and functions
- (2) To carry out actual work such as installation and wiring
- (3) To set parameters and data required for positioning control
- (4) To create a sequence program required for positioning control
- (5) To understand the memory configuration and data transmission process

Read "SECTION 2" for details on each control.

CHAPTER 1	PRODUCT OUTLINE .....	1-1 to 1-20
CHAPTER 2	SYSTEM CONFIGURATION .....	2-1 to 2-10
CHAPTER 3	SPECIFICATIONS AND FUNCTIONS .....	3-1 to 3-18
CHAPTER 4	INSTALLATION, WIRING AND MAINTENANCE OF THE PRODUCT ...	4-1 to 4-20
CHAPTER 5	DATA USED FOR POSITIONING CONTROL.....	5-1 to 5-184
CHAPTER 6	SEQUENCE PROGRAM USED FOR POSITIONING CONTROL .....	6-1 to 6-38
CHAPTER 7	MEMORY CONFIGURATION AND DATA PROCESS .....	7-1 to 7-20





---

# CHAPTER 1

---

## PRODUCT OUTLINE

The purpose and outline of positioning control using AD75 are explained in this chapter.

By understanding "What can be done", and "Which procedures to use" beforehand, the positioning system can be structured smoothly.

- 1.1 Positioning control ..... 1-2
  - 1.1.1 Features of AD75..... 1-2
  - 1.1.2 Purpose and applications of positioning control ..... 1-6
  - 1.1.3 Mechanism of positioning control..... 1-8
  - 1.1.4 Outline design of positioning system..... 1-10
  - 1.1.5 Communicating signals between AD75 and each module..... 1-12
- 1.2 Flow of system operation ..... 1-14
  - 1.2.1 Flow of all processes ..... 1-14
  - 1.2.2 Outline of starting ..... 1-16
  - 1.2.3 Outline of stopping ..... 1-18
  - 1.2.4 Outline for restarting ..... 1-19


1.1 Positioning control

1.1.1 Features of AD75

The features of the AD75 are shown below.

(1) Connection to servo amplifier by SSCNET

- (a) Having the SSCNET interface for connection to the servo amplifier (MR-H-B (MR-H-BN), MR-J-B, MR-J2-B, MR-J2S-B, MR-J2-03B5), the AD75 can be connected directly to the Mitsubishi servo amplifier on the SSCNET.
- (b) The SSCNET cables are used for connection between the AD75 and servo amplifier or between the servo amplifiers, saving the wiring.
- (c) The servo parameters can be set on the AD75 side and transferred to the servo amplifier by the SSCNET.
- (d) The error definition that the servo has can be checked in the AD75 buffer memory.

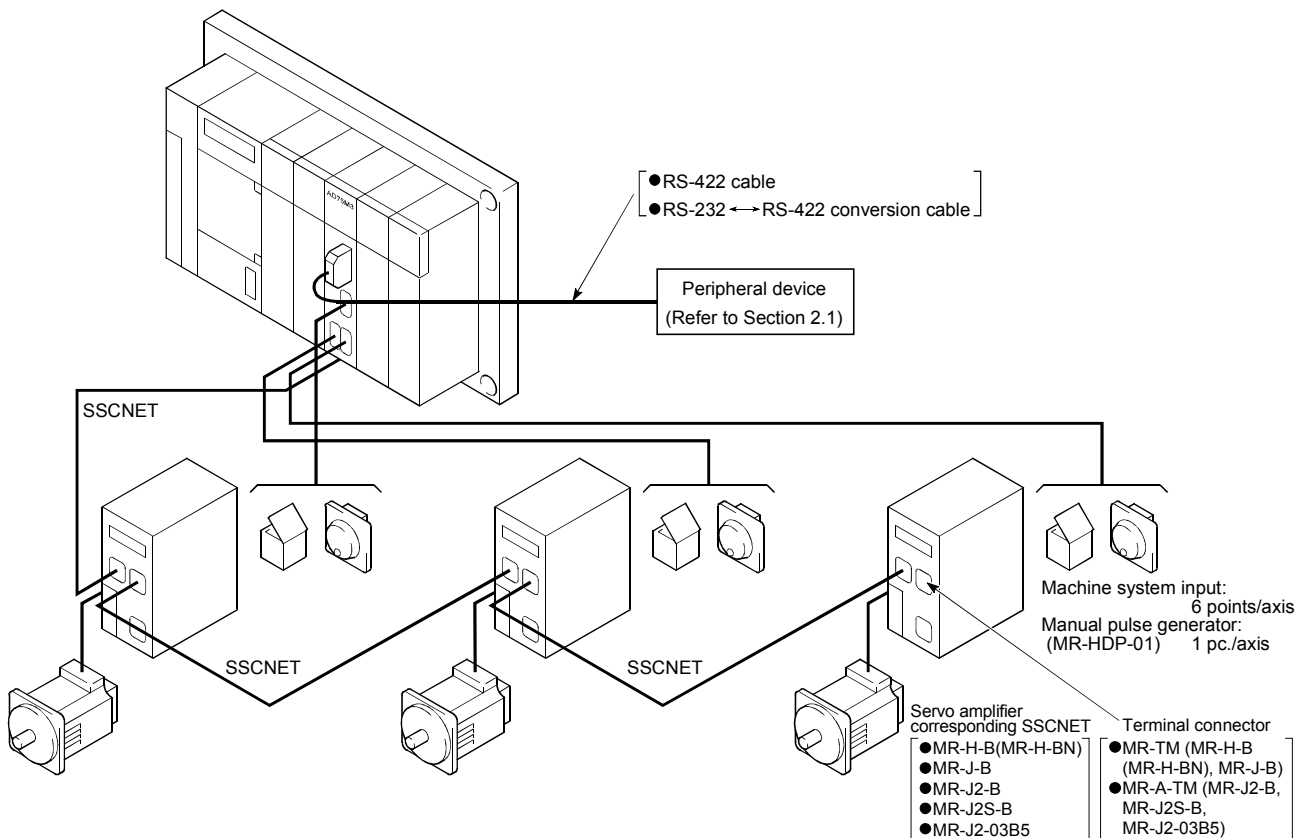

**(2) Ease of compatibility with absolute position detection system**

- (a) Connection of an absolute position corresponding servo system supports an absolute position detection system.
- (b) Once a zero point position is established, zero point return operation is not necessary at power-on.
- (c) In the absolute position detection system, a zero point position can be established by a data setting method machine zero point return. This eliminates the need for wiring of near-point dogs, etc.
- (d) By setting the absolute position restoration mode to the "infinite length mode", infinite length positioning control in the control unit "degree" can be realized in the absolute position detection system.

**(3) Control by machine system input**

External inputs, such as the external start, stop and speed/position changeover, enable positioning control without use of sequence programs.

**(4) Lineup of 1-axis to 3-axis modules**

- (a) There are six types of positioning modules for 1-axis to 3-axis control. Select according to the programmable controller CPU type and the required No. of control axes.
- (b) There is one slot used to mount each AD75 onto the base unit. The number of input/output points occupied by the programmable controller CPU is 32 points each.  
There is no limit to the No. of mounted modules as long as the total is within the programmable controller CPU No. of input/output points.

**(5) Ample positioning control functions**

- (a) Various functions required for the positioning system, such as positioning control to random position, fixed-dimension feed control and uniform speed control are provided.
  - 1) Up to 600 positioning data items containing the positioning address, control method and operation pattern, etc., can be set for each axis. Positioning for each axis is carried out using this positioning data. (2-axis interpolation control, and multiple axes using simultaneous start is possible.)
  - 2) Linear control (3-axis simultaneous execution possible) is possible with positioning for each axis. This control can carry out independent positioning with one positioning data item, or can carry out continuous positioning with continuous execution of multiple positioning data items.
  - 3) With multiple axes positioning, linear interpolation control or circular interpolation control using two axes is possible. This control can carry out independent positioning with one positioning data item, or can carry out positioning with continuous execution of multiple positioning data items.

- (b) The control method designated with each positioning data includes position control, speed control and speed/position changeover control.
- (c) Continuous positioning with multiple positioning data items is possible with the operation pattern set by the user using positioning data.  
With the above multiple positioning data as one block, continuous positioning of multiple blocks is possible.
- (d) The zero point return control has been strengthened.
  - 1) The near-point dog method (two types), count method (three types), and data setting method (one type) zero point return methods have been prepared as the "machine zero point return" zero point return method.
  - 2) To realize zero point return control to the machine zero point from a random position, the zero point return retry function has been prepared. (The machine zero point is the position used as the start point for control such as positioning control. The machine zero point is established with the machine zero point return in item 1) above.)
- (e) Automatic trapezoidal acceleration/deceleration and S-curve acceleration/deceleration have been prepared as the acceleration/deceleration methods. The user can select from automatic trapezoidal acceleration/deceleration or S-curve acceleration/deceleration.

#### (6) High-speed starting process

To quicken the process when starting positioning, the start processing time has been reduced to 20ms.

When operation using simultaneous start function or interpolation operation is executed, no start delay is generated between the target axes.

(Example) When operation is started with the simultaneous start function for axes 1 and 3: No start delay between axes 1 and 3.

When interpolation operation is started for axes 2 and axis 3: No start delay between axes 2 and 3.

#### (7) Easy maintenance

The maintenance of the AD75 has been improved with the following matters.

- (a) The various data, such as the positioning data and parameters, are stored on a flash ROM in the AD75.  
This allows the data to be held without a battery.
- (b) The error display, machine system input state can be confirmed with the 17-segment display.
- (c) The primary diagnosis has been improved by detailing the error details.
- (d) Up to 16 history items each for the error and warning information can be held, so the details of the errors and warnings that have occurred can be confirmed easily.



1.1.2 Purpose and applications of positioning control

"Positioning" refers to moving a moving body, such as a workpiece or tool (hereinafter, generically called "workpiece") at a designated speed, and accurately stopping it at the target position. The main application examples are shown below.

**■ Punch press (X, Y feed positioning)**

- To punch insulation material or leather, etc., as the same shape at a high yield, positioning is carried out with the X axis and Y axis servos.
- After positioning the table with the X axis servo, the press head is positioned with the Y axis servo, and is then punched with the press.
- When the material type or shape changes, the press head die is changed, and the positioning pattern is changed.

**■ Palletizer**

- Using the servo for one axis, the palletizer is positioned at a high accuracy.
- The amount to lower the palletizer according to the material thickness is saved.

**■ Compact machining center (ATC magazine positioning)**

Rotation direction for calling 11, 12, 1, 2 or 3

Rotation direction for calling 17 to 20, 1 to 5

Current value retrieval position

Current value retrieval position

Rotation direction for calling 5, 6, 7, 8, 9 or 10


Rotation direction for calling 7 to 16

<No. of tools: 12>

<No. of tools: 20>


- The ATC tool magazine for a compact machining center is positioned.
- The relation of the magazine's current value and target value is calculated, and positioning is carried out with forward run or reverse run to achieve the shortest access time.

■ Lifter (Storage of Braun tubes onto aging rack)

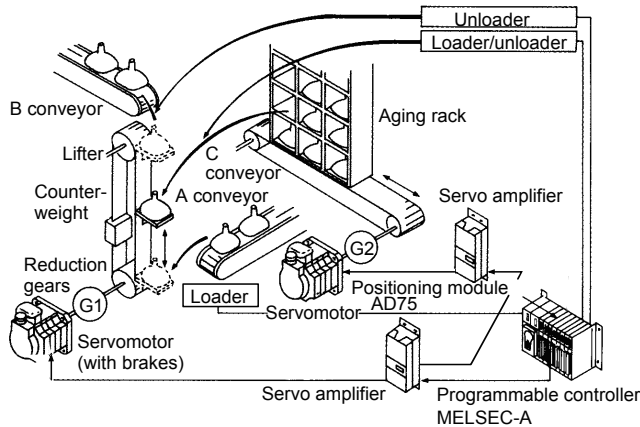


- During the aging process of braun tubes, storage onto the rack is carried out by positioning with the servo.
- The up/down positioning of the lifter is carried out with the 1-axis servo, and the horizontal position of the aging rack is positioned with the 2-axis servo.

■ Index table (High-accuracy indexing of angle)

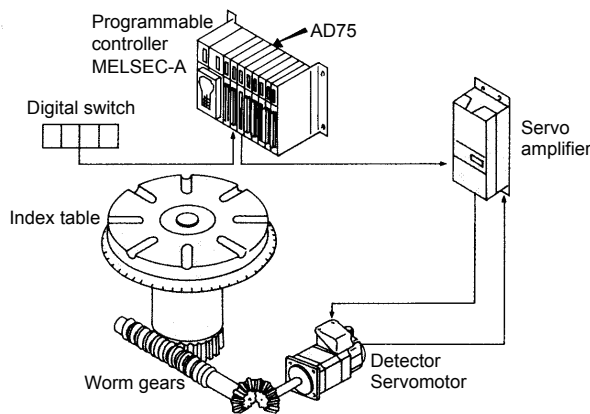

- The index table is positioned at a high accuracy using the 1-axis servo.

■ Inner surface grinder

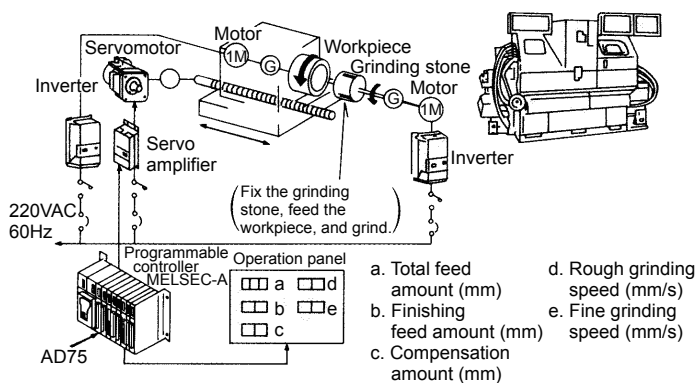


- The grinding of the workpiece's inner surface is controlled with the servo and inverter.
- The rotation of the workpiece is controlled with the 1-axis inverter, and the rotation of the grinding stone is controlled with the 2-axis inverter. The workpiece is fed and ground with the 3-axis servo.

1.1.3 Mechanism of positioning control

Positioning control using the AD75 is carried out with "SSCNET". In the positioning system using the AD75, various software and devices are used for the following roles. The AD75 realizes complicated positioning control when it reads in various signals, parameters and data and is controlled with the programmable controller CPU.

This section explains positioning control as performed by pulse train output for ease of understanding. (Because of the SSCNET connection type, the AD75 outputs to the servo amplifier the data (position/speed commands) resultant from conversion of pulse trains into numerical values.)

In numerical data-based commands and pulse train-based commands, the concepts of the movement amount and speed are the same.

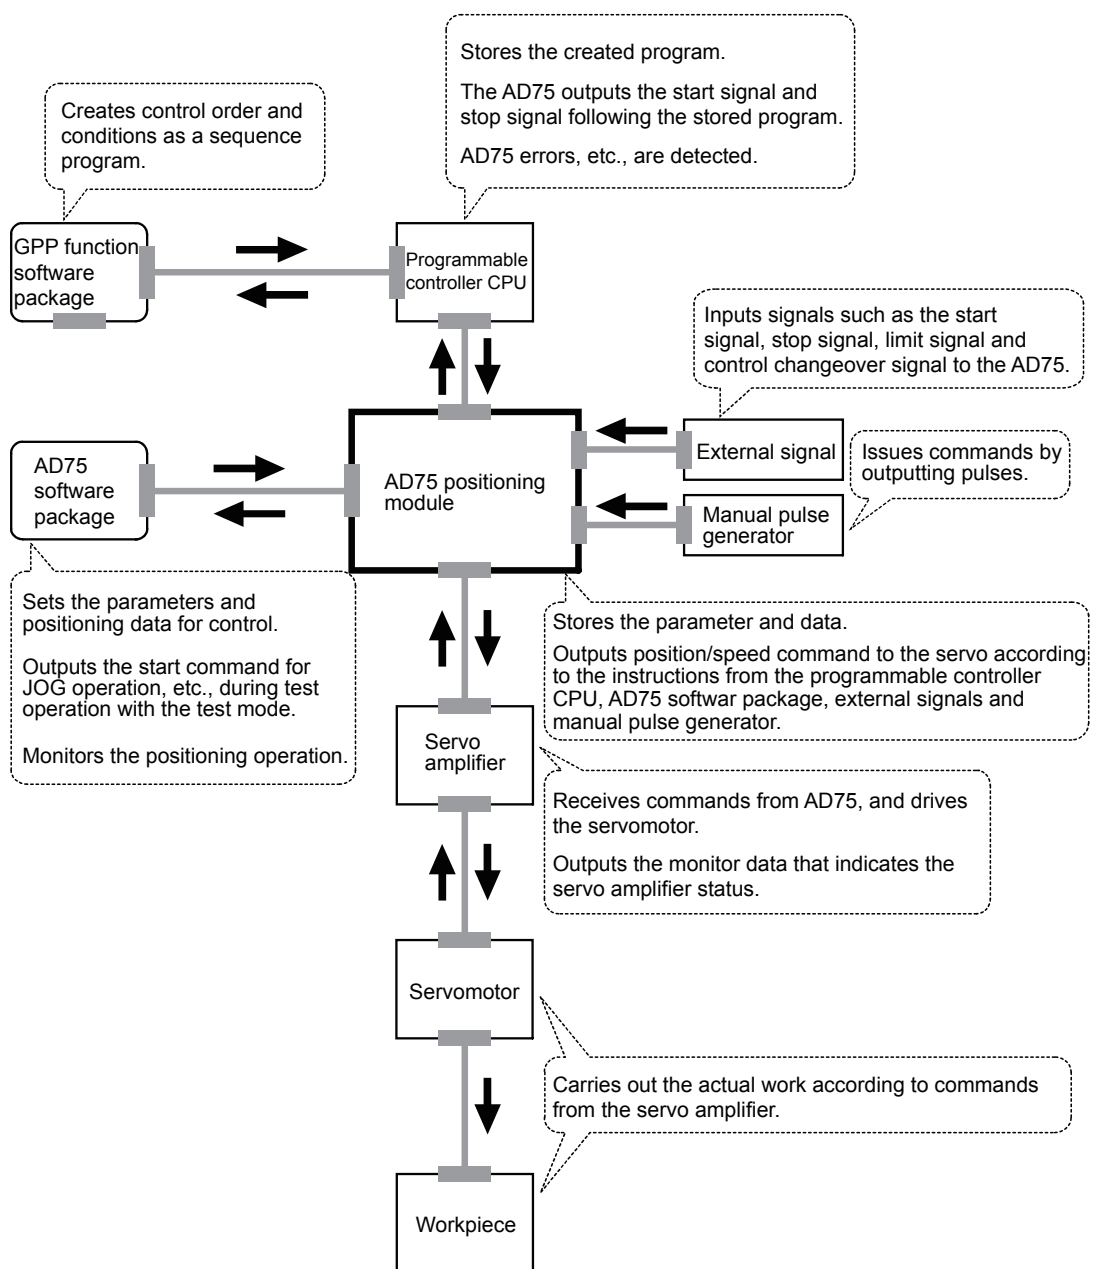



The principle of "position control" and "speed control" operation is shown below.

■ Position control

The total number of pulses in a pulse train required to move the designated distance is obtained in the following manner.

$$\left( \begin{array}{l} \text{Total number of} \\ \text{pulses in a pulse} \\ \text{train required to} \\ \text{move designated} \\ \text{distance} \end{array} \right) = \frac{\left[ \text{Designated distance} \right]}{\left[ \begin{array}{l} \text{Movement amount of machine (load)} \\ \text{side when motor rotates once} \end{array} \right]} \times \left( \begin{array}{l} \text{No. of pulses required} \\ \text{for servomotor to rotate} \\ \text{once} \end{array} \right)$$

\* The No. of pulses required for the servomotor to rotate once is the "pulse encoder resolution" described in the servomotor catalog specification list.

When this total number of pulses in a pulse train is issued from the AD75 to the servo amplifier, control to move the designated distance can be executed.

The machine side movement amount when one pulse is issued to the servo amplifier is called the "movement amount per pulse". This value is the min. value for the workpiece to move, and is also the electrical positioning precision.

■ Speed control

The above "total number of pulses in a pulse train" is an element required for movement distance control, but when carrying out positioning control or speed control, the speed must also be controlled.

This "speed" is controlled by the "pulse train frequency".

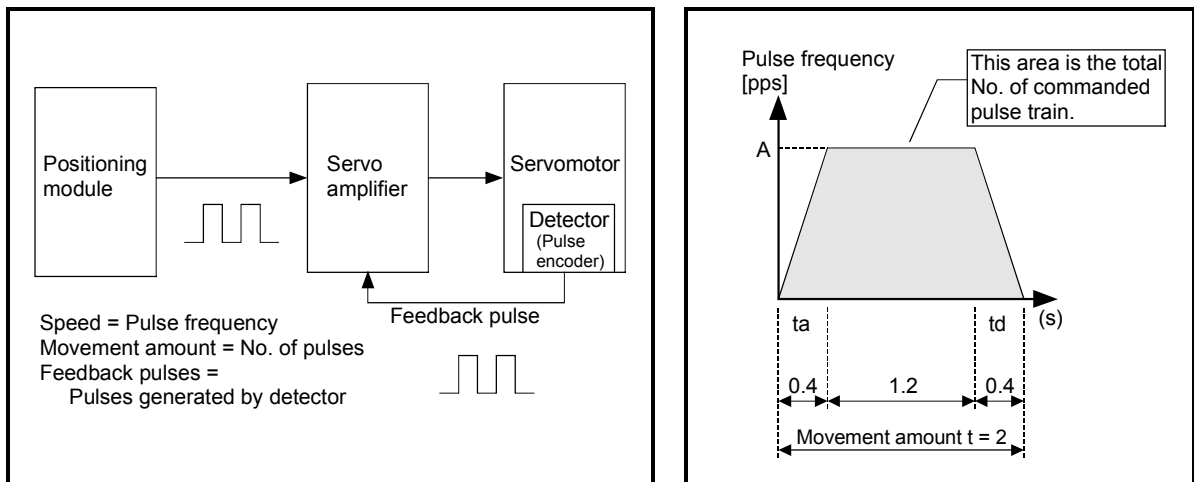


Fig.1.1 Relationship between position control and speed control

**POINT**

The AD75 controls the position with the "total number of pulses in a pulse train", and the speed with the "pulse train frequency".

1.1.4 Outline design of positioning system

The outline of the positioning system operation and design, using the AD75, is shown below.

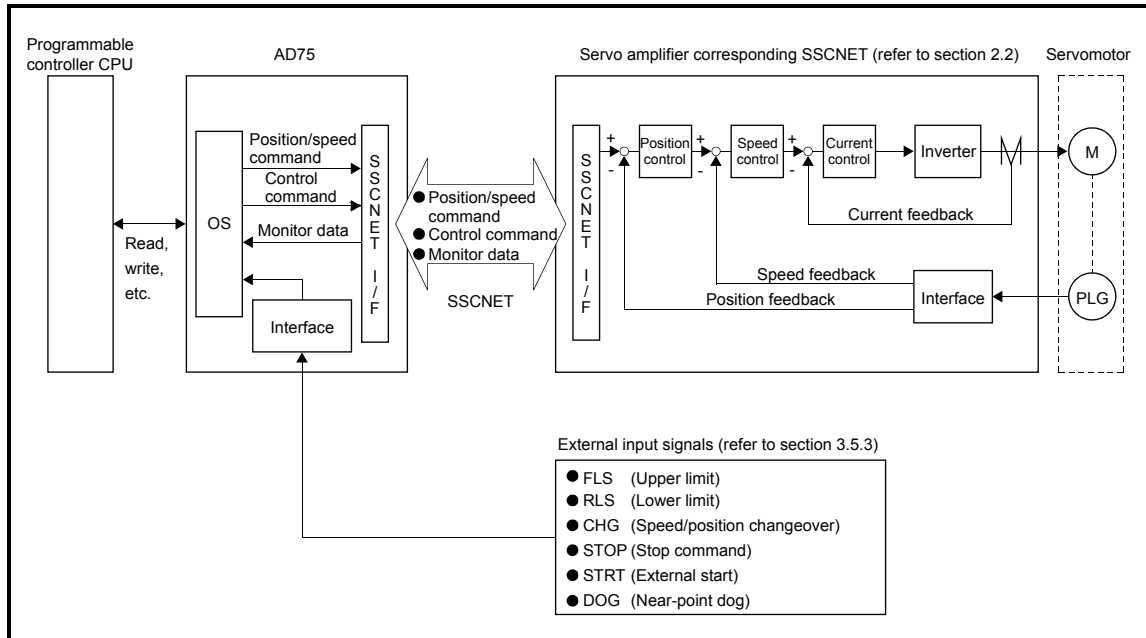


Fig.1.2 Outline of the operation of positioning system using AD75

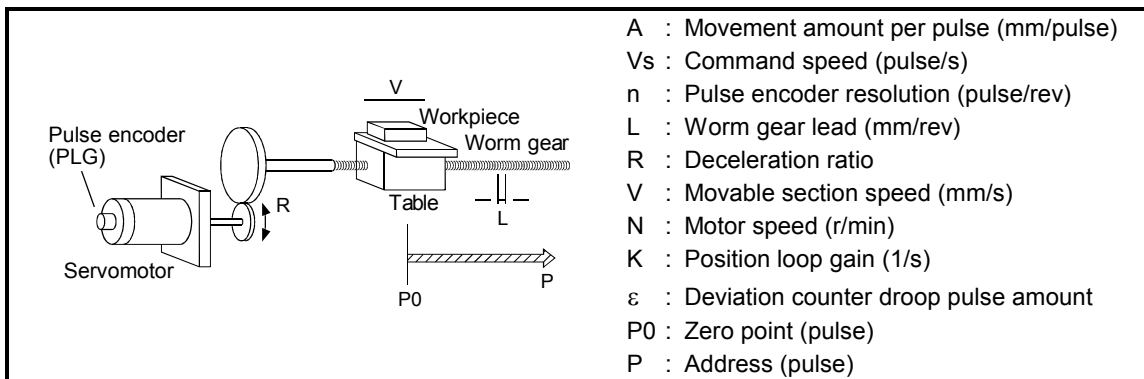


Fig.1.3 System using worm gears

(1) Movement amount per pulse

$$A = \frac{L}{R \times n} \text{ [mm/pulse]}$$

(2) Command speed

$$Vs = \frac{V}{A} \text{ [pulse /s]}$$

(3) Deviation counter droop pulse amount

$$\varepsilon = \frac{Vs}{K} \text{ [pulse]}$$

The movement amount per pulse is indicated with (1), and the [position/speed command] × [movement amount per pulse] is the movement amount. The command speed is calculated with (2) using the movable section speed and movement amount per pulse.


The relation of the command speed and deviation counter droop pulses is shown in (3).

As the positioning command unit, (mm), (inch), (degree) or (pulse) can be selected independently for the 1 to 3 axes of the AD75.

Thus, if the data such as the movement amount per pulse, acceleration/deceleration time, positioning speed, and positioning address are set to match the positioning command unit, the operation will be carried out within the AD75 for the target positioning address. The position/speed command will be output, and positioning will be executed.

1.1.5 Communicating signals between AD75 and each module

The outline of signal communication between the AD75 and programmable controller CPU, peripheral device, servo amplifier, etc. is shown below.

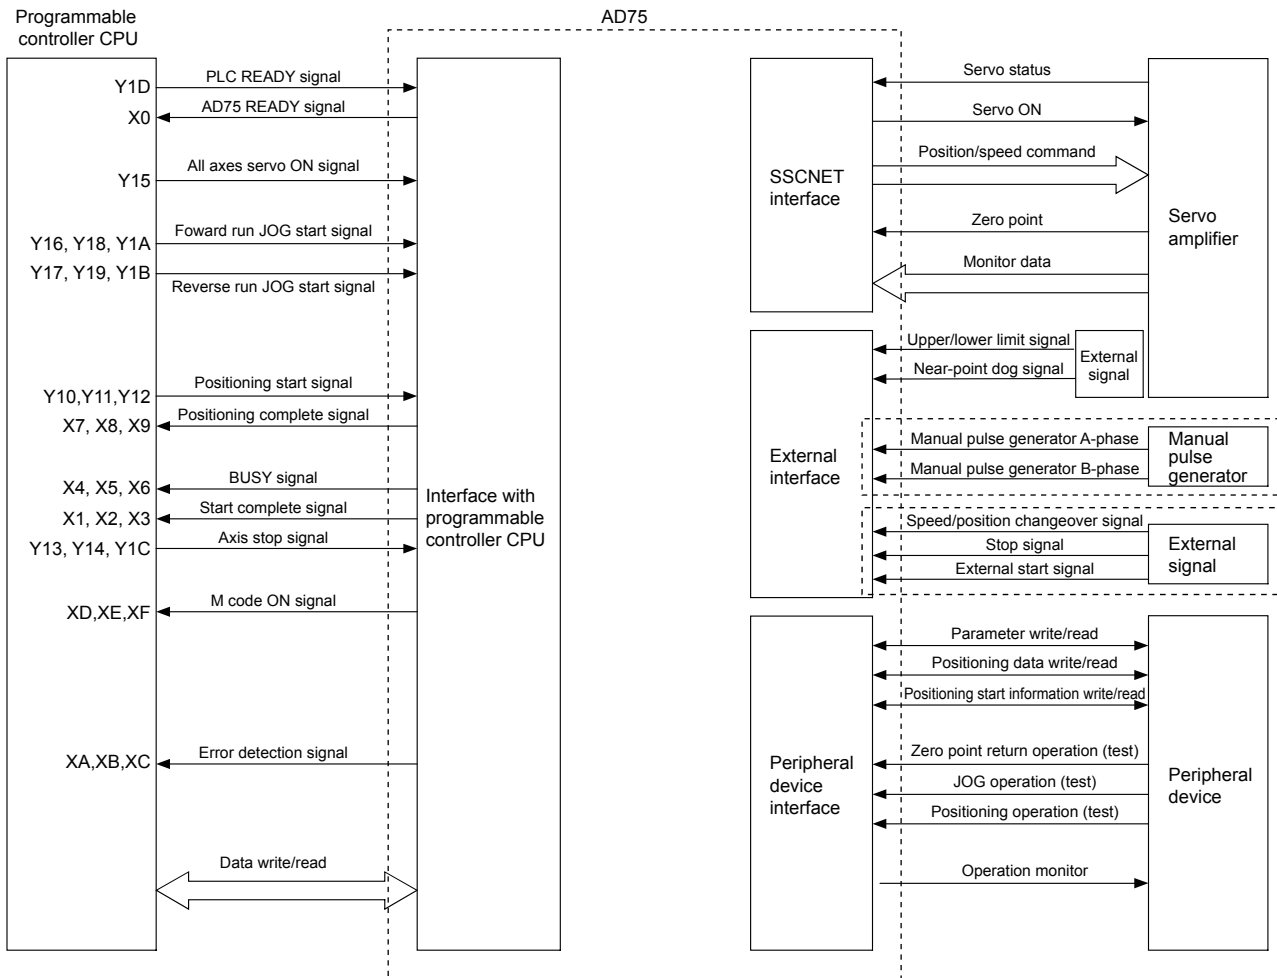

■ AD75 ↔ Programmable controller CPU

The AD75 and programmable controller CPU communicate the following data via the base unit.

Direction Communication	AD75 → Programmable controller CPU	Programmable controller CPU → AD75
Control signal *	Signal indicating AD75 state, such as AD75 READY signal, BUSY signal.	Signal related to commands such as PLC READY signal, all axes servo ON signal, various start signals, stop signals
Data (read/write)	Parameter, positioning data, positioning start information, monitor data, control data	Parameter, positioning data, positioning start information, control data

\* Refer to the section "3.4 Specifications of input/output signals with programmable controller CPU" for details.

### ■ AD75 ↔ Peripheral device

The AD75 and peripheral device communicate the following data via the peripheral device connection connector.

Direction Communication	AD75 → Peripheral device	Peripheral device → AD75
Data (read/write)	Parameter, positioning data, positioning start information	Parameter, positioning data, positioning start information
Test operation	–	Zero point return control start command Positioning control start command JOG operation start command Manual pulse generator operation enable/disable command
Operation monitor	Monitor data	–

### ■ AD75 ↔ Servo amplifier

The AD75 and servo amplifier communicate the following data via the SSCNET connection connector.

Direction Communication	AD75 → Servo amplifier	Servo amplifier → AD75
Control signal	Signals related to commands such as servo ON	Signals indicating the states of servo ON/OFF, zero point pass, etc.
Position/speed command	Commands that specify the position and speed calculated in the AD75	–
Monitor data	–	Data indicating the deviation counter value, servo amplifier state, etc.

### ■ AD75 ↔ Manual pulse generator

The AD75 and manual pulse generator communicate the following data via the external device connection connector.

Direction Communication	AD75 → Manual pulse generator	Manual pulse generator → AD75
Pulse signal	–	Manual pulse generator A-phase, manual pulse generator B-phase

### ■ AD75 ↔ External signal


The AD75 and external signal communicate the following data via the external device connection connector.

Direction Communication	AD75 → External signal	External signal → AD75
Control signal	–	<ul style="list-style-type: none"> <li>• Signals from detector such as near-point dog signal, upper/lower limit signal</li> <li>• Control signals from external device such as stop signal, external start signal, speed/position changeover signal</li> </ul>

1.2 Flow of system operation

1.2.1 Flow of all processes

The positioning control processes, using the AD75, are shown below.

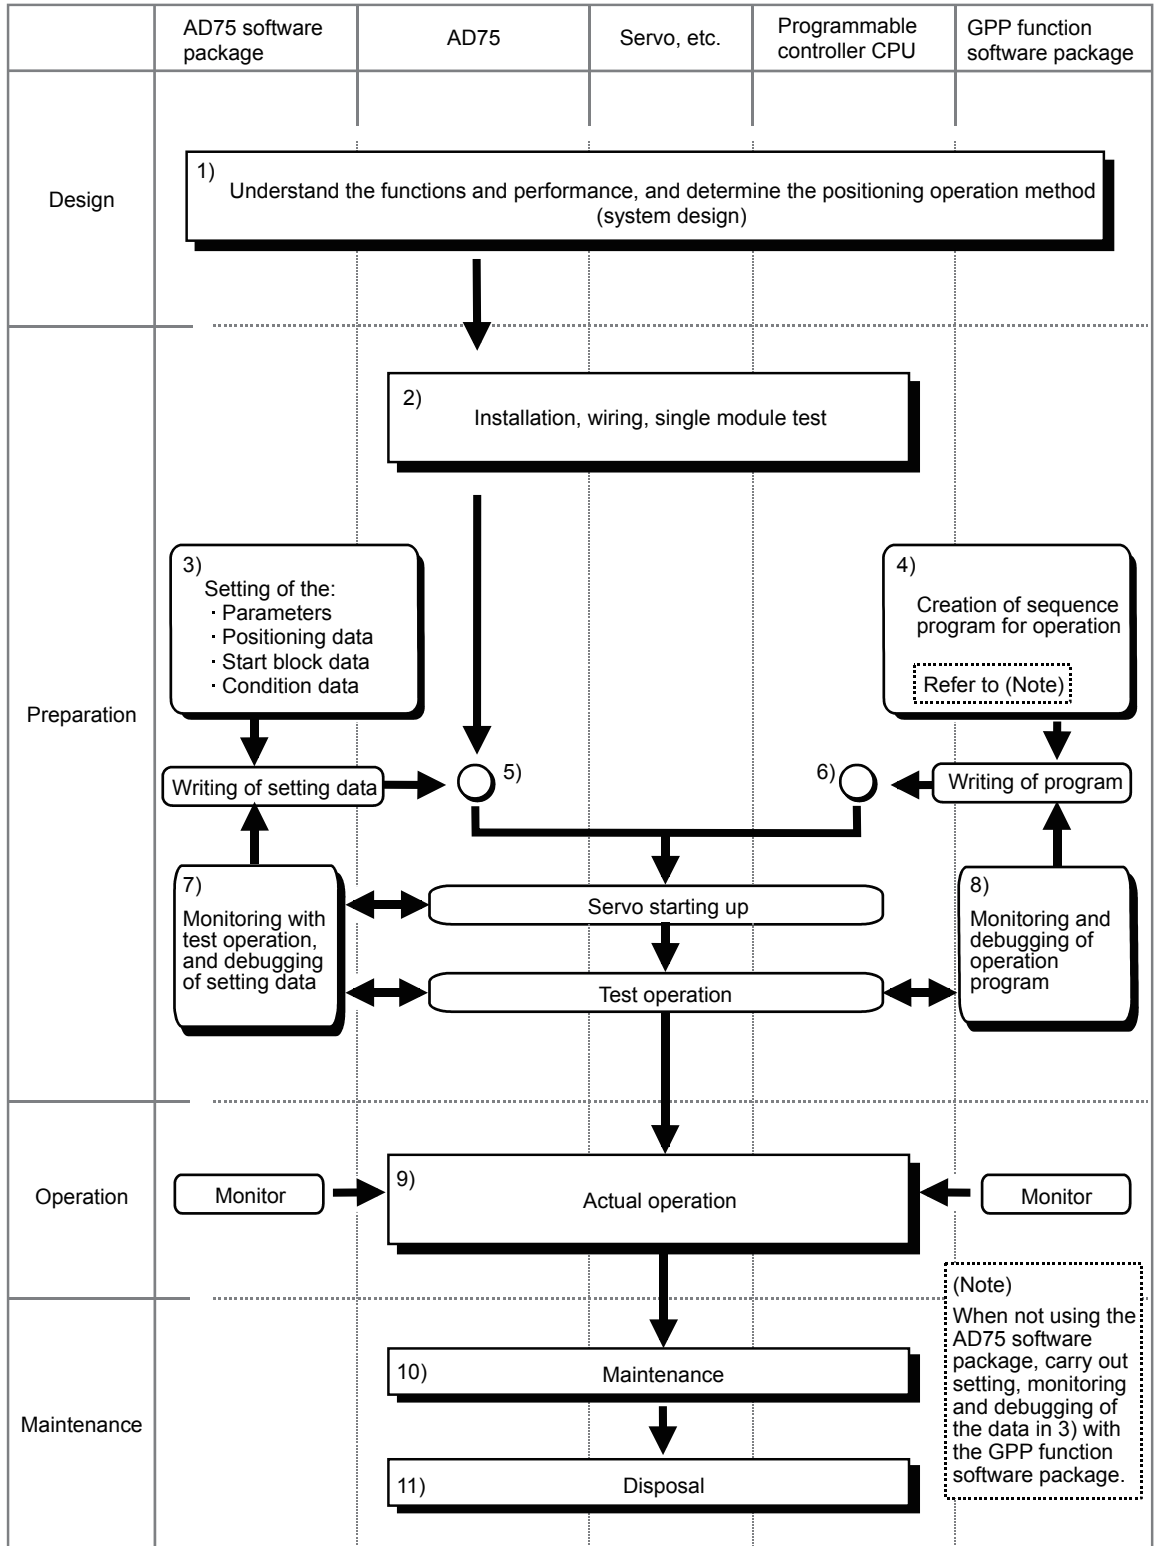


The following work is carried out with the processes shown on the left page.

	Details	Reference
1)	Understand the product functions and usage methods, the configuration devices and specifications required for positioning control, and design the system.	<ul style="list-style-type: none"> <li>• CHAPTER 1</li> <li>• CHAPTER 2</li> <li>• CHAPTER 3</li> <li>• CHAPTER 8 to CHAPTER 13</li> </ul>
2)	Install the AD75 onto the base unit, wire the AD75 and external connection devices (servo amplifier, etc.), and connect the AD75 and peripheral devices. Check that the AD75 operates correctly. (Single module test)	<ul style="list-style-type: none"> <li>• CHAPTER 4</li> </ul>
3)	Using the AD75 software package, set the parameters, positioning data, start block data and condition data required for the positioning control to be executed.	<ul style="list-style-type: none"> <li>• CHAPTER 5</li> <li>• CHAPTER 8 to CHAPTER 13</li> <li>• AD75 Software Package Operating Manual</li> </ul>
4)	Using the GPP function software package, create the sequence program required for positioning operation. (When not using the AD75 software package, also create the sequence program for setting data.)	<ul style="list-style-type: none"> <li>• CHAPTER 6</li> <li>• GPP Function Software Package Operating Manual</li> </ul>
5)	Write the parameters and positioning data, etc., created with the AD75 software package into the AD75.	<ul style="list-style-type: none"> <li>• CHAPTER 7</li> <li>• AD75 Software Package Operating Manual</li> </ul>
6)	Using the GPP function software package, write the created sequence program into the programmable controller CPU. (When not using the AD75 software package, also write in the sequence program for setting data.)	<ul style="list-style-type: none"> <li>• CHAPTER 7</li> <li>• GPP Function Software Package Operating Manual</li> </ul>
7)	Carry out test operation and adjustments in the test mode to check the servo amplifier setting status and external connection device operation status, and to confirm that the designated positioning operation is executed correctly. (Debug the set "parameters" and "positioning data", etc.)	<ul style="list-style-type: none"> <li>• AD75 Software Package Operating Manual</li> </ul>
8)	Carry out test operation and adjustment to confirm that the designated positioning operation is executed correctly. (Debug the created sequence program. When not using the AD75 software package, also debug the set data.)	<ul style="list-style-type: none"> <li>• GPP Function Software Package Operating Manual</li> </ul>
9)	Actually operate the positioning operation. At this time, monitor the operation state as required. If an error or warning occurs, remedy.	<ul style="list-style-type: none"> <li>• CHAPTER 5</li> <li>• CHAPTER 14</li> <li>• AD75 Software Package Operating Manual</li> <li>• GPP Function Software Package Operating Manual</li> </ul>
10)	Service the AD75 as required.	<ul style="list-style-type: none"> <li>• CHAPTER 4</li> </ul>
11)	Dispose of the AD75.	<ul style="list-style-type: none"> <li>• CHAPTER 4</li> </ul>

1.2.2 Outline of starting

The outline for starting each control is shown with the following flowchart.


\* It is assumed that each module is installed, and the required system configuration, etc., has been prepared.

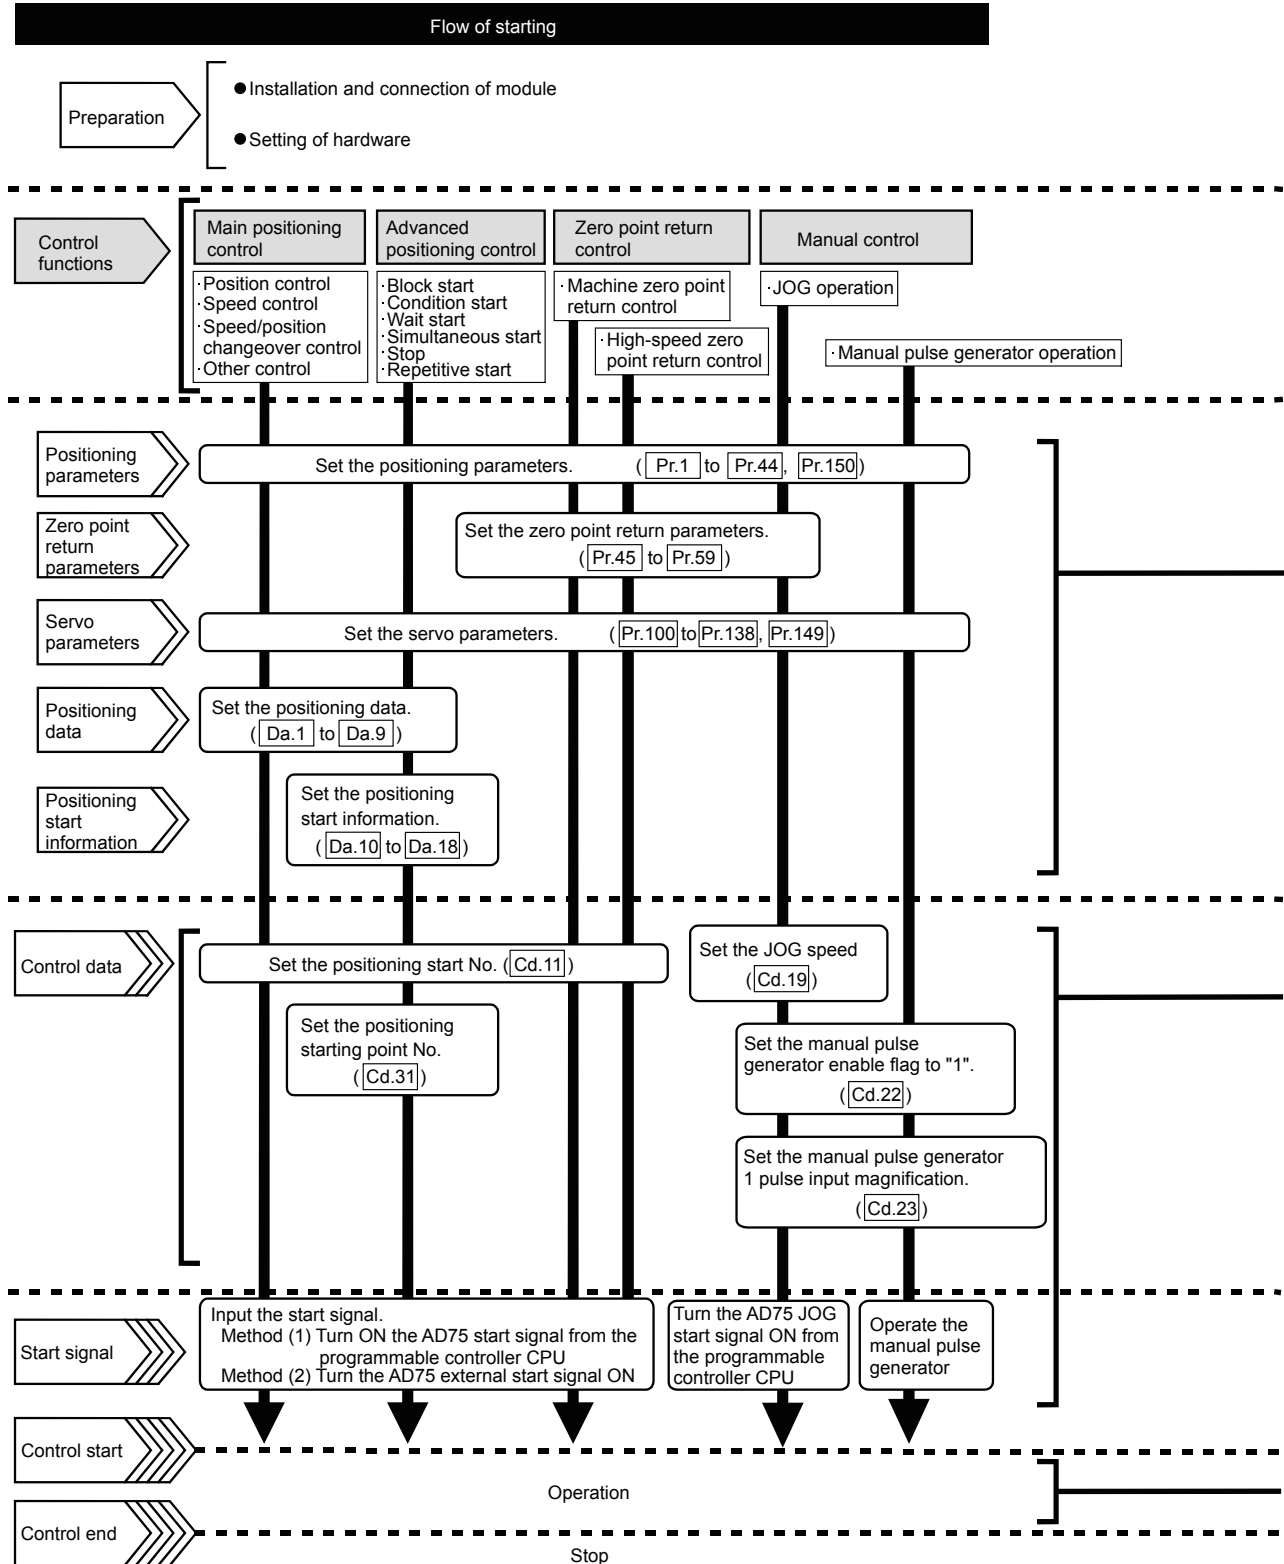



**Setting method**

: Indicates the sequence program that must be created.

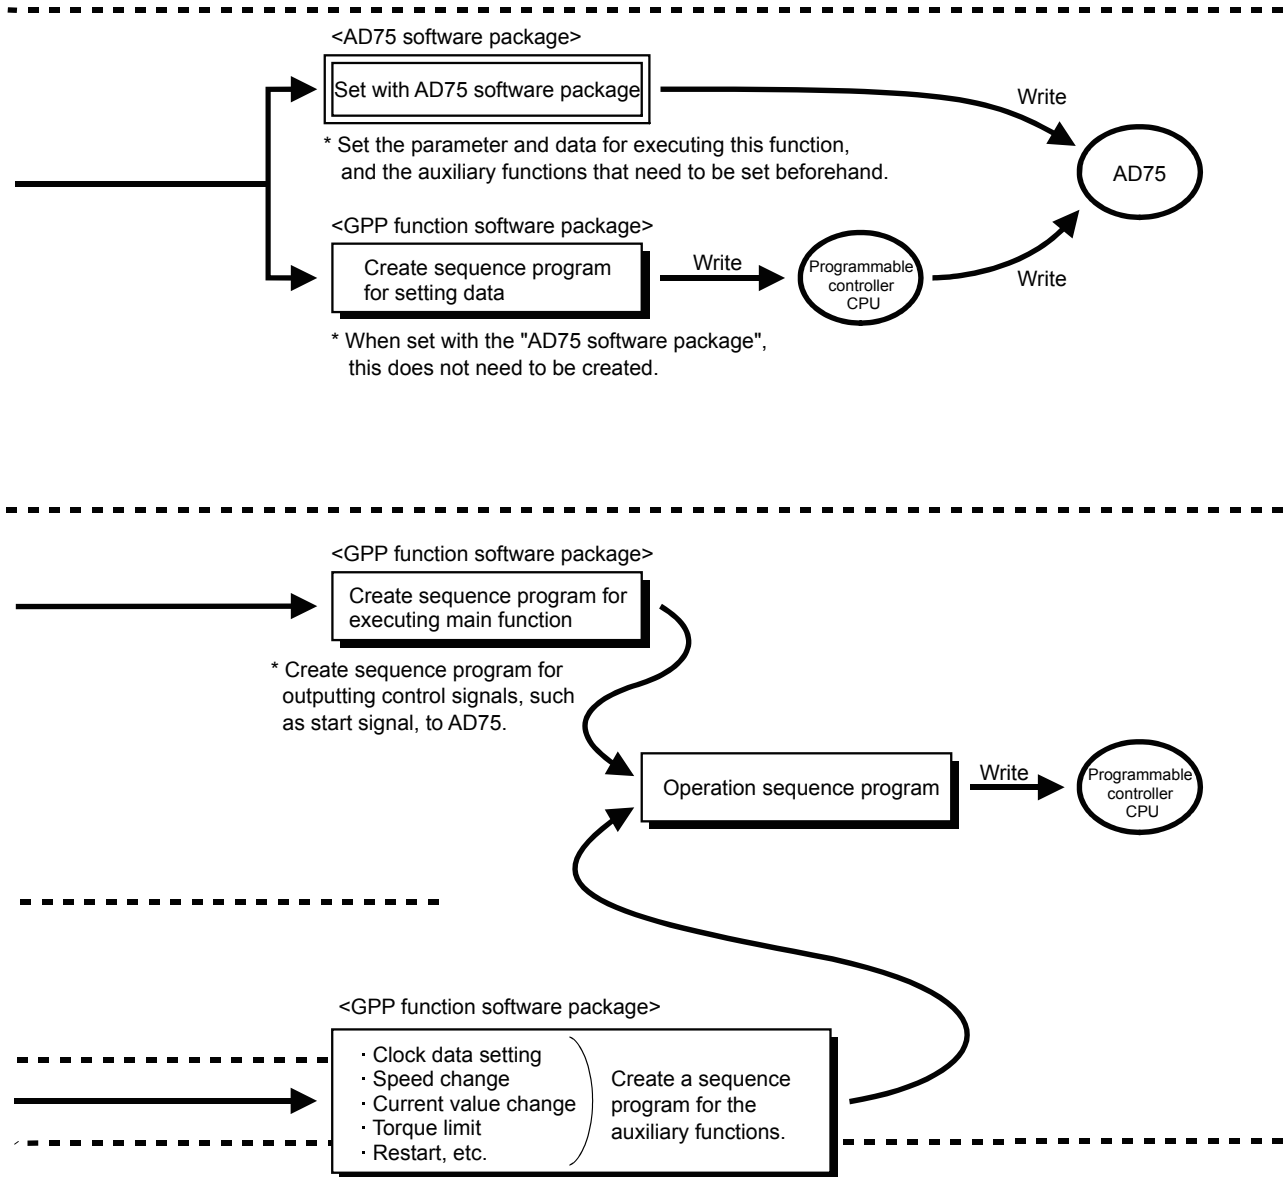

1.2.3 Outline of stopping

Each control is stopped in the following cases.

- (1) When each control is completed normally.
- (2) When Servo alarm (Md.116 Servo status: b13) turns ON
- (3) When the PLC READY signal is turned OFF (When "parameter error" or "watch dog timer error" occurs in programmable controller CPU.)
- (4) When an error occurs.
- (5) When control is intentionally stopped (Stop signal from programmable controller CPU turned ON, stop from peripheral device, etc.)

The outline for the stopping process in these cases is shown below. (Excluding (1) for normal stopping.)

Stop cause		Stop axis	Axis operation status after stopping (Md.35)	Stop process					
				Zero point return control		Main positioning control	Advanced positioning control	Manual control	
				Machine zero point return control	High-speed zero point return control			JOG operation	Manual pulse generator operation
Forced stop	Servo alarm turns ON and Servo ON turns OFF (Md.116 Servo status: b1, b13)	Each axis	During error	Immediate stop				Immediate stop	
Fatal stop (Stop group 1)	Hardware stroke limit upper/lower limit error occurrence	Each axis	During error	Deceleration stop/sudden stop (Select with Pr.38)				Deceleration stop	
Emergency stop (Stop group 2)	Software stroke limit upper/lower limit error occurrence	Each axis	During error	Deceleration stop/sudden stop (Select with Pr.39)				Deceleration stop	
	PLC READY signal OFF "Stop" input from peripheral device	All axes							
Relatively safe stop (Stop group 3)	Axis error detection (Error other than stop group 1 or 2) Error in test mode	Each axis	During error	Deceleration stop/sudden stop (Select with Pr.40)				Deceleration stop	
Intentional stop (Stop group 3)	"Stop signal" ON from external source "Axis stop signal" ON from programmable controller CPU	Each axis	When stopped						

1.2.4 Outline for restarting


When a stop cause has occurred during operation with position control causing the axis to stop, positioning to the end point of the positioning data can be restarted from the stopped position by using the "[Cd.13] Restart command".

■ When "[Cd.13] Restart command" is ON

- (1) If the "[Md.35] Axis operation status" is stopped, positioning to the end point of the positioning data will be restarted from the stopped position regardless of the absolute method or incremental method.
- (2) When "[Md.35] Axis operation status" is not stopped, the warning "restart not possible" (warning code: 104) will be applied, and the restart command will be ignored.

[Example for incremental method]

The restart operation when the axis 1 movement amount is 300, and the axis 2 movement amount is 600 is shown below.

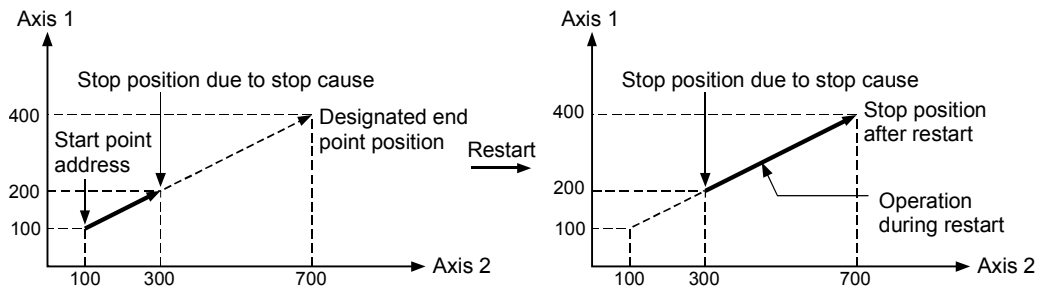


■ Reference

If the positioning start signal [Y10 to Y12]/external start signal is turned ON while the "[Md.35] Axis operation status" is waiting or stopped, positioning will be restarted from the start of the positioning start data regardless of the absolute method or incremental method.  
 (Same as normal positioning.)

[Example for incremental method]

The positioning start operation when the axis 1 movement amount is 300 and the axis 2 movement amount is 600 is shown below.

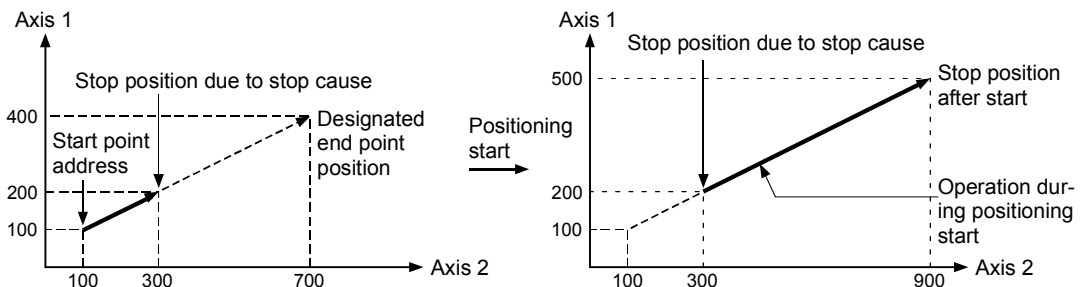



---

# CHAPTER 2

---

## SYSTEM CONFIGURATION


In this chapter, the general image of the system configuration of the positioning control using AD75, the configuration devices, applicable CPU module and the precautions of configuring the system are explained.  
Prepare the required configuration devices to match the positioning control system.

2.1	General image of system .....	2-2
2.2	List of configuration devices .....	2-4
2.3	Applicable system.....	2-6
2.4	Precautions for configuring system.....	2-7
2.4.1	Precautions for mounting base unit.....	2-7
2.4.2	Precautions according to module version .....	2-7
2.4.3	Precautions for using 3-axis module .....	2-8
2.4.4	Precautions for configuring absolute position detection system .....	2-8
2.4.5	Precautions for machine zero point return control in absolute position detection system .....	2-8
2.4.6	Precautions for using servo amplifier MR-J2-03B5 .....	2-9
2.4.7	Precautions for using servo amplifier MR-J2S-B.....	2-9

2.1 General image of system


The general image of the system, including the AD75, programmable controller CPU and peripheral devices is shown below.

(The Nos. in the illustration refer to the "No." in section "2.2 List of configuration devices".)

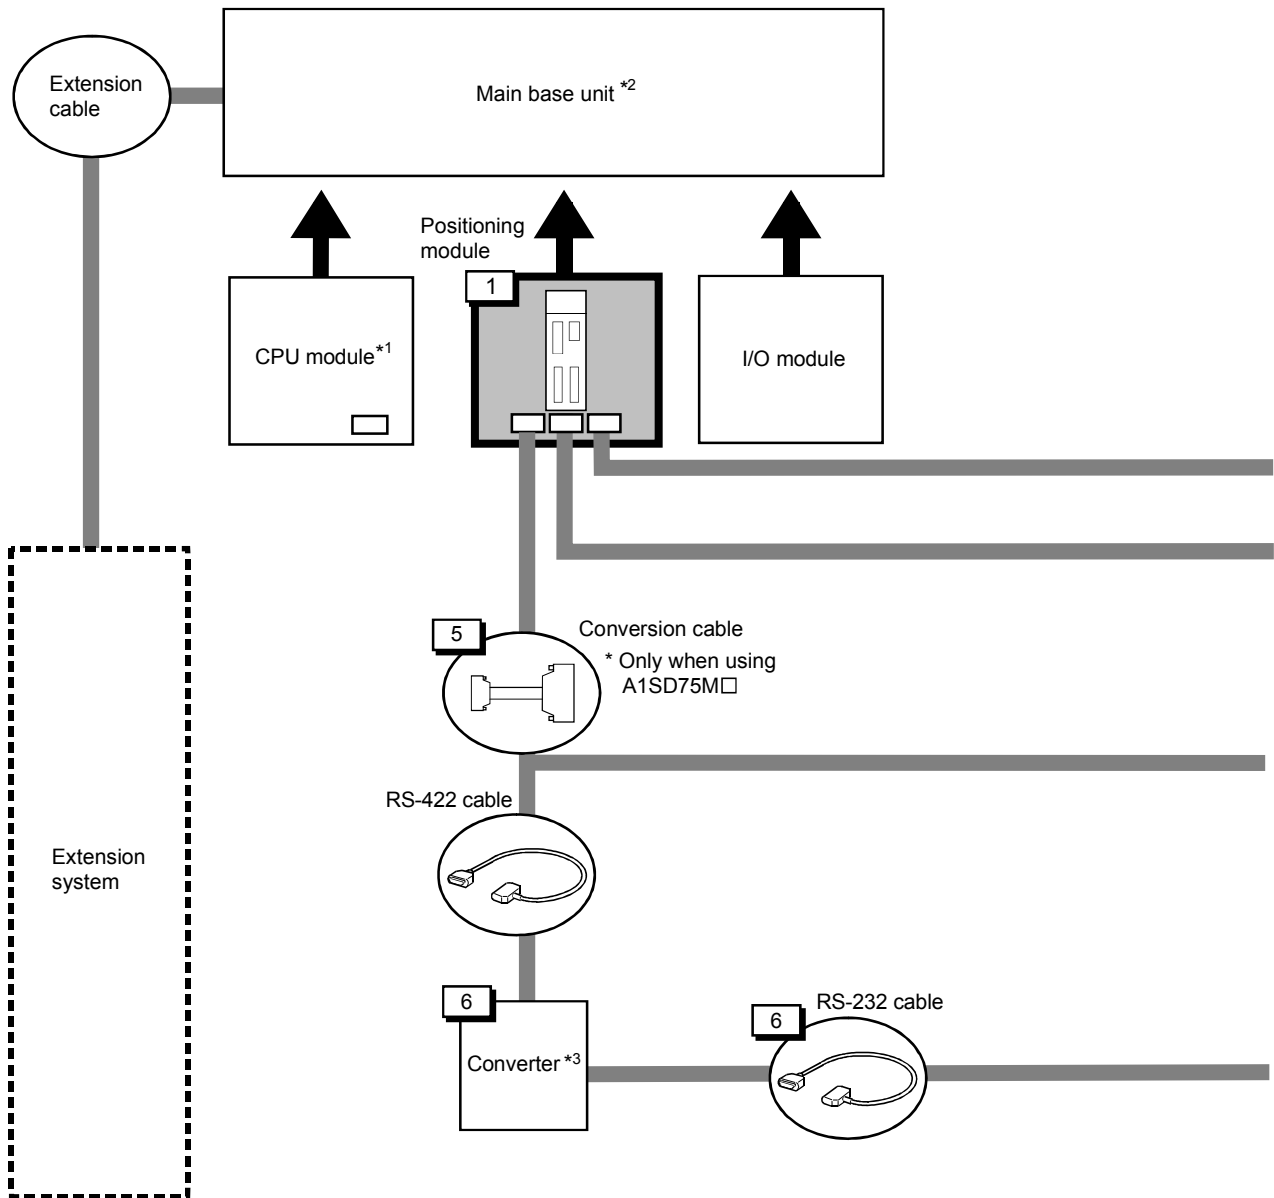

**REMARK**

- \*1 Refer to section "2.3 Applicable system" for the CPU modules that can be used.
- \*2 Refer to the CPU module User's Manual for the base units that can be used.
- \*3 Refer to the AD75 Software Package Operating Manual.
- \*4 Refer to section "2.2 List of configuration devices" for the usable servo amplifiers.

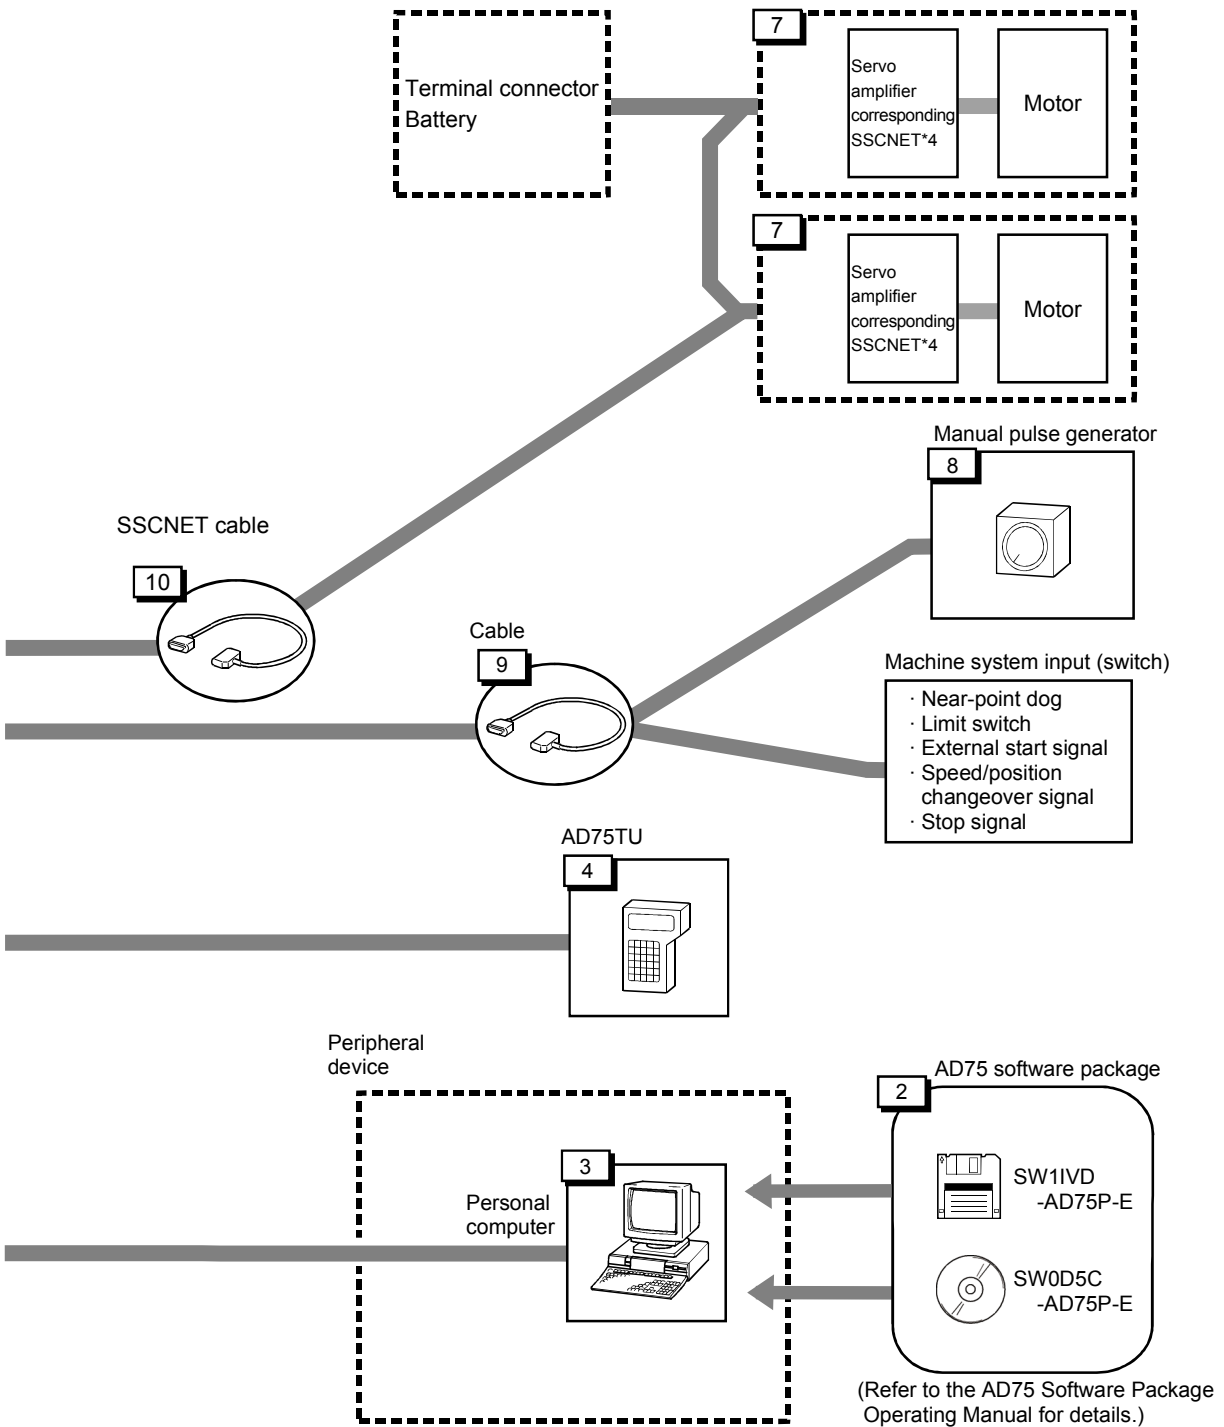

2.2 List of configuration devices

The positioning system using the AD75 is configured of the following devices.

No.	Part name	Type	Remarks
1	Positioning module	AD75M1 AD75M2 AD75M3 A1SD75M1 A1SD75M2 A1SD75M3	<p>No. of control axes</p> <p>· AD ..... Building block type · A1SD ... Compact building block type</p>
2	AD75 software package	SW1IVD-AD75P-E SW0D5C-AD75P-E	DOS/V personal computer software package For details, refer to the GX Configurator-AP Operating Manual.
3	Personal computer	DOS/V personal computer	(Prepared by user) Refer to the AD75 Software Package Operating Manual for details.
4	Teaching unit	AD75TU *1	Unit for setting, monitoring and testing the AD75 parameters and positioning data.
5	Conversion cable	A1SD75-C01H A1SD75-C01HA	Length 30cm   Cable for connecting RS-422 cable and A1SD75M□.
6	Connection cable (converter)	—	RS-232 cable for connecting AD75 with DOS/V personal computer, and RS-232/RS-422 converter. (Prepared by user) Refer to the AD75 Software Package Operating Manual for details.
7	Servo amplifier corresponding SSCNET	MR-H-B (MR-H-BN) MR-J-B MR-J2-B MR-J2S-B *2 MR-J2-03B5 *2	(Prepared by user)
8	Manual pulse generator	—	(Prepared by user) Recommended: MR-HDP01 (Mitsubishi Electric)
9	Connection cable (prepared by user)	—	Cable for connecting AD75 with manual pulse generator or machine system input signal. (Prepared by user) Refer to manual of connected device.
10	SSCNET cable	MR-HBUS□M MR-J2HBUS□M-A	Cable for connection between the AD75 and servo amplifier corresponding SSCNET or between the servo amplifiers corresponding SSCNET. (Prepared by user) 0.5m, 1m, 5m The SSCNET cable changes depending on the connected servo amplifier. Refer to the Specifications and Installation Guide or Instruction Manual of the used servo amplifier.

\*1 There are data that cannot be set to the servo parameters and some positioning parameters.  
For the data that can be set, refer to the manual of the teaching unit.

Use a sequence program to set the data that cannot be set with the teaching unit.

\*2 Set some servo parameters using a sequence program.

(Refer to section "5.2.10 Servo parameters for MR-J2S-B" or "5.2.11 Servo parameters for MR-J2-03B5".)



■ Specifications list of recommended manual pulse generator

Item	Specifications
Model name	MR-HDP01
Pulse resolution	25pulse/rev (100 pulse/rev after magnification by 4)
Output method	Voltage-output (power supply voltage -1V or more), Output current = Max. 20mA
Power supply voltage	4.5 to 13.2VDC
Current consumption	60mA
Life time	100 revolutions (at 200r/min)
Permitted axial loads	Radial load : Max. 19.6N
	Thrust load : Max. 9.8N
Operation temperature	-10 to 60°C (14 to 140°F)
Weight	0.4 (0.88) [kg(lb)]
Number of max. revolution	Instantaneous Max. 600r/min. normal 200r/min
Pulse signal status	2 signals : A phase, B phase, 90° phase difference
Friction torque	0.1N/m (at 20°C (68°F))

2.3 Applicable system

The CPU module and remote I/O station applicable for the AD75 are shown below.

■ CPU module

Programmable controller CPU *1	AD75	For AD75M1/AD75M2/AD75M3	For A1SD75M1/ A1SD75M2/ A1SD75M3	
ACPU		<ul style="list-style-type: none"> <li>• A0J2CPU</li> <li>• A0J2HCPU</li> <li>• A1CPU</li> <li>• A2CPU (-S1)</li> <li>• A3CPU</li> <li>• A1NCP</li> <li>• A2NCP (-S1)</li> <li>• A3NCP</li> <li>• A3MCP</li> <li>• A3HCP</li> <li>• A2ACP (-S1)</li> <li>• A3ACP</li> </ul>	<ul style="list-style-type: none"> <li>• A2UCPU (-S1)</li> <li>• A3UCPU</li> <li>• A4UCPU</li> <li>• A73CPU (-S3) *2</li> <li>• A81CPU</li> <li>• A52GCP</li> <li>• A1SCP</li> <li>• A1SJCP-S3</li> <li>• A2SCP</li> <li>• A2ASCP (-S1)</li> <li>• A1SHCP</li> <li>• A2SHCP</li> <li>• A1SJHCP</li> <li>• A2USHCP-S1</li> </ul>	<ul style="list-style-type: none"> <li>• A1SCP</li> <li>• A1SJCP (-S3)</li> <li>• A2SCP</li> <li>• A2ASCP (-S1)</li> <li>• A52GCP</li> <li>• A1SHCP</li> <li>• A2SHCP</li> <li>• A1SJHCP</li> </ul>
QnACPU		<ul style="list-style-type: none"> <li>• Q2ACP (-S1)</li> <li>• Q2ASCP (-S1)</li> <li>• Q2ASHCP (-S1)</li> </ul>	<ul style="list-style-type: none"> <li>• Q3ACP</li> <li>• Q4ACP</li> <li>• Q4ARCP</li> </ul>	<ul style="list-style-type: none"> <li>• Q2ASCP (-S1)</li> <li>• Q2ASHCP (-S1)</li> </ul>
QCPU (A mode)			-	<ul style="list-style-type: none"> <li>Q02CP-A</li> <li>Q02HCP-A</li> <li>Q06HCP-A</li> </ul>

\*1 Including programmable controller CPU with link function.

\*2 When using the A73CPU(-S3), mount the AD75M1, AD75M2 or AD75M3 on the extension base unit.

■ Remote I/O station (MELSECNET/10, MELSECNET (II), MELSECNET/B)

The AD75M1/AD75M2/AD75M3 and A1SD75M1/A1SD75M2/A1SD75M3 positioning modules are applicable for the data link system (MELSECNET (II)/B) and network system (MELSECNET/10) remote I/O station, with the exception of A0J2P25/R25 (remote I/O station).

## 2.4 Precautions for configuring system

The following precautions apply when configuring the positioning system using the AD75.

- Precautions for mounting base unit
- Precautions according to module version
- Precautions for using 3-axis module
- Precautions for configuring absolute position detection system
- Precautions for using servo amplifier MR-J2S-B, MR-J2-03B5

### 2.4.1 Precautions for mounting base unit

The AD75 can be mounted in a random slot of the main base unit or extension base unit. Note that the following precautions must be observed.

- (1) When mounting the AD75 in an extension base unit that has no power supply, take special care to the power capacity and the voltage drop.
- (2) The AD75M1/AD75M2/AD75M3 cannot be mounted into the final slot at the 7th extension stage of the A3CPU.
- (3) The AD75M1/AD75M2/AD75M3 cannot be mounted into the main base unit of the A73CPU(-S3).  
Simultaneous start and interpolation operation with the axis controlled by the A73(S3)CPU/A373CPU PCPU is not possible.
- (4) When mounting onto the programmable controller CPU or base unit, refer to the User's Manual of the programmable controller CPU being used.

POINT
One slot is required for mounting the AD75 onto the base unit. The No. of input/output points occupied in respect to the programmable controller CPU is 32 points. When assigning the I/O with the parameters, set as "special 32 points". There is no limit to the No. of mounted modules as long as the total is within the programmable controller CPU's No. of input/output points.

### 2.4.2 Precautions according to module version

Some AD75 cannot be used depending on the module version. Refer to "Appendix 4 Comparison with old versions of A1SD75M1/A1SD75M2/A1SD75M3, and AD75M1/AD75M2/AD75M3 models" for details.

### 2.4.3 Precautions for using 3-axis module

When configuring a positioning system using a 3-axis module (A1SD75M3, AD75M3), the following precautions must be observed.

- (1) No. of FROM/TO commands executed in one scan  
(Refer to section "6.1 Precautions for creating program" for details.)

The No. of FROM/TO commands (during 16-bit transmission), DFRO/DTO commands (during 32-bit transmission) and special function module device (U□\G□) executed in one scan will be as follows.

- When carrying out circular interpolation control or S-curve acceleration/deceleration: 4 times/axis
- When CHG signal is simultaneously input for two axes with speed/position changeover control: 4 times/axis
- Control other than the above: 10 times/axis

- (2) Execution of speed/position changeover control

If there is a timing at which the CHG signal is input simultaneously for 3 axes with the speed/position changeover control, split the AD75. (Example: Split into 1-axis and 2-axis.)

Furthermore, machine vibration could occur because of the speed fluctuation.

### 2.4.4 Precautions for configuring absolute position detection system

There are the following precautions for configuring an absolute position detection system.

- Infinite length feed control, e.g. control in the given direction only, is not allowed.
- Restrictions on the usable ranges of the movement amount, etc. according to the zero point address and feedback pulse count.

Refer to section "12.6 Absolute position restoration function" for details.

### 2.4.5 Precautions for machine zero point return control in absolute position detection system

When machine zero point return control is executed in the absolute position detection system, access is made to the FeRAM (Ferroelectric Random Access Memory). (Refer to section 12.6.)

(The FeRAM is a memory capable of fast read and write and non-volatile storage, i.e. data are not lost when power is switched off. Further it is operable at low voltage and features that a rewritable count is more than several orders of magnitude greater than those of the flash ROM and E<sup>2</sup>PROM.)

The FeRAM access count is maximum  $9.9999 \times 10^9$  times.

When the FeRAM access count exceeds  $9.9999 \times 10^9$  times, the absolute position (zero point position) cannot be restored normally at a system startup (power on, reset, etc.).

(Refer to "Appendix 4" for the zero point position storage destination and access count for the absolute position detection system, which change depending on the module version.)

### 2.4.6 Precautions for using servo amplifier MR-J2-03B5

The followings are the precautions on the use of the servo amplifier MR-J2-03B5.

- The parameters, whose specifications and setting ranges have been extend, added, or deleted from those of the MR-J2-B, cannot be set from a peripheral device.

For items and ranges that can be set from a peripheral device, refer to the section "5.2.11 Servo parameters for MR-J2-03B5.

Use a sequence program to set an item or range that cannot be set from a peripheral device.

### 2.4.7 Precautions for using servo amplifier MR-J2S-B

The followings are the precautions on the use of the servo amplifier MR-J2S-B.

- The parameters, whose specifications and setting ranges have been extend, added, or deleted from those of the MR-J2-B, cannot be set from a peripheral device.

For items and ranges that can be set from a peripheral device, refer to the section "5.2.10 Servo parameters for MR-J2S-B".

Use a sequence program to set an item or range that cannot be set from a peripheral device.

- Setting change required when connecting the MR-J2S-B, which was connected to a controller such as the A172SHCPU, to the AD75M.

The servo amplifier model selection setting of the MR-J2S-B which was connected to a controller such as the A172SHCPU is automatically set to "response with the MR-J2-B" (parameter No.37: 0).

If the MR-J2S-B is connected to the AD75M in such condition, "Ab" is displayed and the MR-J2S-B does not communicate with the AD75M.

When connecting the MR-J2S-B which was connected to a controller to the AD75M, change the servo amplifier model selection setting back to the default "response with the MR-J2-B" (parameter No.37: 0), using a set-up software (MRZJW3-SETUP161) before connecting them.



---

# CHAPTER 3

---

## SPECIFICATIONS AND FUNCTIONS

The various specifications of the AD75 are explained in this chapter.

The "General specifications", "Performance specifications", "List of functions", "Specifications of input/output signals with programmable controller CPU", and the "Specifications of interfaces with external devices", etc., are described as information required when designing the positioning system.

Confirm each specification before designing the positioning system.

3.1	General specifications .....	3-2
3.2	Performance specifications .....	3-3
3.3	List of functions .....	3-4
3.3.1	AD75 control functions.....	3-4
3.3.2	AD75 main functions.....	3-6
3.3.3	AD75 auxiliary functions and common functions.....	3-8
3.3.4	Combination of AD75 main functions and auxiliary functions.....	3-10
3.4	Specifications of input/output signals with programmable controller CPU.....	3-12
3.4.1	List of input/output signals with programmable controller CPU .....	3-12
3.4.2	Details of input signals (AD75 → Programmable controller CPU).....	3-13
3.4.3	Details of output signals (Programmable controller CPU → AD75).....	3-15
3.5	Specifications of interfaces with external devices .....	3-16
3.5.1	Electrical specifications of input signals.....	3-16
3.5.2	Signal layout for external device connection connector .....	3-17
3.5.3	List of input signal details.....	3-18
3.5.4	Interface internal circuit.....	3-19

### 3.1 General specifications

For general specifications, refer to the user's manual for the CPU module used.



3.2 Performance specifications

Item	Model	A1SD75M1 AD75M1	A1SD75M2 AD75M2	A1SD75M3 AD75M3	
No. of control axes		1 axis	2 axes	3 axes	
Interpolation function		None	2-axis linear interpolation 2-axis circular interpolation	2-axis linear interpolation 2-axis circular interpolation	
Control method		PTP (Point To Point) control, path control (both linear and arc can be set), speed control, speed/position changeover control			
Control unit		mm, inch, degree, pulse			
Positioning data		Set with peripheral device : 600 data (positioning data No. 1 to 600)/axis setting possible Set with sequence program : 100 data (positioning data No. 1 to 100)/axis setting possible			
Backup		Parameters and positioning data can be saved on flash ROM (battery-less).			
Positioning	Positioning method	PTP control : Incremental method/absolute method Speed/position changeover : Incremental method Path control : Incremental method/absolute method			
	Positioning range	Absolute method	When system is not absolute position detection system Feedback pulse count = 8192	When system is absolute position detection system (refer to section 12.6) Feedback pulse count = 16384	
		Incremental method	• -214748364.8 to 214748364.7 (μm) • -21474.83648 to 21474.83647 (inch) • 0 to 359.99999 (degree) • -2147483648 to 2147483647 (pulse)	• -26843545.6 to 26843545.5 (μm) • -2684.35456 to 2684.35455 (inch) • 0 to 359.99999 (degree) • -268435456 to 268435455 (pulse)	• -53687091.2 to 53687091.1 (μm) • -5368.70912 to 5368.70911 (inch) • 0 to 359.99999 (degree) • -536870912 to 536870911 (pulse)
		Speed/position changeover control	• 0 to 214748364.7 (μm) • 0 to 21474.83647 (inch) • 0 to 21474.83647 (degree) • 0 to 2147483647 (pulse)	• 0 to 26843545.5 (μm) • 0 to 2684.35455 (inch) • 0 to 359.99999 (degree) • 0 to 268435455 (pulse)	• 0 to 53687091.1 (μm) • 0 to 5368.70911 (inch) • 0 to 359.99999 (degree) • 0 to 536870911 (pulse)
	Speed command	0.01 to 6000000.00 (mm/min) 0.001 to 600000.000 (inch/min) 0.001 to 600000.000 (degree/min) 1 to 1000000 (pulse/s)			
	Acceleration/deceleration process	Automatic trapezoidal acceleration/deceleration, S-curve acceleration/deceleration			
	Acceleration/deceleration time	Changeover between 1 to 65535 (ms)/1 to 8388608 (ms) possible Four patterns can be set each for acceleration time and deceleration time			
	Sudden stop deceleration time	Changeover between 1 to 65535 (ms)/1 to 8388608 (ms) possible (Same range as acceleration/deceleration time)			
	External device connection connector	10136-3000VE (soldered type, accessory) 10136-6000EL (crimp type, optional)			
	Applicable wire size	For 10136-3000VE : Approximately 0.05 to 0.2mm <sup>2</sup> (AWG30 to 24) For 10136-6000EL : Approximately 0.08mm <sup>2</sup> (AWG28)			
Max. output command speed	1Mpps				
Max. connection distance between servos (max. extension distance of SSCNET connection cable)	30m				
Internal current consumption (5VDC)	A1SD75M□: 0.7A or less, AD75M□: 0.7A or less				
Flash ROM write count	Maximum 100,000 times				
E <sup>2</sup> PROM/FeRAM access count in absolute position detection system*	E <sup>2</sup> PROM: Maximum 100,000 times				
	FeRAM : Maximum 9.9999 × 10 <sup>9</sup> times				
No. of occupied input/output points	32 points (I/O assignment: special function module 32 points)				
Outline dimensions	A1SD75M□:130(H) × 34.5(W) × 93.6(D)mm , AD75M□:250(H) × 37.5(W) × 106(D)mm				
Weight	A1SD75M□: 0.35kg , AD75M□: 0.45kg				

\* Whether E<sup>2</sup>PROM or FeRAM is built in changes depending on the hardware version of the module. (Refer to Appendix 4.)

### 3.3 List of functions

#### 3.3.1 AD75 control functions

The AD75 has several functions. In this manual, the AD75 functions are categorized and explained as follows.

##### ■ Main functions

###### (1) Zero point return control

"Zero point return control" is a function that established the start point for carrying out positioning control, and carries out positioning toward that start point. This is used to return a workpiece, located at a position other than the zero point when the power is turned ON or after positioning stop, to the zero point. The "zero point return control" is preregistered in the AD75 as the "Positioning start data No. 9001 (Machine zero point return)", and "Positioning start data No. 9002 (High-speed zero point return)". (Refer to "CHAPTER 8 ZERO POINT RETURN CONTROL".)

###### (2) Main positioning control

This control is carried out using the "Positioning data" stored in the AD75. Basic control, such as position control and speed control, is executed by setting the required items in this "positioning data" and starting that positioning data. An "operation pattern" can be set in this "positioning data", and with this whether to carry out control with continuous positioning data (ex.: positioning data No. 1, No. 2, No. 3, ...) can be set. (Refer to "CHAPTER 9 MAIN POSITIONING CONTROL".)

###### (3) Advanced positioning control

This control executes the "positioning data" stored in the AD75 using the "positioning start information". The following types of applied positioning control can be carried out.

- Random blocks, handling several continuing positioning data items as "blocks", can be executed in the designated order.
- "Condition judgment" can be added to position control and speed control.
- The positioning data having the same No. and set for multiple axes can be started simultaneously. (Position/speed commands are output simultaneously to multiple servos.)
- The designated positioning data can be executed repeatedly, etc., (Refer to "CHAPTER 10 ADVANCED POSITIONING CONTROL".)

###### (4) Manual control


By inputting a signal into the AD75 from an external source, the AD75 will output a random position/speed command and carry out control. Use this manual control to move the workpiece to a random position (JOG operation), and to finely adjust the positioning (manual pulse generator operation), etc. (Refer to "CHAPTER 11 MANUAL CONTROL".)

##### ■ Auxiliary functions

When executing the main functions, control compensation, limits and functions can be added. (Refer to "CHAPTER 12 CONTROL AUXILIARY FUNCTIONS".)

##### ■ Common functions

Common control using the AD75 for "parameter initialization" or "backup of execution data" can be carried out. (Refer to "CHAPTER 13 COMMON FUNCTIONS".)

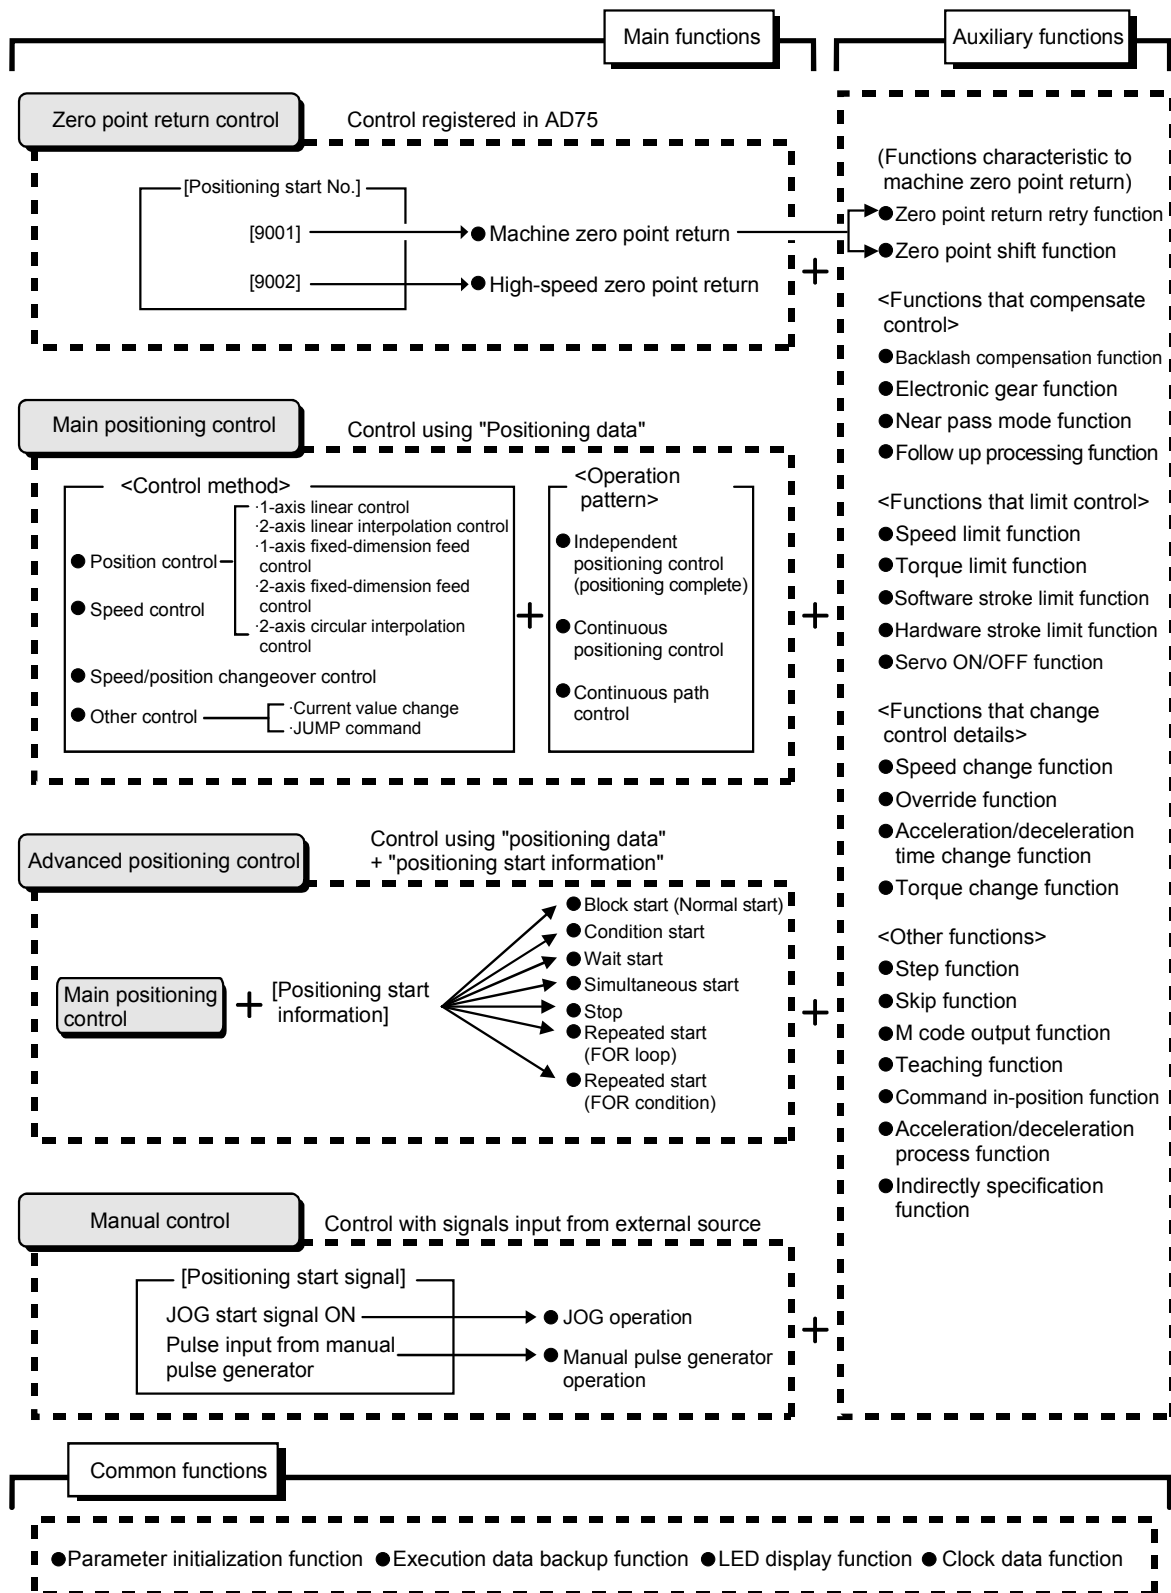

3.3.2 AD75 main functions

The outline of the main functions for positioning control with the AD75 are described below. (Refer to "SECTION 2" for details on each function.)

Main functions		Details	Reference section
Zero point return control	Machine zero point return control	Mechanically establishes the positioning start point. (Positioning start No.9001)	8.2
	High-speed zero point return control	Positions to the zero point address ( <u>Pr.47</u> ) stored in the AD75 with machine zero point return. (Positioning start No.9002)	8.3
Main positioning control	Position control	Linear control (1-axis linear control) (2-axis linear interpolation control)	Positions with a linear path to the address set in the positioning data or the position designated with the movement amount. 9.2.2 9.2.3
		Fixed-dimension feed control (1-axis fixed-dimension feed control) (2-axis fixed-dimension feed control)	Positions the movement amount designated with the movement amount set in the positioning data. (With fixed-dimension feed control, the " <u>Md.29</u> Current feed value" is set to "0" when starting. With 2-axis fixed-dimension feed control, the linear path will be fixed-dimension fed with interpolation.) 9.2.4 9.2.5
		2-axis circular interpolation control	Positions with an arc path to the address set in the positioning data, or the position designated with the movement amount, auxiliary point or center point. 9.2.6 9.2.7
	Speed control		Continuously outputs the pulses corresponding to the command speed set in the positioning data. 9.2.8
	Speed/position changeover control		First, carries out speed control, and then carries out position control (positioning of designated movement amount) by turning the "speed/position changeover signal" ON. 9.2.9
	Other control	Current value change	Changes the Current feed value ( <u>Md.29</u> ) to the address set in the positioning data. The following two methods can be used. (The machine feed value cannot be changed.) • Current value change using positioning data • Current value change using current value change start No. (No. 9003) 9.2.10
		JUMP command	Unconditionally or conditionally jumps to designated positioning data No. 9.2.11

Main functions		Details	Reference section
Advanced positioning control	Block start (Normal start)	With one start, executes the positioning data in a random block with the set order.	10.3.2
	Condition start	Carries out condition judgment set in the "condition data" for the designated positioning data, and then executes the "start block data". When the condition is established, the "start block data" is executed. When not established, that "start block data" is ignored, and the next point's "start block data" is executed.	10.3.3
	Wait start	Carries out condition judgment set in the "condition data" for the designated positioning data, and then executes the "start block data". When the condition is established, the "start block data" is executed. When not established, stops the control until the condition is established. (Waits.)	10.3.4
	Simultaneous start	Simultaneously executes the positioning data having the No. for the axis designated with the "condition data". (Outputs position/speed commands at the same timing.)	10.3.5
	Stop	Stops the positioning operation.	10.3.6
	Repeated start (FOR loop)	Repeats the program from the start block data set with the "FOR loop" to the start block data set in "NEXT" for the designated No. of times.	10.3.7
	Repeated start (FOR condition)	Repeats the program from the start block data set with the "FOR condition" to the start block data set in "NEXT" until the conditions set in the "condition data" are established.	10.3.8
Manual control	JOG operation	Outputs a position/speed command to the servo amplifier while the JOG start signal is ON.	11.2
	Manual pulse generator operation	Outputs the position/speed command to the servo amplifier according to the input pulses from the manual pulse generator. (Carry out fine adjustment, etc., at the pulse level.)	11.3

With the "main positioning control" ("advanced positioning control"), whether or not to continuously execute the positioning data can be set with the "operation pattern".  
Outlines of the "operation patterns" are given below.

Da.1 Operation pattern	Details	Reference section
Independent positioning control (positioning complete)	When "independent positioning control" is set for the operation pattern of the started positioning data, only the designated positioning data will be executed, and then the positioning will end.	9.1.2
Continuous positioning control	When "continuous positioning control" is set for the operation pattern of the started positioning data, after the designated positioning data is executed, the program will stop once, and then the next following positioning data will be executed.	
Continuous path control	When "continuous path control" is set for the operation pattern of the started positioning data, the designated positioning data will be executed, and then without decelerating, the next following positioning data will be executed.	

3.3.3 AD75 auxiliary functions and common functions

■ Auxiliary functions

The functions that assist positioning control using the AD75 are described below.  
(Refer to "SECTION 2" for details on each function.)

Auxiliary function		Details	Reference section
Functions characteristic to machine zero point return	Zero point return retry function	This function retries the machine zero point return with the upper/lower limit switches during machine zero point return. This allows machine zero point return to be carried out even if the axis is not returned to before the near-point dog with JOG operation, etc.	12.2.1
	Zero point shift function	After returning to the machine zero point, this function compensates the position by the designated distance from the machine zero point position and sets that position as the zero point address.	12.2.2
Functions that compensate control	Backlash compensation function	This function compensates the mechanical backlash. Position/speed commands equivalent to the set backlash amount are output each time the movement direction changes.	12.3.1
	Electronic gear function	By setting the movement amount per pulse, this function can freely change the machine movement amount per commanded pulse. When the movement amount per pulse is set, a flexible positioning system that matches the machine system can be structured.	12.3.2
	Near pass mode function	This function suppresses the machine vibration when the speed changes during continuous path control in the interpolation control.	12.3.3
	Follow up processing function	This function monitors the motor rotation amount (real current value) of the motor in a servo OFF status and reflects it on the current feed value.	12.3.4
Functions that limit control	Speed limit function	If the command speed exceeds "[Pr.7] Speed limit value" during control, this function limits the commanded speed to within the "[Pr.7] Speed limit value" setting range.	12.4.1
	Torque limit function	If the torque generated by the servomotor exceeds "[Pr.18] Torque limit setting value" during control, this function limits the generated torque to within the "[Pr.18] Torque limit setting value" setting range.	12.4.2
	Software stroke limit function	If a command outside of the upper/lower limit stroke limit setting range, set in the parameters, is issued, this function will not execute positioning for that command.	12.4.3
	Hardware stroke limit function	This function carries out deceleration stop with the limit switch connected to the AD75 external device connection connector.	12.4.4
	Servo ON/OFF function	This function performs all axes servo ON/OFF using the all axes servo ON signal (Y15). This function performs the servo ON/OFF of each axis using "[Cd.100] Servo OFF command".	12.4.5
Functions that change control details	Speed change function	This function changes the speed during positioning. Set the new speed in the speed change buffer memory ([Cd.16] New speed value), and change the speed with the Speed change request ([Cd.17]).	12.5.1
	Override function	This function changes the speed within a percentage of 1 to 300% during positioning. This is executed using "[Cd.18] Positioning operation speed override".	12.5.2
	Acceleration/deceleration time change function	This function changes the acceleration/deceleration time during speed change.	12.5.3
	Torque change function	This function changes the "torque limit value" during control.	12.5.4
Absolute position restoration function *1		This function restores the absolute position of the axis at servo power-on.	12.6

\*1 The "servomotor with absolute position detector that can configure an absolute position detection system" is required.

Auxiliary function		Details	Reference section
Other functions	Step function	This function temporarily stops the operation to confirm the positioning operation during debugging, etc. The operation can be stopped at each "automatic deceleration" or "positioning data".	12.7.1
	Skip function	This function stops (decelerates to a stop) the positioning being executed when the skip signal is input, and carries out the next positioning.	12.7.2
	M code output function	This function issues an auxiliary work (clamp or drill stop, tool change, etc.) according to the code No. (0 to 32767) set for each positioning data.	12.7.3
	Teaching function	This function stores the address positioned with manual control into the positioning address having the designated positioning data No. ( <u>  </u> Cd.5 <u>  </u> ).	12.7.4
	Command in-position function	At each automatic deceleration, this function calculates the remaining distance for the AD75 to reach the positioning stop position, and when the value is less than the set value, sets the "command in-position flag". When using another auxiliary work before ending the control, use this function as a trigger for the auxiliary work.	12.7.5
	Acceleration/deceleration process function	This function adjusts the control acceleration/deceleration.	12.7.6
	Indirectly specification function	This function specifies indirectly and starts the positioning data No.	12.7.7

■ Common functions

The outline of the functions executed as necessary are described below.  
(Refer to "SECTION 2" for details on each function.)

Common functions	Details	Reference section
Parameter initialization function	This function returns the "setting data" stored in the AD75 flash ROM to the default values. The following two methods can be used. 1) Method using sequence program 2) Method using AD75 software package	13.2
Execution data backup function	This functions stores the "setting data", currently being executed, into the flash ROM. 1) Method using sequence program 2) Method using AD75 software package	13.3
LED display function	This function displays the AD75 operation state, signal state and error details on the 17-segment LED on the front of the main module. The display details can be changed with the mode switch on the front of the main module.	13.4
Clock data function	This function sets the programmable controller CPU clock data in the AD75. This used for the various history data.	13.5

3.3.4 Combination of AD75 main functions and auxiliary functions

With positioning control using the AD75, the main functions and auxiliary functions can be combined and used as necessary. A list of the main function and auxiliary function combinations is given below.

Main functions		Auxiliary functions	Functions characteristic to machine zero point return		Combination with operation pattern.*1
			Zero point return retry function	Zero point shift function	
Zero point return control	Machine zero point return control		×	○	○
	High-speed zero point return control		×	-	-
Main positioning control	Position control	1-axis linear control	○	-	-
		2-axis linear interpolation control	○	-	-
		1-axis fixed-dimension feed control	△ (Continuous path control cannot be set)	-	-
		2-axis fixed-dimension feed control (interpolation)	△ (Continuous path control cannot be set)	-	-
		2-axis circular interpolation control	○	-	-
	Speed control		△ (Only independent positioning control can be set)	-	-
	Speed/position changeover control		△ (Continuous path control cannot be set)	-	-
	Other control	Current value change	△ (Continuous path control cannot be set)	-	-
JUMP command		△ (Independent positioning control cannot be set)	-	-	
Manual control	JOG operation		×	-	-
	Manual pulse generator operation		×	-	-

◎: Always combine, ○: Combination possible, △: Combination limited, ×: Combination not possible, -: Setting invalid

\*1 The operation pattern is one of the "positioning data" setting items.

\*2 Change the current value using the positioning data. Disabled for a start of positioning start No. 9003.



	Functions that compensate control			Functions that limit control				Functions that change control details				Other functions						
	Backlash compensation function	Electronic gear function	Near pass mode function	Speed limit function	Torque limit function	Software stroke limit function	Hardware stroke limit function	Speed change function	Override function	Acceleration/ deceleration time change function	Torque change function	Step function	Skip function	M code output function	Teaching function	Command in-position function	Acceleration/deceleration process function	Indirectly specification function
	○	○	×	○	○	×	◎	△	△	×	○	×	×	×	×	×	○	×
	○	○	×	○	○	×	◎	○	○	×	○	×	×	×	×	×	○	×
	○	○	○	○	○	○	◎	○	○	○	○	○	○	○	×	○	○	○
	○	○	○	○	○	○	◎	○	○	○	○	○	○	○	×	○	○	○
	○	○	○	○	○	○	◎	○	○	○	○	○	○	○	×	○	○	○
	○	○	○	○	○	○	◎	○	○	○	○	○	○	○	×	○	○	○
	○	○	○	○	○	○	◎	○	○	○	○	○	○	○	×	○	○	○
	○	○	×	○	○	○	◎	○	○	○	○	×	×	○	×	×	○	○
	○	○	×	○	○	○	◎	○	○	○	○	○	○	○	×	○	○	○
	-	-	-	-	-	-	◎	-	-	-	-	-	-	-	-	-	-	△*2
	-	-	-	-	-	-	◎	-	-	-	-	-	-	-	-	-	-	○
	○	○	×	○	○	○	◎	○	○	×	○	×	×	×	○	×	○	-
	○	○	×	×	○	○	◎	×	×	×	○	×	×	×	○	×	×	-

**REMARK**

- The "common functions" are functions executed as necessary. (These are not combined with the control.)
- "Advanced positioning control" is a control used in combination with the "main positioning control". For combinations with the auxiliary functions, refer to the combinations of the "main positioning control" and auxiliary functions.

3.4 Specifications of input/output signals with programmable controller CPU

3.4.1 List of input/output signals with programmable controller CPU

The AD75 uses 32 input points and 32 output points for exchanging data with the programmable controller CPU.

The input/output signals for when the AD75 is mounted in slot No. 0 of the main base unit are shown below.

Device X refers to the signals input from the AD75 to the programmable controller CPU, and device Y refers to the signals output from the programmable controller CPU to the AD75.

Signal direction: AD75 → Programmable controller CPU		Signal direction: Programmable controller CPU → AD75		
Device No.	Signal name	Device No.	Signal name	
X0	AD75 READY	Y0       ↓       YF	Use prohibited	
X1	Axis 1			
X2	Axis 2			
X3	Axis 3			
X4	Axis 1			
X5	Axis 2			
X6	Axis 3			
X7	Axis 1			
X8	Axis 2			
X9	Axis 3			
XA	Axis 1			
XB	Axis 2			
XC	Axis 3			
XD	Axis 1			
XE	Axis 2			
XF	Axis 3			
X10       ↓       X1F	Use prohibited	Y10	Axis 1	
		Y11	Axis 2	
		Y12	Axis 3	
		Y13	Axis 1	
		Y14	Axis 2	
		Y15	All axes servo ON	
		Y16	Axis 1	Forward run JOG start
		Y17	Axis 1	Reverse run JOG start
		Y18	Axis 2	Forward run JOG start
		Y19	Axis 2	Reverse run JOG start
		Y1A	Axis 3	Forward run JOG start
		Y1B	Axis 3	Reverse run JOG start
		Y1C	Axis 3	Axis stop
		Y1D	PLC READY	
		Y1E	Use prohibited	
Y1F				

**Important**  
 [Y1E], [Y1F], [Y0 to YF] and [X10 to X1F] are used by the system, and cannot be used by the user.  
 If used, the operation of the AD75 will not be guaranteed.  
 Note that when the AD75 is mounted on the remote I/O station, [YD] to [YF] can be turned OFF in the user program.

3.4.2 Details of input signals (AD75 → Programmable controller CPU)

The ON/OFF timing and conditions, etc., of the input signals are shown below.

Device No.	Signal name		Details
X0	AD75 READY		<p>OFF: READY complete ON : Not ready/WDT error *3</p> <ul style="list-style-type: none"> <li>When the PLC READY signal [Y1D] turns from OFF to ON, the parameter setting range is checked, and if there is no error, this signal turns OFF.</li> <li>When the PLC READY signal [Y1D] turns OFF, this signal turns ON.</li> <li>When a WDT error occurs, this signal turns ON.</li> <li>This is used for the interlock with the sequence program, etc.</li> </ul>
X1 X2 X3	Axis 1 Axis 2 Axis 3	Start complete	<p>OFF: Starting incomplete ON : Start complete</p> <ul style="list-style-type: none"> <li>When the positioning start signal turns ON, and the AD75 starts the positioning process, this signal turns ON. (The start complete signal also turns ON during zero point return control.)</li> </ul>
X4 X5 X6	Axis 1 Axis 2 Axis 3	BUSY *1	<p>OFF: Not BUSY ON : BUSY</p> <ul style="list-style-type: none"> <li>This signal turns ON at the start of positioning, zero point return or JOG, and turns OFF after the "[Da.8] Dwell time" has passed after positioning stop. (This signal remains ON during positioning.) This signal turns OFF when stopped with step operation.</li> <li>During manual pulse generator operation, this signal turns ON while the "[Cd.22] Manual pulse generator enable flag" is ON.</li> <li>This signal turns OFF at an error complete or stop.</li> </ul>
X7 X8 X9	Axis 1 Axis 2 Axis 3	Positioning complete *2	<p>OFF: Positioning incomplete ON : Positioning complete</p> <ul style="list-style-type: none"> <li>This signal turns ON for the time set in "[Pr.41] Positioning complete signal output time" from the time that each positioning data No. positioning control is completed. (This does not turn ON when "[Pr.41] Positioning complete signal output time" is 0.)</li> <li>If positioning is started (including zero point return), JOG operation or manual pulse generator operation start is executed while this signal is ON, the signal will turn OFF.</li> <li>This signal will not turn ON when speed control or positioning is canceled midway.</li> <li>After the BUSY signal [X4,X5,X6] turns OFF, the positioning complete signal [X7,X8,X9] turns ON.</li> </ul>
XA XB XC	Axis 1 Axis 2 Axis 3	Error detection	<p>OFF: No error ON : Error occurrence</p> <ul style="list-style-type: none"> <li>This signal turns ON when an error listed in section 14.1 occurs, and turns OFF when the error is reset.</li> </ul>
XD XE XF	Axis 1 Axis 2 Axis 3	M code ON	<p>OFF: No M code setting ON : M code set</p> <ul style="list-style-type: none"> <li>In the WITH mode, this signal turns ON when the positioning data is started, and in the AFTER mode, this signal turns ON when the positioning data positioning is completed.</li> <li>This signal turns OFF with the "[Cd.14] M code OFF request".</li> <li>When there is no M code designated (when "[Da.9] M code" is 0), this signal will remain OFF.</li> <li>With using continuous path control for the positioning operation, the positioning will continue even when this signal does not turn OFF. However, a warning will occur. (Warning code: 503)</li> <li>When the PLC READY signal [Y1D] turns OFF, the M code ON signal will also turn OFF.</li> <li>If operation is started while the M code is ON, an error will occur. (Error code: 536)</li> </ul>

**Important**

- \*1 When position control of movement amount 0 is executed, the BUSY signal also turns ON. However, since the ON time is short, the ON status may not be detected in the sequence program.
- \*2 AD75 positioning complete refers to when the output of position/speed commands from AD75 is completed.  
Thus, even if the AD75 positioning complete signal turns ON, the system may continue to operate.
- \*3 If WDT error occurs, status of I/O signals cannot be checked by the monitor function of GX Configurator-AP.  
To check the status of WDT error by the AD75 READY signal [X0], use the device monitor of GX Developer.



## 3.4.3 Details of output signals (Programmable controller CPU → AD75)

The ON/OFF timing and conditions, etc., of the output signals are shown below.

Device No.	Signal name		Details	
Y10 Y11 Y12	Axis 1 Axis 2 Axis 3	Positioning start	OFF : No positioning start request ON : Positioning start requested	<ul style="list-style-type: none"> <li>Zero point return or positioning operation is started.</li> <li>The positioning start signal is valid at the rising edge, and carries out starting.</li> <li>When the positioning start signal turns ON during BUSY, the warning "start during operation" (warning code: 100) will occur.</li> </ul>
Y13 Y14 Y1C	Axis 1 Axis 2 Axis 3	Axis stop	OFF : No axis stop request ON : Axis stop requested	<ul style="list-style-type: none"> <li>When the axis stop signal turns ON, the zero point return control, positioning control, JOG operation and manual pulse generator operation will stop. Since ON/OFF is detected at intervals of 4ms, set the ON time to 4ms or longer when stopping the axis.</li> <li>By turning the axis stop signal ON during positioning operation, the positioning operation will be "stopped".</li> <li>Whether to decelerate or suddenly stop for each stop group can be selected with "[Pr.38] Stop group 1 sudden stop selection" to "[Pr.40] Stop group 3 sudden stop selection".</li> <li>During interpolation control of the positioning operation, if the axis stop signal for either axis turns ON, both axes will decelerate and stop.</li> </ul>
Y15	All axes servo ON		OFF : Servo operation not possible ON : Servo operation possible	<ul style="list-style-type: none"> <li>This signal makes all axes servos operable. For servo ON/OFF, refer to section "12.4.5 Servo ON/OFF function".</li> </ul>
Y16 Y17 Y18 Y19 Y1A Y1B	Axis 1 Axis 1 Axis 2 Axis 2 Axis 3 Axis 3	Forward run JOG start Reverse run JOG start Forward run JOG start Reverse run JOG start	OFF : JOG not started ON : JOG started	<ul style="list-style-type: none"> <li>When the JOG start signal is ON, JOG operation will be carried out at the "[Cd.19] JOG speed". When the JOG start signal turns OFF, the system will decelerate and stop.</li> </ul>
Y1D	PLC READY		OFF : PLC READY OFF ON : PLC READY ON	<p>(a) This signal notifies the AD75 that the programmable controller CPU is normal.</p> <ul style="list-style-type: none"> <li>This is turned ON/OFF with the sequence program.</li> <li>The PLC READY signal is turned ON during positioning control, zero point return control, JOG operation and manual pulse generator operation, except for in the peripheral device test mode.</li> </ul> <p>(b) When data (parameters, etc) are changed, the PLC READY signal will turn OFF depending on the item. (Refer to CHAPTER 7.)</p> <p>(c) The following processes are carried out when the PLC READY signal turns from OFF to ON.</p> <ul style="list-style-type: none"> <li>The parameter setting range is checked.</li> <li>The AD75 READY complete signal [X0] turns OFF.</li> </ul> <p>(d) The following processes are carried out when the PLC READY signal turns from ON to OFF.</p> <p>In this case, the OFF time will be 100ms or more.</p> <ul style="list-style-type: none"> <li>The AD75 READY signal [X0] turns ON.</li> <li>The operating axis stops.</li> <li>The M code ON signal [XD to XF] for each axis turns OFF, and "0" is stored in "[Md.32] Valid M code".</li> </ul> <p>(e) When parameters or positioning data (No.1 to 100) are written from the peripheral device or programmable controller CPU to the flash ROM, the PLC READY signal will turn OFF.</p>

3.5 Specifications of interfaces with external devices

3.5.1 Electrical specifications of input signals

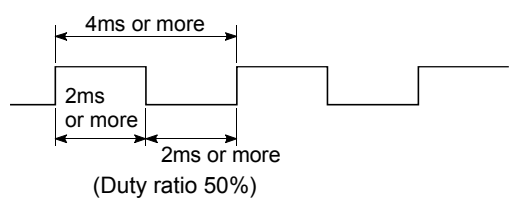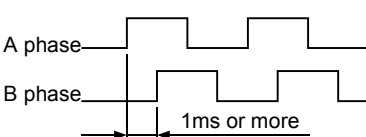

Signal name	Rated input voltage/current	Working voltage range	ON voltage/current	OFF voltage/current	Input resistance	Response time
Manual pulse generator A phase (PULSER A) Manual pulse generator B phase (PULSER B)	5VDC/5mA	4.5 to 6.1VDC	2.5VDC or more/ 3.5mA or more	1VDC or less/ 0.1mA or less	Approx. 1.5kΩ	1ms or less
<p>1) Pulse width</p>  <p>2) Phase difference</p>  <p>When the A phase has advanced more than the B phase, the positioning address (current value) increases.</p>						
Near-point dog signal (DOG) Stop signal (STOP) Upper limit signal (FLS) Lower limit signal (RLS) External start signal (STRT) Speed/position changeover signal (CHG)	24VDC/5mA	19.2 to 26.4VDC	17.5VDC or more/ 3.5mA or more	7VDC or less/ 1.7mA or less	Approx. 4.7kΩ	4ms or less

3.5.2 Signal layout for external device connection connector

The specifications of the connector section, which is the input interface for the AD75 and external device, are shown below.

The signal layout for the AD75 external device connection connector (for one axis) is shown.



(The signal layout for the external device connection connector is the same for axis 1 to axis 3.)

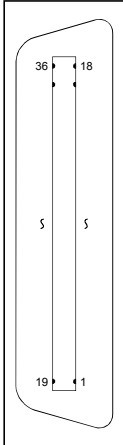Pin layout	Pin No.	Signal name		Signal direction AD75 – external	Connection destination
A1SD75M1/A1SD75M2/ A1SD75M3 (Main body side) 	36	Common	COM	↔	(External device)
	35	Common	COM	↔	(External device)
	34	Vacant			
	↓	↓			
	29	Vacant			
	28	Manual pulse generator	PULSER B-	←	Manual pulse generator
	27	Manual pulse generator	PULSER A-	←	Manual pulse generator
	26	Vacant			
	↓	↓			
	17	Vacant			
AD75M1/AD75M2/AD75M3 (Main body side) 	16	External start signal *	STRT	←	(External device)
	15	Speed/position changeover signal	CHG	←	(External device)
	14	Stop signal	STOP	←	(External device)
	13	Lower limit signal	RLS	←	Limit switch
	12	Upper limit signal	FLS	←	Limit switch
	11	Near-point dog signal	DOG	←	Near-point dog
	10	Manual pulse generator	PULSE B+	←	Manual pulse generator
	9	Manual pulse generator	PULSE A+	←	Manual pulse generator
	8	Vacant			
	↓	↓			
	1	Vacant			

\* The signal application follows "Pr.43 External start function selection".

3.5.3 List of input signal details

The details of each AD75 external device connection connector (for 1 axis) signal are shown below.

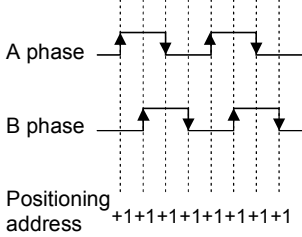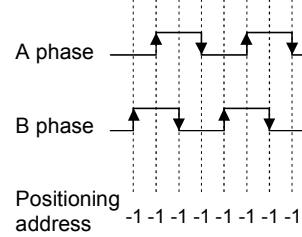Signal name	Pin No.	Signal details
Common	36 35	<ul style="list-style-type: none"> <li>Common for near-point dog signal, upper/lower limit, stop signal, speed/position changeover signal, and external start signal.</li> </ul>
Manual pulse generator (B phase -) Manual pulse generator (A phase -)	28 27	<ul style="list-style-type: none"> <li>Input the pulse signal from the manual pulse generator A phase and B phase.</li> <li>If the A phase is advanced more than the B phase, the positioning address will increase at the rising edge and falling edge of each phase.</li> <li>If the B phase is advanced more than the A phase, the positioning address will decrease at the rising edge and falling edge of each phase.</li> </ul>
Manual pulse generator (B phase +) Manual pulse generator (A phase +)	10 9	<p>[When increased]</p>  <p>[When decreased]</p> 
External start signal	16	<ul style="list-style-type: none"> <li>Use as the positioning start, speed change request and skip request input signal from an external source.</li> <li>Set which function to use the external start signal with in "Pr.43 External start function selection".</li> </ul>
Speed/position changeover signal	15	<ul style="list-style-type: none"> <li>Input the control changeover signal for the speed/position changeover control.</li> </ul>
Stop signal	14	<ul style="list-style-type: none"> <li>Input when positioning is stopped.</li> <li>When this signal turns ON, the AD75 will stop the positioning being executed. After that, even if this signal turns from ON for OFF, the system will not start.</li> </ul>
Lower limit signal	13	<ul style="list-style-type: none"> <li>This signal is input from the limit switch installed at the stroke lower limit position.</li> <li>Positioning will stop when this signal turns OFF.</li> <li>When zero point return retry function is valid, this will be the lower limit for finding the near-point dog signal.</li> </ul>
Upper limit signal	12	<ul style="list-style-type: none"> <li>This signal is input from the limit switch installed at the stroke upper limit position.</li> <li>Positioning will stop when this signal turns OFF.</li> <li>When zero point return retry function is valid, this will be the upper limit for finding the near-point dog signal.</li> </ul>
Near-point dog signal	11	<ul style="list-style-type: none"> <li>Use this for detecting the near-point dog during machine zero point return.</li> <li>The near-point dog signal is detected at turning from OFF to ON.</li> </ul>



3.5.4 Interface internal circuit

The outline diagram of the internal circuit for the AD75 external device connection interface is shown below.

External wiring	Pin No.	Internal circuit	Signal name	Need for wiring *1		
	11		Near-point dog signal	DOG	△	
	12		Upper limit signal	FLS	○	
	13		Lower limit signal	RLS	○	
	14		Stop signal	STOP	△	
	15		Speed/position changeover signal	CHG	△	
	16		External start signal	STRT	△	
	35		Common	COM	○	
	36					
		(+) 9		Manual pulse generator A phase	PULSER A+	△
		(-) 27			PULSER A-	
(+) 10			PULSER B+			
(-) 28			PULSER B-			

\*1: The meaning of “○” and “△” in the “need for wiring” column is as follows.

- ○: Wiring is necessary in positioning.
- △: Perform wiring when necessary.

\*2: The terminal connected to the common line may be either positive or negative.

# MEMO

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## CHAPTER 4

---

# INSTALLATION, WIRING AND MAINTENANCE OF THE PRODUCT

The installation, wiring and maintenance of the AD75 are explained in this chapter.

Important information such as precautions to prevent malfunctioning of the AD75, accidents and injuries as well as the proper work methods are described.


Read this chapter thoroughly before starting installation, wiring or maintenance, and always following the precautions.

4.1	Outline of installation, wiring and maintenance .....	4-2
4.1.1	Installation, wiring and maintenance procedures .....	4-2
4.1.2	Names of each part .....	4-3
4.1.3	Handling precautions .....	4-5
4.2	Installation .....	4-7
4.2.1	Precautions for installation .....	4-7
4.3	Wiring .....	4-8
4.3.1	Precautions for wiring .....	4-8
4.3.2	Wiring the external device connection connector pins .....	4-11
4.4	Confirming the installation and wiring .....	4-15
4.4.1	Items to confirm when installation and wiring are completed.....	4-15
4.4.2	Single module test .....	4-16
4.5	Maintenance .....	4-19
4.5.1	Precautions for maintenance.....	4-19
4.5.2	Disposal instructions.....	4-19

4.1 Outline of installation, wiring and maintenance


4.1.1 Installation, wiring and maintenance procedures


The outline and procedures for AD75 installation, wiring and maintenance are shown below.

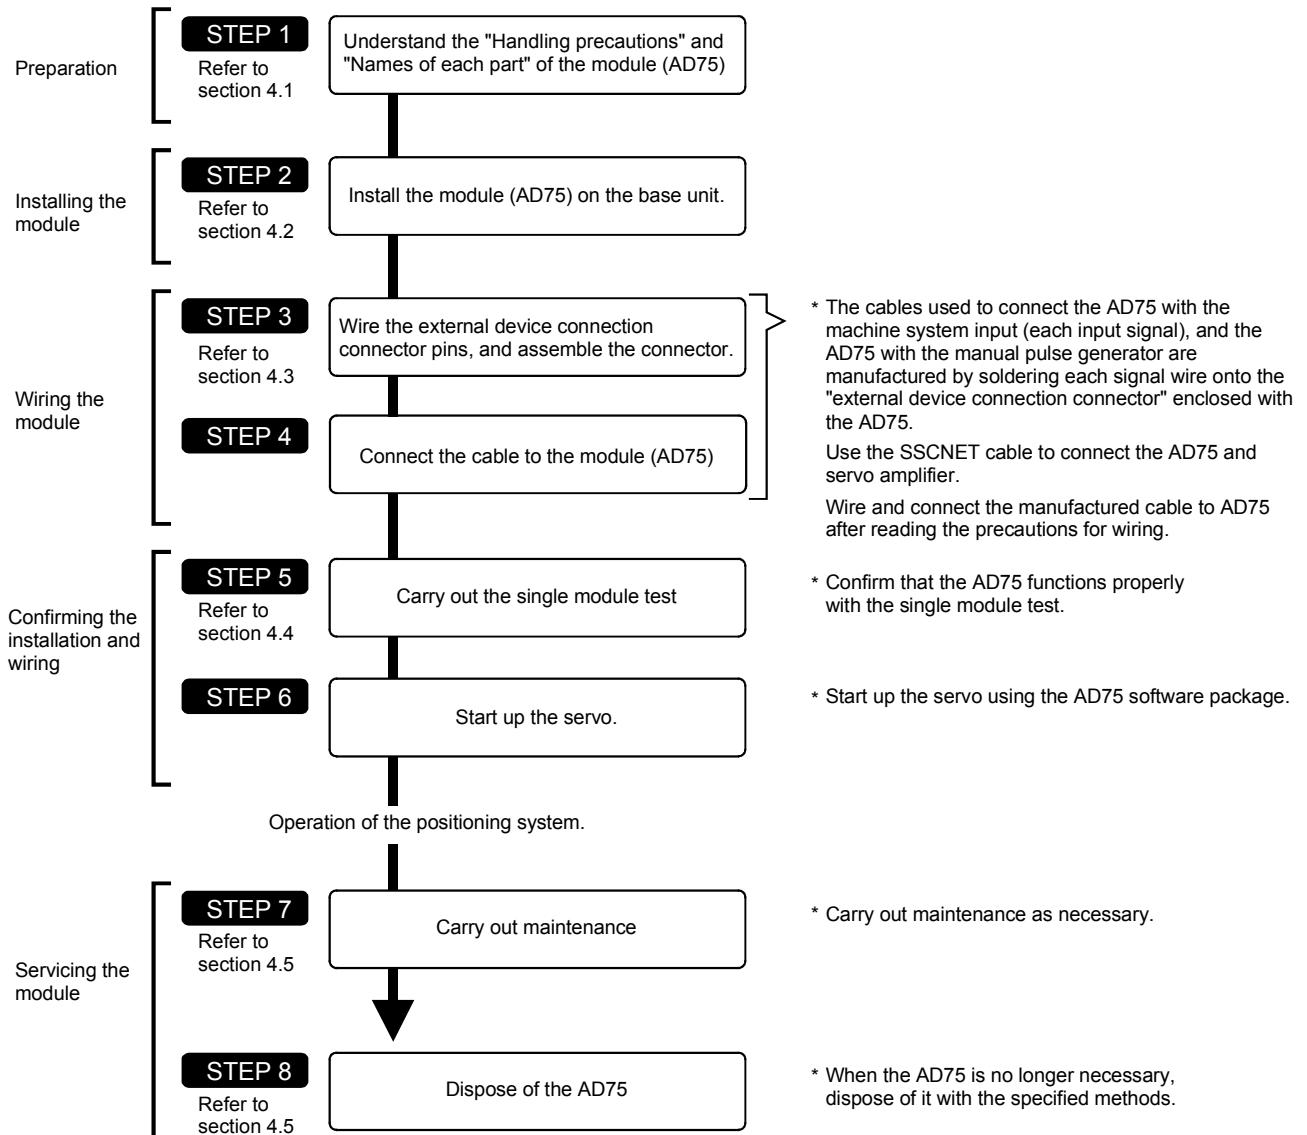


4.1.2 Names of each part

The names of each AD75 part are shown below.

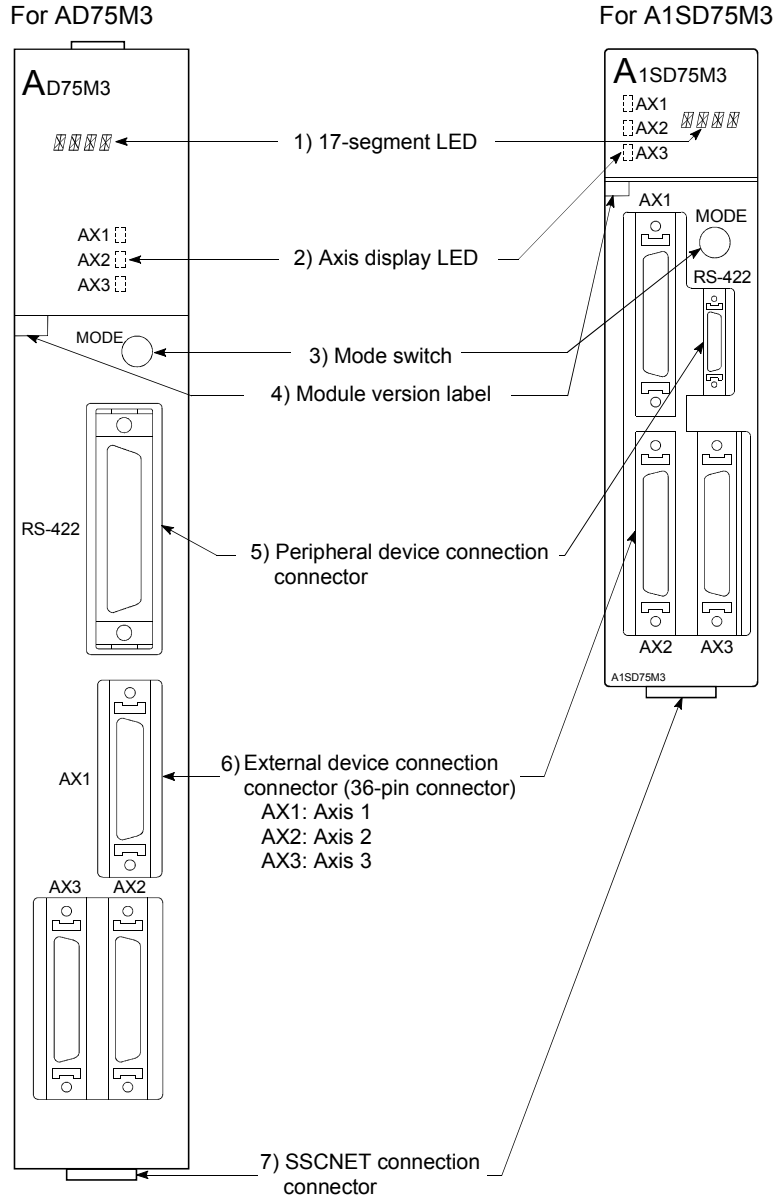

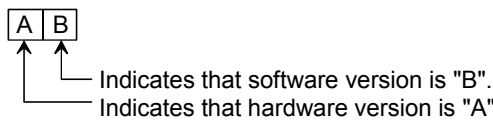No.	Name	Details
1)	17-segment LED	Display the operating status (1)) of the target axis (2)) for that axis. RUN : The LED corresponding to the operating axis flickers. TEST: The LEDs of all axes turn ON.
2)	Axis display LED (AX1 to 3)	IDL : OFF ERR : The LED corresponding to the axis in error flickers.
3)	Mode switch	Each time this switch is pressed, the details displayed on "1) 17-segment LED" and "2) Axis display LED" will change. [Display details] <pre>                     graph TD                         Input[Input information n] --&gt; OM1[Operation monitor 1]                         OM1 --&gt; OM2[Operation monitor 2]                         OM2 --&gt; II1[Internal information 1]                         II1 --&gt; II2[Internal information 2]                         II2 --&gt; Input                     </pre> (Refer to section "13.4 LED display function" for details on the displayed information.)
4)	Module version label	This label indicates the module's software version and hardware version. (Example) 
5)	Peripheral device connection connector	Connector for connecting with peripheral device.
6)	External device connection connector	Connector for connecting mechanical system input and manual pulse generator.
7)	SSCNET connection connector	SSCNET connector for connection with the servo amplifier.

Each AD75 interface is as shown below.

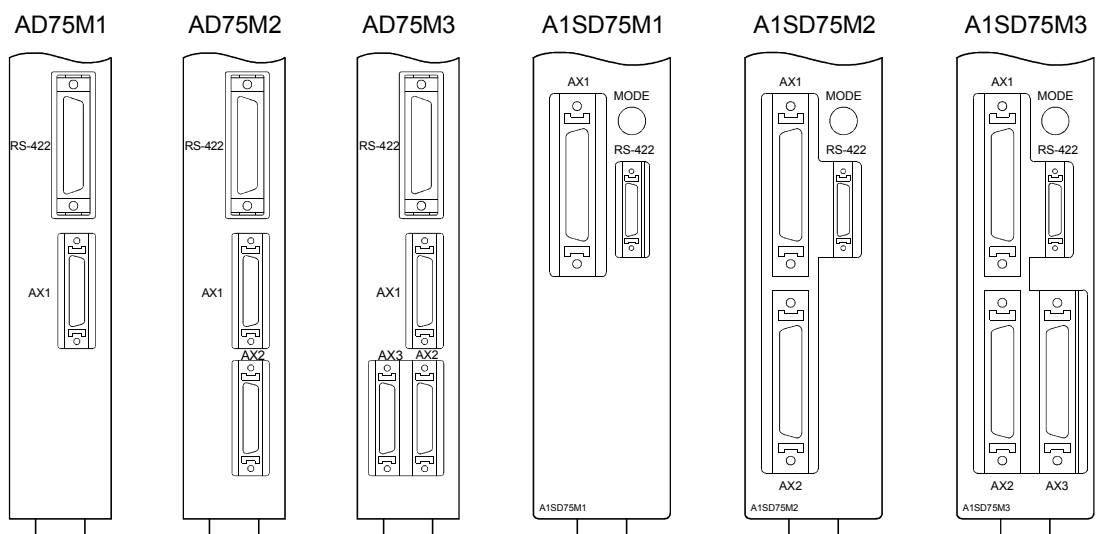

### 4.1.3 Handling precautions

Handle the AD75 and cable while observing the following precautions.

#### (1) Handling precautions

#### CAUTION

- Use the programmable controller within the general specifications environment given in this manual.  
Using the programmable controller outside the general specification range environment could lead to electric shocks, fires, malfunctioning, product damage or deterioration.
- Do not directly touch the conductive section and electronic parts of the module.  
Failure to observe this could lead to module malfunctioning or trouble.
- When not connecting the external device or peripheral device, always install a cover on the connector section.  
Failure to observe this could lead to malfunctioning.
- Make sure that foreign matter, such as cutting chips or wire scraps, do not enter the module.  
Failure to observe this could lead to fires, trouble or malfunctioning.
- Never disassemble or modify the module.  
Failure to observe this could lead to trouble, malfunctioning, injuries or fires.

## (2) Other precautions

### (a) Main body

- The main body case is made of plastic. Take care not to drop or apply strong impacts onto the case.
- Do not remove the AD75 PCB from the case. Failure to observe this could lead to faults.

### (b) Cable

- Do not press on the cable with a sharp object.
- Do not twist the cable with force.
- Do not forcibly pull on the cable.
- Do not step on the cable.
- Do not place objects on the cable.
- Do not damage the cable sheath.

### (c) Installation environment

Do not install the module in the following type of environment.

- Where the ambient temperature exceeds the 0 to 55°C range.
- Where the ambient humidity exceeds the 10 to 90%RH range.
- Where there is sudden temperature changes, or where dew condenses.
- Where there is corrosive gas or flammable gas.
- Where there are high levels of dust, conductive powder, such as iron chips, oil mist, salt or organic solvents.
- Where the module will be subject to direct sunlight.
- Where there are strong electric fields or magnetic fields.
- Where vibration or impact could be directly applied onto the main body.



## 4.2 Installation

### 4.2.1 Precautions for installation

The precautions for installing the AD75 are given below. Refer to this section as well as section "4.1.3 Handling precautions" when carrying out the work.

#### (1) Precautions for installation

##### WARNING

- Switch off all phases of the externally supplied power used in the system before cleaning or tightening the screws.  
Failure to turn all phases OFF could lead to electric shocks.

##### CAUTION

- Never disassemble or modify the module.  
Failure to observe this could lead to trouble, malfunctioning, injuries or fires.
- Switch off all phases of the externally supplied power used in the system before installing or removing the module.  
Failure to turn all phases OFF could lead to module trouble or malfunctioning.
- Use the programmable controller within the general specifications environment given in this manual.  
Using the programmable controller outside the general specification range environment could lead to electric shocks, fires, malfunctioning, product damage or deterioration.
- Always securely insert the module latches at the bottom of the module into the fixing holes on the base unit. (Always screw the AnS Series module onto the base unit with the specified torque.) Improper mounting of the module could lead to malfunctioning, faults or dropping.

#### (2) Precautions for mounting

When mounting the AD75 onto the base unit (main base unit, extension base unit), observe the following points.

- (a) Avoid mounting the AD75 onto an extension base unit (A5□B/A1S5□B) that has no power supply module.  
When mounting on this type of unit, take the power capacity and extension cable voltage drop into consideration.
- (b) If the temperature in the panel could exceed 55 °C, consider forcibly ventilating in the programmable controller panel.



### 4.3 Wiring

The wiring precautions for the AD75 are described below. Be careful to observe the following items together with the "Handling precautions" described in section 4.1.3.


#### 4.3.1 Precautions for wiring

- (1) Perform wiring of the AD75 correctly while checking the terminal arrangement. (For the terminal arrangement of the external device connection connector, refer to section "3.5.2 Signal layout for external device connection connector.")
- (2) Solder or crimp the external device connection connector correctly. An improperly soldered or crimped connector may cause malfunctions.
- (3) Be careful to avoid entry of chips, wiring dust and so on inside the AD75. Otherwise fire, failure or malfunction may be caused.
- (4) Be sure to install a cover for the external device connection connector if no external device is connected. Otherwise malfunction may be caused.
- (5) Connect the external device connection connector, SSCNET connection connector and peripheral device connection connector with the connector of the AD75. Check that the connector snaps. An improperly connected connector will cause poor continuity, possibly causing erroneous inputs or outputs.
- (6) Do not pull the cable when removing the cable from the AD75 or servo amplifier. Hold and pull the connector connected to the AD75 or servo amplifier. If the cable connected to the AD75 or servo amplifier is pulled, a malfunction may be caused. As well, the AD75, servo amplifier or cable may be broken.
- (7) Disconnect the external device connection connector and SSCNET connection connector when the system is stopped. If the external device connection connector or SSCNET connection connector is disconnected during operation of the system, the system will be stopped.
- (8) Route the cables connected to the AD75, in a duct, or fix them. If cables are not routed in the duct or no fixing measures are taken to them, drifting or moving cables, breakage of the AD75, servo amplifier or cable due to a carelessly pulled cable, or malfunction caused by a poorly connected cable may be caused.
- (9) Do not tie the AD75 cable with the main circuit cable, power cable, or a load cable for other than the programmable controller or do not route the AD75 cable near them. Separate these by 100 mm as a measure. Otherwise noise, surge or induction may cause a malfunction.
- (10) When routing the AD75 cable near a power cable at a distance smaller than 100 mm, use a shielded cable for a countermeasure against noise. Connect the shielding wire of the shielded cable securely to the panel of the AD75.

[Shielding wire processing example]

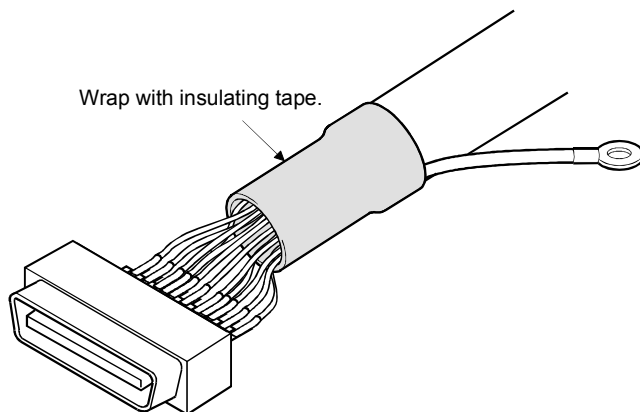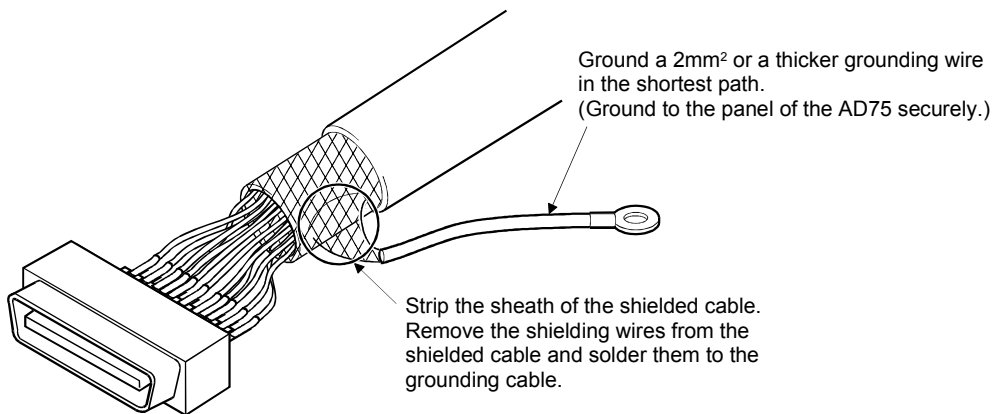

- (11) To comply with EMC directive and low voltage directive, use shielded cables and AD75CK cable clamp (made by Mitsubishi Electric) to ground to the panel.

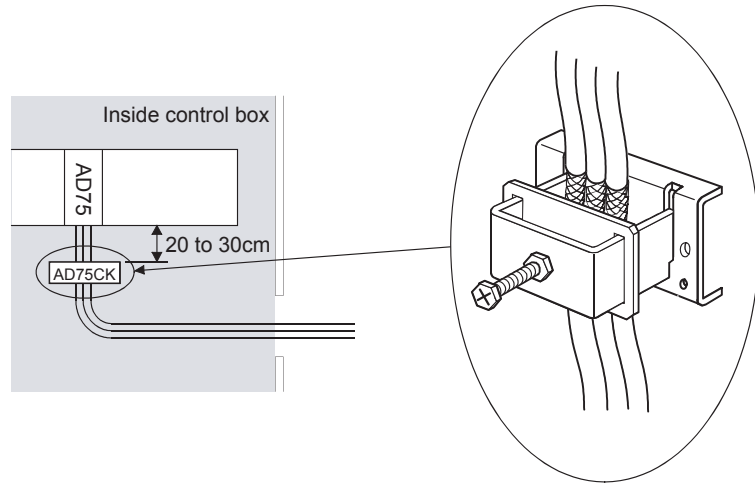

For details on AD75CK, refer to the following.  
AD75CK-type Cable Clamping Instruction Manual

- (12) The influence of noise may be reduced by installing ferrite cores to the cable connected to the AD75 as a noise reduction technique.  
For the noise reduction techniques related to connection with the servo amplifier, also refer to the instruction manual of the servo amplifier.
- (13) If compliance with the EMC directive is not required, the influence of external noise may be reduced by making the configuration compliant with the EMC directive.  
For the configuration compliant with the EMC directive, refer to "EMC AND LOW VOLTAGE DIRECTIVES" in the user's manual for the CPU module used.
- (14) Installing ferrite cores and noise filter to the power supply line of the PLC as noise reduction techniques may have effects on external noise.
- (Example)
- Ferrite cores  
Type: ZCAT3035-1330 (TDK Corporation ferrite core)
  - Noise filter  
Type: MXB-1210-33 (TDK-Lambda Corporation noise filter)


## 4.3.2 Wiring the external device connection connector pins

The pins for the external device connection connector are wired in the following manner.

- (1) Disassembling the connector section ..... Disassemble the connector section, and remove the connector.
- ↓
- (2) Connecting the connector and wire ..... Solder the wire onto the connector pin.
- ↓
- (3) Assembling the connector section ..... Assemble the connector section.

## (1) Disassembling the connector section

- (a) Loosen and remove screw A.  
(Take care not to lose the screw and nut.)
- (b) Open the connector cover from the connector side.
- (c) Remove the connector and cable fixture.

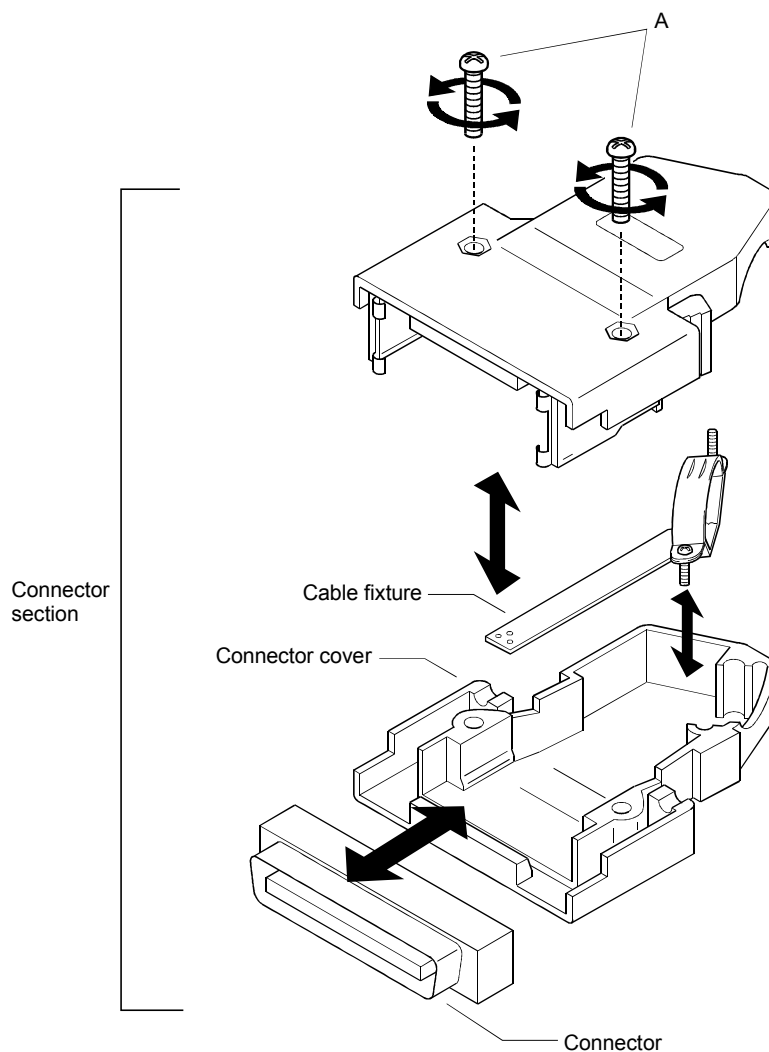


(2) Connecting the connector and wire

\* Refer to section "3.5 Specifications of interfaces with external devices" when connecting.

(a) Loosen the cable fixture screw B, pass the cable through, and then tighten screw B.


(Screw B may be removed once, and then tightened after sandwiching the cable.)

(Take care not to lose the screw and nut.)

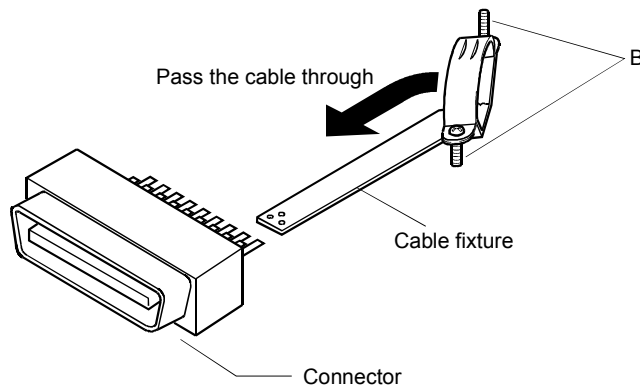


(b) Solder the wire onto the connector.

Connector pin layout

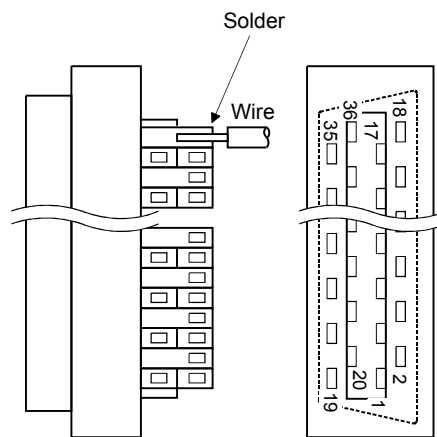

\* The applicable size of the wire to be connected is Approximately 0.05 to 0.2mm<sup>2</sup> (AWG30 to 24).

(c) After connection, the state will be as shown below.

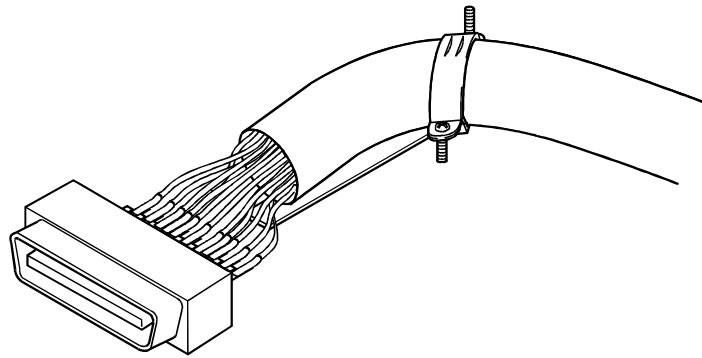




## (3) Assembling the connector section

- (a) Fit the soldered connector and cable fixture into the connector cover.

\* The cable fixture acts as a stopper to protect the signal wire connection section when the cable is pulled on. If the cable is not sufficiently tightened with the cable fixture, wind insulation tape around the cable so that it can be sufficiently tightened and pressed down.

- (b) Sandwich the parts with the connector cover, and tighten screw A.

The following figure shows the case of the AD75M1/AD75M2/AD75M3.

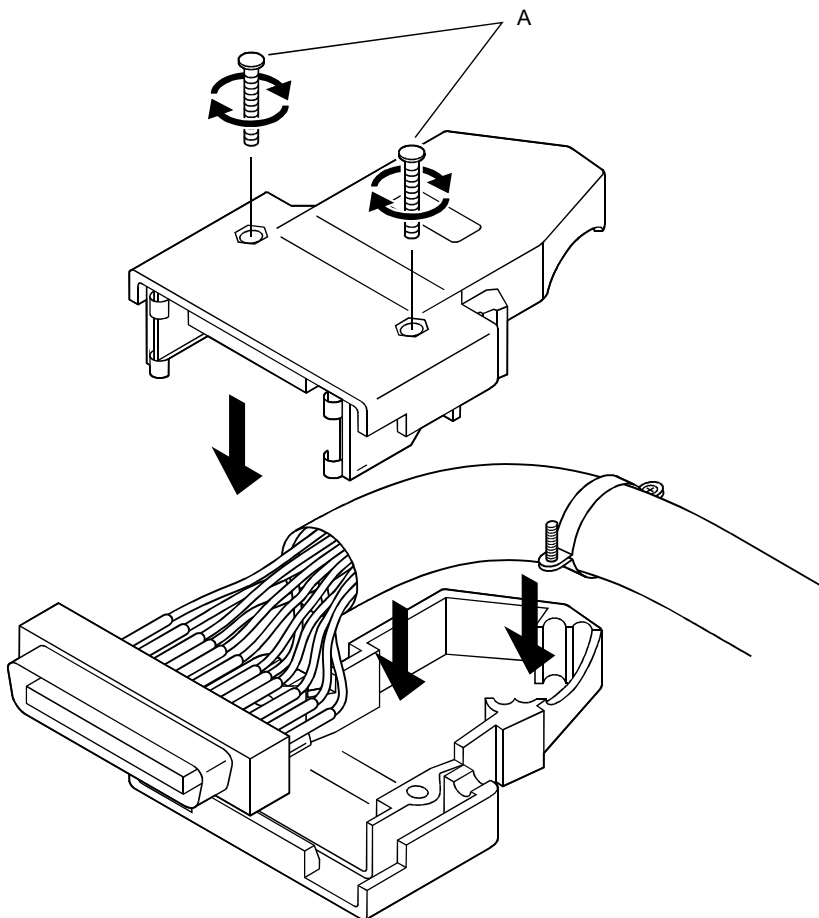

\* In the case of the A1SD75M1/A1SD75M2/A1SD75M3, the orientation of the connector is opposite. (Refer to section "4.1.2 Names of each part".)

## 4.4 Confirming the installation and wiring

### 4.4.1 Items to confirm when installation and wiring are completed

Check the (1) and (2) points when completed with the AD75 installation and wiring.

(1) Does the AD75 operate correctly? ... "Single module test"

With the "single module test", correct operation of the AD75 is confirmed by the LED displays on the AD75. (Change the mode switch following the procedures given in section "4.4.2 Single module test", and confirm the details displayed on each mode LED.)

Check that there are no faults in the AD75 with the single module test.

(2) Is the servo amplifier correctly wired and set? ... "Servo starting up"

In "servo starting up", check the following four points with the servo starting up function of the AD75 software package. (To perform "servo starting up", the servo parameters must be set and written to the AD75 using the AD75 software package.)

- Checking of error/warning history
- Checking of servo parameters and peripheral device's servo parameters
- Checking of upper/lower limit switch operations
- Checking of motor speed

In this manual (1) "Single module test" is explained. Refer to the AD75 Software Package Operating Manual for details on (2) "Servo starting up".

<b>Important</b>
If the AD75 is faulty, or when the required signals such as the near-point dog signal and stop signal are not recognized, unexpected accidents such as "not decelerating at the near-point dog during machine zero point return and colliding with the stopper", or "not being able to stop with the stop signal" may occur. The "single module test" and "servo starting up" must be carried out not only when structuring the positioning system, but also when the system has been changed with module replacement or rewiring, etc.

#### 4.4.2 Single module test

Whether the AD75 is operating correctly is confirmed with the LED displays on the AD75 main body.

The "single module test" methods are described below.

The "single module test" can be carried out when there is no sequence program stored in the programmable controller CPU, when there is no data stored in the AD75, and when the AD75 is running.

Carry this test out after connecting the AD75, servo amplifier, servomotor and external devices. The "mode switch", "17-segment LED" and "axis display LED" used in the explanation refer to the AD75 switches and LEDs.

##### (Step 1) Turning ON the power

- 1) Stop the programmable controller CPU.  
(When the AD75 is mounted on the remote station, stop the master station.)
- 2) Turn ON for the programmable controller CPU (when the AD75 is mounted on the remote station, the mounted station and master station), and the power for the servo amplifier and servomotor connected to the AD75.
- 3) The AD75 OS type [same displays as (Step 4)] will appear on the 17-segment LED for one second.
- 4) After one second passes, the state will shift to the operation monitor 1 described in (Step 2).

##### (Step 2) Operation monitor 1

- 1) Depending on the AD75 state, one of the following will appear on the 17-segment LED and axis display LED.

Confirm that the display matches the AD75 state.

AD75 state	17-segment LED	Each axis' axis display LED (AX1 to 3)
Running	RUN	The LED corresponding to the operating axis flickers.
In test mode	TEST	The LEDs of all axes turn ON.
Idle	IDL	OFF
Error occurrence	ERR	The LED corresponding to the axis in error flickers.

- 2) When the mode switch is pressed, the state will shift to the operation monitor 2 described in (Step 3).

(Step 3) Operation monitor 2

- 1) The axis display LED for each axis will turn ON sequentially at an approx. 0.5 second interval.  
One of the following states will appear on the 17-segment LED to indicate the state of the axis for which the axis display LED is ON.  
Confirm that the display matches each axis state.

Axis state	17-segment LED	Remarks
Idle	IDLE	• State when power is turned ON/operation has ended.
Stopped	STOP	• State when positioning operation is temporarily stopped.
In JOG operation	JOG	-
In manual pulse generator operation	MANP	
In zero point return	OPR	
In position control	POSI	
In speed control	VELO	
In speed control for speed/position changeover control	V- P	
In position control for speed/position changeover control	V -P	
Waiting	BUSY	
Error occurrence *	E***	• The error code appears in ***. Refer to CHAPTER 14 for details on the errors.

<b>POINT</b>
<p>* When the PLC READY signal [Y1D] is ON, even if a parameter error occurs, the error code will not appear on the 17-segment LED. If the error code is not displayed on the 17-segment LED, check the error code with the peripheral device or AD75 error code storage buffer memory. (Md.33 Axis error No., Md.34 Axis warning No.)</p>


- 2) When the mode switch is pressed, the state will shift to the internal information 1 monitor state described in (Step 4).

(Step 4) Internal information 1 monitor

- 1) The AD75 OS type ("S000") will appear on the 17-segment LED for reference.
- 2) The axis display LED for each axis will turn OFF.
- 3) When the mode switch is pressed, the state will shift to the internal information 2 monitor state described in (Step 5).

(Step 5) Internal information 2 monitor

- 1) The AD75 OS version will appear on the 17-segment LED for reference.



- 2) The axis display LED for each axis will turn OFF.
- 3) When the mode switch is pressed, the state will shift to the input information n monitor state described in (Step 6).

(Step 6) Input information n monitor

- 1) Each time the mode switch is pressed, the following input signal names will sequentially appear on the 17-segment LED.
- 2) The signal state of each axis displayed on the 17-segment LED is displayed with the axis display LED for each axis.

Confirm that the display matches each signal state.

- When signal is ON ..... Axis display LED turns ON
- When signal is OFF ..... Axis display LED turns OFF

17-segment LED	Target signal name	Remarks
SVON	Servo ON ([Md.116] Servo status: b1)	Changes sequentially with each press of the mode switch.
ULMT	Upper limit signal	
LLMT	Lower limit signal	
V-P	Speed/position changeover signal	
DOG	Near-point dog signal	

(Step 7) Shifting to operation monitor 1, and ending the operation monitor

- 1) When the mode switch is pressed, the state will return to the operation monitor 1 (Step 2).  
 Each time the mode switch is then pressed, the operation monitors between (Step 2) and (Step 6) will be repeated.
- 2) To end the operation monitor, enter the monitor state between (Step 2) and (Step 6) required by the user.

<b>POINT</b>	<p>(1) The operation monitor described in this section is a function that allows the AD75 state, control state of each axis and state of the input signals to be confirmed. This monitor can be operated at any time.</p> <p>(2) If the AD75 is not operating correctly, use the operation monitors as necessary.</p> <p>(3) As another display on the above 17-segment LED, if a watch dog timer error occurs in the AD75, "FALT" will appear.                      If a watch dog timer error occurs in the AD75, the programmable controller CPU must be reset.                      If the watch dog timer error still occurs in the AD75 even after resetting the programmable controller CPU, the AD75 module must be replaced.                      Contact your nearest dealer or sales office.</p>
--------------	---

4.5 Maintenance

4.5.1 Precautions for maintenance

The precautions for servicing the AD75 are given below. Refer to this section as well as section "4.1.3 Handling precautions" when carrying out the work.

 **WARNING**

- Switch off all phases of the externally supplied power used in the system before cleaning or tightening the screws.  
Failure to turn all phases OFF could lead to electric shocks.

 **CAUTION**

- Never disassemble or modify the module.  
Failure to observe this could lead to trouble, malfunctioning, injuries or fires.
- Switch off all phases of the externally supplied power used in the system before installing or removing the module.  
Failure to turn all phases OFF could lead to module trouble or malfunctioning.

4.5.2 Disposal instructions

 **CAUTION**

- When disposing of the product, handle it as industrial waste.

---

# CHAPTER 5

---

## DATA USED FOR POSITIONING CONTROL

The parameters and data used to carry out positioning control with the AD75 are explained in this chapter.

With the positioning system using the AD75, the various parameters and data explained in this chapter are used for control. The parameters and data include parameters set according to the device configuration, such as the system configuration, and parameters and data set according to each control. Read this section thoroughly and make settings according to each control or application.

\* Refer to "SECTION 2" for details on each control.

5.1	Types of data .....	5-2
5.1.1	Parameters and data required for control .....	5-2
5.1.2	Setting items for positioning parameters .....	5-5
5.1.3	Setting items for zero point return parameters .....	5-7
5.1.4	Setting items for servo parameters .....	5-8
5.1.5	Setting items for positioning data .....	5-10
5.1.6	Setting items for start block data .....	5-12
5.1.7	Setting items for condition data .....	5-13
5.1.8	Types and roles of monitor data .....	5-14
5.1.9	Types and roles of control data .....	5-18
5.2	List of parameters .....	5-22
5.2.1	Basic parameters 1 .....	5-22
5.2.2	Basic parameters 2 .....	5-26
5.2.3	Detailed parameters 1 .....	5-28
5.2.4	Detailed parameters 2 .....	5-36
5.2.5	Zero point return basic parameters .....	5-45
5.2.6	Zero point return detailed parameters .....	5-52
5.2.7	Servo parameters for MR-H-B (MR-H-BN) .....	5-56
5.2.8	Servo parameters for MR-J-B .....	5-66
5.2.9	Servo parameters for MR-J2-B .....	5-76
5.2.10	Servo parameters for MR-J2S-B .....	5-86
5.2.11	Servo parameters for MR-J2-03B5 .....	5-102
5.3	List of positioning data .....	5-110
5.4	List of start block data .....	5-125
5.5	List of condition data .....	5-129
5.6	List of monitor data .....	5-134
5.6.1	System monitor data .....	5-134
5.6.2	Axis monitor data .....	5-144
5.7	List of control data .....	5-166
5.7.1	System control data .....	5-166
5.7.2	Axis control data .....	5-172


5.1 Types of data

5.1.1 Parameters and data required for control

The parameters and data required to carry out control with the AD75 include the "setting data", "monitor data" and "control data" shown below.


**Setting data**

(Data set beforehand according to the machine and application, and stored in the flash ROM.)

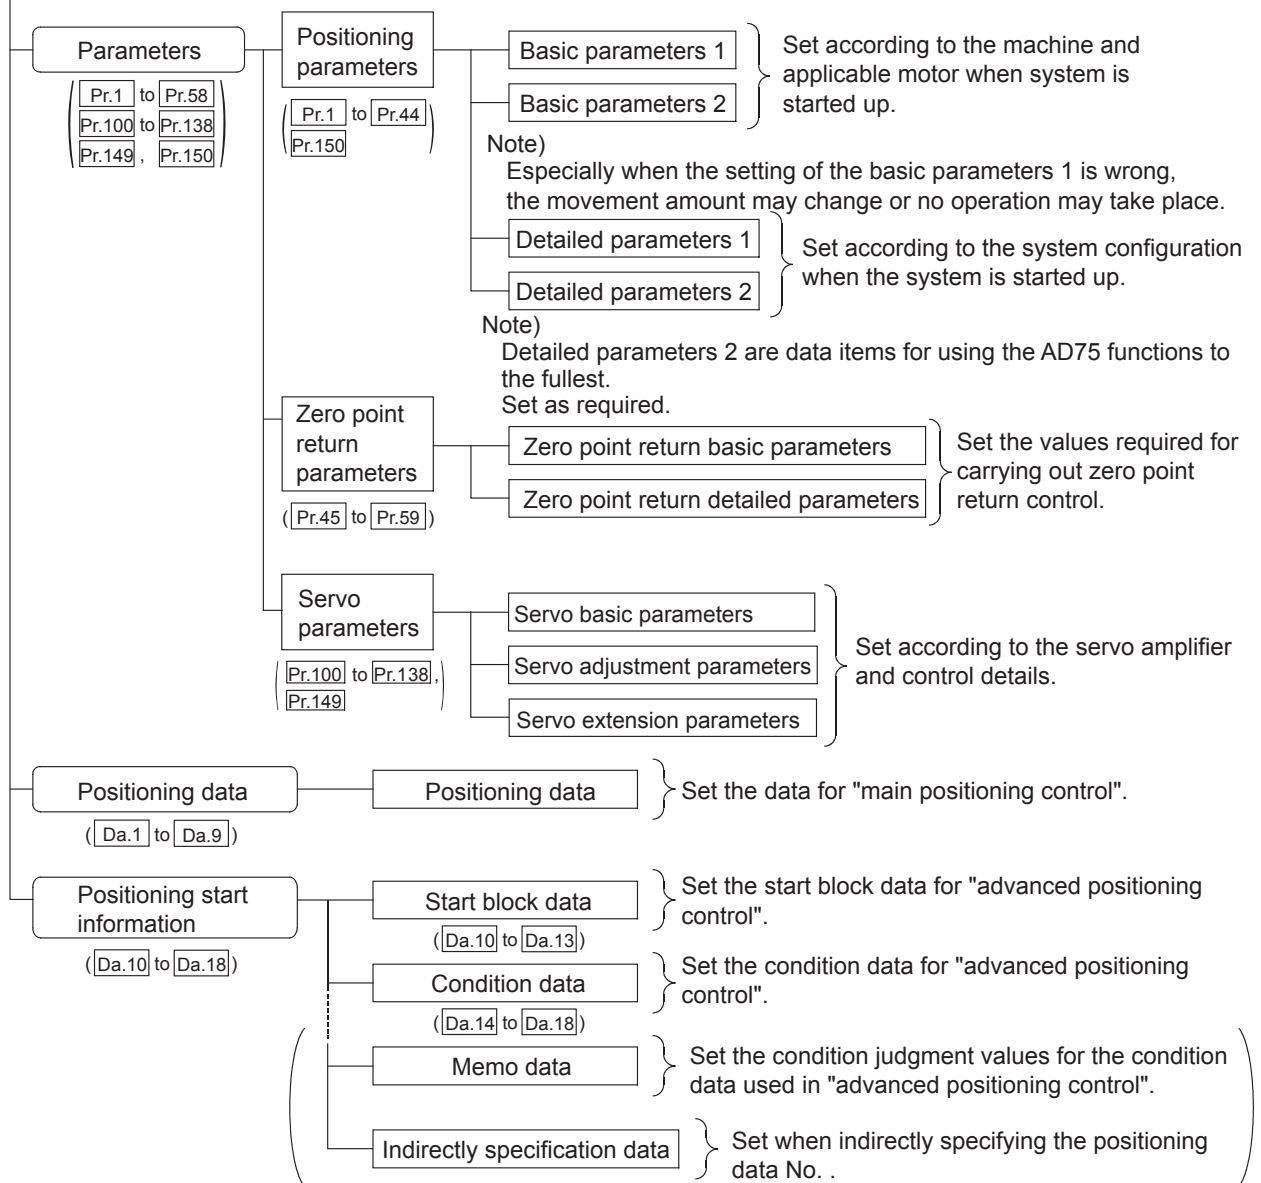




- ◇ The data is set with the sequence program or peripheral device.  
In this chapter, the method using the peripheral device will be explained.  
(Refer to "Point" on the next page.)
  - ◇ The basic parameters 1, detailed parameters 1, and zero point return parameters become valid when the PLC READY signal [Y1D] turns from OFF to ON.
  - ◇ Even when the PLC READY signal [Y1D] is ON, the values or contents of the following can be changed: basic parameters 2, detailed parameters 2<sup>\*1</sup>, positioning data, and positioning start information.  
The changed value is reflected at the start of positioning or JOG operation.  
To reflect the changed value on control without fail, change the set values before the start of positioning or JOG operation.  
If basic parameters 2, detailed parameters 2, positioning data, or positioning start information is changed while positioning data is consecutively executed in continuous positioning control or continuous path control, the positioning data to which the change is reflected is the fourth (maximum) data counted from the one in execution.
  - ◇ The servo parameters are transferred from the AD75 to the servo amplifier by initial communication that is made after power-on or after programmable controller CPU reset.  
When any of the servo parameter values has been changed, perform write to the flash ROM of the AD75, and switch power off, then on again or reset the programmable controller CPU.  
However, the following servo parameters are also transferred to the servo amplifier when the PLC READY signal [Y1D] turns from OFF to ON.
    - Auto tuning (servo basic parameter)
    - Position loop gain 1 (servo adjustment parameter)
    - Position loop gain 2 (servo adjustment parameter)
    - Speed integral compensation (servo adjustment parameter)
    - Feed forward gain (servo adjustment parameter)
    - Load inertia ratio (servo adjustment parameter)
    - Speed loop gain 1 (servo adjustment parameter)
    - Speed loop gain 2 (servo adjustment parameter)
- \*1: The setting in the following parameter is activated by turning PLC READY signal [Y1D] on from off.
- Detailed parameters 2: "Pr.44 Near pass mode selection for path control"

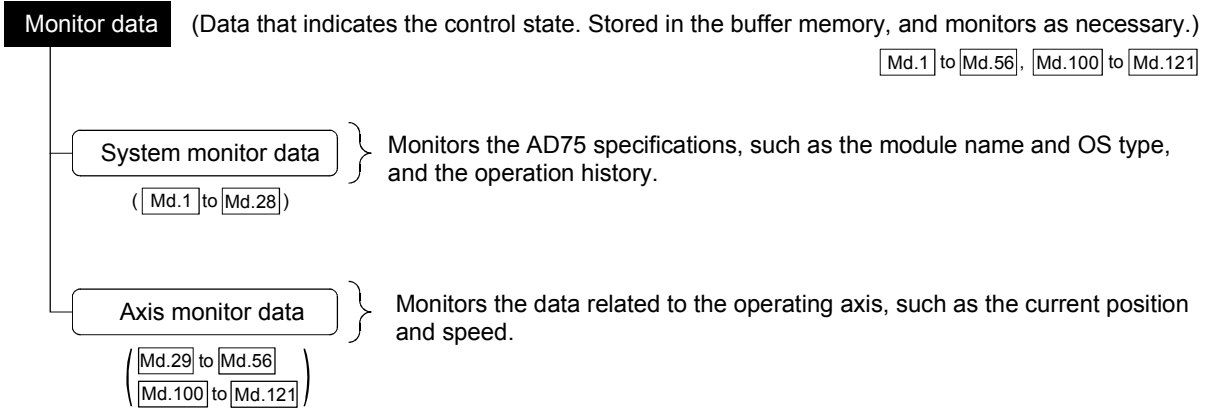

◇ The data is monitored with the sequence program or peripheral device. In this chapter, the method using the peripheral device will be explained.

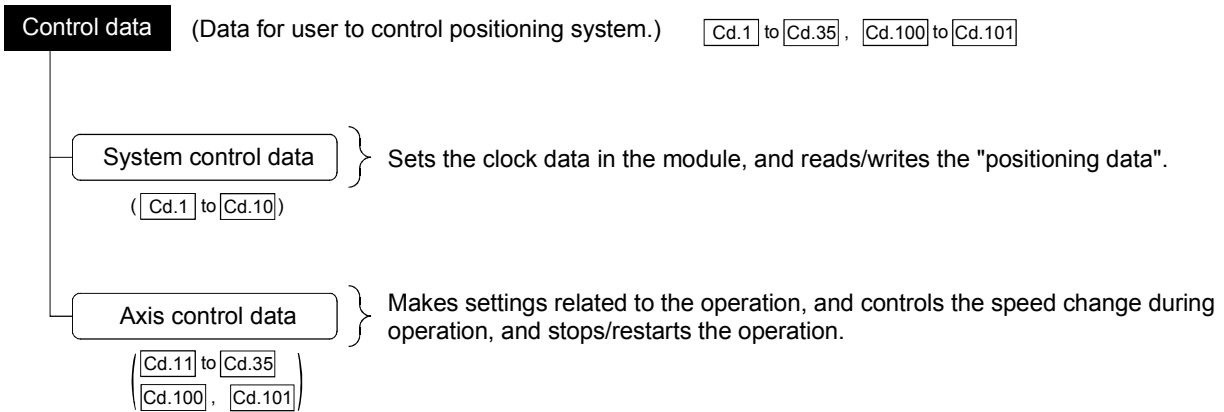

◇ Control using the control data is carried out with the sequence program.

POINT
(1) The "setting data" is created for each axis.
(2) The "setting data" parameters have determined default values, and are set to the default values before shipment from the factory. (Parameters related to axes that are not used are left at the default value.)
(3) The "setting data" can be initialized with the AD75 software package or the sequence program.
(4) It is recommended to set the "setting data" with the AD75 software package. When executed with the sequence program, many sequence programs and devices must be used. This will not only complicate the program, but will also increase the scan time.

5.1.2 Setting items for positioning parameters

The setting items for the "positioning parameters" are shown below. The "positioning parameters" are commonly set for each axis for all control using the AD75. Refer to "SECTION 2" for details on each control, and section "5.2 List of parameters" for details on each setting item.

Positioning parameter		Control	Main positioning control								Manual control		Related auxiliary function	
			Zero point return control	Position control				Speed control	Speed/position changeover control	Other control		Manual pulse generator operation		JOG operation
				1-axis linear control	2-axis linear interpolation control	1-axis fixed-dimension feed control	2-axis fixed-dimension feed control			2-axis circular interpolation control	Current value change			
Basic parameters 1	Pr.1	Unit setting	◎	◎	◎	△	◎	◎	◎	◎	◎	◎	-	
	Pr.2	No. of pulses per rotation (Ap)	◎	◎	◎	◎	◎	◎	◎	◎	◎	◎	12.3.2*	
	Pr.3	Movement amount per rotation (Al)	◎	◎	◎	◎	◎	◎	◎	◎	◎	◎		
	Pr.4	Unit magnification (Am)	◎	◎	◎	◎	◎	◎	◎	◎	◎	◎		
Basic parameters 2	Pr.7	Speed limit value	◎	◎	◎	◎	◎	◎	◎	◎	-	◎	12.4.1*	
	Pr.8	Acceleration time 0	◎	◎	◎	◎	◎	◎	◎	◎	-	◎	12.7.6*	
	Pr.9	Deceleration time 0	◎	◎	◎	◎	◎	◎	◎	◎	-	◎		
	Pr.10	Bias speed at start	○	○	○	-	○	○	-	-	-	○	-	
Detailed parameters 1	Pr.12	Backlash compensation amount	○	○	○	○	○	○	-	-	○	○	12.3.1*	
	Pr.13	Software stroke limit upper limit value	-	○	○	○	○	○	-	-	○	○	12.4.3*	
	Pr.14	Software stroke limit lower limit value	-	○	○	○	○	○	-	-	○	○		
	Pr.15	Software stroke limit selection	-	○	○	○	○	○	-	-	○	○		
	Pr.16	Software stroke limit valid/invalid setting	-	-	-	-	-	-	○	○	○	○		
	Pr.17	Command in-position width	-	○	○	○	-	○	-	-	-	-	12.7.5*	
	Pr.18	Torque limit setting value	△	○	○	○	○	○	-	-	△	△	12.4.2*	
	Pr.19	M code ON signal output timing	-	○	○	○	○	○	-	-	-	-	12.7.3*	
	Pr.20	Speed changeover mode	-	○	○	○	-	-	-	-	-	-	-	
	Pr.21	Interpolation speed designation method	-	○	○	△	-	-	-	-	-	-	-	
	Pr.22	Current feed value during speed control	-	-	-	-	○	○	-	-	-	-	-	
	Pr.23	Manual pulse generator selection	-	-	-	-	-	-	-	-	◎	-	-	
Pr.25	Size selection for acceleration/deceleration time	○	△	△	△	△	△	-	-	-	△	-		

- ◎ : Always set
- : Set as required ("-" when not set)
- △ : Setting limited
- : Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)
- \* : Section to be referred to

Positioning parameter		Control		Main positioning control							Manual control		Related auxiliary function	
				Position control				Speed control	Speed/position changeover control	Other control		Manual pulse generator operation		JOG operation
				Zero point return control	1-axis linear control 2-axis linear interpolation control	1-axis fixed-dimension feed control 2-axis fixed-dimension feed control	2-axis circular interpolation control			Current value change	JUMP command			
Detailed parameters 2	Pr.26	Acceleration time 1	○	○	○	○	○	○	-	-	-	○	12.7.6*	
	Pr.27	Acceleration time 2	○	○	○	○	○	○	-	-	-	○		
	Pr.28	Acceleration time 3	○	○	○	○	○	○	-	-	-	○		
	Pr.29	Deceleration time 1	○	○	○	○	○	○	-	-	-	○		
	Pr.30	Deceleration time 2	○	○	○	○	○	○	-	-	-	○		
	Pr.31	Deceleration time 3	○	○	○	○	○	○	-	-	-	○		
	Pr.32	JOG speed limit value	-	-	-	-	-	-	-	-	-	◎	12.4.1*	
	Pr.33	JOG operation acceleration time selection	-	-	-	-	-	-	-	-	-	◎	-	
	Pr.34	JOG operation deceleration time selection	-	-	-	-	-	-	-	-	-	◎	-	
	Pr.35	Acceleration/deceleration process selection	○	○	○	○	○	○	-	-	-	○	12.7.6*	
	Pr.36	S-curve ratio	○	○	○	○	○	○	-	-	-	○		
	Pr.37	Sudden stop deceleration time	○	○	○	○	○	○	-	-	-	○		
	Pr.38	Stop group 1 sudden stop selection	○	○	○	○	○	○	-	-	-	○		
	Pr.39	Stop group 2 sudden stop selection	○	○	○	○	○	○	-	-	-	○	-	
	Pr.40	Stop group 3 sudden stop selection	○	○	○	○	○	○	-	-	-	○	-	
	Pr.41	Positioning complete signal output time	-	○	○	○	○	○	○	-	-	-	-	
	Pr.42	Allowable circular interpolation error width	-	-	-	○	-	-	-	-	-	-	-	
Pr.43	External start function selection	○	○	○	○	○	○	○	-	-	○	12.5.1* 12.7.2*		
Pr.44	Near pass mode selection for path control	-	○	-	○	-	-	-	-	-	-	12.3.3*		
Pr.150	Setting for the restart allowable range when servo OFF to ON	○	○	○	○	-	○	-	-	-	-	12.4.5		

- ◎ : Always set
- : Set as required ("-" when not set)
- : Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)
- \* : Section to be referred to

■ Checking the positioning parameters

Pr.1 to Pr.44, Pr.150 are checked with the following timing.

- (1) When the "PLC READY signal" output from the programmable controller CPU to the AD75 changes from OFF to ON
- (2) When the test mode using the AD75 software package

**REMARK**

- "Advanced positioning control" is carried out in combination with the "main positioning control". Refer to the "main positioning control" parameter settings for details on the parameters required for "advanced positioning control".

## 5.1.3 Setting items for zero point return parameters

When carrying out "zero point return control", the "zero point return parameters" must be set. The setting items for the "zero point return parameters" are shown below.

The "zero point return parameters" are set commonly for each axis.

Refer to "CHAPTER 8 ZERO POINT RETURN CONTROL" for details on the "zero point return control", and to section "5.2 List of parameters" for details on each setting item.

Zero point return control		Machine zero point return control						High-speed zero point return control
Zero point return parameters		Near-point dog method	Near-point dog method 2)	Count method 1)	Count method 2)	Count method 3)	Data setting method	
Zero point return basic parameters	Pr.45	Zero point return method						
	Pr.46	Zero point return direction	◎	◎	◎	◎	◎	-
	Pr.47	Zero point address	◎	◎	◎	◎	◎	◎
	Pr.48	Zero point return speed	◎	◎	◎	◎	◎	-
	Pr.49	Creep speed	◎	◎	◎	◎	◎	-
	Pr.50	Zero point return retry	R	R	R	R	R	-
Zero point return detailed parameters	Pr.52	Setting for the movement amount after near-point dog ON	-	-	◎	◎	◎	-
	Pr.53	Zero point return acceleration time selection	◎	◎	◎	◎	◎	-
	Pr.54	Zero point return deceleration time selection	◎	◎	◎	◎	◎	-
	Pr.55	Zero point shift amount	S	S	S	S	S	-
	Pr.56	Zero point return torque limit value	-	-	-	-	-	-
	Pr.57	Speed designation during zero point shift	S	S	S	S	S	-
	Pr.58	Dwell time during zero point return retry	R	R	R	R	R	-
	Pr.59	Absolute position restoration selection	A	A	A	A	A	A

Value set for machine zero point return control are used.

◎ : Always set

- : Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)

R : Set when using the section "12.2.1 Zero point return retry function". ("-" when not set.)

S : Set when using the section "12.2.2 Zero point shift function". ("-" when not set.)

A : Set when an absolute position detection system is configured. ("-" when an absolute position detection system is not configured.)

#### ■ Checking the zero point return parameters.

Pr.45 to Pr.59 are checked with the following timing.

- (1) When the "PLC READY signal" output from the programmable controller CPU to the AD75 changes from OFF to ON
- (2) When the test mode using the AD75 software package

## 5.1.4 Setting items for servo parameters

The setting items for the "servo parameters" are indicated below. Set the "servo parameters" axis-by-axis according to the used servo amplifier and control details. The types and setting ranges of the parameters change depending on the used servo amplifier.

For details of the setting items, refer to the following servo parameter section of the corresponding model.

- When MR-H-B (MR-H-BN) is used : "Section 5.2.7 Servo parameters for MR-H-B (MR-H-BN)"
- When MR-J-B is used : "Section 5.2.8 Servo parameters for MR-J-B"
- When MR-J2-B is used : "Section 5.2.9 Servo parameters for MR-J2-B"
- When MR-J2S-B is used : "Section 5.2.10 Servo parameters for MR-J2S-B"
- When MR-J2-03B5 is used : "Section 5.2.11 Servo parameters for MR-J2-03B5"

For details of the servo parameters, refer to the Instruction Manual of the used servo amplifier.

Servo parameter		Servo amplifier model					
		MR-H-B (MR-H-BN)	MR-J-B	MR-J2-B	MR-J2S-B	MR-J2-03B5	
Servo basic parameter	Pr.100	Servo series	○	○	○	○	○
	Pr.101	Amplifier setting	○	○	○	○	×
	Pr.102	Regenerative brake resistor	○	○	○	○	×
	Pr.103	Motor type	○	○	○	○	○
	Pr.104	Motor capacity	○	○	○	○	○
	Pr.105	Motor speed	○	○	×	×	×
	Pr.106	Feedback pulse	○	○	×	○	×
	Pr.107	Rotation direction	○	○	○	○	○
	Pr.108	Auto tuning	○	○	○	○	○
	Pr.109	Servo response setting	○	○	○	○	○
Servo adjustment parameter	Pr.112	Load inertia ratio	○	○	○	○	○
	Pr.113	Position loop gain 1	○	○	○	○	○
	Pr.114	Speed loop gain 1	○	○	○	○	○
	Pr.115	Position loop gain 2	○	○	○	○	○
	Pr.116	Speed loop gain 2	○	○	○	○	○
	Pr.117	Speed integral compensation	○	○	○	○	○
	Pr.118	Notch filter selection*	○	○	○	○	○
	Pr.119	Feed forward gain	○	○	○	○	○
	Pr.120	In-position range	○	○	○	○	○
	Pr.121	Solenoid brake output	○	×	○	○	○
	Pr.122	Monitor output mode selection	○	○	○	○	×
	Pr.123	Option function 1	○	○	○	○	△
	Pr.124	Option function 2	○	○	○	○	○
	Pr.125	Low pass filter/adaptive vibration suppression control	×	×	×	○	×

\* : Called "machine resonance suppression filter 1" in the MR-J2S-B.

- : Can be set
- △ : Some restrictions
- ×

Servo parameter		Servo amplifier model					
		MR-H-B (MR-H-BN)	MR-J-B	MR-J2-B	MR-J2S-B	MR-J2-03B5	
Servo extension parameter	Pr.127	Monitor output 1 offset	○	○	○	○	×
	Pr.128	Monitor output 2 offset	○	×	○	○	×
	Pr.129	Pre-alarm data selection	○	×	×	×	×
	Pr.130	Zero speed	○	○	○	○	○
	Pr.131	Error excessive alarm level	○	○	○	○	○
	Pr.132	Option function 5	○	×	○	○	○
	Pr.133	Option function 6	×	×	×	○	×
	Pr.134	PI-PID switching position droop	○	×	○	○	○
	Pr.136	Speed differential compensation	○	○	○	○	○
	Pr.138	Encoder output pulses	×	×	×	○	×
	Pr.149	Servo parameter transmission setting	×	×	×	○	×

- : Can be set  
 × : Cannot be set

#### ■ Checking the servo parameters

Pr.100 to Pr.138 and Pr.149 are checked with the following timing.

- (1) When the "PLC READY signal" output from the programmable controller CPU to the AD75 changes from OFF to ON
- (2) When the test mode using the AD75 software package

5.1.5 Setting items for positioning data

The "positioning data" must be set when carrying out "main positioning control". The setting items for the "positioning data" are shown below.

One to 600 "positioning data" items can be set for each axis.

Refer to "CHAPTER 9 MAIN POSITIONING CONTROL" for details on the "main positioning control", and to section "5.3 List of positioning data" for details on each setting item.

Main positioning control			Position control			Speed control	Speed/position changeover control	Other control	
			1-axis linear control 2-axis linear interpolation control	1-axis fixed-dimension feed control 2-axis fixed-dimension feed control	2-axis circular interpolation control			Current value change	JUMP command
Positioning data setting items									
Da.1	Operation pattern	Independent positioning control	◎	◎	◎	◎	◎	◎	×
		Continuous positioning control	◎	◎	◎	×	◎	◎	◎
		Continuous path control	◎	×	◎	×	×	×	◎
Da.2	Control method	Linear 1 Linear 2 *	Fixed-dimension feed 1 Fixed-dimension feed 2 *	Circular interpolation Circular right Circular left *	Forward run Speed limited Reverse run Speed limited	Forward run speed/posi- tion Reverse run speed/posi- tion	Current value chang	JUMP command	
Da.3	Acceleration time No.	○	○	○	○	○	-	-	
Da.4	Deceleration time No.	○	○	○	○	○	-	-	
Da.5	Positioning address/movement amount	◎	◎	◎	-	-	Change destina- tion address	-	
Da.6	Arc address	-	-	◎	-	-	-	-	
Da.7	Command speed	◎	◎	◎	◎	◎	-	-	
Da.8	Dwell time/JUMP destination positioning data No.	○	○	○	○	○	-	JUMP destination positioning data No.	
Da.9	M code/condition data	○	○	○	○	○	-	Condition data No. when JUMP	

◎ : Always set

○ : Set as required ("-" when not set)

× : Setting not possible

- : Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)

\* : The "ABS (absolute) method" or "INC (incremental) method" can be used for the control method.



■ Checking the positioning data

Da.1 to  Da.9 are checked with the following timing.

- (1) Startup of a positioning operation
- (2) When the test mode using the AD75 software package

## 5.1.6 Setting items for start block data

The "start block data" must be set when carrying out "advanced positioning control".

The setting items for the "start block data" are shown below.

Up to 50 points of "start block data" can be set for each axis.

Refer to "CHAPTER 10 ADVANCED POSITIONING CONTROL" for details on the "advanced positioning control", and to section "5.4 List of start block data" for details on each setting item.

Advanced positioning control Start block data setting items		Block start (Normal start)	Condition start	Wait start	Simulta- neous start	Stop	Repeated start (FOR loop)	Repeated start (FOR condition)
Da.10	Shape	○	○	○	○	○	○	○
Da.11	Start data No.	○	○	○	○	○	○	○
Da.12	Special start command	—	○	○	○	○	○	○
Da.13	Parameter	—	○	○	○	—	○	○

○ : Set as required ("—" when not set)

— : Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)

#### ■ Checking the start block data

Da.10 to Da.13 are checked with the following timing.

- (1) When the "Start block data" starts
- (2) When the test mode using the AD75 software package

5.1.7 Setting items for condition data

When carrying out "advanced positioning control" or using the JUMP command in the "main positioning control", the "condition data" must be set as required. The setting items for the "condition data" are shown below.

Up to 10 "condition data" items can be set for each axis.

Refer to "CHAPTER 10 ADVANCED POSITIONING CONTROL" for details on the "advanced positioning control", and to section "5.5 List of condition data" for details on each setting item.

Control		Main positioning control		Advanced positioning control						
		Other than JUMP command	JUMP command	Block start (Normal start)	Condition start	Wait start	Simultaneous start	Stop	Repeated start (FOR loop)	Repeated start (FOR condition)
Condition data										
Da.14	Condition target	-	○	-	○	○	○	-	-	○
Da.15	Condition operator	-	○	-	○	○	○	-	-	○
Da.16	Address	-	△	-	△	△	-	-	-	△
Da.17	Parameter 1	-	○	-	○	○	△	-	-	○
Da.18	Parameter 2	-	△	-	△	△	△	-	-	△

○ : Set as required ("-" when not set)

△ : Setting limited

- : Setting not required (This is an irrelevant item, so the setting value will be ignored. If the value is the default value or within the setting range, there is no problem.)

■ Checking the condition data

Da.14 to Da.18 are checked with the following timing.

- (1) When the "Start block data" starts
- (2) When "JUMP command" starts
- (3) When the test mode using the AD75 software package

### 5.1.8 Types and roles of monitor data

Data that indicates the positioning system's operation state is stored in the buffer memory's monitor data area.

When using the positioning system, this data must be monitored as necessary.

The data that can be monitored is shown below.

- Monitoring the system

Monitors the AD75 specifications, such as the module name and OS type, and the operation history. (System monitor data Md.1 to Md.28)

- Monitoring the axis operation state

Monitors the data related to the operating axis, such as the current position and speed. (Axis monitor data Md.29 to Md.56)

\* The axis monitor data is updated every 56.8ms. Note that "Md.32 Valid M code" is updated simultaneously when "M code ON signal [XD, XE, XF] turns ON.

#### (1) Monitoring the system

##### ■ Monitoring the AD75 specifications

Monitor details	Corresponding item
Monitor the module name	<span style="border: 1px solid black; padding: 0 2px;">Md.2</span> Module name
Monitor the OS type	<span style="border: 1px solid black; padding: 0 2px;">Md.3</span> OS type
Monitor the OS version	<span style="border: 1px solid black; padding: 0 2px;">Md.4</span> OS version
Monitor the clock data used in the system	<span style="border: 1px solid black; padding: 0 2px;">Md.5</span> Clock data (Hour: minute)
	<span style="border: 1px solid black; padding: 0 2px;">Md.6</span> Clock data (Second: 100ms)

■ Monitoring the positioning system operation history

Monitor details		Corresponding item		
Monitor whether the system is in the test mode		Md.1	In test mode flag	
Monitor the history of the data that has been started	Start axis	Md.7	Start axis	
	Operation type	Md.8	Operation type	
	Start	Hour : minute	Md.9	Start time (Hour: minute)
		Second : 100ms	Md.10	Start time (Second: 100 ms)
	Error when starting	Md.11	Error judgment	
Latest pointer No.	Md.12	Starting history pointer		
Monitor the history of the data that caused an error when starting and that was not operated	Start axis	Md.13	Start axis	
	Operation type	Md.14	Operation type	
	Start	Hour : minute	Md.15	Start time (Hour: minute)
		Second : 100ms	Md.16	Start time (Second: 100 ms)
	Error when starting	Md.17	Error judgment	
Latest pointer No.	Md.18	Starting history pointer at error		
Monitor the history of all errors	Axis in which the error occurred	Md.19	Axis in which the error occurred	
	Axis error No.	Md.20	Axis error No.	
	Axis error occurrence	Hour : minute	Md.21	Axis error occurrence time (Hour: minute)
		Second : 100ms	Md.22	Axis error occurrence time (Second: 100ms)
	Latest pointer No.	Md.23	Error history pointer	
Monitor the history of all warnings	Axis in which the warning occurred	Md.24	Axis in which the warning occurred	
	Axis warning No.	Md.25	Axis warning No.	
	Axis warning occurrence	Hour : minute	Md.26	Axis warning occurrence time (Hour: minute)
		Second : 100ms	Md.27	Axis warning occurrence time (Second: 100ms)
	Latest pointer No.	Md.28	Warning history pointer	

(2) Monitoring the axis operation state

■ Monitoring the position

Monitor details	Corresponding item
Monitor the current machine feed value	Md.30 Machine feed value
Monitor the current "current feed value"	Md.29 Current feed value
Monitor the current target value	Md.41 Target value
Monitor the current value of actual movement (current feed value - droop value of deviation counter)	Md.101 Real current value

### ■ Monitoring the speed

Monitor details			Corresponding item
Monitor the current speed	During independent axis control		Indicates the speed of each axis
	During interpolation control	When "0: Composite speed" is set for "[Pr.21] Interpolation speed designation method"	Indicates the composite speed
		When "1: Reference axis speed" is set for "[Pr.21] Interpolation speed designation method"	Indicates the reference axis speed
	Constantly indicates the speed of each axis		
Monitor the current target speed			[Md.42] Target speed

### ■ Monitoring the state

Monitor details	Corresponding item
Monitor the axis operation state	[Md.35] Axis operation status
Monitor the latest error code that occurred with the axis	[Md.33] Axis error No.
Monitor the latest warning code that occurred with the axis	[Md.34] Axis warning No.
Monitor the external input signal and flag	[Md.39] External input signal [Md.40] Status
Monitor the valid M codes	[Md.32] Valid M code
Monitor whether the speed is being limited	[Md.49] In speed limit flag
Monitor whether the speed is being changed	[Md.50] In speed change processing flag
Monitor the "start information" point currently being executed	[Md.51] Start data pointer being executed
Monitor the "positioning data No." currently being executed	[Md.54] Positioning data No. being executed
Monitor the remaining No. of repetitions	[Md.53] Repeat counter
Monitor the block positioning No.	[Md.55] Block No. being executed
Monitor the zero point absolute position	[Md.43] Zero point absolute position
Monitor the current torque limit value	[Md.45] Torque limit stored value
Monitor the "command code" of the special start data when using special start	[Md.46] Special start data command code setting value
Monitor the "command parameter" of the special start data when using special start	[Md.47] Special start data command parameter setting value
Monitor the "start data No." of the special start data when using special start	[Md.48] Start positioning data No. setting value
Monitor the "positioning data No." executed last	[Md.52] Last executed positioning data No.
Monitor the positioning data currently being executed	[Md.56] Positioning data being executed
Monitor the movement amount after the current position control changeover when using "speed/position changeover control"	[Md.38] Speed/position changeover control positioning amount
Store the movement amount (signed) of movement achieved up to the zero point by re-movement	[Md.100] Zero point return re-movement amount
Monitor the difference between the current feed value and real current value	[Md.102] Deviation counter value
Monitor the FeRAM access count	[Md.120] FeRAM access count
Monitor the absolute position restoration mode in the axis where absolute position detection is valid in the control unit "degree"	[Md.121] Absolute position restoration mode

■ Monitoring the servo conditions

Monitor details	Corresponding item
Monitor the servomotor speed	<b>Md.103</b> Motor speed
Monitor the current flowing in the servomotor	<b>Md.104</b> Motor current
Monitor " <b>Pr.108</b> Auto tuning" used by the servo amplifier	<b>Md.105</b> Auto tuning
Monitor " <b>Pr.112</b> Load inertia ratio" used by the servo amplifier	<b>Md.106</b> Load inertia ratio
Monitor " <b>Pr.113</b> Position loop gain 1" used by the servo amplifier	<b>Md.107</b> Position loop gain 1
Monitor " <b>Pr.114</b> Speed loop gain 1" used by the servo amplifier	<b>Md.108</b> Speed loop gain 1
Monitor " <b>Pr.115</b> Position loop gain 2" used by the servo amplifier	<b>Md.109</b> Position loop gain 2
Monitor " <b>Pr.116</b> Speed loop gain 2" used by the servo amplifier	<b>Md.110</b> Speed loop gain 2
Monitor " <b>Pr.117</b> Speed integral compensation" used by the servo amplifier	<b>Md.111</b> Speed integral compensation
Monitor the software number of the used servo amplifier	<b>Md.112</b> Servo amplifier software No.
Monitor the parameter No. 1 to 15 errors of the servo amplifier	<b>Md.113</b> Parameter error (No. 1 to 15)
Monitor the parameter No. 16 to 31 errors of the servo amplifier	<b>Md.114</b> Parameter error (No. 16 to 31)
Monitor the parameter No. 32 to 36 errors of the servo amplifier	<b>Md.115</b> Parameter error (No. 32 to 36)
Monitor the servo amplifier status	<b>Md.116</b> Servo status
Monitor the ratio of the load to the allowable value of regenerative brake resistor	<b>Md.117</b> Regenerative load ratio
Monitor the ratio of the load to the rated torque	<b>Md.118</b> Effective load ratio
Monitor the ratio of the peak load to the rated torque	<b>Md.119</b> Peak load ratio

## 5.1.9 Types and roles of control data

Several controls are carried out as necessary when using the positioning system. (When the power is turned ON, the default values of the data used for control are set. However, these values can be set with the sequence program when necessary.) The items that can be controlled are shown below.

- Controlling the system data

Sets the clock data in the AD75, and reads/writes the "positioning data". (System control data  to )

- Controlling the operation

Makes settings related to the operation, and controls the speed change during operation, and stops/restarts the operation. (Axis control data  to , , )

## (1) Controlling the system data

■ Setting the AD75 clock data

Control details	Corresponding item
Set the item (hour)	<input type="text" value="Cd.1"/> Clock data setting (hour)
Set the item (minute, second)	<input type="text" value="Cd.2"/> Clock data setting (minute, second)
Write the data set in <input type="text" value="Cd.1"/> and <input type="text" value="Cd.2"/> into the AD75	<input type="text" value="Cd.3"/> Clock data writing


■ Reading/writing the positioning data

Control details	Corresponding item
Set the "axis" in which the positioning data subject to reading or writing is set	<input type="text" value="Cd.4"/> Target axis
Set the "positioning data No." subject to reading or writing	<input type="text" value="Cd.5"/> Positioning data No.
When writing the data, designate which "positioning data" that has been read in to write	<input type="text" value="Cd.6"/> Write pattern
Request writing or reading	<input type="text" value="Cd.7"/> Read/write request
Temporarily store the read data * This buffer memory is used as the storage area.	<input type="text" value="Cd.8"/> Read/write positioning data I/F
Write the data in the OS area to the flash ROM	<input type="text" value="Cd.9"/> Flash ROM write request
Initialize the parameters	<input type="text" value="Cd.10"/> Parameter initialization request



[Reference]

The outline of reading and writing the positioning data is shown below.

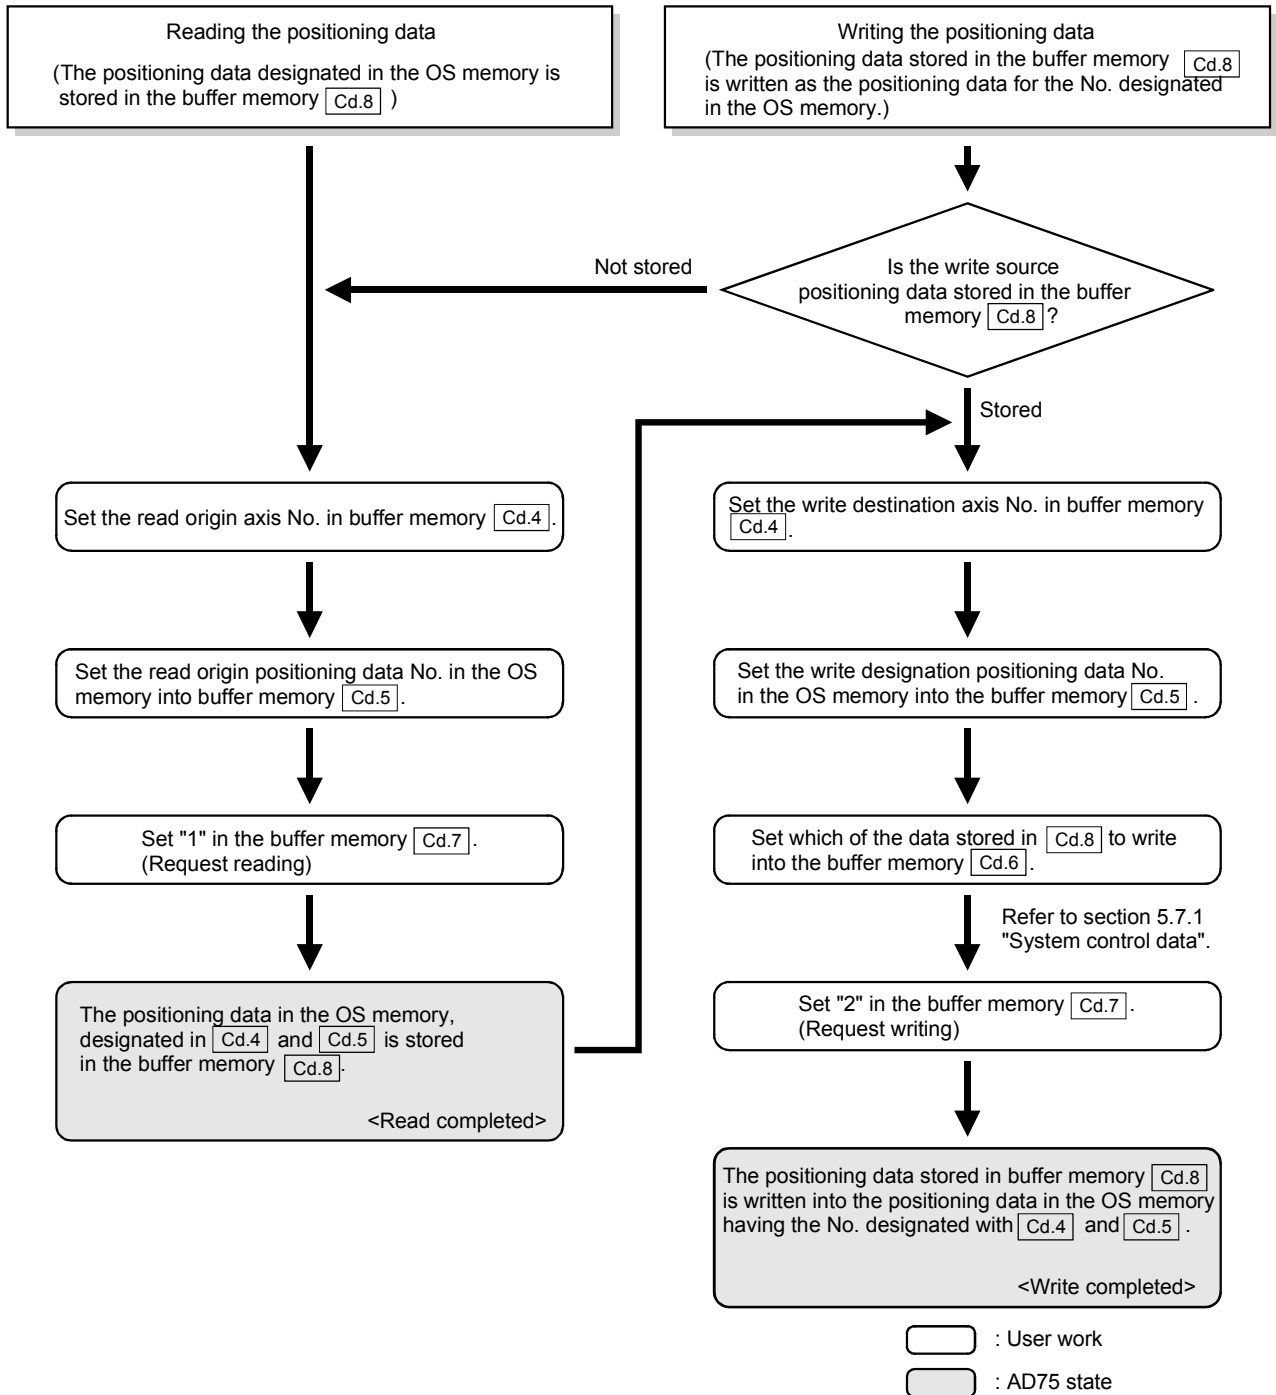

## (2) Controlling the operation

## ■ Controlling the operation

Control details	Corresponding item
Set which positioning to execute (start No.)	Cd.11 Positioning start No.
Clear (reset) the axis error No. (Md.33) and axis warning No. (Md.34)	Cd.12 Axis error reset
Issue instruction to restart (When axis operation is stopped)	Cd.13 Restart command
End current positioning (deceleration stop), and start next positioning	Cd.29 Skip command
Set start point No. for executing block start	Cd.31 Positioning starting point No.
Stop continuous control	Cd.32 Interrupt request during continuous operation
Switch servo OFF (free run status)	Cd.100 Servo OFF command

## ■ Controlling operation per step

Control details	Corresponding item
Stop positioning operation after each operation	Cd.26 Step valid flag
Set unit to carry out step	Cd.27 Step mode
Issue instruction to continuous operation or restart from stopped step	Cd.28 Step start information

## ■ Controlling the speed


Control details	Corresponding item
Set new speed when changing speed during operation	Cd.16 New speed value
Issue instruction to change speed in operation to Cd.16 value (Only during positioning operation and JOG operation)	Cd.17 Speed change request
Change positioning operation speed between 1 and 300% range	Cd.18 Positioning operation speed override
Set JOG speed	Cd.19 JOG speed
When changing acceleration time during speed change, set new acceleration time	Cd.33 New acceleration time value
When changing deceleration time during speed change, set new deceleration time	Cd.34 New deceleration time value
Set acceleration/deceleration time validity during speed change	Cd.35 Acceleration/deceleration time change during speed change, enable/disable selection

■ Making settings related to operation

Control details	Corresponding item
Turn M code ON signal OFF	<a href="#">Cd.14</a> M code OFF request
Set new value when changing current value	<a href="#">Cd.15</a> New current value
Validate speed/position changeover signal from external source	<a href="#">Cd.20</a> Speed/position changeover enable flag
Change movement amount for position control during speed/position changeover control	<a href="#">Cd.21</a> Speed/position changeover control movement amount change register
Set manual pulse generator operation validity	<a href="#">Cd.22</a> Manual pulse generator enable flag
Set scale per pulse of No. of input pulses from manual pulse generator	<a href="#">Cd.23</a> Manual pulse generator 1 pulse input magnification
Change zero point return request flag from "ON to OFF"	<a href="#">Cd.24</a> Zero point return request flag OFF request
Validate external start signal	<a href="#">Cd.25</a> External start valid
Change " <a href="#">Md.45</a> Torque limit stored value"	<a href="#">Cd.30</a> New torque value
Set the torque output value	<a href="#">Cd.101</a> Torque output setting value

5.2 List of parameters

5.2.1 Basic parameters 1

Item	Setting value, setting range		Default value	Setting value buffer memory address							
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3					
Pr.1 Unit setting	0 : mm	0	3	0	150	300					
	1 : inch	1									
	2 : degree	2									
	3 : pulse	3									
Movement amount per pulse	Pr.2 No. of pulses per rotation (Ap) (Unit : pulse) 1 to 65535	1 to 65535	20000	1	151	301					
		1 to 32767: Set as a decimal									
		32768 to 65535: Convert into hexadecimal and set									
Pr.3 Movement amount per rotation (Al)	The setting value range differs according to the "Pr.1 Unit setting". Here, the value within the [Table 1] range is set.		20000	2	152	302					
											
	Pr.4 Unit magnification (Am)	1 : 1-fold					1	1	3	153	303
		10 : 10-fold					10				
100 : 100-fold		100									
1000 : 1000-fold		1000									

Pr.1 Unit setting

This sets the command unit for positioning control. The unit is selected from mm, inch, degree, pulse according to the control target. The unit for axis 1, axis 2 and axis 3 can be set independently.

(Example)

mm, inch..... X, Y table, conveyor. (If the machine has inch specifications, set with an inch unit.)

degree ..... Rotating body. (360 degree/rotation)

pulse..... X, Y table, conveyor

\* Even if the unit setting is changed, the other parameters and positioning data values will not change. When changing the unit, check that the parameters and data are within the setting range.

**Pr.2** to **Pr.4** Movement amount per pulse

Set the movement amount per pulse count when outputting a position/speed command from the AD75. The setting is made with **Pr.2** to **Pr.4**. (The case for the "**Pr.1** Unit setting" is "mm" is explained below.)

The movement amount per pulse is expressed with the following expression.

$$\text{Movement amount per pulse} = \frac{\text{Movement amount per rotation (Al)}}{\text{No. of pulses per rotation (Ap)}}$$

\* When carrying out positioning, an error (mechanical error) could occur between the designated movement amount and actual movement amount. In that case, the error can be compensated with the "movement amount per pulse". (Refer to section "12.3.2 Electronic gear function".)

<b>POINT</b>
<p>If the movement amount per pulse is less than 1, command speed variations will occur.                  Smaller setting will increase variations and may cause machine vibration.                  Make setting so that the movement amount per pulse is 1 or greater.</p>

Pr.

**Pr.2** No. of pulses per rotation (Ap)

Set the number of pulses required for the motor shaft to rotate once (resolution per servomotor revolution).

$$\text{No. of pulses per revolution (Ap)} = \text{Resolution per servomotor revolution}$$

Set this parameter to 16384 when using the encoder of 16384 pulses or more with the MR-J2S-B.

Set this parameter to 8192 when using the MR-J2-03B5.

[Table 1]

<b>Pr.1</b> setting value	Value set with peripheral device (unit)	Value set with sequence program (unit) *
0 : mm	0.1 to 6553.5 (μm)	1 to 65535 (×10 <sup>-1</sup> μm)
1 : inch	0.0001 to 0.65535 (inch)	1 to 65535 (×10 <sup>-5</sup> inch)
2 : degree	0.00001 to 0.65535 (degree)	1 to 65535 (×10 <sup>-5</sup> degree)
3 : pulse	1 to 65535 (pulse)	1 to 65535 (pulse)

\* 1 to 32767 : Set as a decimal  
 32768 to 65535 : Convert into hexadecimal and set

**Pr.3** Movement amount per rotation (AL), **Pr.4** Unit magnification (Am)

The amount how the workpiece moves with one motor rotation is determined by the mechanical structure.

If the worm gear lead (mm/rev) is PB and the deceleration rate is 1/n, then

$$\text{Movement amount per rotation (AL)} = \text{PB} \times 1/n$$

However, the maximum value that can be set for this "movement amount per rotation (AL)" parameter is 6553.5µm (approx. 6.5mm). Set the "movement amount per rotation (AL)" as shown below so that the "movement amount per rotation (AL)" does not exceed this maximum value.

$$\begin{aligned} \text{Movement amount per rotation (AL)} &= \text{PB} \times 1/n \\ &= \text{Movement amount per rotation (Al)} \times \text{Unit magnification (Am)} \end{aligned}$$

Note) The unit magnification (Am) is a value of 1, 10, 100 or 1000. If the "PB × 1/n" value exceeds 6553.5 µm, adjust with the unit magnification so that the "movement amount per rotation (Al)" does not exceed 6553.5 µm.

**Example 1)**


When movement amount per rotation (AL) = PB × 1/n = 6000.0µm (= 6mm)

$$\begin{aligned} \text{Movement amount per rotation (AL)} &= \text{Movement amount per rotation (Al)} \times \text{Unit magnification (Am)} \\ &= 6000.0\mu\text{m} \times 1 \end{aligned}$$

**Example 2)**



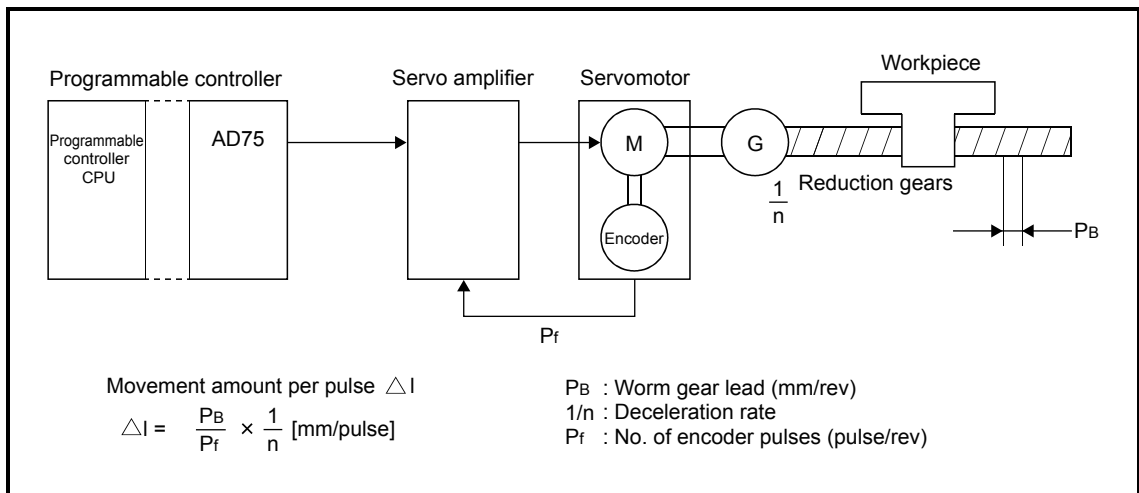

When movement amount per rotation (AL) = PB × 1/n = 60000.0µm (= 60mm)

$$\begin{aligned} \text{Movement amount per rotation (AL)} &= \text{Movement amount per rotation (Al)} \times \text{Unit magnification (Am)} \\ &= 6000.0\mu\text{m} \times 10 \\ &= 600.0\mu\text{m} \times 100 \end{aligned}$$





5.2.2 Basic parameters 2

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.7</b> Speed limit value	The setting value range differs depending on the " <b>Pr.1</b> Unit setting". Here, the value within the [Table 1] range is set. 		200000	6 7	156 157	306 307
<b>Pr.8</b> Acceleration time 0	The setting value range differs according to the " <b>Pr.25</b> Size selection for acceleration/deceleration time setting". Here, the value within the [Table 2] range is set. 		1000	8 9	158 159	308 309
<b>Pr.9</b> Deceleration time 0	The setting value range differs according to the " <b>Pr.25</b> Size selection for acceleration/deceleration time setting". Here, the value within the [Table 2] range is set. 		1000	10 11	160 161	310 311
<b>Pr.10</b> Bias speed at start	The setting value range differs depending on the " <b>Pr.1</b> Unit setting". Here, the value within the [Table 1] range is set. 		0	12 13	162 163	312 313

**Pr.7** Speed limit value


Set the maximum speed for zero point return control and positioning control. The speed during positioning control must be limited according to the servo amplifier and control target.

The speed limit conditions follow the following:

- 1) Motor speed
- 2) Workpiece movement speed

**Pr.8** Acceleration time 0, **Pr.9** Deceleration time 0

Set the item to reach "**Pr.7** Speed limit value" from speed 0.

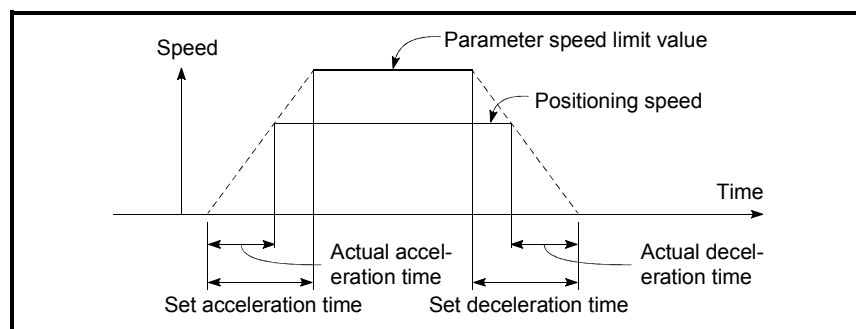

**POINT**

If the "**Pr.7** Speed limit value", "**Pr.8** Acceleration time 0" and "**Pr.9** Deceleration time 0" value is changed during positioning control, the new value is reflected after a delay of a maximum of three pieces of data, with the exception of the positioning data No. being executed at the time of the change.



- 1) If the positioning speed setting is slower than the parameter speed limit, the actual acceleration/deceleration time will be relatively short. Thus, set the maximum positioning speed value to be equal to the parameter speed limit value or a close value under the speed limit value.
- 2) These settings are value for zero point return, positioning and JOG operation.
- 3) During interpolation positioning, the acceleration/deceleration item for the reference axis is valid.

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 6000000.00 (mm/min)	1 to 600000000 ( $\times 10^{-2}$ mm/min)
1 : inch	0.001 to 600000.000 (inch/min)	1 to 600000000 ( $\times 10^{-3}$ inch/min)
2 : degree	0.001 to 600000.000 (degree/min)	1 to 600000000 ( $\times 10^{-3}$ degree/min)
3 : pulse	1 to 1000000 (pulse/s)	1 to 1000000 (pulse/s)

[Table 2]

Pr.25 setting value	Value set with peripheral device (ms)	Value set with sequence program (ms)
0 : 1-word type	1 to 65535	1 to 65535*
1 : 2-word type	1 to 8388608	1 to 8388608

- \* 1 to 32767 : Set as a decimal  
 32768 to 65535 : Convert into hexadecimal and set

#### Pr.10 Bias speed at start



Set the "minimum speed for starting" for the "bias speed at start".

This is set to smoothly start the motor.

The set "bias speed at start" is valid for the following operation.

- Positioning operation
- Zero point return
- JOG operation


5.2.3 Detailed parameters 1

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.12 Backlash compensation amount	The setting value range differs according to the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. 		0	15	165	315
Pr.13 Software stroke limit upper limit value	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 2] range is set. 		2147483647	16 17	166 167	316 317
Pr.14 Software stroke limit lower limit value			-2147483648	18 19	168 169	318 319
Pr.15 Software stroke limit selection	0 : Apply software stroke limit on current feed value	0	0	20	170	320
	1 : Apply software stroke limit on machine feed value	1				
Pr.16 Software stroke limit valid/invalid setting	0 : Software stroke limit invalid during JOG operation and manual pulse generator operation	0	0	21	171	321
	1 : Software stroke limit valid during JOG operation and manual pulse generator operation	1				

Pr.12 Backlash compensation amount

The error that occurs due to backlash when moving the machine via gears can be compensated.

When the backlash compensation amount is set, position/speed command equivalent to the compensation amount will be output each time the direction changes during positioning.

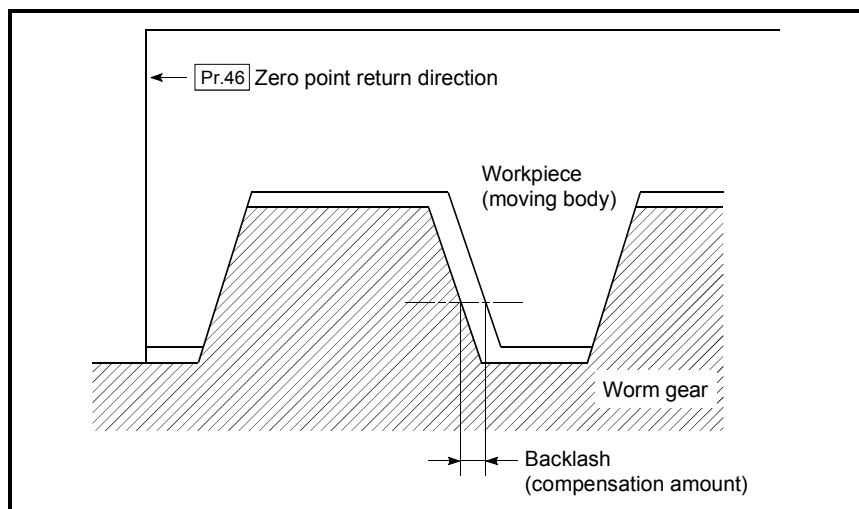

- 1) The backlash compensation is valid after completed the machine zero point return. Thus, if the backlash compensation amount is set or changed, always carry out machine zero point return once.
- 2) The backlash compensation amount setting range is 0 to 65535, but it should be set to 255 or less by using the following expression.

$$0 \leq \frac{\text{Backlash compensation amount}}{\text{Movement amount per pulse}} \leq 255$$

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit) *
0 : mm	0 to 6553.5 (μm)	0 to 65535 (×10 <sup>-1</sup> μm)
1 : inch	0 to 0.65535 (inch)	0 to 65535 (×10 <sup>-5</sup> inch)
2 : degree	0 to 0.65535 (degree)	0 to 65535 (×10 <sup>-5</sup> degree)
3 : pulse	0 to 65535 (pulse)	0 to 65535 (pulse)

\* 1 to 32767 : Set as a decimal  
 32768 to 65535 : Convert into hexadecimal and set

[Table 2]


Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	-214748364.8 to 214748364.7 (μm)	-2147483648 to 2147483647 (×10 <sup>-1</sup> μm)
1 : inch	-21474.83648 to 21474.83647(inch)	-2147483648 to 2147483647 (×10 <sup>-5</sup> inch)
2 : degree	0 to 359.99999 (degree)	0 to 35999999 (×10 <sup>-5</sup> degree)
3 : pulse	-2147483648 to 2147483647(pulse)	-2147483648 to 2147483647 (pulse)

**Pr.13 Software stroke limit upper limit value**

Set the upper limit for the machine's movement range during positioning control.

**Pr.14 Software stroke limit lower limit value**

Set the lower limit for the machine's movement range during positioning control.

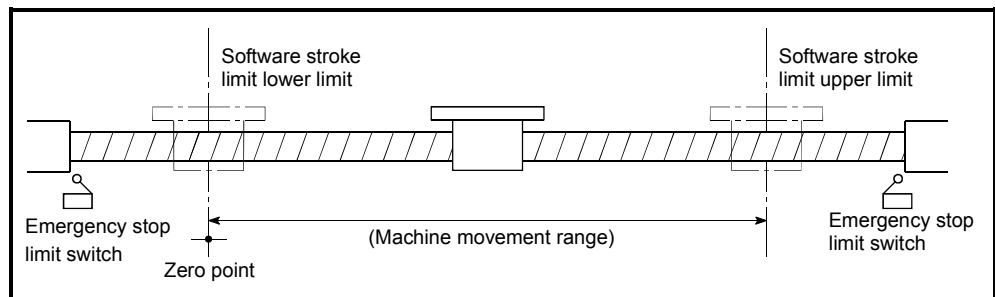


- 1) Generally, the zero point is set at the lower limit or upper limit of the stroke limit.
- 2) By setting the upper limit value or lower limit value of the software stroke limit, overrun can be prevented in the software. However, an emergency stop limit switch must be installed nearby outside the range.
- 3) To invalidate the software stroke limit, set the setting value to "upper limit value = lower limit value". (Any value within the setting range can be set.)
- 4) When the unit is "degree", the software stroke limit check is invalid during speed control (including speed/position chageover control) or during manual control.

**Pr.15** Software stroke limit selection

Set whether to apply the software stroke limit on the "current feed value" or the "machine feed value". The software stroke limit will be validated according to the set value.


**Pr.16** Software stroke limit valid/invalid setting

Set whether to validate the software stroke limit during JOG operation and manual pulse generator operation.

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.17</b> Command in-position width	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. 		100	22 23	172 173	322 323
<b>Pr.18</b> Torque limit setting value	1 to 500 (%)	1 to 500 (%)	300	24	174	324
<b>Pr.19</b> M code ON signal output timing	0 : WITH mode	0	0	25	175	325
	1 : AFTER mode	1				

**Pr.17** Command in-position width

Set the remaining distance that turns the command in-position ON. When positioning control is started, the "command in-position flag" (b2) in "Md.40 Status" turns OFF, and the "command in-position flag" turns ON in the range of the command in-position.

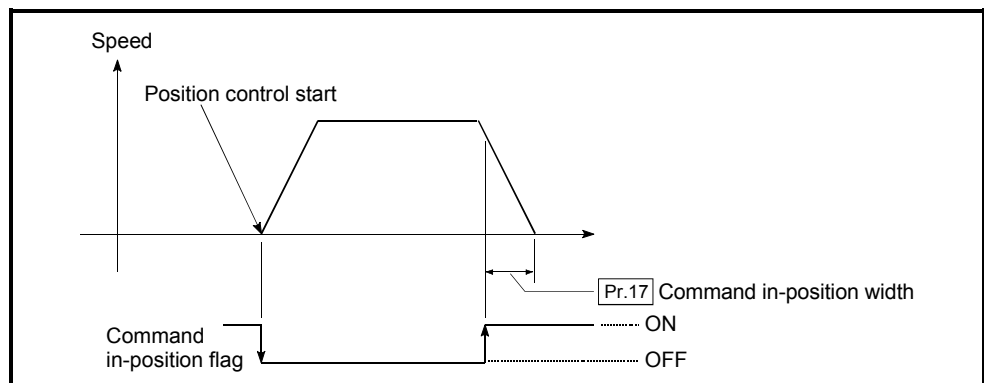

**Pr.18** Torque limit setting value

Used to limit the torque generated by the servomotor to within the setting range. The set "**Pr.18** Torque limit setting value" is set to "**Md.45** Torque limit storage value" of the buffer memory.

Set the maximum value of the torque limit value at the rate of 1 to 500%.

\* When "**Cd.101** Torque output setting value" and "**Cd.30** New torque value" are not used, the servo amplifier limits the torque according to "**Pr.18** Torque limit setting value".

When "**Cd.101** Torque output setting value" or "**Cd.30** New torque value" is used, the servo amplifier limits the torque according to "**Cd.101** Torque output setting value" or "**Cd.30** New torque value".

However, when the value set to "**Cd.101** Torque output setting value" or "**Cd.30** New torque value" is greater than "**Pr.18** Torque limit setting value", the servo amplifier limits the torque according to "**Pr.18** Torque limit setting value".


[Table 1]

<b>Pr.1</b> setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.1 to 3276700.0 ( $\mu\text{m}$ )	1 to 32767000 ( $\times 10^{-1}\mu\text{m}$ )
1 : inch	0.00001 to 327.67000 (inch)	1 to 32767000 ( $\times 10^{-5}\text{inch}$ )
2 : degree	0.00001 to 327.67000 (degree)	1 to 32767000 ( $\times 10^{-5}\text{degree}$ )
3 : pulse	1 to 32767 (pulse)	1 to 32767 (pulse)

**Pr.19** M code ON signal output timing

Set the timing to output the M code ON signal.

The WITH mode and AFTER mode can be used for the M code ON signal output timing.

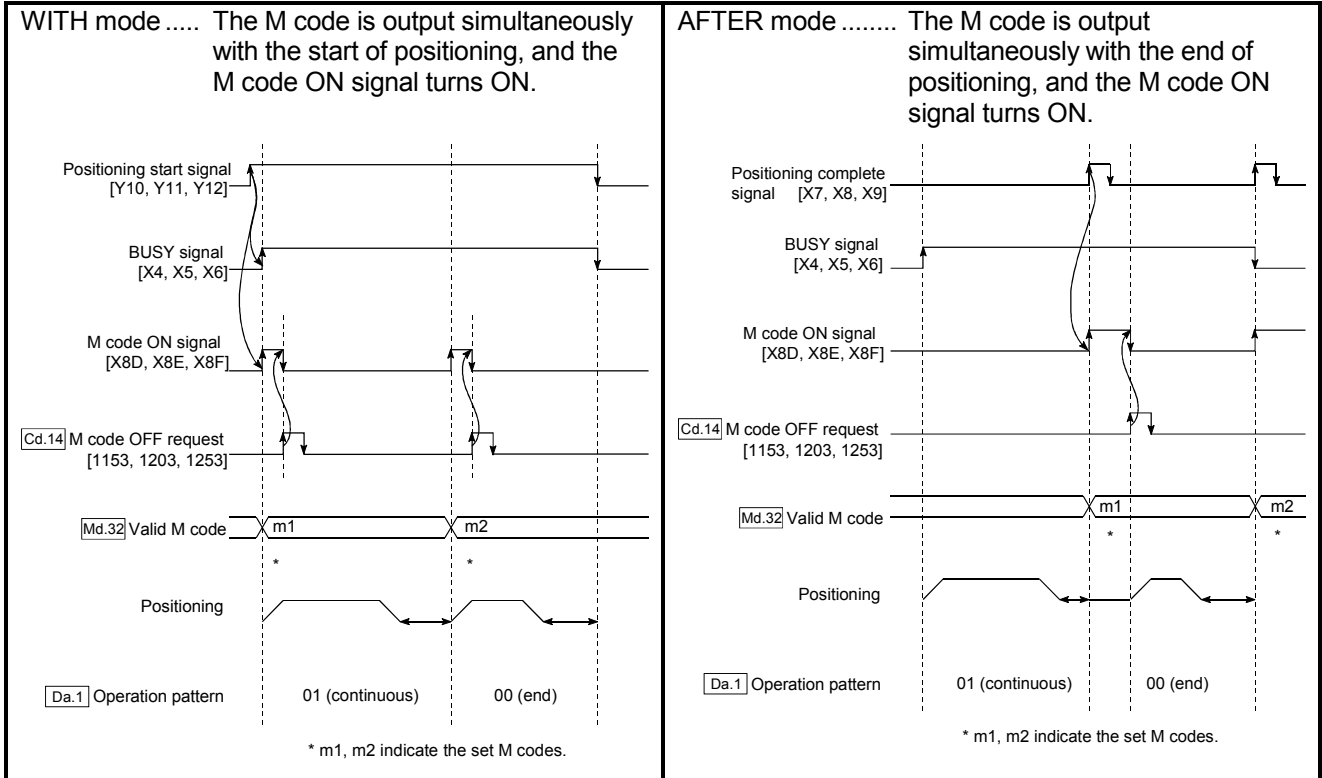

Note) When using the AFTER mode with speed control, the M code will not be output and the M code ON signal will not turn ON.

The M code is a No. between 0 and 32767 that can be set for each positioning data ([Da.9]).

When the M code ON signal [XD, XE, XF] turns ON, "[Md.32] Valid M code" is read from the buffer memory by the sequence program, and an auxiliary work (ex., clamping, drill rotation, tool change, etc.) matching the code No. can be issued.


Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.20 Speed changeover mode	0 : Standard speed changeover mode	0	0	26	176	326
	1 : Front-loading speed changeover mode	1				
Pr.21 Interpolation speed designation method	0 : Composite speed	0	0	27	177	327
	1 : Reference axis speed	1				
Pr.22 Current feed value during speed control	0 : Do not update current feed value	0	0	28	178	328
	1 : Update current feed value	1				
	2 : Clear current feed value to zero	2				
Pr.23 Manual pulse generator selection	0 : Ignore manual pulse generator operation	0	Axis 1 = 1 Axis 2 = 2 Axis 3 = 3	29	179	329
	1 : Use manual pulse generator 1	1				
	2 : Use manual pulse generator 2	2				
	3 : Use manual pulse generator 3	3				
Pr.25 Size selection for acceleration/ deceleration time	0 : 1-word type (1 to 65535ms)	0	0	31	181	331
	1 : 2-word type (1 to 8388608ms)	1				

**Pr.20** Speed changeover mode

Set whether to change the speed changeover mode with the standard changeover or front-loading changeover mode.

0 : Standard changeover ..... Change the speed when executing the next positioning data.


1 : Front-loading changeover .... The speed changes at the end of the positioning data currently being executed.

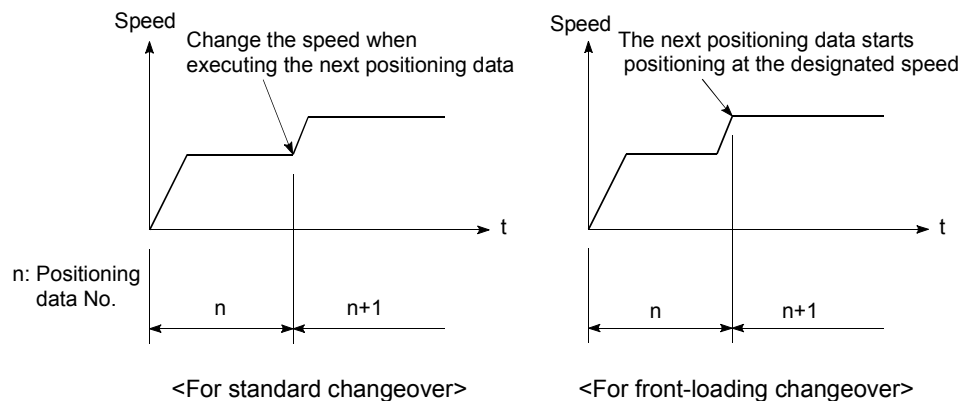


**Pr.21** Interpolation speed designation method

When carrying out linear interpolation, set whether to designate the composite speed or reference axis speed.

- 0: Composite speed ..... The movement speed for the control target is designated, and the speed for each axis is calculated by the AD75.
- 1: Reference axis speed ..... The axis speed set for the reference axis is designated, and the speed for the other axis carrying out interpolation is calculated by the AD75.

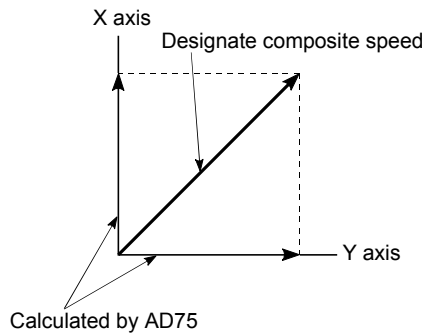

<When composite speed is designated>

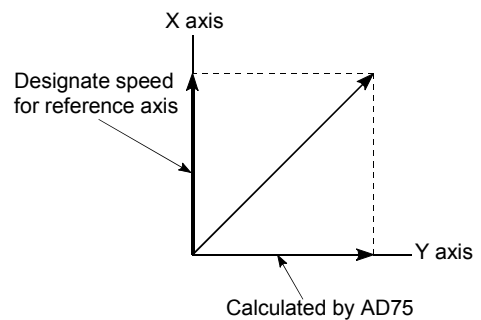

<When reference axis speed is designated>

Note) For a positioning operation that involves the circular interpolation, specify the composite speed always.

**Pr.22** Current feed value during speed control

When carrying out speed control (including speed control during speed/position changeover control), set whether to update the "[Md.29] Current feed value".

- 0 : Do not update current feed value ..... The current feed value is not updated. (The current feed value at the start of speed control is held.)
- 1 : Update current feed value ..... The current feed value is updated. (The current feed value is updated when speed control is started.)
- 2 : Clear current feed value to zero ..... The current feed value is cleared to "0", and is not updated.



**Pr.23** Manual pulse generator selection

Set which manual pulse generator to use for control for each axis (motor).

- 0 : Ignore manual pulse generator operation..... Manual pulse generator operation is not carried out.
- 1 : Use manual pulse generator 1..... Control with manual pulse generator connected to axis 1.
- 2 : Use manual pulse generator 2..... Control with manual pulse generator connected to axis 2.
- 3 : Use manual pulse generator 3..... Control with manual pulse generator connected to axis 3.

Example 1) To correspond axis to control and manual pulse generator

Example 2) To control all axes with one manual pulse generator (manual pulse generator 1)

Axis (buffer memory address)	Setting for Example 1)	Setting for Example 2)
Axis 1 (29)	1	1
Axis 2 (179)	2	1
Axis 3 (329)	3	1



**Pr.25** Size selection for acceleration/deceleration time

Select the setting size for the acceleration/deceleration time. The setting size such as "Acceleration time 0 to 3", "Deceleration time 0 to 3" and "Sudden stop deceleration time" is determined by this setting size.

- 0 : Acceleration/deceleration time 1 to 65535ms (1-word type)
  - 1 : Acceleration/deceleration time 1 to 8388608ms (2-word type)
- Normally, select "0 : Acceleration/deceleration time 1 to 65535ms (1-word type)".

- Note)
- Before selecting the "1: Acceleration/deceleration time 1 to 8388608ms (2-word type)", confirm that there is sufficient movement amount and that constant speed movement is possible. Do not use this setting if the movement amount is remarkably small, or if the speed is slow.
  - When changing the "acceleration/deceleration time size" from the 2-word type to the 1-word type, check that all acceleration/deceleration time setting values are within the "acceleration/deceleration time size" setting range.

5.2.4 Detailed parameters 2

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.26</b> Acceleration time 1	The setting value range differs according to the " <b>Pr.25</b> Size selection for acceleration/deceleration time" setting. Here, the value within the [Table 1] range is set. <div style="text-align: center; margin-top: 10px;">  <span>[Table 1] on right page</span> </div>		1000	36	186	336
<b>Pr.27</b> Acceleration time 2				37	187	337
<b>Pr.28</b> Acceleration time 3				38	188	338
				39	189	339
<b>Pr.29</b> Deceleration time 1				40	190	340
				41	191	341
<b>Pr.29</b> Deceleration time 1	42	192	342			
	43	193	343			
<b>Pr.30</b> Deceleration time 2	44	194	344			
	45	195	345			
<b>Pr.31</b> Deceleration time 3	46	196	346			
	47	197	347			
<b>Pr.32</b> JOG speed limit value	The setting value range differs depending on the " <b>Pr.1</b> Unit setting". Here, the value within the [Table 2] range is set. <div style="text-align: center; margin-top: 10px;">  <span>[Table 2] on right page</span> </div>		20000	48	198	348
	49	199	349			
<b>Pr.33</b> JOG operation acceleration time selection	0 : <b>Pr.8</b> Acceleration time 0	0	0	50	200	350
	1 : <b>Pr.26</b> Acceleration time 1	1				
	2 : <b>Pr.27</b> Acceleration time 2	2				
	3 : <b>Pr.28</b> Acceleration time 3	3				
<b>Pr.34</b> JOG operation deceleration time selection	0 : <b>Pr.9</b> Deceleration time 0	0	0	51	201	351
	1 : <b>Pr.29</b> Deceleration time 1	1				
	2 : <b>Pr.30</b> Deceleration time 2	2				
	3 : <b>Pr.31</b> Deceleration time 3	3				

**Pr.26** Acceleration time 1 to **Pr.28** Acceleration time 3

Set the item to reach "**Pr.7** Speed limit value" from speed 0 during positioning operation.

The setting value size is determined by "**Pr.25** Size selection for acceleration/deceleration time".

**Pr.29** Deceleration time 1 to **Pr.31** Deceleration time 3

Set the item to reach speed 0 from "**Pr.7** Speed limit value" during positioning operation.

The setting value size is determined by "**Pr.25** Size selection for acceleration/deceleration time".

[Table 1]

Pr.25 setting value	Value set with peripheral device (ms)	Value set with sequence program (ms)
0 : 1-word type	1 to 65535	1 to 65535*
1 : 2-word type	1 to 8388608	1 to 8388608

\* 1 to 32767 : Set as a decimal  
32768 to 65535 : Convert into hexadecimal and set

[Table 2]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 6000000.00 (mm/min)	1 to 600000000 ( $\times 10^{-2}$ mm/min)
1 : inch	0.001 to 600000.000 (inch/min)	1 to 600000000 ( $\times 10^{-3}$ inch/min)
2 : degree	0.001 to 600000.000 (degree/min)	1 to 600000000 ( $\times 10^{-3}$ degree/min)
3 : pulse	1 to 1000000 (pulse/s)	1 to 1000000 (pulse/s)

**Pr.32** JOG speed limit value

Set the maximum speed for JOG operation.

Note) Set the "JOG speed limit value" to less than "Pr.7 Speed limit value".  
If the "speed limit value" is exceeded, the "JOG speed limit value error"  
(error code: 956) will occur.

**Pr.33** JOG operation acceleration time selection


Set which of "acceleration time 0 to 3" to use for the acceleration time during JOG operation.

- 0 : Use value set in "Pr.8 Acceleration time 0".
- 1 : Use value set in "Pr.26 Acceleration time 1".
- 2 : Use value set in "Pr.27 Acceleration time 2".
- 3 : Use value set in "Pr.28 Acceleration time 3".

**Pr.34** JOG operation deceleration time selection

Set which of "deceleration time 0 to 3" to use for the deceleration time during JOG operation.


- 0 : Use value set in "Pr.9 Deceleration time 0".
- 1 : Use value set in "Pr.29 Deceleration time 1".
- 2 : Use value set in "Pr.30 Deceleration time 2".
- 3 : Use value set in "Pr.31 Deceleration time 3".

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.35 Acceleration/deceleration process selection	0 : Automatic trapezoid acceleration/deceleration process	0	0	52	202	352
	1 : S-curve acceleration/deceleration process	1				
Pr.36 S-curve ratio	1 to 100 (%)	1 to 100 (%)	100	53	203	353
Pr.37 Sudden stop deceleration time	The setting value range differs according to the "Pr.25 Size selection for acceleration/deceleration time" setting. Here, the value within the [Table 1] range is set. 		1000	54 55	204 205	354 355
Pr.38 Stop group 1 sudden stop selection	0 : Normal deceleration stop	0	0	56	206	356
Pr.39 Stop group 2 sudden stop selection				57	207	357
Pr.40 Stop group 3 sudden stop selection	1 : Sudden stop	1		58	208	358


**Pr.35 Acceleration/deceleration process selection**

Set whether to use automatic trapezoid acceleration/deceleration or S-curve acceleration/deceleration for the acceleration/deceleration process.

Note) Refer to section "12.7.6 Acceleration/deceleration process function" for details.

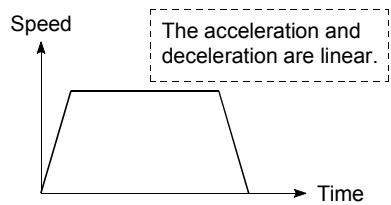

<Automatic trapezoid acceleration/deceleration>

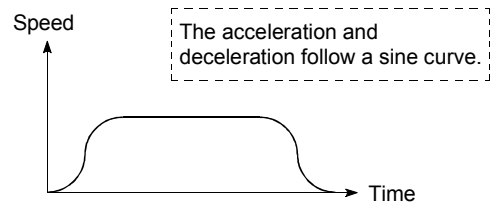


<S-curve acceleration/deceleration>

**Pr.36** S-curve ratio

Set the S-curve ratio (1 to 100%) for carrying out the S-curve acceleration/deceleration process.

The S-curve ratio indicates where to draw the acceleration/deceleration curve using the sine curve as shown below.

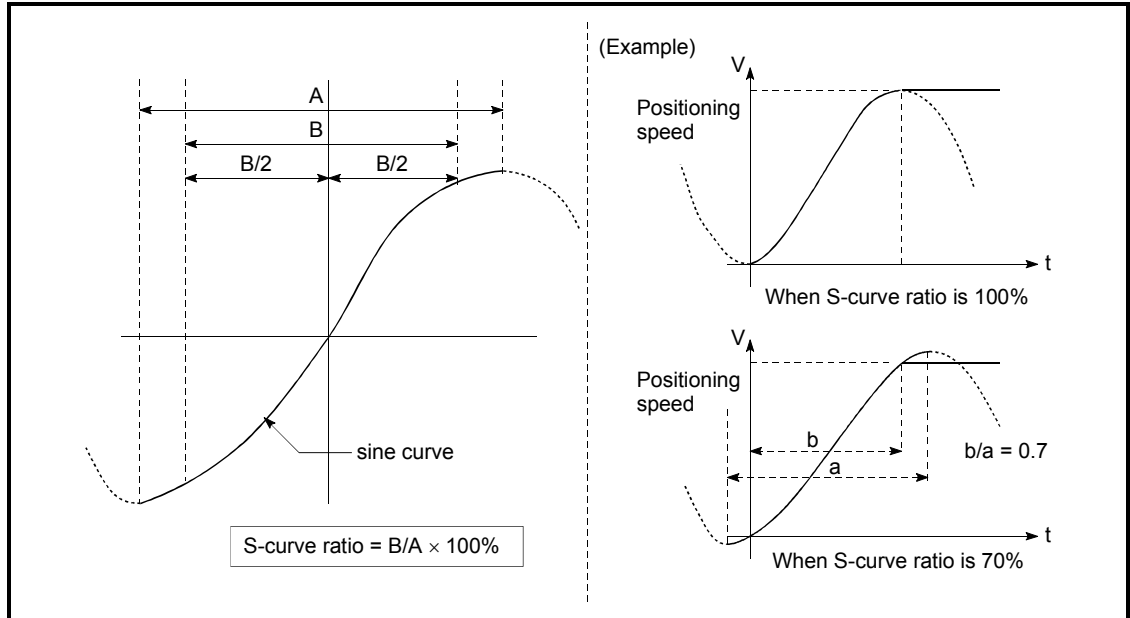


[Table 1]

<b>Pr.25</b> setting value	Value set with peripheral device (ms)	Value set with sequence program (ms)
0 : 1-word type	1 to 65535	1 to 65535*
1 : 2-word type	1 to 8388608	1 to 8388608

\* 1 to 32767 : Set as a decimal  
 32768 to 65535 : Convert into hexadecimal and set

**Pr.37** Sudden stop deceleration time

Set the time to reach speed 0 from "Pr.7 Speed limit value" during the sudden stop. The setting value size is determined by "Pr.25 Size selection for acceleration/deceleration time". The relation with the other parameters is as shown below.

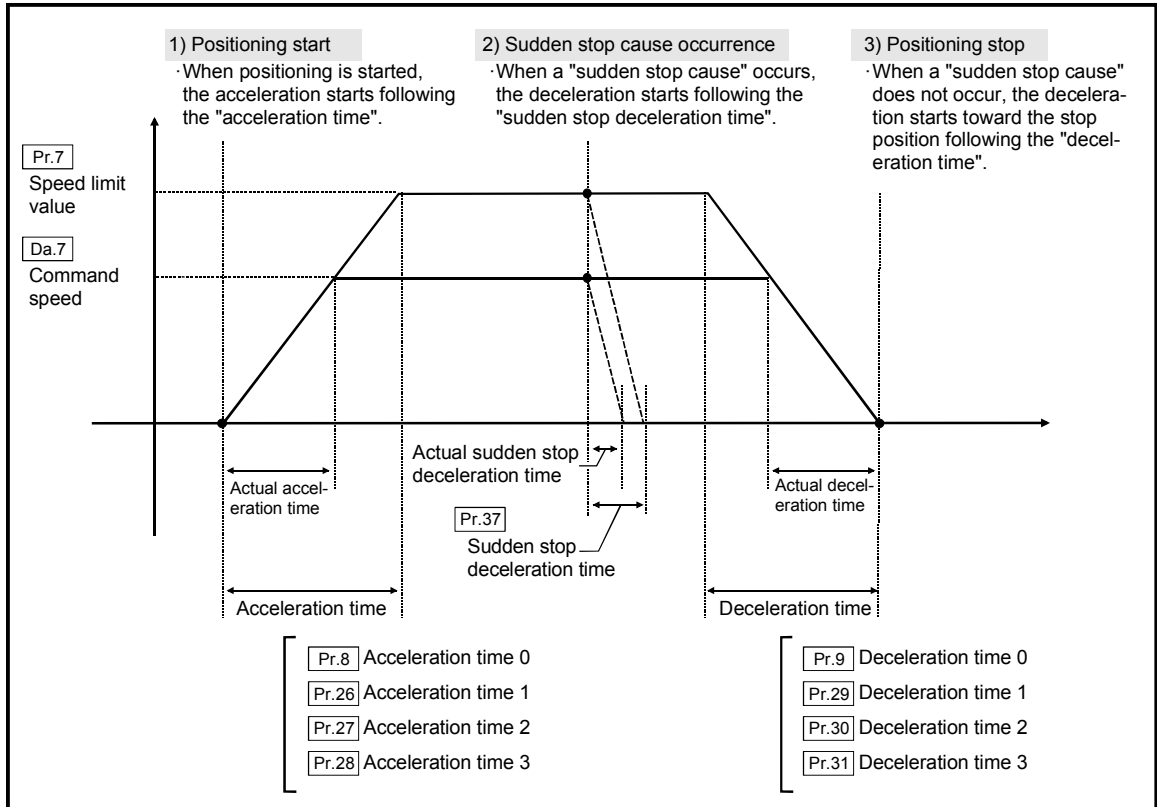

**Pr.38** Stop group 1 sudden stop selection  
to


**Pr.40** Stop group 3 sudden stop selection

Set the method to stop when the stop causes in the following stop groups occur.

- Stop group 1 ..... Stop with hardware stroke limit
- Stop group 2 ..... Stop with software stroke limit  
Stop signal from peripheral device, PLC READY signal  
OFF
- Stop group 3 ..... External stop signal  
Stop signal from programmable controller  
Error occurrence (excluding errors in stop group 1 and 2)  
Stop caused by an ON --> OFF change at the near-point  
dog during count method machine zero point return made  
at a near-point dog ON. (Refer to sections 8.2.5 and  
8.2.6.)

The methods of stopping include "0: Normal deceleration stop" and "1: Sudden stop".


If "1: Sudden stop" is selected, the axis will suddenly decelerate to a stop when the stop signal is input.

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.41 Positioning complete signal output time	0 to 65535 (ms)	0 to 65535 (ms) 0 to 32767 : Set as a decimal 32768 to 65535: Convert into hexadecimal and set	300	59	209	359
Pr.42 Allowable circular interpolation error width	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. 		100	60 61	210 211	360 361
Pr.43 External start function selection	0 : External positioning start 1 : External speed change request 2 : Skip request	0 1 2	0	62	212	362
Pr.44 Near pass mode selection for path control	0 : Positioning address pass mode 1 : Near pass mode	0 1	0	66	216	366
Pr.150 Setting for the restart allowable range when servo OFF to ON	0 to 163840 (pulse)	0 to 163840 (pulse)	0	64 65	214 215	364 365

**Pr.41** Positioning complete signal output time

Set the output time of the positioning complete signal [X7, X8, X9] output from the AD75.

Positioning complete refers to the state in which the positioning operation complete has completed, and the specified dwell time has passed.

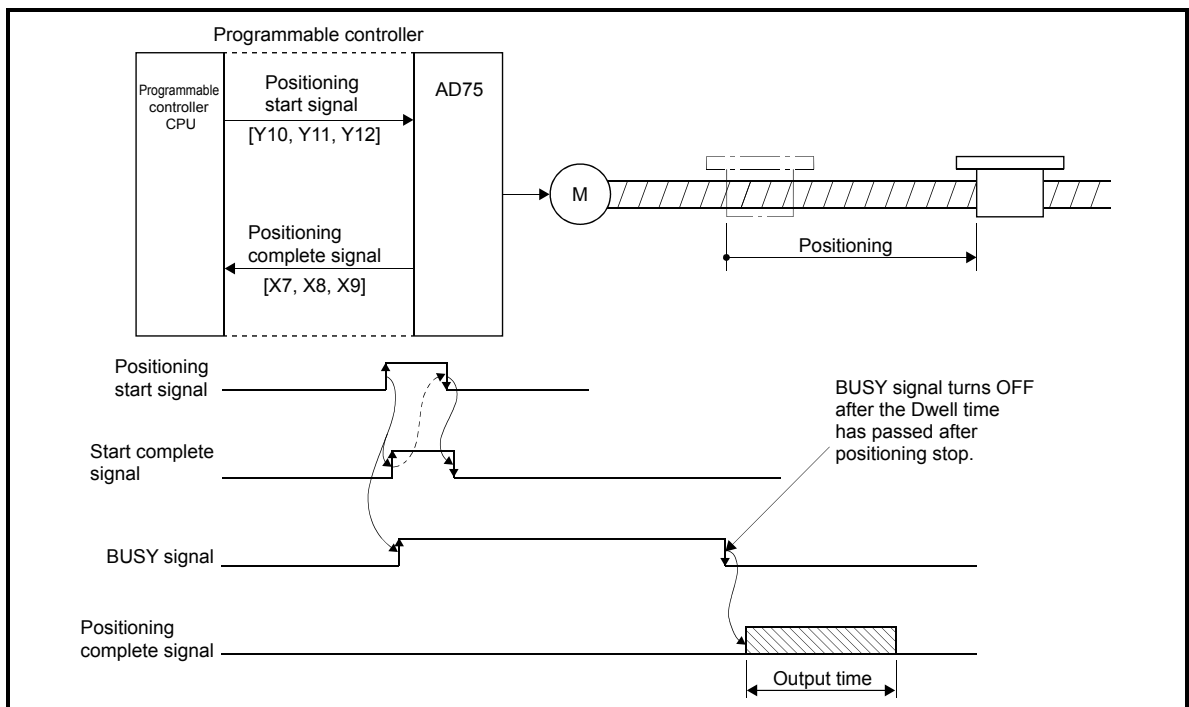

Positioning complete signal output time



[Table 1]


Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0 to 10000.0 ( $\mu\text{m}$ )	0 to 100000 ( $\times 10^{-1}\mu\text{m}$ )
1 : inch	0 to 1.00000 (inch)	0 to 100000 ( $\times 10^{-5}\text{inch}$ )
2 : degree	0 to 1.00000 (degree)	0 to 100000 ( $\times 10^{-5}\text{degree}$ )
3 : pulse	0 to 100000 (pulse)	0 to 100000 (pulse)

**Pr.42** Allowable circular interpolation error width

With the "allowable circular interpolation error width", the allowable error range of the calculated arc path and end point address is set. If the error of the calculated arc path and end point address is within the set range, circular interpolation will be carried out to the set end point address while compensating the error with spiral interpolation.

The allowable circular interpolation error width is set in the reference axis buffer memory addresses.

- For circular interpolation in axis 1 and axis 2, set in the axis 1 buffer memory address [60, 61]
- For circular interpolation in axis 2 and axis 3, set in the axis 2 buffer memory address [210, 211]
- For circular interpolation in axis 3 and axis 1, set in the axis 3 buffer memory address [360, 361]

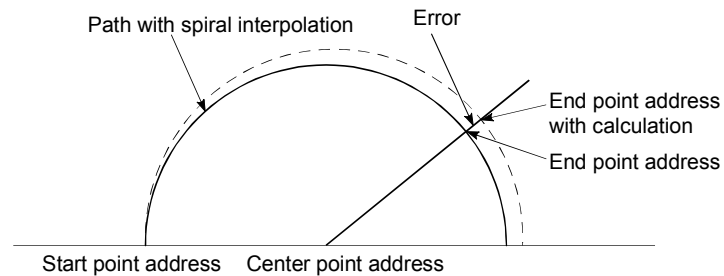

- \* With circular interpolation control using the center point designation, the arc path calculated with the start point address and center point address and the end point address may deviate.

**Pr.43** External start function selection

Set which function to use the external start signal with.

- 0 : External positioning start ..... Carry out positioning operation with external start signal input.
- 1 : External speed change request..... Change the speed of the positioning operation currently being executed with the external start signal input.  
In this case, set the new speed value in "[Cd.16] New speed value".
- 2 : Skip request ..... The positioning operation currently being carried out is skipped with the external start signal input.

**POINT**

"[Cd.25] External start valid" must be set to validate the external start signal.

**Pr.44** Near pass mode selection for path control

Set the method to carry out control between positioning data items during continuous path control of the AD75 interpolation control.

- 0 : Positioning address pass mode... The address designated in the "positioning data" is passed, but the speed output when the corresponding positioning address is passed may drop momentarily.
- 1 : Near pass mode..... Since positioning is not performed at the address designated in the "positioning data", the path merely passes near the designated positioning address, but machine vibration caused by the momentary output speed drop can be suppressed.

Note) Refer to section "12.3.3 Near pass mode function" for details on the near pass mode.

**Pr.150** Setting for the restart allowable range when servo OFF to ON

Set the range that is used as a condition for enabling a restart when the servo switches from OFF to ON. (This setting is disabled for the AD75TU of software version "C" or earlier.)

- 0 : Restart not allowed ..... A restart at servo OFF to ON is not allowed.
- 1 to 163840 : Restart allowed  
(restart allowable range) ..... A restart is allowed (axis operation status is during a stop) when the difference between the last command position of the AD75 and the current value at servo OFF to ON is less than the set value.

Note) For a restart at servo OFF to ON, refer to section "12.4.5 Servo ON/OFF function".

## 5.2.5 Zero point return basic parameters

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.45 Zero point return method	0 : Near-point dog method	0	0	70	220	370
	4 : Count method 1)	4				
	5 : Count method 2)	5				
	6 : Data setting method	6				
	7 : Near-point dog method 2)*	7				
	8 : Count method 3)*	8				

\* : When setting the parameter with the peripheral device, "7: Near-point dog method 2)" and "8: Count method 3)" can be set using GX Configurator-AP only. For details, refer to the "GX Configurator-AP Operating Manual".

## Pr.45 Zero point return method

Set the "zero point return method" for carrying out machine zero point return.

- 0 : Near-point dog method ..... After decelerating at the near-point dog ON, stop at the zero point, and complete the machine zero point return.  
(An error occurs when the zero point is not detected.)
- 4 : Count method 1) ..... After decelerating at the near-point dog ON, move the designated distance, stop at the zero point, and then complete the machine zero point return.  
(An error occurs when the zero point is not detected.)
- 5 : Count method 2) ..... After decelerating at the near-point dog ON, move the designated distance, and complete the machine zero point return.
- 6 : Data setting method ..... The position reached by manual operation in the absolute position detection system is defined as the zero point.
- 7 : Near-point dog method 2) .... After decelerating at the near-point dog ON, stop at the zero point, and complete the machine zero point return.  
(An error does not occur if the zero point is not detected.)
- 8 : Count method 3) ..... After decelerating at the near-point dog ON, move the designated distance, stop at the zero point, and complete the machine zero point return.  
(An error does not occur if the zero point is not detected.)


Note) Refer to section "8.2.2 Machine zero point return method" for details on the zero point return methods.

Zero point return method

0 : Near-point dog method

- (1) Start machine zero point return.  
(Start machine movement at the "Pr.48 Zero point return speed" in the "Pr.46 Zero point return direction".)
- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to "Pr.49 Creep speed", and move with the creep speed.  
Decelerate to a stop at the near-point dog OFF.
- (4) Move to the first zero point (single-pulse output per motor revolution) after the near-point dog OFF, and complete the machine zero point return.


Note) If the zero point is not detected between a machine zero point return start and deceleration to a stop by the near-point dog OFF, an error "zero point not pass at zero point return" (error code: 210) occurs.

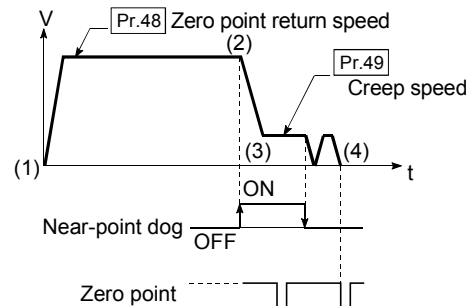

4 : Count method 1)


- (1) Start machine zero point return.  
(Start movement at the "Pr.48 Zero point return speed" in the "Pr.46 Zero point return direction".)
- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to "Pr.49 Creep speed", and move with the creep speed.  
Stop in the position where the movement amount set in "Pr.52 Setting for the movement amount after near-point dog ON" is reached after the near-point dog turned ON.
- (4) Move to the first zero point (single-pulse output per motor revolution), and complete the machine zero point return.

Note) If the zero point is not detected from when the machine zero point return has started until the movement amount set in "Pr.52 Setting for the movement amount after near-point dog ON" is reached, an error "zero point not pass at zero point return" (error code: 210) occurs.

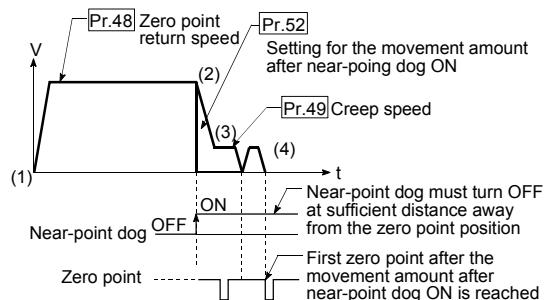


5 : Count method 2)

- (1) Start machine zero point return.  
(Start movement at the "Pr.48 Zero point return speed" in the "Pr.46 Zero point return direction".)
- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to "Pr.49 Creep speed", and move with the creep speed.
- (4) Stop when the movement amount set in "Pr.52 Setting for the movement amount after near-point dog ON" is reached after the near-point dog turned ON, and complete the machine zero point return.

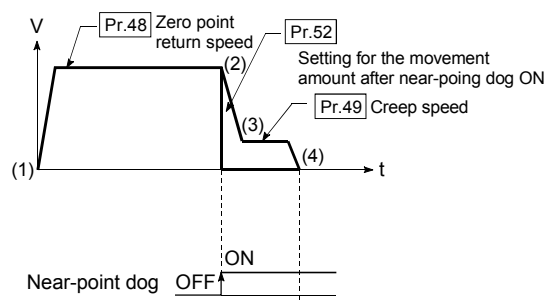

## 6 : Data setting method


- (1) Start machine zero point return.  
(The axis does not operate.)
- (2) Register the current position to the servo amplifier as the zero point.  
(Store "[Pr.47] Zero point address" into the current feed value and machine feed value.)

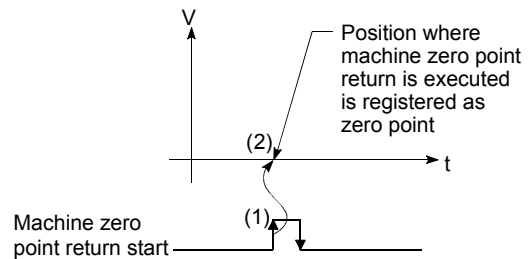

## 7 : Near-point dog method 2)

- (1) Start machine zero point return.  
(Start movement at the "[Pr.48] Zero point return speed" in the "[Pr.46] Zero point return direction".)
- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to "[Pr.49] Creep speed", and move with the creep speed.  
Decelerate to a stop at the near-point dog OFF.
- (4) Move to the first zero point (single-pulse output per motor revolution) after the near-point dog OFF, and complete the machine zero point return.


Note) If the zero point is not detected between a machine zero point return start and deceleration to a stop by the near-point dog OFF, deceleration to a stop occurs at the near-point dog OFF, the motor rotates one turn in the direction opposite to the designated zero point return direction, and then the machine zero point return operation is performed again.  
When the zero point is detected, the operation as in the near-point dog method is performed.

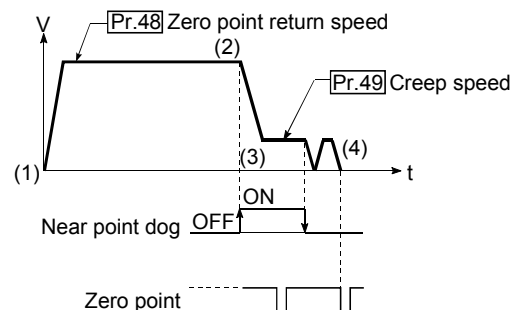



## 8 : Count method 3)

- (1) Start machine zero point return.  
(Start movement at the "[Pr.48] Zero point return speed" in the "[Pr.46] Zero point return direction".)
- (2) Detect the near-point dog ON, and start deceleration.
- (3) Decelerate to "[Pr.49] Creep speed", and move with the creep speed.  
Stop in the position where the movement amount set in "[Pr.52] Setting for the movement amount after near-point dog ON" is reached after the near-point dog turned ON.
- (4) Move to the first zero point (single-pulse output per motor revolution), and complete the machine zero point return.

Note) If the zero point is not detected from when the machine zero point return has started until the movement amount set in "[Pr.52] Setting for the movement amount after near-point dog ON" is reached, deceleration to a stop occurs at the near-point dog OFF, the motor rotates one turn in the direction opposite to the designated zero point return direction, and then the machine zero point return operation is performed again.  
When the zero point is detected, the operation as in the count method 1) is performed.

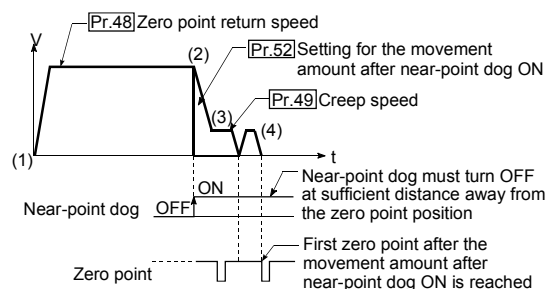

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.46</b> Zero point return direction	0 : Positive direction (address increment direction)	0	0	71	221	371
	1 : Negative direction (address decrement direction)	1				
<b>Pr.47</b> Zero point address	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. 		0	72 73	222 223	372 373
<b>Pr.48</b> Zero point return speed	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 2] range is set. 		1	74 75	224 225	374 375

**Pr.46** Zero point return direction

Set the direction to start movement when starting machine zero point return.


0: Positive direction (address increment direction)

Moves in the direction that the address increments. (Arrow 2))

1: Negative direction (address decrement direction)

Moves in the direction that the address decrements. (Arrow 1))

Normally, the zero point is set near the lower limit or the upper limit, so " Pr.46 Zero point return direction" is set as shown below.

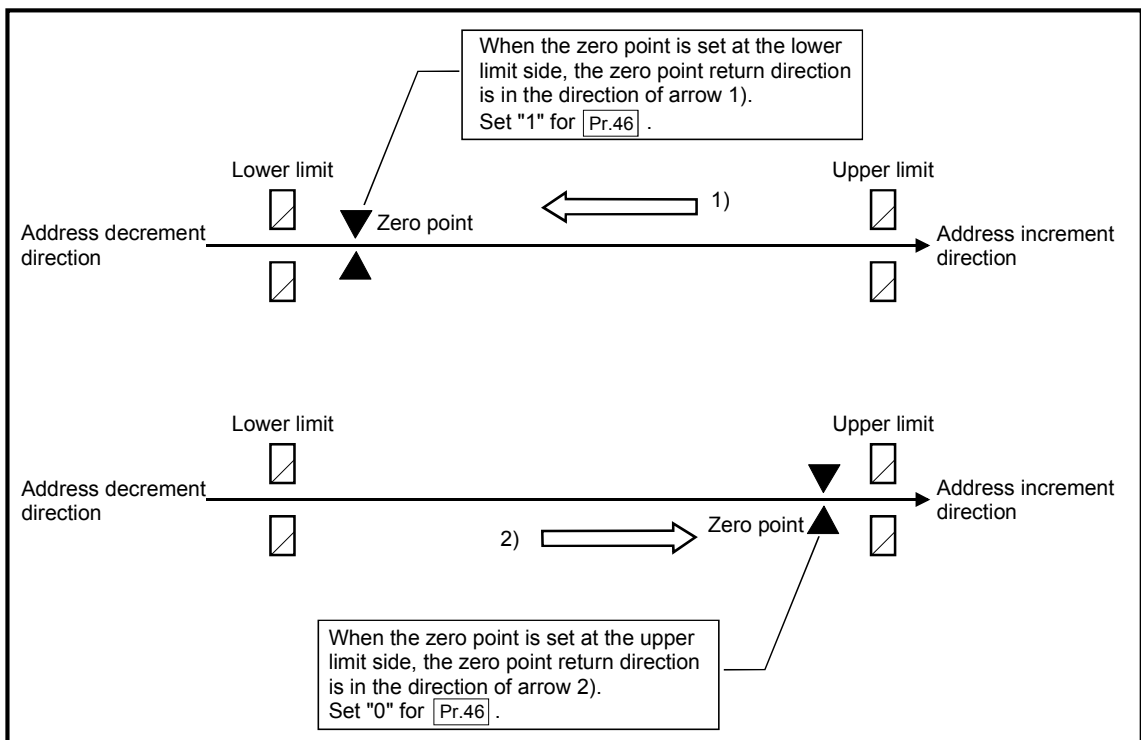

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	-214748364.8 to 214748364.7 ( $\mu\text{m}$ )	-2147483648 to 2147483647 ( $\times 10^{-1}\mu\text{m}$ )
1 : inch	-21474.83648 to 21474.83647 (inch)	-2147483648 to 2147483647 ( $\times 10^{-5}\text{inch}$ )
2 : degree	0 to 359.99999 (degree)	0 to 359999999 ( $\times 10^{-5}\text{degree}$ )
3 : pulse	-2147483648 to 2147483647 (pulse)	-2147483648 to 2147483647 (pulse)

[Table 2]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 6000000.00 (mm/min)	1 to 600000000 ( $\times 10^{-2}\text{mm/min}$ )
1 : inch	0.001 to 600000.000 (inch/min)	1 to 600000000 ( $\times 10^{-3}\text{inch/min}$ )
2 : degree	0.001 to 600000.000 (degree/min)	1 to 600000000 ( $\times 10^{-3}\text{degree/min}$ )
3 : pulse	1 to 1000000 (pulse/s)	1 to 1000000 (pulse/s)


**Pr.47** Zero point address

Set the address used as the reference point for positioning control (ABS method). (When the machine zero point return is completed, the stop position address is changed to the address set in "Pr.47 Zero point address". At the same time, the "Pr.47 Zero point address" is stored in "Md.29 Current feed value" and "Md.30 Machine feed value".)

**Pr.48** Zero point return speed

Set the speed for zero point return.


Note) Set the "zero point return speed" to less than "Pr.7 Speed limit value". If the "speed limit value" is exceeded, the "zero point return speed" will be limited by "Pr.7 Speed limit value".

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.49 Creep speed	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. 		1	76 77	226 227	376 377
Pr.50 Zero point return retry	0 : Do not retry zero point return with limit switch	0	0	78	228	378
	1 : Retry zero point return with limit switch	1				

**Pr.49 Creep speed**

Set the creep speed after near-point dog ON (the low speed just before stopping after decelerating from the zero point return speed). The creep speed is set within the following range.

Pr.48 Zero point return speed > Pr.49 Creep speed

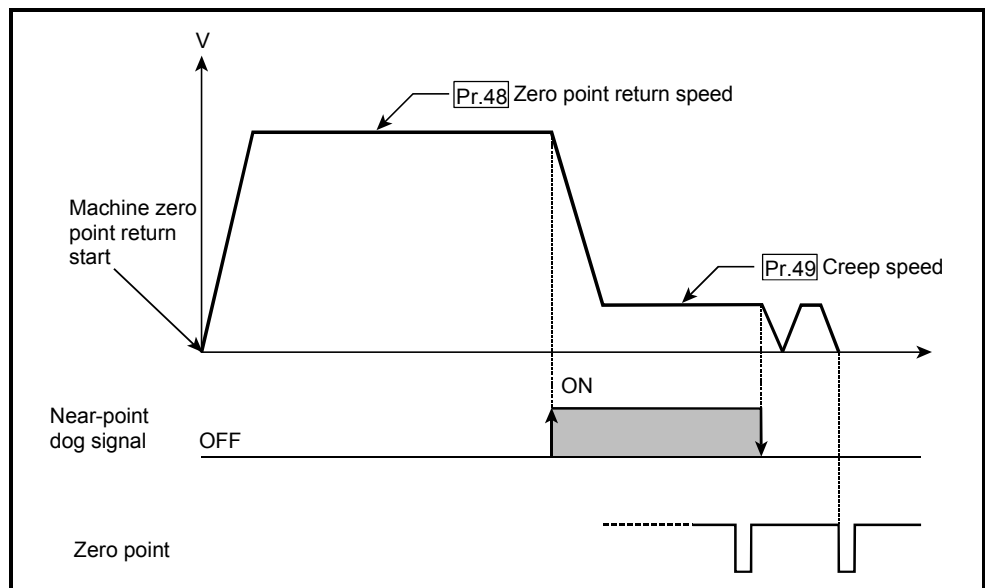




[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 6000000.00 (mm/min)	1 to 600000000 ( $\times 10^{-2}$ mm/min)
1 : inch	0.001 to 600000.000 (inch/min)	1 to 600000000 ( $\times 10^{-3}$ inch/min)
2 : degree	0.001 to 600000.000 (degree/min)	1 to 600000000 ( $\times 10^{-3}$ degree/min)
3 : pulse	1 to 1000000 (pulse/s)	1 to 1000000 (pulse/s)


**Pr.50** Zero point return retry

Set whether to carry out zero point return retry.

When the zero point return retry function is validated and the machine zero point return is started, first the axis will move in the designated zero point return direction (1)). If the upper/lower limit signal turns OFF before the near-point dog signal ON is detected (2)), the axis will decelerate to a stop, and then will move in the direction opposite the designated zero point return direction (3)). If it is detected that the near-point dog signal has turned OFF from turning ON while moving in the opposite direction, the axis will decelerate to a stop (4)), and then will carry out machine zero point return again (5), 6)).

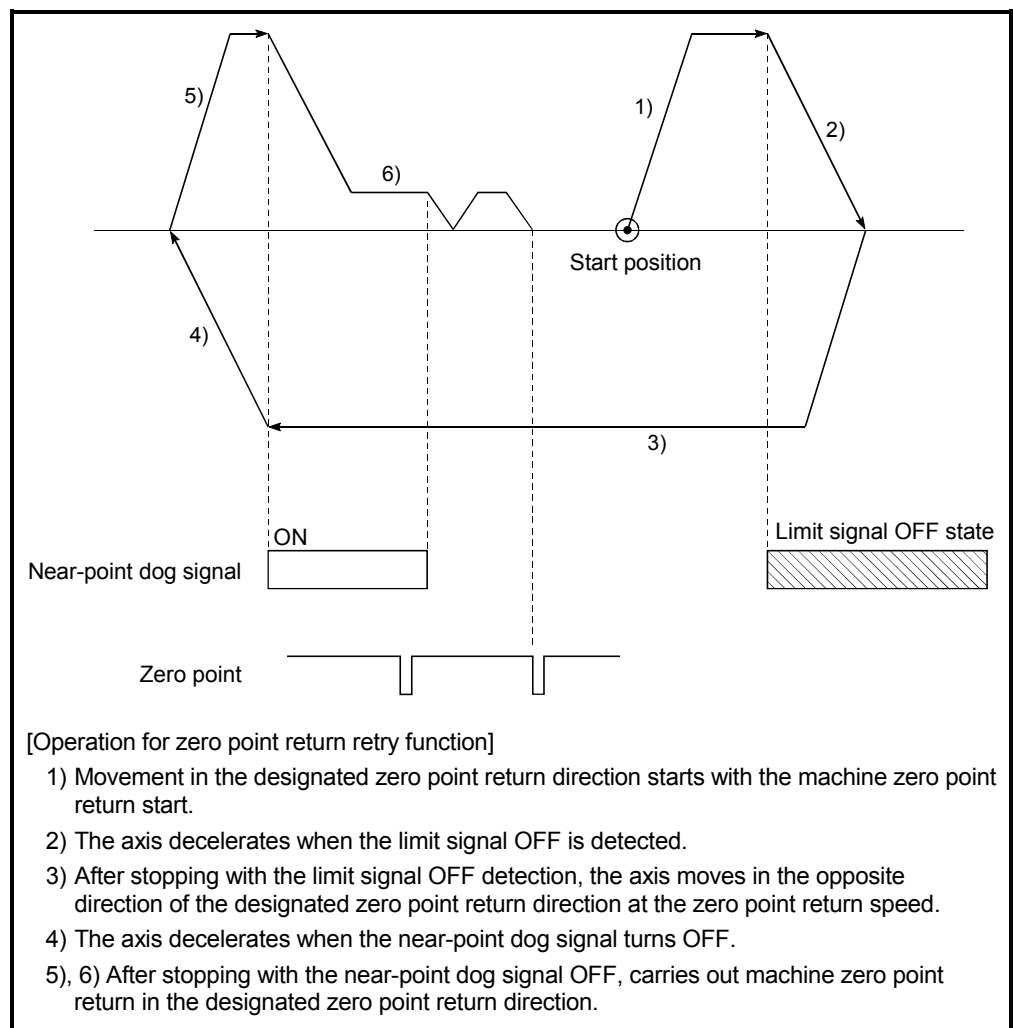

## 5.2.6 Zero point return detailed parameters

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.52 Setting for the movement amount after near-point dog ON	The setting value range differs depending on the "Pr.1 Unit setting". Here, the value within the [Table 1] range is set. 		0	80 81	230 231	380 381
Pr.53 Zero point return acceleration time selection	0 : Pr.8 Acceleration time 0	0	0	82	232	382
	1 : Pr.26 Acceleration time 1	1				
	2 : Pr.27 Acceleration time 2	2				
	3 : Pr.28 Acceleration time 3	3				
Pr.54 Zero point return deceleration time selection	0 : Pr.9 Deceleration time 0	0	0	83	233	383
	1 : Pr.29 Deceleration time 1	1				
	2 : Pr.30 Deceleration time 2	2				
	3 : Pr.31 Deceleration time 3	3				

**Pr.52** Setting for the movement amount after near-point dog ON

When zero point return method is set the count method 1) or 2), set the movement amount to the zero point after the near-point dog signal turns ON.  
(The movement amount after near-point dog ON should be equal to greater than the sum of the "distance covered by the deceleration from the zero point return speed to the creep speed" and "distance of movement in 10 ms at the zero point return speed".)


[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0 to 214748364.7 (μm)	0 to 2147483647 (×10 <sup>-1</sup> μm)
1 : inch	0 to 21474.83647 (inch)	0 to 2147483647 (×10 <sup>-5</sup> inch)
2 : degree	0 to 21474.83647 (degree)	0 to 2147483647 (×10 <sup>-5</sup> degree)
3 : pulse	0 to 2147483647 (pulse)	0 to 2147483647 (pulse)

Example for setting "Pr.52 Setting for the movement amount after near-point dog ON"

When "Pr.7 Speed limit value" is set to 200kpulse/s, "Pr.48 Zero point return speed" is set to 10kpulse/s, "Pr.49 Creep speed" is set to 1kpulse/s and the deceleration time is set to 300ms, "Pr.52 Setting for the movement amount after near-point dog ON" is calculated as shown below.

[Machine zero point return operation]

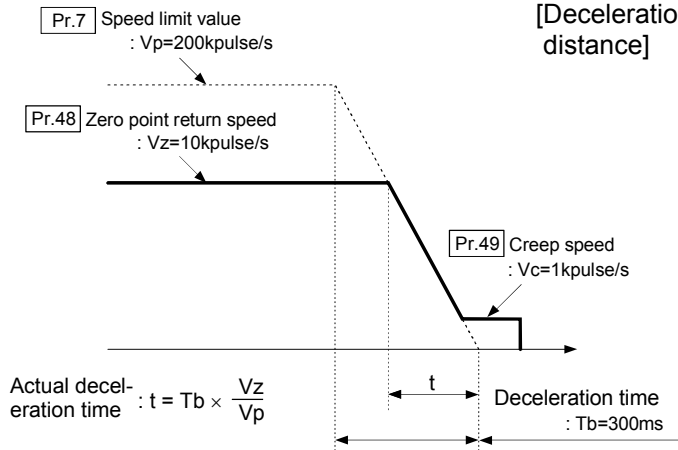

$$\begin{aligned}
 \text{[Deceleration distance]} &= \frac{1}{2} \times \frac{V_z}{1000} \times t + 0.01 \times V_z \\
 &= \frac{V_z}{2000} \times \frac{T_b \times V_z}{V_p} + 0.01 \times V_z \\
 &= \frac{10 \times 10^3}{2000} \times \frac{300 \times 10 \times 10^3}{200 \times 10^3} + 0.01 \times 10 \times 10^3 \\
 &= 75 + 100 \\
 &= 175
 \end{aligned}$$

\* Set 175 or more for "Pr.52 Setting for the movement amount after near-point dog ON"

Pr.53 Zero point return acceleration time selection


Set which of "acceleration time 0 to 3" to use for the acceleration time during zero point return.

- 0 : Use the value set in "Pr.8 Acceleration time 0".
- 1 : Use the value set in "Pr.26 Acceleration time 1".
- 2 : Use the value set in "Pr.27 Acceleration time 2".
- 3 : Use the value set in "Pr.28 Acceleration time 3".

Pr.54 Zero point return deceleration time selection

Set which of deceleration time 0 to 3" to use for the deceleration time during zero point return.

- 0 : Use the value set in "Pr.9 Deceleration time 0".
- 1 : Use the value set in "Pr.29 Deceleration time 1".
- 2 : Use the value set in "Pr.30 Deceleration time 2".
- 3 : Use the value set in "Pr.31 Deceleration time 3".

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.55</b> Zero point shift amount	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set. 		0	84 85	234 235	384 385
<b>Pr.56</b> Zero point return torque limit value	1 to 300 (%)	1 to 300 (%)	300	86	236	386
<b>Pr.57</b> Speed designation during zero point shift	0 : Zero point return speed 1 : Creep speed	0 1	0	88	238	388
<b>Pr.58</b> Dwell time during zero point return retry	0 to 65535 (ms)	0 to 65535 (ms) 0 to 32767 : Set as a decimal 32768 to 65535 : Convert into hexadecimal and set	0	89	239	389
<b>Pr.59</b> Absolute position restoration selection	0 : Standard mode 1 : Infinite length mode	0 1	0	91	241	391


\*: When **Pr.59** is set with the peripheral device, setting can be made using GX Configurator-AP only. For details, refer to the "GX Configurator-AP Operating Manual".

**Pr.55** Zero point shift amount

Set the amount to shift (move) from the position stopped at with machine zero point return.

\* The zero point shift function is used to compensate the zero point position stopped at with machine zero point return.

If there is a physical limit to the zero point position, due to the relation of the near-point dog installation position, use this function to compensate the zero point to an optimum position.

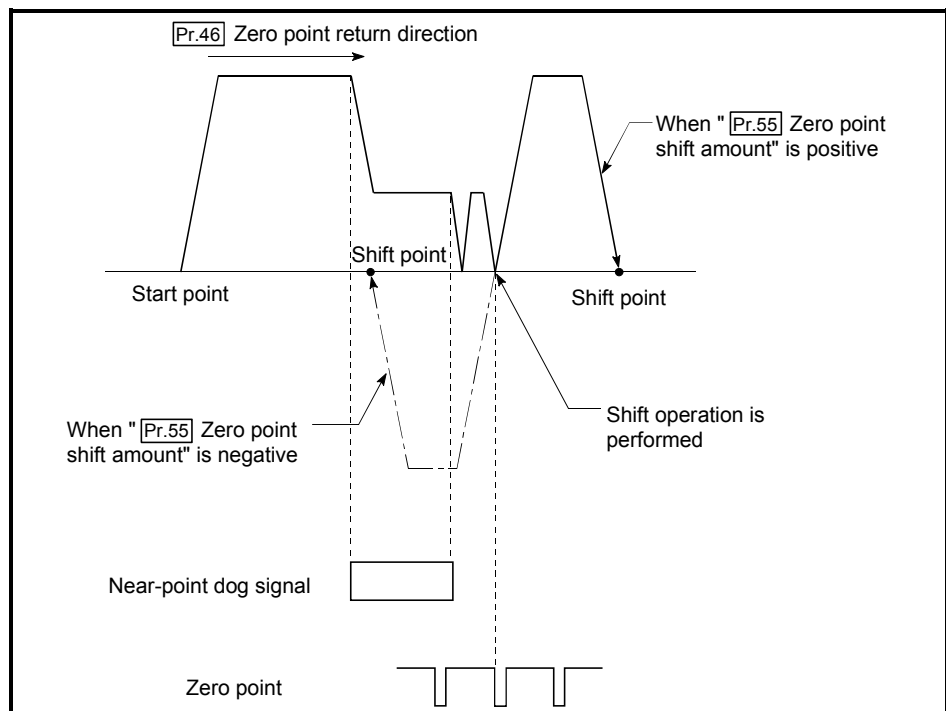

[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	-214748364.8 to 214748364.7 ( $\mu\text{m}$ )	-2147483648 to 2147483647 ( $\times 10^{-1}\mu\text{m}$ )
1 : inch	-21474.83648 to 21474.83647 (inch)	-2147483648 to 2147483647 ( $\times 10^{-5}\text{inch}$ )
2 : degree	-21474.83648 to 21474.83647 (degree)	-2147483648 to 2147483647 ( $\times 10^{-5}\text{degree}$ )
3 : pulse	-2147483648 to 2147483647 (pulse)	-2147483648 to 2147483647 (pulse)

**Pr.56** Zero point return torque limit value

For the machine zero point return, set a value to limit the torque of the servomotor after starting the deceleration to the creep speed."

Refer to section "12.4.2 Torque limit function" for details on the torque limits.

**Pr.57** Speed designation during zero point shift


Set the operation speed for when a value other than "0" is set for "[Pr.55] Zero point shift amount". Select the setting from "[Pr.48] Zero point return speed" or "[Pr.49] Creep speed".

0 : Designate "[Pr.48] Zero point return speed" as the setting value.

1 : Designate "[Pr.49] Creep speed" as the setting value.

**Pr.58** Dwell time during zero point return retry

When zero point return retry is validated (when "1" is set for [Pr.50]), set the stop time after decelerating in 2) and 4) in the following drawing.

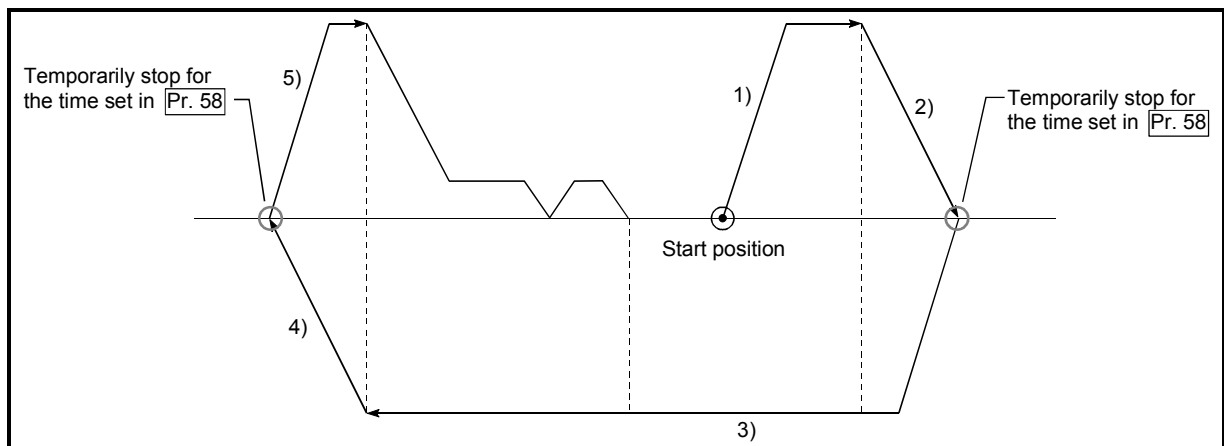**Pr.59** Absolute position restoration selection

In the absolute position detection system in the control unit "degree", set the mode for absolute position restoration. Select either the standard mode or infinite length mode for the setting.

0 : Standard mode

1 : Infinite length mode

Setting of other than "1" is regarded as "0", the standard mode.

After setting, turning the PLC READY signal [Y1D] from OFF to ON and making a machine zero point return establishes the mode for absolute position restoration.

The established mode for absolute position restoration is stored into the axis monitor "[Md.121] Absolute position restoration mode".

For details of the mode for absolute position restoration, refer to section "12.6.2 Absolute position restoration mode switching function".

## 5.2.7 Servo parameters for MR-H-B (MR-H-BN)

## (1) Servo basic parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.100 Servo series	-	-	0 : MR-H-B(MR-H-BN) 1 : MR-J-B 2 : MR-J2-B 3 : Other	0000H 0001H 0002H 001EH	0000H	100	250	400
Pr.101 Amplifier setting	No.1	*AMS	0 : Absolute position detection invalid 1 : Absolute position detection valid	0 1	0	101	251	401
Pr.102 Regenerative brake resistor	No.2	*REG	Regenerative brake option		0000H	102	252	402
			00 : External regenerative brake option not used	<input type="checkbox"/> <input type="checkbox"/> 00H				
			01 : FR-RC, FR-BU	<input type="checkbox"/> <input type="checkbox"/> 01H				
			02 : MR-RB013	<input type="checkbox"/> <input type="checkbox"/> 02H				
			03 : MR-RB033	<input type="checkbox"/> <input type="checkbox"/> 03H				
			05 : MR-RB32	<input type="checkbox"/> <input type="checkbox"/> 05H				
			06 : MR-RB34	<input type="checkbox"/> <input type="checkbox"/> 06H				
			07 : MR-RB54	<input type="checkbox"/> <input type="checkbox"/> 07H				
			08 : MR-RB30	<input type="checkbox"/> <input type="checkbox"/> 08H				
			09 : MR-RB50	<input type="checkbox"/> <input type="checkbox"/> 09H				
			0B : MR-RB31	<input type="checkbox"/> <input type="checkbox"/> 0BH				
			0C : MR-RB51	<input type="checkbox"/> <input type="checkbox"/> 0CH				
			0E : Standard + fan	<input type="checkbox"/> <input type="checkbox"/> 0EH				
			External dynamic brake selection					
			0 : External dynamic brake invalid	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H				
			1 : External dynamic brake valid	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H				
Pr.103 Motor type	No.3	*MTY	0000H: HA-SH standard 0001H: HA-LH low inertia 0002H: HA-UH flat 0003H: HA-FH/HA-FF 0005H: HA-MH 0080H: Automatic setting (MR-H-BN only)	0000H 0001H 0002H 0003H 0005H 0080H	0000H	103	253	403
Pr.104 Motor capacity	No.4	*MCA	Set the "motor output capacity (kW) × 100" value in hexadecimal. (With the exception of 50W, the first digit is discarded.)		0000H	104	254	404

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.100** Servo series

Set this parameter to "0: MR-H-B (MR-H-BN)".

**Pr.101** Amplifier setting

Set whether an absolute position detection system is valid or invalid.

When using the servo amplifier in an incremental system, set this parameter to "0: Absolute position detection invalid".

When using the servo amplifier in an absolute position detection system, set this parameter to "1: Absolute position detection valid".

Note) A parameter error will occur if "Absolute position detection valid" is selected for the incremental encoder.

**Pr.102** Regenerative brake resistor

Select the regenerative brake resistor to be used and whether an external dynamic brake is valid or invalid.

0 [ ] [ ] [ ] H

Regenerative brake option selection

00 : External regenerative brake option not used\*

01 : FR-RC, FR-BU

02 : MR-RB013

03 : MR-RB033

05 : MR-RB32

06 : MR-RB34

07 : MR-RB54

08 : MR-RB30

09 : MR-RB50

0B : MR-RB31

0C : MR-RB51

0E : Standard+fan

\* : When using the converter unit

MR-RB-138-4 with the large

capacity type servo amplifier,

select "00: External regenerative

brake option not used".

At this time, setting must also be

made to the converter unit.

External dynamic brake valid/invalid selection

0 : External dynamic brake invalid

1 : External dynamic brake valid

**Pr.103** Motor type

Set the motor type to be used.

"80H" is valid only when the servo amplifier is the MR-H-BN.

(Set "80H" when using the motor other than "00H, 01H, 02H, 03H or 05H".)

When the motor type is set to "0080H: Automatic setting", "**Pr.105** Motor speed" and "**Pr.106** Feedback pulse" are automatically set in the servo amplifier.

**Pr.104** Motor capacity

Set 100 times greater than the output capacity (kW) of the motor in hexadecimal. For the output capacity of the motor, refer to the MR-H-B(N) Servo Amplifier Instruction Manual.

Example 1) When the motor capacity is 50W

$0.05 \text{ (kW)} \times 100 = 5$  ..... Set "5H".

Example 2) When the motor capacity is 22kW

$22 \text{ (kW)} \times 100 = 2200$  ..... Set "2200H".

**POINT**

Always set the motor capacity.

At the default value "0", operation cannot be performed since communication with the servo amplifier is not made.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.105 Motor speed	No.5	*MTR	1 to 3	1 to 3	1	105	255	405
Pr.106 Feedback pulse	No.6	*FBP	0 : 16384pulse 1 : 8192pulse	0 1	0	106	256	406
Pr.107 Rotation direction	No.7	*POL	0 : Forward run with positioning address increment 1 : Reverse run with positioning address increment	0 1	0	107	257	407
Pr.108 Auto tuning	No.8	ATU	0 : Auto tuning selected for use of interpolation axis control in position control 1 : Auto tuning for ordinary operation 2 : Invalid	0 1 2	1	108	258	408
Pr.109 Servo response setting	No.9	RSP	1 : Normal (Low response) 2 : Normal (Low/middle response) 3 : Normal (Middle response) 4 : Normal (Middle/high response) 5 : Normal (High response) 8 : Large friction (Low response) 9 : Large friction (Low/middle response) A : Large friction (Middle response) B : Large friction (Middle/high response) C : Large friction (High response)	0001H 0002H 0003H 0004H 0005H 0008H 0009H 000AH 000BH 000CH	0001H	109	259	409

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

#### Pr.105 Motor speed

Set the "10<sup>-3</sup> of the rated speed (r/min) of the servomotor" value.  
For the rated speed of the servomotor, refer to the MR-H-B(N) Servo Amplifier Instruction Manual.

Example) Set "2" for 2000r/min.


#### Pr.106 Feedback pulse

Set the feedback pulse (resolution per servomotor revolution).



**Pr.107** Rotation direction

Set the rotation direction as viewed from the load side.

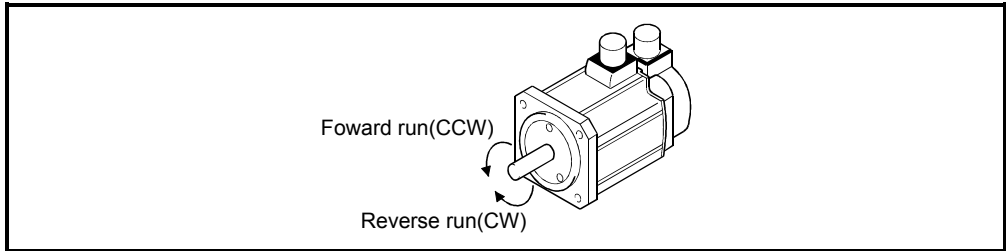

**Pr.108** Auto tuning

Select the auto tuning function.

**Pr.109** Servo response setting

Set this parameter to increase the response of the servo.

Machine type	Setting value	Description			Guideline for position settling time GDL <sup>2</sup> /GDM <sup>2</sup> guideline = within 5 times
		Response	Guideline for corresponding machine rigidity	GDL <sup>2</sup> /GDM <sup>2</sup> guideline for load inertia	
Normal (Standard mode)	1	Low response	Low rigidity	1 to 10 times	50 to 300ms
	2	}	}		10 to 70ms
	3	Middle response	Middle rigidity		10 to 30ms
	4	}	}		
	5	High response	High rigidity		
Large friction (Friction load reduction mode)	8	Low response	Low rigidity	1 to 10 times	70 to 400ms
	9	}	}		10 to 100ms
	A	Middle response	Middle rigidity		
	B	}	}		
	C	High response	High rigidity		10 to 50ms

## (2) Servo adjustment parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.112 Load inertia ratio	No.12	GD2	0.0 to 100.0 (%)	0 to 1000 (0.1%)	30	112	262	412
Pr.113 Position loop gain 1	No.13	PG1	4 to 1000 (rad/s)	4 to 1000 (rad/s)	70	113	263	413
Pr.114 Speed loop gain 1	No.14	VG1	20 to 5000 (rad/s)	20 to 5000 (rad/s)	1200	114	264	414
Pr.115 Position loop gain 2	No.15	PG2	1 to 500 (rad/s)	1 to 500 (rad/s)	25	115	265	415
Pr.116 Speed loop gain 2	No.16	VG2	20 to 8000 (rad/s)	20 to 8000 (rad/s)	600	116	266	416
Pr.117 Speed integral compensation	No.17	VIC	1 to 1000 (ms)	1 to 1000 (ms)	20	117	267	417
Pr.118 Notch filter selection	No.18	NCH	0 : Not used 1 : 1125 2 : 563 3 : 375 4 : 282 5 : 225 6 : 188 7 : 161	0 1 2 3 4 5 6 7	0	118	268	418
Pr.119 Feed forward gain	No.19	FFC	0 to 100 (%)	0 to 100 (%)	0	119	269	419
Pr.120 In-position range	No.20	INP	0 to 50000 (pulse)	0 to 50000 (pulse)	100	120	270	420
Pr.121 Solenoid brake output	No.21	MBR	0 to 1000 (ms)	0 to 1000 (ms)	100	121	271	421

## POINT

"Pr.112 Load inertia ratio" to "Pr.117 Speed integral compensation" are transferred to the servo amplifier when the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] turns ON. When auto tuning is executed and operation is performed, however, they are changed to the optimum values in the servo amplifier.

At this time, the auto tuning results are not reflected on the AD75.

Hence, if "Pr.108 Auto tuning" is changed to "2: Invalid" and the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] is turned ON, the settings return to the status before auto tuning, and the motor may vibrate. When it is desired to save the optimum values obtained by auto tuning, set the data read from the buffer memory addresses 858 to 863 (Axis 1), 958 to 963 (Axis 2), 1058 to 1063 (Axis 3) to Pr.112 to Pr.117, and perform write to flash ROM.

**Pr.112** Load inertia ratio (Ratio of load inertia to servomotor inertia)

Set the ratio of load inertia to servomotor inertia.

When auto tuning is executed, this parameter is automatically changed to the auto tuning result in the servo amplifier.

**Pr.113** Position loop gain 1 (Model position gain)

Set the gain of the position loop.

Increase the position loop gain 1 to improve trackability in response to the position command.

**Pr.114** Speed loop gain 1 (Model speed gain)

Normally use this parameter at the initial value.

Higher setting of the speed loop gain 1 increases the response level, but is liable to generate vibration and/or noise.

**Pr.115** Position loop gain 2 (Actual position gain)

Set the gain of the position loop.

The response to load disturbance can be increased.

Higher setting of the position loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

**Pr.116** Speed loop gain 2 (Actual speed gain)

Set this parameter when vibration occurs on machines of low rigidity or large backlash.

Higher setting of the speed loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

**Pr.117** Speed integral compensation

Set the time constant for integral compensation.

**Pr.118** Notch filter selection

Select the frequency that matches the resonance frequency of the mechanical system.

**Pr.119** Feed forward gain

Set the feed forward gain factor for position control.

When the setting is 0%, feed forward control is not performed.

When the setting is 100%, droop pulses are not generated during constant-speed operation.

However, if sudden acceleration/deceleration is made, overshoot increases. (The guideline of the acceleration/deceleration time at 100% is 1s or more.)

**POINT**

When setting this parameter, always set "**Pr.108** Auto tuning" to "2: Invalid".

**Pr.120** In-position range

Set the droop pulse range in which the in-position output is provided to the AD75.

**Pr.121** Solenoid brake output


Set a time delay from when the solenoid brake interlock signal (MBR) turns OFF until the servo amplifier shuts OFF the base circuit.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.122 Monitor output mode selection	No.22	MOD	0 : Servomotor speed	<input type="text"/> 0 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 0H	0001H	122	272	422
			1 : Torque	<input type="text"/> 1 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 1H				
			2 : Servomotor speed (+)	<input type="text"/> 2 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 2H				
			3 : Torque (+)	<input type="text"/> 3 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 3H				
			4 : Current command	<input type="text"/> 4 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 4H				
			5 : Command speed	<input type="text"/> 5 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 5H				
			6 : Droop pulse 1/1	<input type="text"/> 6 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 6H				
			7 : Droop pulse 1/4	<input type="text"/> 7 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 7H				
			8 : Droop pulse 1/16	<input type="text"/> 8 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 8H				
			9 : Droop pulse 1/32	<input type="text"/> 9 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 9H				
A : Droop pulse 1/64	<input type="text"/> A <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> AH							
Pr.123 Option function 1	No.23	*OP1	Carrier frequency selection		0000H	123	273	423
			0 : 2.25KHz (Standard)	<input type="text"/> <input type="text"/> 0 <input type="text"/> H				
			3 : 9.0KHz (Low noise)	<input type="text"/> <input type="text"/> 3 <input type="text"/> H				
			Serial encoder cable selection					
			0 : 2-wire	<input type="text"/> 0 <input type="text"/> <input type="text"/> H				
1 : 4-wire (Supports long distance cables)	<input type="text"/> 1 <input type="text"/> <input type="text"/> H							
Pr.124 Option function 2	No.24	*OP2	Motor-less operation selection		0000H	124	274	424
			0 : Invalid	<input type="text"/> 0 <input type="text"/> <input type="text"/> H				
			1 : Valid	<input type="text"/> 1 <input type="text"/> <input type="text"/> H				
			Solenoid brake interlock output selection					
			0 : Independent of motor speed (Output under specific condition)	<input type="text"/> 0 <input type="text"/> <input type="text"/> <input type="text"/> H				
1 : Output under specific condition at motor speed of zero speed or less	<input type="text"/> 1 <input type="text"/> <input type="text"/> <input type="text"/> H							

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.122** Monitor output mode selection

Select the signals to be output from the analog monitor CH1 and CH2 of the servo amplifier.




Monitor output 2 selection  
Set any of 0 to A. (Refer to the settings of the following monitor output 1)

- Monitor output 1 selection
- 0: Servomotor speed
  - 1: Torque
  - 2: Servomotor speed (+)
  - 3: Torque (+)
  - 4: Current command
  - 5: Command speed
  - 6: Droop pulse 1/1
  - 7: Droop pulse 1/4
  - 8: Droop pulse 1/16
  - 9: Droop pulse 1/32
  - A: Droop pulse 1/64

**Pr.123** Option function 1


Set the option function 1 (carrier frequency selection, serial encoder cable selection).

- Carrier frequency selection (low acoustic noise mode selection)  
Select the carrier frequency of "1: 9.0KHz" to reduce the electromagnetic sound generated by the servomotor by about 20dB.  
At this time, the continuous output of the servomotor reduces.
- Serial encoder cable selection  
Select the serial encoder cable to be used.

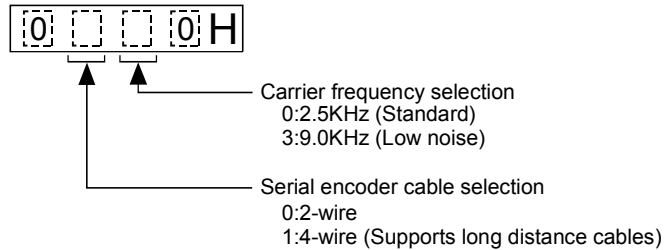**Pr.124** Option function 2

Set the option function 2 (motor-less operation selection, solenoid brake interlock output selection).

- Motor-less operation selection  
When motor-less operation is valid, signals can be output or the status displayed without connection of the servomotor.
- Solenoid brake interlock output selection  
Selection of "0: Independent of motor speed (Output under specific condition)" provides output in any of the following statuses regardless of the servomotor speed.
  - 1) Servo OFF
  - 2) During alarm occurrence
  - 3) Emergency stop input is OFF (valid)
 Selection of "1: Output under specific condition at motor speed of zero speed or less" provides output in any of the above statuses 1) to 3) and under the condition that the servomotor speed is equal to or less than "**Pr.130** Zero speed". Use "**Pr.121** Solenoid brake output" to set the time from when the solenoid brake interlock signal is output until the servo amplifier shuts OFF the base circuit.

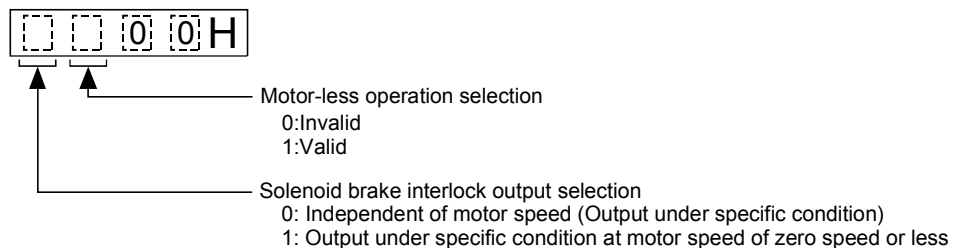

## (3) Servo extension parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.127 Monitor output 1 offset	No.27	MO1	-9999 to 9999 (mV)	-9999 to 9999 (mV)	0	127	277	427
Pr.128 Monitor output 2 offset	No.28	MO2	-9999 to 9999 (mV)	-9999 to 9999 (mV)	0	128	278	428
Pr.129 Pre-alarm data selection	No.29	MOA	Data selection 1/data selection 2		0001H	129	279	429
			0 : Servomotor speed	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 0H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 0H				
			1 : Torque	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 1H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 1H				
			2 : Servomotor speed (+)	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 2H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 2H				
			3 : Torque (+)	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 3H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 3H				
			4 : Current command	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 4H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 4H				
			5 : Command speed	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 5H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 5H				
			6 : Droop pulse 1/1	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 6H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 6H				
			7 : Droop pulse 1/4	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 7H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 7H				
			8 : Droop pulse 1/16	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 8H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 8H				
			9 : Droop pulse 1/32	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 9H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 9H				
			A : Droop pulse 1/64	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> AH/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> AH				
			Pre-alarm data sampling time selection					
0 : 1.77ms	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H							
1 : 3.55ms	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H							
2 : 7.11ms	<input type="checkbox"/> 2 <input type="checkbox"/> <input type="checkbox"/> H							
3 : 14.2ms	<input type="checkbox"/> 3 <input type="checkbox"/> <input type="checkbox"/> H							
4 : 28.4ms	<input type="checkbox"/> 4 <input type="checkbox"/> <input type="checkbox"/> H							
Pr.130 Zero speed	No.30	ZSP	0 to 10000 (r/min)	0 to 10000 (r/min)	50	130	280	430
Pr.131 Error excessive alarm level	No.31	ERZ	1 to 1000 (kpulse)	1 to 1000 (kpulse)	80	131	281	431
Pr.132 Option function 5	No.32	OP5	PI-PID control switching		0	132	282	432
			0 : PI control is always valid	0				
			1 : Switched to PID control when value set to "PI-PID switching position droop" is reached or exceeded during position control	1				
2 : PID control is always valid	2							
Pr.134 PI-PID switching position droop	No.34	VPI	0 to 50000 (pulse)	0 to 50000 (pulse)	0	134	284	434
Pr.136 Speed differential compensation	No.36	VDC	0 to 1000	0 to 1000	980	136	286	436

**Pr.127** Monitor output 1 offset


Set the offset voltage for the monitor output 1.

**Pr.128** Monitor output 2 offset

Set the offset voltage for the monitor output 2.

**Pr.129** Pre-alarm data selection

Set the data to be output in analog form at alarm occurrence.

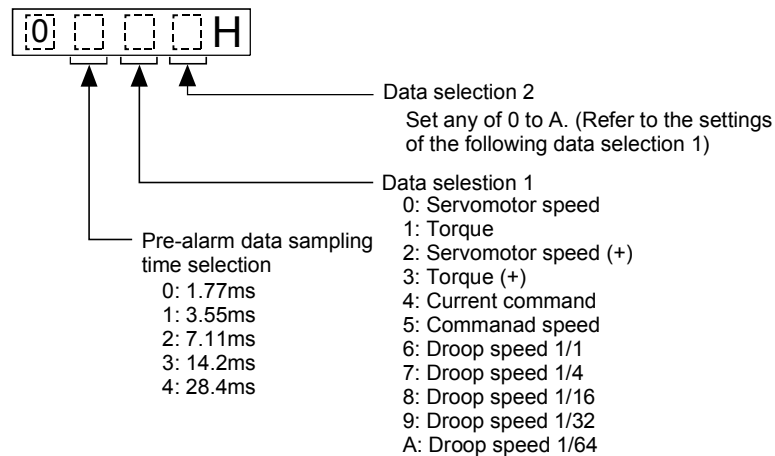**Pr.130** Zero speed

Set the servomotor speed at which the motor speed is judged as zero.

**Pr.131** Error excessive alarm level

Set the range in which a droop pulse excess alarm will be output.

**Pr.132** Option function 5

Select the PI-PID control switching.

**Pr.134** PI-PID switching position droop

Set the position droop amount at which PI control is switched to PID control during position control.

**Pr.136** Speed differential compensation

Set the differential compensation value of the actual speed loop.

## 5.2.8 Servo parameters for MR-J-B

## (1) Servo basic parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.100</b> Servo series	-	-	0 : MR-H-B(MR-H-BN) 1 : MR-J-B 2 : MR-J2-B 3 : Other	0000H 0001H 0002H 001EH	0000H	100	250	400
<b>Pr.101</b> Amplifier setting	No.1	*AMS	0 : Absolute position detection invalid 1 : Absolute position detection valid	0 1	0	101	251	401
<b>Pr.102</b> Regenerative brake resistor	No.2	*REG	Regenerative brake option		0000H	102	252	402
			00: External regenerative brake option not used	<input type="checkbox"/> <input type="checkbox"/> 00H				
			02: MR-RB013	<input type="checkbox"/> <input type="checkbox"/> 02H				
			03: MR-RB033	<input type="checkbox"/> <input type="checkbox"/> 03H				
			04: MR-RB064×2	<input type="checkbox"/> <input type="checkbox"/> 04H				
			05: MR-RB32	<input type="checkbox"/> <input type="checkbox"/> 05H				
			06: MR-RB34	<input type="checkbox"/> <input type="checkbox"/> 06H				
			07: MR-RB54	<input type="checkbox"/> <input type="checkbox"/> 07H				
			0F: MR-RB064	<input type="checkbox"/> <input type="checkbox"/> 0FH				
			External dynamic brake selection					
			0 : External dynamic brake invalid	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H				
			1 : External dynamic brake valid	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H				
<b>Pr.103</b> Motor type	No.3	*MTY	0000H: HA-SH standard 0003H: HA-FH 0005H: HA-MH	0000H 0003H 0005H	0000H	103	253	403
<b>Pr.104</b> Motor capacity	No.4	*MCA	Set the "motor output capacity (kW)×100" value in hexadecimal. (With the exception of 50W, the first digit is discarded.)		0000H	104	254	404

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.100** Servo series

Set this parameter to "1: MR-J-B".

**Pr.101** Amplifier setting

Set whether an absolute position detection system is valid or invalid.

When using the servo amplifier in an incremental system, set this parameter to "0: Absolute position detection invalid".


When using the servo amplifier in an absolute position detection system, set this parameter to "1: Absolute position detection valid".

Note) A parameter error will occur if "Absolute position detection valid" is selected for the incremental encoder.



**Pr.102** Regenerative brake resistor

Select the regenerative brake resistor to be used and whether an external dynamic brake is valid or invalid.

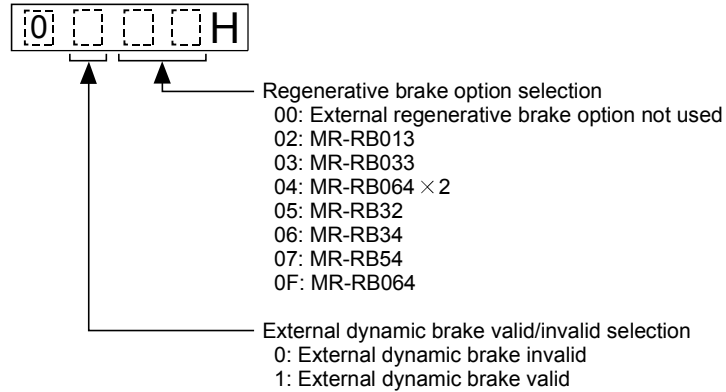

**Pr.103** Motor type

Set the motor type to be used.

**Pr.104** Motor capacity

Set 100 times greater than the output capacity (kW) of the motor in hexadecimal. For the output capacity of the motor, refer to the MR-J-B Servo Amplifier Specifications and Installation Guide.

Example 1) When the motor capacity is 50W  
 $0.05 \text{ (kW)} \times 100 = 5 \dots\dots$  Set "5H".

Example 2) When the motor capacity is 22kW  
 $22 \text{ (kW)} \times 100 = 2200 \dots\dots$  Set "2200H".

**POINT**

Always set the motor capacity.  
 At the default value "0", operation cannot be performed since communication with the servo amplifier is not made.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.105 Motor speed	No.5	*MTR	1 to 3	1 to 3	1	105	255	405
Pr.106 Feedback pulse	No.6	*FBP	0 : 16384pulse 1 : 8192pulse	0 1	0	106	256	406
Pr.107 Rotation direction	No.7	*POL	0 : Forward run with positioning address increment 1 : Reverse run with positioning address increment	0 1	0	107	257	407
Pr.108 Auto tuning	No.8	ATU	0 : Auto tuning selected for use of interpolation axis control in position control 1 : Auto tuning for ordinary operation 2 : Invalid	0 1 2	1	108	258	408
Pr.109 Servo response setting	No.9	RSP	1 : Normal (Low response) 2 : Normal (Low/middle response) 3 : Normal (Middle response) 4 : Normal (Middle/high response) 5 : Normal (High response)	1 2 3 4 5	1	109	259	409

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.105** Motor speed


Set the "10<sup>-3</sup> of the rated speed (r/min) of the servomotor" value.  
 For the rated speed of the servomotor, refer to the MR-J-B Servo Amplifier Specifications and Installation Guide.  
 Example) Set "2" for 2000r/min.

**Pr.106** Feedback pulse

Set the feedback pulse (resolution per servomotor revolution).

**Pr.107** Rotation direction

Set the rotation direction as viewed from the load side.

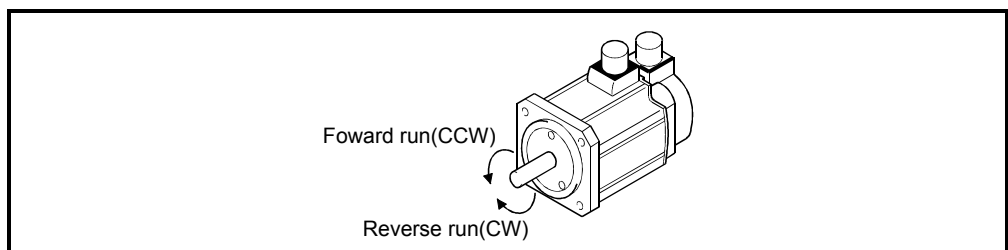

**Pr.108** Auto tuning

Select the auto tuning function.

If "0: Auto tuning selected for use of interpolation axis control in position control" or "1: Auto tuning for ordinary operation" is selected, the setting automatically changes to "2: Invalid" after auto tuning.

**Pr.109** Servo response setting

Set this parameter to increase the response of the servo.

Machine type	Setting value	Description			Guideline for position settling time GDL <sup>2</sup> /GDM <sup>2</sup> guideline = within 5 times
		Response	Guideline for corresponding machine rigidity	GDL <sup>2</sup> /GDM <sup>2</sup> guideline for load inertia	
Normal (Standard mode)	1	Low response	Low rigidity	1 to 10 times	50 to 300ms
	2	}	}		
	3	Middle response	Middle rigidity		10 to 70ms
	4	}	}		
	5	High response	High rigidity		

## (2) Servo adjustment parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.112 Load inertia ratio	No.12	GD2	0.0 to 100.0 (%)	0 to 1000 (0.1%)	30	112	262	412
Pr.113 Position loop gain 1	No.13	PG1	4 to 1000 (rad/s)	4 to 1000 (rad/s)	70	113	263	413
Pr.114 Speed loop gain 1	No.14	VG1	20 to 5000 (rad/s)	20 to 5000 (rad/s)	1200	114	264	414
Pr.115 Position loop gain 2	No.15	PG2	1 to 500 (rad/s)	1 to 500 (rad/s)	25	115	265	415
Pr.116 Speed loop gain 2	No.16	VG2	20 to 8000 (rad/s)	20 to 8000 (rad/s)	600	116	266	416
Pr.117 Speed integral compensation	No.17	VIC	1 to 1000 (ms)	1 to 1000 (ms)	20	117	267	417
Pr.118 Notch filter selection	No.18	NCH	0 : Not used 1 : 1125 2 : 563 3 : 375 4 : 282 5 : 225 6 : 188 7 : 161	0 1 2 3 4 5 6 7	0	118	268	418
Pr.119 Feed forward gain	No.19	FFC	0 to 100 (%)	0 to 100 (%)	0	119	269	419
Pr.120 In-position range	No.20	INP	0 to 50000 (pulse)	0 to 50000 (pulse)	100	120	270	420

## POINT

"Pr.112 Load inertia ratio" to "Pr.117 Speed integral compensation" are transferred to the servo amplifier when the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] turns ON. When auto tuning is executed and operation is performed, however, they are changed to the optimum values in the servo amplifier.

At this time, the auto tuning results are not reflected on the AD75.

Hence, if "Pr.108 Auto tuning" is changed to "2: Invalid" and the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] is turned ON, the settings return to the status before auto tuning, and the motor may vibrate. When it is desired to save the optimum values obtained by auto tuning, set the data read from the buffer memory addresses 858 to 863 (Axis 1), 958 to 963 (Axis 2), 1058 to 1063 (Axis 3) to Pr.112 to Pr.117, and perform write to flash ROM.

**Pr.112** Load inertia ratio (Ratio of load inertia to servomotor inertia)

Set the ratio of load inertia to servomotor inertia.

When auto tuning is executed, this parameter is automatically changed to the auto tuning result in the servo amplifier.

**Pr.113** Position loop gain 1 (Model position gain)

Set the gain of the position loop.

Increase the position loop gain 1 to improve trackability in response to the position command.

**Pr.114** Speed loop gain 1 (Model speed gain)

Normally use this parameter at the initial value.

Higher setting of the speed loop gain 1 increases the response level, but is liable to generate vibration and/or noise.

**Pr.115** Position loop gain 2 (Actual position gain)

Set the gain of the position loop.

The response to load disturbance can be increased.

Higher setting of the position loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

**Pr.116** Speed loop gain 2 (Actual speed gain)

Set this parameter when vibration occurs on machines of low rigidity or large backlash.

Higher setting of the speed loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

**Pr.117** Speed integral compensation

Set the time constant for integral compensation.

**Pr.118** Notch filter selection

Select the frequency that matches the resonance frequency of the mechanical system.

**Pr.119** Feed forward gain

Set the feed forward gain factor for position control.

When the setting is 0%, feed forward control is not performed.

When the setting is 100%, droop pulses are not generated during constant-speed operation.

However, if sudden acceleration/deceleration is made, overshoot increases. (The guideline of the acceleration/deceleration time at 100% is 1s or more.)

**POINT**

When setting this parameter, always set "**Pr.108** Auto tuning" to "2: Invalid".

**Pr.120** In-position range

Set the droop pulse range in which the in-position output is provided to the AD75.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.122 Monitor output mode selection	No.22	MOD	0 : Servomotor speed	<input type="text" value="0"/> <input type="text" value=""/> H	0001H	122	272	422
			1 : Torque	<input type="text" value="1"/> <input type="text" value=""/> H				
			2 : Servomotor speed (+)	<input type="text" value="2"/> <input type="text" value=""/> H				
			3 : Torque (+)	<input type="text" value="3"/> <input type="text" value=""/> H				
			4 : Current command	<input type="text" value="4"/> <input type="text" value=""/> H				
			5 : Command speed	<input type="text" value="5"/> <input type="text" value=""/> H				
			6 : Droop pulse 1/1	<input type="text" value="6"/> <input type="text" value=""/> H				
			7 : Droop pulse 1/4	<input type="text" value="7"/> <input type="text" value=""/> H				
			8 : Droop pulse 1/16	<input type="text" value="8"/> <input type="text" value=""/> H				
			9 : Droop pulse 1/32	<input type="text" value="9"/> <input type="text" value=""/> H				
Pr.123 Option function 1	No.23	*OP1	Carrier frequency selection		0000H	123	273	423
			0 : 2.25KHz (Standard)	<input type="text" value=""/> <input type="text" value=""/> <input type="text" value="0"/> H				
			3 : 9.0KHz (Low noise)	<input type="text" value=""/> <input type="text" value=""/> <input type="text" value="3"/> H				
			Serial encoder cable selection					
			0 : 2-wire	<input type="text" value=""/> <input type="text" value=""/> <input type="text" value="0"/> H				
			1 : 4-wire (Supports long distance cables)	<input type="text" value=""/> <input type="text" value=""/> <input type="text" value="1"/> H				
Pr.124 Option function 2	No.24	*OP2	Motor-less operation selection		0000H	124	274	424
			0 : Invalid	<input type="text" value=""/> <input type="text" value=""/> <input type="text" value="0"/> H				
			1 : Valid	<input type="text" value=""/> <input type="text" value=""/> <input type="text" value="1"/> H				

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.122** Monitor output mode selection

Select the signals to be output from the analog monitor CH1 of the servo amplifier.

H




- Monitor output 1 selection
- 0: Servomotor speed
  - 1: Torque
  - 2: Servomotor speed (+)
  - 3: Torque (+)
  - 4: Current command
  - 5: Command speed
  - 6: Droop pulse 1/1
  - 7: Droop pulse 1/4
  - 8: Droop pulse 1/16
  - 9: Droop pulse 1/32

**Pr.123** Option function 1

Set the option function 1 (carrier frequency selection, serial encoder cable selection).


- Carrier frequency selection (low acoustic noise mode selection)  
 Select the carrier frequency of "1: 9.0KHz" to reduce the electromagnetic sound generated by the servomotor by about 20dB.  
 At this time, the continuous output of the servomotor reduces.
- Serial encoder cable selection  
 Select the serial encoder cable to be used.

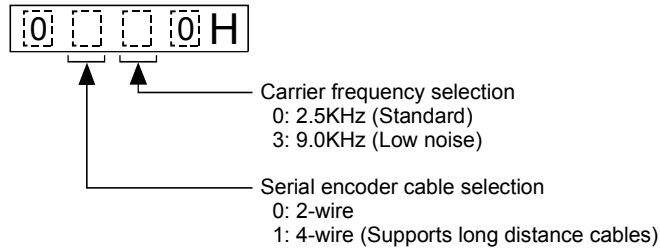

**Pr.124** Option function 2

Set the option function 2 (motor-less operation selection selection).

- Motor-less operation selection  
 When motor-less operation is valid, signals can be output or the status displayed without connection of the servomotor.

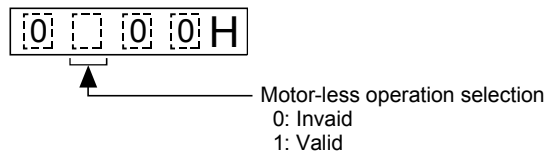

## (3) Servo extension parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.127 Monitor output 1 offset	No.27	MO1	-9999 to 9999 (mV)	-9999 to 9999 (mV)	0	127	277	427
Pr.130 Zero speed	No.30	ZSP	0 to 10000 (r/min)	0 to 10000 (r/min)	50	130	280	430
Pr.131 Error excessive alarm level	No.31	ERZ	1 to 1000 (kpulse)	1 to 1000 (kpulse)	80	131	281	431
Pr.136 Speed differential compensation	No.36	VDC	0 to 1000	0 to 1000	980	136	286	436

**Pr.127** Monitor output 1 offset

Set the offset voltage for the monitor output 1.

**Pr.130** Zero speed

Set the servomotor speed at which the motor speed is judged as zero.

**Pr.131** Error excessive alarm level

Set the range in which a droop pulse excess alarm will be output.

**Pr.136** Speed differential compensation

Set the differential compensation value of the actual speed loop.



# MEMO

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

5.2.9 Servo parameters for MR-J2-B

(1) Servo basic parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.100 Servo series	-	-	0 : MR-H-B(MR-H-BN) 1 : MR-J-B 2 : MR-J2-B 3 : Other	0000H 0001H 0002H 001EH	0000H	100	250	400
Pr.101 Amplifier setting	No.1	*AMS	0 : Absolute position detection invalid 1 : Absolute position detection valid	0 1	0	101	251	401
Pr.102 Regenerative brake resistor	No.2	*REG	Regenerative brake option		0000H	102	252	402
		00 : External regenerative brake option not used	<input type="checkbox"/> <input type="checkbox"/> 00H					
		05 : MR-RB32	<input type="checkbox"/> <input type="checkbox"/> 05H					
		08 : MR-RB30	<input type="checkbox"/> <input type="checkbox"/> 08H					
		09 : MR-RB50	<input type="checkbox"/> <input type="checkbox"/> 09H					
		10 : MR-RB032	<input type="checkbox"/> <input type="checkbox"/> 10H					
		11 : MR-RB12	<input type="checkbox"/> <input type="checkbox"/> 11H					
		External dynamic brake selection						
		0 : External dynamic brake invalid	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H					
		1 : External dynamic brake valid	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H					
Pr.103 Motor type	No.3	*MTY	0080H: Automatic setting	0080H	0000H	103	253	403
Pr.104 Motor capacity	No.4	*MCA	1 to 9999	1 to 9999H	0000H	104	254	404

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.100** Servo series

Set this parameter to "2: MR-J2-B".

**Pr.101** Amplifier setting

Set whether an absolute position detection system is valid or invalid.  
 When using the servo amplifier in an incremental system, set this parameter to "0: Absolute position detection invalid".  
 When using the servo amplifier in an absolute position detection system, set this parameter to "1: Absolute position detection valid".  
 Note) A parameter error will occur if "Absolute position detection valid" is selected for the incremental encoder.

**Pr.102** Regenerative brake resistor

Select the regenerative brake resistor to be used and whether an external dynamic brake is valid or invalid.

0 [ ] [ ] [ ] H

- Regenerative brake option selection  
 00: External regenerative brake option not used  
 05: MR-RB32  
 08: MR-RB30  
 09: MR-RB50  
 10: MR-RB032  
 11: MR-RB12
- External dynamic brake valid/invalid selection  
 0: External dynamic brake invalid  
 1: External dynamic brake valid

**Pr.103** Motor type

Set the motor type to be used.

When the motor type is set to "0080H: Automatic setting", "**Pr.104** Motor capacity" is automatically set in the servo amplifier.

However, set the "**Pr.104** Motor capacity" of the AD75 to other than the initial value "0".

(Refer to the following "**Pr.104** Motor capacity".)

**Pr.104** Motor capacity

Set any of 1 to 9999 in hexadecimal.

The value is automatically set in the servo amplifier according to the used servomotor.

**POINT**

Always set the motor capacity to other than "0".


At the default value "0", operation cannot be performed since communication with the servo amplifier is not made.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.107 Rotation direction	No.7	*POL	0 : Forward run with positioning address increment	0	0	107	257	407
			1 : Reverse run with positioning address increment	1				
Pr.108 Auto tuning	No.8	ATU	0 : Auto tuning selected for use of interpolation axis control in position control	0	1	108	258	408
			1 : Auto tuning for ordinary operation	1				
			2 : Invalid	2				
Pr.109 Servo response setting	No.9	RSP	1 : Normal (Low response)	0001H	0001H	109	259	409
			2 : Normal (Low/middle response)	0002H				
			3 : Normal (Middle response)	0003H				
			4 : Normal (Middle/high response)	0004H				
			5 : Normal (High response)	0005H				
			8 : Large friction (Low response)	0008H				
			9 : Large friction (Low/middle response)	0009H				
			A : Large friction (Middle response)	000AH				
			B : Large friction (Middle/high response)	000BH				
C : Large friction (High response)	000CH							

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.107** Rotation direction

Set the rotation direction as viewed from the load side.

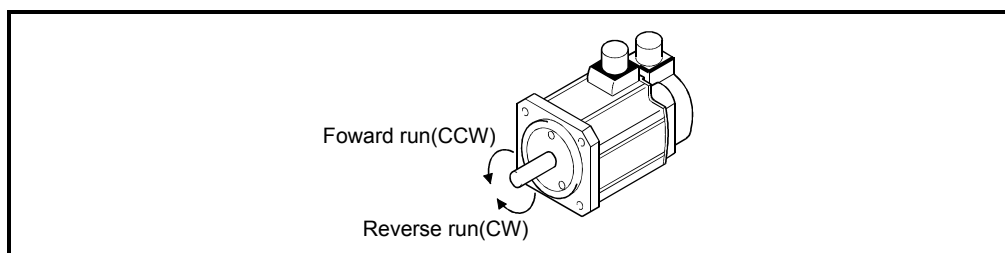

**Pr.108** Auto tuning

Select the auto tuning function.

**Pr.109** Servo response setting

Set this parameter to increase the response of the servo.

Machine type	Setting value	Description			Guideline for position settling time GDL <sup>2</sup> /GDM <sup>2</sup> guideline = within 5 times
		Response	Guideline for corresponding machine rigidity	GDL <sup>2</sup> /GDM <sup>2</sup> guideline for load inertia	
Normal (Standard mode)	1	Low response	Low rigidity	1 to 10 times	50 to 300ms
	2	}	}		
	3	Middle response	Middle rigidity		10 to 70ms
	4	}	}		
	5	High response	High rigidity		10 to 30ms
Large friction (Friction load reduction mode)	8	Low response	Low rigidity	1 to 10 times	70 to 400ms
	9	}	}		
	A	Middle response	Middle rigidity		10 to 100ms
	B	}	}		
	C	High response	High rigidity		10 to 50ms

## (2) Servo adjustment parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.112</b> Load inertia ratio	No.12	GD2	0.0 to 100.0 (%)	0 to 1000 (0.1%)	30	112	262	412
<b>Pr.113</b> Position loop gain 1	No.13	PG1	4 to 1000 (rad/s)	4 to 1000 (rad/s)	70	113	263	413
<b>Pr.114</b> Speed loop gain 1	No.14	VG1	20 to 5000 (rad/s)	20 to 5000 (rad/s)	1200	114	264	414
<b>Pr.115</b> Position loop gain 2	No.15	PG2	1 to 500 (rad/s)	1 to 500 (rad/s)	25	115	265	415
<b>Pr.116</b> Speed loop gain 2	No.16	VG2	20 to 8000 (rad/s)	20 to 8000 (rad/s)	600	116	266	416
<b>Pr.117</b> Speed integral compensation	No.17	VIC	1 to 1000 (ms)	1 to 1000 (ms)	20	117	267	417
<b>Pr.118</b> Notch filter selection	No.18	NCH	0 : Not used 1 : 1125 2 : 563 3 : 375 4 : 282 5 : 225 6 : 188 7 : 161	0 1 2 3 4 5 6 7	0	118	268	418
<b>Pr.119</b> Feed forward gain	No.19	FFC	0 to 100 (%)	0 to 100 (%)	0	119	269	419
<b>Pr.120</b> In-position range	No.20	INP	0 to 50000 (pulse)	0 to 50000 (pulse)	100	120	270	420
<b>Pr.121</b> Solenoid brake output	No.21	MBR	0 to 1000 (ms)	0 to 1000 (ms)	100	121	271	421

**POINT**

"**Pr.112** Load inertia ratio" to "**Pr.117** Speed integral compensation" are transferred to the servo amplifier when the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] turns ON. When auto tuning is executed and operation is performed, however, they are changed to the optimum values in the servo amplifier.

At this time, the auto tuning results are not reflected on the AD75.

Hence, if "**Pr.108** Auto tuning" is changed to "2: Invalid" and the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] is turned ON, the settings return to the status before auto tuning, and the motor may vibrate. When it is desired to save the optimum values obtained by auto tuning, set the data read from the buffer memory addresses 858 to 863 (Axis 1), 958 to 963 (Axis 2), 1058 to 1063 (Axis 3) to **Pr.112** to **Pr.117**, and perform write to flash ROM.

**Pr.112** Load inertia ratio (Ratio of load inertia to servomotor inertia)

Set the ratio of load inertia to servomotor inertia.

When auto tuning is executed, this parameter is automatically changed to the auto tuning result in the servo amplifier.

**Pr.113** Position loop gain 1 (Model position gain)

Set the gain of the position loop.

Increase the position loop gain 1 to improve trackability in response to the position command.

**Pr.114** Speed loop gain 1 (Model speed gain)

Normally use this parameter at the initial value.

Higher setting of the speed loop gain 1 increases the response level, but is liable to generate vibration and/or noise.

**Pr.115** Position loop gain 2 (Actual position gain)

Set the gain of the position loop.

The response to load disturbance can be increased.

Higher setting of the position loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

**Pr.116** Speed loop gain 2 (Actual speed gain)

Set this parameter when vibration occurs on machines of low rigidity or large backlash.

Higher setting of the speed loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

**Pr.117** Speed integral compensation

Set the time constant for integral compensation.

**Pr.118** Notch filter selection

Select the frequency that matches the resonance frequency of the mechanical system.

**Pr.119** Feed forward gain

Set the feed forward gain factor for position control.

When the setting is 0%, feed forward control is not performed.

When the setting is 100%, droop pulses are not generated during constant-speed operation.

However, if sudden acceleration/deceleration is made, overshoot increases. (The guideline of the acceleration/deceleration time at 100% is 1s or more.)

**POINT**

When setting this parameter, always set "**Pr.108** Auto tuning" to "2: Invalid".

**Pr.120** In-position range

Set the droop pulse range in which the in-position output is provided to the AD75.

**Pr.121** Solenoid brake output


Set a time delay from when the solenoid brake interlock signal (MBR) turns OFF until the servo amplifier shuts OFF the base circuit.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.122 Monitor output mode selection	No.22	MOD	0 : Servomotor speed	<input type="text"/> 0 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 0H	0001H	122	272	422
			1 : Torque	<input type="text"/> 1 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 1H				
			2 : Servomotor speed (+)	<input type="text"/> 2 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 2H				
			3 : Torque (+)	<input type="text"/> 3 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 3H				
			4 : Current command	<input type="text"/> 4 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 4H				
			5 : Command speed	<input type="text"/> 5 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 5H				
			6 : Droop pulse 1/1	<input type="text"/> 6 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 6H				
			7 : Droop pulse 1/16	<input type="text"/> 7 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 7H				
			8 : Droop pulse 1/64	<input type="text"/> 8 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 8H				
			9 : Droop pulse 1/256	<input type="text"/> 9 <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> 9H				
A : Droop pulse 1/1024	<input type="text"/> A <input type="text"/> <input type="text"/> H/ <input type="text"/> <input type="text"/> <input type="text"/> AH							
Pr.123 Option function 1	No.23	*OP1	Amplifier EMG selection		0000H	123	273	423
			0 : Valid	<input type="text"/> <input type="text"/> <input type="text"/> 0H				
			1 : Invalid	<input type="text"/> <input type="text"/> <input type="text"/> 1H				
			Serial encoder cable selection					
			0 : 2-wire	<input type="text"/> 0 <input type="text"/> <input type="text"/> H				
1 : 4-wire (Supports long distance cables)	<input type="text"/> 1 <input type="text"/> <input type="text"/> H							
Pr.124 Option function 2	No.24	*OP2	Slight vibration suppression function selection		0000H	124	274	424
			0 : Invalid	<input type="text"/> <input type="text"/> 0 <input type="text"/> H				
			1 : Valid	<input type="text"/> <input type="text"/> 1 <input type="text"/> H				
			Motor-less operation selection					
			0 : Invalid	<input type="text"/> 0 <input type="text"/> <input type="text"/> H				
1 : Valid	<input type="text"/> 1 <input type="text"/> <input type="text"/> H							

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.122** Monitor output mode selection

Select the signals to be output from the analog monitor CH1 and CH2 of the servo amplifier.



Monitor output 2 selection  
Set any of 0 to A. (Refer to the settings of the following monitor output 1)


- Monitor output 1 selection
- 0: Servomotor speed
  - 1: Torque
  - 2: Servomotor speed (+)
  - 3: Torque (+)
  - 4: Current command
  - 5: Command speed
  - 6: Droop pulse 1/1
  - 7: Droop pulse 1/16
  - 8: Droop pulse 1/64
  - 9: Droop pulse 1/256
  - A: Droop pulse 1/1024



**Pr.123** Option function 1


Set the option function 1 (amplifier EMG selection, serial encoder cable selection).

- Amplifier EMG selection  
The external emergency stop signal EM1 can be made invalid.
- Serial encoder cable selection  
Select the serial encoder cable to be used.

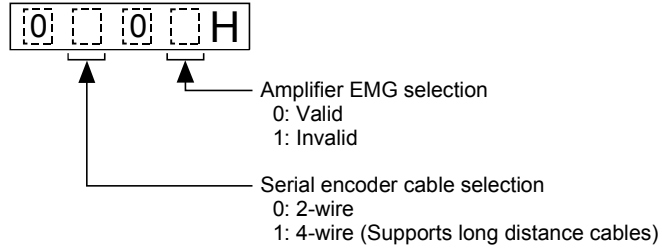**Pr.124** Option function 2

Set the option function 2 (slight vibration suppression function selection, motor-less operation selection).

- Slight vibration suppression function selection  
When "[Pr.108] Auto tuning" is set to "2: Invalid", the function to suppress vibration at a stop can be made valid.
- Motor-less operation selection  
When motor-less operation is valid, signals can be output or the status displayed without connection of the servomotor.

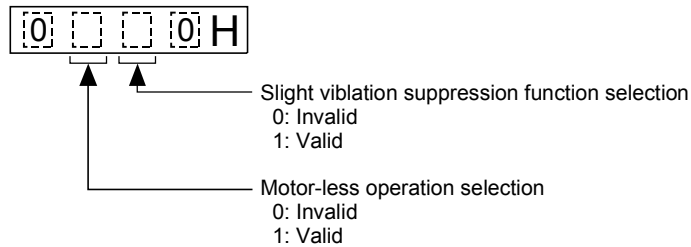

## (3) Servo extension parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.127 Monitor output 1 offset	No.27	MO1	-999 to 999 (mV)	-999 to 999 (mV)	0	127	277	427
Pr.128 Monitor output 2 offset	No.28	MO2	-999 to 999 (mV)	-999 to 999 (mV)	0	128	278	428
Pr.130 Zero speed	No.30	ZSP	0 to 10000 (r/min)	0 to 10000 (r/min)	50	130	280	430
Pr.131 Error excessive alarm level	No.31	ERZ	1 to 1000 (kpulse)	1 to 1000 (kpulse)	80	131	281	431
Pr.132 Option function 5	No.32	OP5	PI-PID control switching		0	132	282	432
			0 : PI control is always valid	0				
			1 : Switched to PID control when value set to "PI-PID switching position droop" is reached or exceeded during position control	1				
			2 : PID control is always valid	2				
Pr.134 PI-PID switching position droop	No.34	VPI	0 to 50000 (pulse)	0 to 50000 (pulse)	0	134	284	434
Pr.136 Speed differential compensation	No.36	VDC	0 to 1000	0 to 1000	980	136	286	436

**Pr.127** Monitor output 1 offset

Set the offset voltage for the monitor output 1.

**Pr.128** Monitor output 2 offset

Set the offset voltage for the monitor output 2.

**Pr.130** Zero speed

Set the servomotor speed at which the motor speed is judged as zero.

**Pr.131** Error excessive alarm level

Set the range in which a droop pulse excess alarm will be output.

**Pr.132** Option function 5

Select the PI-PID control switching.

**Pr.134** PI-PID switching position droop

Set the position droop amount at which PI control is switched to PID control during position control.

**Pr.136** Speed differential compensation

Set the differential compensation value of the actual speed loop.

## 5.2.10 Servo parameters for MR-J2S-B

When using the servo amplifier MR-J2Super (Model MR-J2S-□B), set the servo series to the "MR-J2-B" on the peripheral device.

For the items and ranges that cannot be set as the MR-J2-B, set them in a sequence program (refer to section "6.4 Positioning program examples").

## (1) Servo basic parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.100 Servo series	-	-	0 : MR-H-B(MR-H-BN) 1 : MR-J-B 2 : MR-J2-B 3 : Other	0000H 0001H 0002H 001EH	0000H	100	250	400
Pr.101 Amplifier setting	No.1	*AMS	0 : Absolute position detection invalid 1 : Absolute position detection valid	0 1	0	101	251	401
Pr.102 Regenerative brake resistor	No.2	*REG	Regenerative brake option		0000H	102	252	402
		00 : External regenerative brake option not used		□□00H				
		05 : MR-RB32		□□05H				
		08 : MR-RB30		□□08H				
		09 : MR-RB50		□□09H				
		10 : MR-RB032		□□10H				
		11 : MR-RB12		□□11H				
		External dynamic brake selection						
		0 : External dynamic brake invalid		□0□□H				
		1 : External dynamic brake valid		□1□□H				
Pr.103 Motor type	No.3	*MTY	0080H: Automatic setting	0080H	0000H	103	253	403
Pr.104 Motor capacity	No.4	*MCA	1 to 9999	1 to 9999H	0000H	104	254	404

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.100** Servo series

Set this parameter to "2: MR-J2-B".

**Pr.101** Amplifier setting

Set whether an absolute position detection system is valid or invalid.

When using the servo amplifier in an incremental system, set this parameter to "0: Absolute position detection invalid".

When using the servo amplifier in an absolute position detection system, set this parameter to "1: Absolute position detection valid".

Note) A parameter error will occur if "Absolute position detection valid" is selected for the incremental encoder.

**Pr.102** Regenerative brake resistor

Select the regenerative brake resistor to be used and whether an external dynamic brake is valid or invalid.

0 [ ] [ ] [ ] H

Regenerative brake option selection

- 00: External regenerative brake option not used
- 05: MR-RB32
- 08: MR-RB30
- 09: MR-RB50
- 10: MR-RB032
- 11: MR-RB12

External dynamic brake valid/invalid selection

- 0: External dynamic brake invalid
- 1: External dynamic brake valid

**Pr.103** Motor type

Set "0080H".

Since setting is made as the MR-J2-B on the peripheral device, "00FFH: Special motor" can be selected, but set "0080H: Automatic setting" (initial setting).

"Pr.104 Motor capacity" and "Pr.106 Feedback pulse" are automatically set in the servo amplifier.

However, set the "Pr.104 Motor capacity" of the AD75 to other than the initial value "0".

(Refer to the following "Pr.104 Motor capacity".)

**Pr.104** Motor capacity

Set any of 1 to 9999 in hexadecimal.

The value is automatically set in the servo amplifier according to the used servomotor.

**POINT**

Always set the motor capacity to other than "0".

At the default value "0", operation cannot be performed since communication with the servo amplifier is not made.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.106</b> Feedback pulse	No.6	*FBP	Setting disabled ("0: 16384pulse" fixed)	0 : 16384pulse 1 : 8192pulse	0	106	256	406
<b>Pr.107</b> Rotation direction	No.7	*POL	0 : Forward run with positioning address increment 1 : Reverse run with positioning address increment	0 1	0	107	257	407
<b>Pr.108</b> Auto tuning	No.8	ATU	0 : Interpolation mode 1 : Auto tuning mode 1 2 : Manual mode 2 - -	0 1 2 3 4	1	108	258	408
<b>Pr.109</b> Servo response setting	No.9	RSP	1 : 15Hz 2 : 20Hz 3 : 25Hz 4 : 30Hz 5 : 35Hz - - 8 : 70Hz 9 : 85Hz A : 105Hz B : 130Hz C : 160Hz - - -	0001H 0002H 0003H 0004H 0005H 0006H 0007H 0008H 0009H 000AH 000BH 000CH 000DH 000EH 000FH	0001H	109	259	409

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

### **Pr.106** Feedback pulse

Set the feedback pulse (resolution per servomotor revolution).

Set any of the following values according to the resolution of the used encoder.


Resolution of used encoder	<b>Pr.106</b> Feedback pulse	<b>Pr.2</b> No. of pulses per rotation
131072pulse	0 : 16384pulse	16384pulse
16384pulse	0 : 16384pulse	16384pulse
8192pulse	1 : 8192pulse	8192pulse

When setting this parameter to "1: 8192 pulse", set it with a sequence program. (When the peripheral device is used, this parameter is fixed to "0: 16384 pulse" as the MR-J2-B.)

When any value other than "0" or "1" is set on the AD75, operation cannot be guaranteed.

**Pr.107** Rotation direction

Set the rotation direction as viewed from the load side.

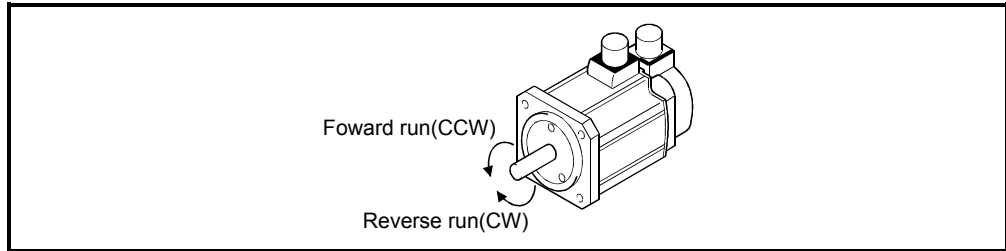

**Pr.108** Auto tuning

Select the auto tuning function.

- 0: Interpolation mode
- 1: Auto tuning mode 1
- 2: Manual mode 2
- 3: Auto tuning mode 2
- 4: Manual mode 1

On the peripheral device, only "0", "1" or "2" may be set.

(Since the setting is made as the MR-J2-B, the screen display differs from the above.)

When setting "3" or "4", set this parameter in the sequence program.

**Pr.109** Servo response setting

Set the response level of auto tuning.

Setting value	Response	Guideline for machine resonance frequency	
1	Low response	15 Hz	
2		20 Hz	
3		↑	25 Hz
4		30 Hz	
5		35 Hz	
6	Middle response	↓	45 Hz
7		55 Hz	
8		70 Hz	
9		↑	85 Hz
A		105 Hz	
B	High response	130 Hz	
C		160 Hz	
D		↓	200 Hz
E		240 Hz	
F		300 Hz	

- If the machine hunts or generates large gear sound, decrease the setting value.

- To improve performance, e.g. shorten the settling time, increase the setting value.

On the peripheral device, any value in the range "0" to "C" can be set.

(Since the setting is made as the MR-J2-B, the screen display differs from the above.)

When setting any of "D" to "F", set this parameter in the sequence program.

## (2) Servo adjustment parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.112</b> Load inertia ratio	No.12	GD2	0.0 to 100.0 (%) –	0 to 1000 (0.1%) 1001 to 3000 (0.1%)	30	112	262	412
<b>Pr.113</b> Position loop gain 1	No.13	PG1	4 to 1000 (rad/s) –	4 to 1000 (rad/s) 1001 to 2000 (rad/s)	70	113	263	413
<b>Pr.114</b> Speed loop gain 1	No.14	VG1	20 to 5000 (rad/s) –	20 to 5000 (rad/s) 5001 to 8000 (rad/s)	1200	114	264	414
<b>Pr.115</b> Position loop gain 2	No.15	PG2	1 to 500 (rad/s) –	1 to 500 (rad/s) 501 to 1000 (rad/s)	25	115	265	415
<b>Pr.116</b> Speed loop gain 2	No.16	VG2	20 to 8000 (rad/s) –	20 to 8000 (rad/s) 8001 to 20000 (rad/s)	600	116	266	416
<b>Pr.117</b> Speed integral compensation	No.17	VIC	1 to 1000 (ms)	1 to 1000 (ms)	20	117	267	417

**POINT**

"**Pr.112** Load inertia ratio" to "**Pr.117** Speed integral compensation" are transferred to the servo amplifier when the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] turns ON. When auto tuning is executed and operation is performed, however, they are changed to the optimum values in the servo amplifier.

At this time, the auto tuning results are not reflected on the AD75.

Hence, if "**Pr.108** Auto tuning" is changed to "2: Manual mode 2" and the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] is turned ON, the settings return to the status before auto tuning, and the motor may vibrate.

When it is desired to save the optimum values obtained by auto tuning, set the data read from the buffer memory addresses 858 to 863 (Axis 1), 958 to 963 (Axis 2), 1058 to 1063 (Axis 3) to **Pr.112** to **Pr.117**, and perform write to flash ROM.

**Pr.112** Load inertia ratio (Ratio of load inertia to servomotor inertia)

Set the ratio of load inertia to servomotor inertia.

When "**Pr.108** Auto tuning" is set to "0: Interpolation mode" or "1: Auto tuning mode 1", this parameter is automatically changed to the auto tuning result in the servo amplifier.

On the peripheral device, any value in the range 0.0 to 100.0% can be set since the setting is made as the MR-J2-B.

When setting any of 100.1 to 300.0%, set this parameter in the sequence program.



**Pr.113** Position loop gain 1 (Model position gain)

Set the gain of the position loop.

Increase the position loop gain 1 to improve trackability in response to the position command.

When "[Pr.108] Auto tuning" is set to "1: Auto tuning mode 1" or "3: Auto tuning mode 2", this parameter is automatically changed to the auto tuning result in the servo amplifier.

On the peripheral device, any value in the range 4 to 1000rad/s can be set since the setting is made as the MR-J2-B.

When setting any of 1001 to 2000rad/s, set this parameter in the sequence program.

**Pr.114** Speed loop gain 1 (Model speed gain)

Normally use this parameter at the initial value.

Higher setting of the speed loop gain 1 increases the response level, but is liable to generate vibration and/or noise.

When "[Pr.108] Auto tuning" is set to "1: Auto tuning mode 1", "3: Auto tuning mode 2" or "4: Manual mode 1", this parameter is automatically changed to the auto tuning result in the servo amplifier.

On the peripheral device, any value in the range 20 to 5000rad/s can be set since the setting is made as the MR-J2-B.

When setting any of 5001 to 8000rad/s, set this parameter in the sequence program.

**Pr.115** Position loop gain 2 (Actual position gain)

Set the gain of the position loop.

The response to load disturbance can be increased.

Higher setting of the position loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

When "[Pr.108] Auto tuning" is set to "0: Interpolation mode", "1: Auto tuning mode 1" or "3: Auto tuning mode 2", this parameter is automatically changed to the auto tuning result in the servo amplifier.

On the peripheral device, any value in the range 1 to 500rad/s can be set since the setting is made as the MR-J2-B.

When setting any of 501 to 1000rad/s, set this parameter in the sequence program.

**Pr.116** Speed loop gain 2 (Actual speed gain)

Set this parameter when vibration occurs on machines of low rigidity or large backlash.

Higher setting of the speed loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

When "[Pr.108] Auto tuning" is set to "0: Interpolation mode", "1: Auto tuning mode 1" or "3: Auto tuning mode 2", this parameter is automatically changed to the auto tuning result in the servo amplifier.

On the peripheral device, any value in the range 20 to 8000rad/s can be set since the setting is made as the MR-J2-B.

When setting any of 8001 to 20000rad/s, set this parameter in the sequence program.

**Pr.117** Speed integral compensation

Set the time constant for integral compensation.

When "[Pr.108] Auto tuning" is set to "0: Interpolation mode", "1: Auto tuning mode 1" or "3: Auto tuning mode 2", this parameter is automatically changed to the auto tuning result in the servo amplifier.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.118 Machine resonance suppression filter 1	No.18	NCH	Notch frequency		0000H	118	268	418
			0 : Invalid	□□00H				
			1 : 4500	□□01H				
			2 : 2250	□□02H				
			3 : 1500	□□03H				
			4 : 1125	□□04H				
			5 : 900	□□05H				
			6 : 750	□□06H				
			7 : 642.9	□□07H				
			-	□□08 to □□1FH				
Notch depth								
0 : -40db	□0□□H							
-	□1□□ to □3□□H							
Pr.119 Feed forward gain	No.19	FFC	0 to 100 (%)	0 to 100 (%)	0	119	269	419
Pr.120 In-position range	No.20	INP	0 to 50000	0 to 50000	100	120	270	420
Pr.121 Solenoid brake output	No.21	MBR	0 to 1000 (ms)	0 to 1000 (ms)	100	121	271	421

Pr.118 Machine resonance suppression filter 1

Set the machine resonance suppression filter 1 (notch frequency, notch depth).



Setting	Frequency	Setting	Frequency	Setting	Frequency	Setting	Frequency
00	Invalid	08	562.5	10	281.3	18	187.5
01	4500	09	500	11	264.7	19	180
02	2250	0A	450	12	250	1A	173.1
03	1500	0B	409.1	13	236.8	1B	166.7
04	1125	0C	375	14	225	1C	160.1
05	900	0D	346.2	15	214.3	1D	155.2
06	750	0E	321.4	16	204.5	1E	150
07	642.9	0F	300	17	195.7	1F	145.2

Setting	Depth	Gain
0	Deep	-40dB
1	}	-14dB
2		-8dB
3	shallow	-4dB

On the peripheral device, any of only the notch frequencies "00" to "07" can be set as the notch filter selection of the MR-J2-B.

(Since the setting is made as the MR-J2-B, the screen display differs from the above.)

On the peripheral device, the notch depth cannot be set. (It is set to the initial setting "0".)

When setting any of notch frequencies "08" to "1F" and notch depths "1" to "3", set this parameter in the sequence program.

**Pr.119** Feed forward gain

Set the feed forward gain factor for position control.

When the setting is 0%, feed forward control is not performed.

When the setting is 100%, droop pulses are not generated during constant-speed operation.

However, if sudden acceleration/deceleration is made, overshoot increases. (The guideline of the acceleration/deceleration time at 100% is 1s or more.)

**POINT**

When setting this parameter, always set "**Pr.108** Auto tuning" to "2: Manual mode 2".

**Pr.120** In-position range

Set the droop pulse range in which the in-position output is provided to the AD75.

Set this parameter in the unit of "**Pr.106** Feedback pulse".

Example) When setting  $\pm 10\mu\text{m}$  as the in-position range at the ballscrew lead of 10mm and the feedback pulse of 8192 pulse, set the value indicated by the following expression.

$$\frac{10 \times 10^{-6}}{10 \times 10^{-3}} \cdot 8192 = 8.192 \div 8$$

**Pr.121** Solenoid brake output


Set a time delay from when the solenoid brake interlock signal (MBR) turns OFF until the servo amplifier shuts OFF the base circuit.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.122 Monitor output mode selection	No.22	MOD	0 : Servomotor speed (±8V/max. speed)	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 0H	0001H	122	272	422
			1 : Torque (±8V/max. torque)	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 1H				
			2 : Servomotor speed (+8V/max. speed)	<input type="checkbox"/> 2 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 2H				
			3 : Torque (+8V/max. torque)	<input type="checkbox"/> 3 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 3H				
			4 : Current command (±8V/max. current command)	<input type="checkbox"/> 4 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 4H				
			5 : Command speed (±8V/max. speed)	<input type="checkbox"/> 5 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 5H				
			6 : Droop pulse (±10V/128 pulses)	<input type="checkbox"/> 6 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 6H				
			7 : Droop pulse (±10V/2048 pulses)	<input type="checkbox"/> 7 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 7H				
			8 : Droop pulse (±10V/8192 pulses)	<input type="checkbox"/> 8 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 8H				
			9 : Droop pulse (±10V/32768 pulses)	<input type="checkbox"/> 9 <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 9H				
			A : Droop pulse (±10V/131072 pulses)	<input type="checkbox"/> A <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> AH				
			<input type="checkbox"/> B <input type="checkbox"/> <input type="checkbox"/> H/ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> BH					
Pr.123 Option function 1	No.23	*OP1	Amplifier EMG selection		0000H	123	273	423
			0 : Valid	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 0H				
			1 : Invalid	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 1H				
			Serial encoder cable selection					
			0 : 2-wire	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H				
1 : 4-wire (Supports long distance cables)	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H							

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.122** Monitor output mode selection

Select the signals to be output from the analog monitor CH1 and CH2 of the servo amplifier.




Monitor output 2 selection  
Set any of 0 to B.  
(Refer to the settings of the following monitor output 1)

- Monitor output 1 selection
- 0: Servomotor speed ( $\pm 8V/\text{max. speed}$ )
  - 1: Torque ( $\pm 8V/\text{max. torque}$ )
  - 2: Servomotor speed ( $+8V/\text{max. speed}$ )
  - 3: Torque ( $+8V/\text{max. torque}$ )
  - 4: Current command ( $\pm 8V/\text{max. current command}$ )
  - 5: Command speed ( $\pm 8V/\text{max. speed}$ )
  - 6: Droop pulse ( $\pm 10V/128$  pulses)
  - 7: Droop pulse ( $\pm 10V/2048$  pulses)
  - 8: Droop pulse ( $\pm 10V/8192$  pulses)
  - 9: Droop pulse ( $\pm 10V/32768$  pulses)
  - A: Droop pulse ( $\pm 10V/131072$  pulses)
  - B: Bus voltage

**Pr.123** Option function 1

Set the option function 1 (amplifier EMG selection, serial encoder cable selection).

- Amplifier EMG selection  
The external emergency stop signal EM1 can be made invalid.
- Serial encoder cable selection  
Select the serial encoder cable to be used.



Amplifier EMG selection  
0: Valid  
1: Invalid

Serial encoder cable selection  
0: 2-wire  
1: 4-wire (Supports long distance cables)


Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.124</b> Option function 2	No.24	*OP2	Slight vibration suppression function selection		0000H	124	274	424
			0 : Invalid	<input type="checkbox"/> <input type="checkbox"/> 0 <input type="checkbox"/> H				
			1 : Valid	<input type="checkbox"/> <input type="checkbox"/> 1 <input type="checkbox"/> H				
			Motor-less operation selection					
			0 : Invalid	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H				
			1 : Valid	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H				
<b>Pr.125</b> Low pass filter/adaptive vibration suppression control	No.25	LPF	Low pass filter selection		0000H	125	275	425
			–	<input type="checkbox"/> <input type="checkbox"/> 0 <input type="checkbox"/> H				
			–	<input type="checkbox"/> <input type="checkbox"/> 1 <input type="checkbox"/> H				
			Adaptive vibration suppression control selection					
			–	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H				
			–	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H				
			–	<input type="checkbox"/> 2 <input type="checkbox"/> <input type="checkbox"/> H				
			Adaptive vibration suppression control sensitivity					
–	0 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> H							
–	1 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> H							

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.124** Option function 2

Set the option function 2 (slight vibration suppression function selection, motor-less operation selection).

- Slight vibration suppression function selection  
 When "**Pr.149** Servo parameter transmission setting" is set to "F003H" and "**Pr.108** Auto tuning" is set to "2: Manual mode", the function to suppress vibration at a stop can be made valid.
- Motor-less operation selection  
 When motor-less operation is valid, signals can be output or the status displayed without connection of the servomotor.

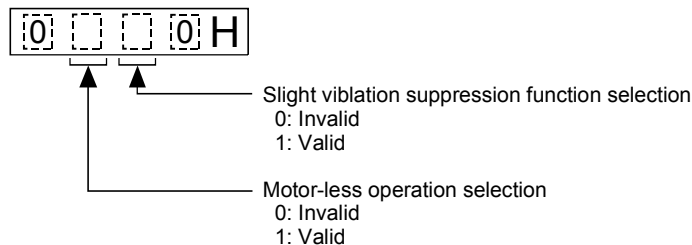


**Pr.125** Low pass filter/adaptive vibration suppression control

Set the low pass filter and adaptive vibration suppression control.

This parameter cannot be set on the peripheral device.

Set this parameter with a sequence program.

- Low pass filter selection  
Select whether the low pass filter in response to the torque command to prevent the resonance at high frequency is made valid (automatic adjustment) or invalid.
- Adaptive vibration suppression control selection  
Select whether the adaptive vibration suppression control, in which the servo amplifier detects machine resonance and automatically sets the filter characteristics to suppress mechanical system vibration, is made invalid or valid or is held.
- Adaptive vibration suppression control sensitivity  
Select the sensitivity at which machine resonance is detected.

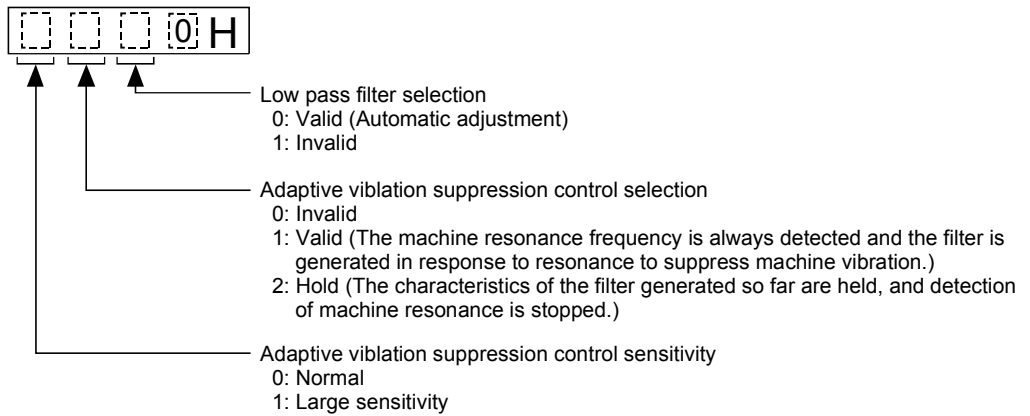

## (3) Servo extension parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.127</b> Monitor output 1 offset	No.27	MO1	-999 to 999 (mV)	-999 to 999 (mV)	0	127	277	427
<b>Pr.128</b> Monitor output 2 offset	No.28	MO2	-999 to 999 (mV)	-999 to 999 (mV)	0	128	278	428
<b>Pr.130</b> Zero speed	No.30	ZSP	0 to 10000 (r/min)	0 to 10000 (r/min)	50	130	280	430
<b>Pr.131</b> Error excessive alarm level	No.31	ERZ	0.025 to 25.000 (0.025rev)	1 to 1000 (0.025rev)	80	131	281	431
<b>Pr.132</b> Option function 5	No.32	OP5	PI-PID control switching		0	132	282	432
			0 : PI control is always valid	0				
			1 : Switched to PID control when value set to "PI-PID switching position droop" is reached or exceeded during position control	1				
			2 : PID control is always valid	2				
<b>Pr.133</b> Option function 6	No.33	*OP6	Serial communication baud rate selection		0000H	133	283	433
			-	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 0H				
			-	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 1H				
			-	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 2H				
			-	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 3H				
			Serial communication response delay time					
			-	<input type="checkbox"/> <input type="checkbox"/> 0 <input type="checkbox"/> H				
			-	<input type="checkbox"/> <input type="checkbox"/> 1 <input type="checkbox"/> H				
Encoder pulse output setting selection								
-	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H							
-	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H							
<b>Pr.134</b> PI-PID switching position droop	No.34	VPI	0 to 50000 (pulse)	0 to 50000 (pulse)	0	134	284	434
<b>Pr.136</b> Speed differential compensation	No.36	VDC	0 to 1000	0 to 1000	980	136	286	436

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.127** Monitor output 1 offset

Set the offset voltage for the monitor output 1.



**Pr.128** Monitor output 2 offset

Set the offset voltage for the monitor output 2.

**Pr.130** Zero speed

Set the servomotor speed at which the motor speed is judged as zero.

**Pr.131** Error excessive alarm level

Set the range in which a droop pulse excess alarm will be output.  
Set any value in the range 0.025 to 25.000rev in 0.025rev increments.

Example) When 80 is set

$$80 \times 0.025 = 2.000 \text{ [rev]}$$

Since setting is made as the MR-J2-B on the peripheral device, the setting range is 1 to 1000pulse, but set this parameter to any of 0.025 to 25.000rev.

**Pr.132** Option function 5

Select the PI-PID control switching.


**Pr.133** Option function 6

Set the option function 6 (serial communication baud rate selection, serial communication response delay time, encoder pulse output setting selection).

This parameter cannot be set on the peripheral device.

Set this parameter with a sequence program.

- Serial communication baud rate selection  
Select the serial communication baud rate.
- Serial communication response delay time  
Select the serial communication response delay time.
- Encoder pulse output setting selection  
Select the output system of the encoder pulses (A phase, B phase) output by the servo amplifier when "[Pr.149] Servo parameter transmission setting" is set to "F003H". (For details, refer to "[Pr.138] Encoder output pulses".)

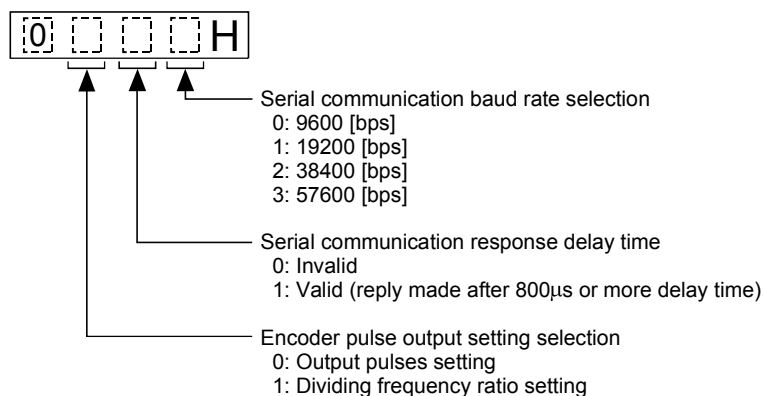**Pr.134** PI-PID switching position droop

Set the position droop amount at which PI control is switched to PID control during position control.

**Pr.136** Speed differential compensation

Set the differential compensation value of the actual speed loop.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.138 Encoder output pulses	No.38	*ENR	—	0 to 65535	4000	138	288	438
Pr.149 Servo parameter transmission setting	—	—	—	0, F003H	0	149	299	449

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

### Pr.138 Encoder output pulses

Set the encoder pulses (A phase, B phase) output by the servo amplifier. Set the value 4 times smaller than the A phase and B phase pulses.

This parameter cannot be set on the peripheral device.

Set this parameter with a sequence program.

Use "Pr.133 Option function 6" to select the output pulses setting or output dividing frequency ratio setting.

The number of A phase and B phase pulses actually output is 1/4 times greater than the preset number of pulses.

The maximum output frequency is 1.3Mpulse (after multiplication by 4). Use this parameter within this range.

- For output pulses setting

Set "Pr.133 Option function 6" to "□0□□H" (initial value).

Set the number of pulses per servomotor revolution.

Output pulses = setting value [pulse/rev]

(Example) When the setting is 5600, the actually output A phase and B phase pulses are as indicated below.

$$\text{A phase and B phase output pulses} = \frac{5600}{4} = 1400 \text{ [pulse]}$$

- For dividing frequency ratio setting

Set "Pr.133 Option function 6" to "□1□□H".

The number of pulses per servomotor revolution is divided by the setting value.

$$\text{Output pulses} = \frac{\text{Resolution per servomotor revolution}}{\text{Setting value}} \text{ [pulse/rev]}$$

(Example) When the setting is 8, the actually output A phase and B phase pulses are as indicated below.

$$\text{A phase and B phase output pulses} = \frac{131072}{8} \times \frac{1}{4} = 4096 \text{ [pulse]}$$

### Pr.149 Servo parameter transmission setting

Set whether the encoder output pulse function and slight vibration suppression function of the MR-J2S-B are valid or invalid.

This parameter cannot be set on the peripheral device.

Set this parameter with a sequence program.

0 : Invalid

F003H : Valid

MEMO

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## 5.2.11 Servo parameters for MR-J2-03B5

When using the servo amplifier MR-J2-Jr series (Model MR-J2-03B5), set the servo series to the "MR-J2-B" on the peripheral device.

For the items and ranges that cannot be set as the MR-J2-B, set them in a sequence program (refer to section "6.4 Positioning program examples").

## (1) Servo basic parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.100</b> Servo series	–	–	0 : MR-H-B(MR-H-BN) 1 : MR-J-B 2 : MR-J2-B 3 : Other	0000H 0001H 0002H 001EH	0000H	100	250	400
<b>Pr.101</b> Amplifier setting	No.1	–	Use prohibited (set the default value)		0	101	251	401
<b>Pr.102</b> Regenerative brake resistor	No.2	–	Use prohibited (set the default value)		0000H	102	252	402
<b>Pr.103</b> Motor type	No.3	*MTY	0080H: Automatic setting	0080H	0000H	103	253	403
<b>Pr.104</b> Motor capacity	No.4	*MCA	1 to 9999	1 to 9999	0000H	104	254	404

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.100** Servo series

Set this parameter to "2: MR-J2-B".

**Pr.103** Motor type

Set "0080H".

Since setting is made as the MR-J2-B on the peripheral device, "00FFH: Special motor" can be selected, but set "0080H: Automatic setting" (initial setting).

"**Pr.104** Motor capacity" is automatically set in the servo amplifier.

However, set the "**Pr.104** Motor capacity" of the AD75 to other than the initial value "0".

(Refer to the following "**Pr.104** Motor capacity".)

**Pr.104** Motor capacity

Set any of 1 to 9999 in hexadecimal.

The value is automatically set in the servo amplifier according to the used servomotor.

**POINT**

Always set the motor capacity to other than "0".


At the default value "0", operation cannot be performed since communication with the servo amplifier is not made.

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.107 Rotation direction	No.7	*POL	0 : Forward run with positioning address increment	0	0	107	257	407
			1 : Reverse run with positioning address increment	1				
Pr.108 Auto tuning	No.8	ATU	0 : Auto tuning selected for use of interpolation axis control in position control	0	1	108	258	408
			1 : Auto tuning for ordinary operation	1				
			2 : Invalid	2				
Pr.109 Servo response setting	No.9	RSP	1 : Normal (Low response)	0001H	0001H	109	259	409
			2 : Normal (Low/middle response)	0002H				
			3 : Normal (Middle response)	0003H				
			4 : Normal (Middle/highresponse)	0004H				
			5 : Normal (High response)	0005H				
			8 : Large friction (Low response)	0008H				
			9 : Large friction (Low/middle response)	0009H				
			A : Large friction (Middle response)	000AH				
			B : Large friction (Middle/high response)	000BH				
C : Large friction (High response)	000CH							

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.107** Rotation direction

Set the rotation direction as viewed from the load side.

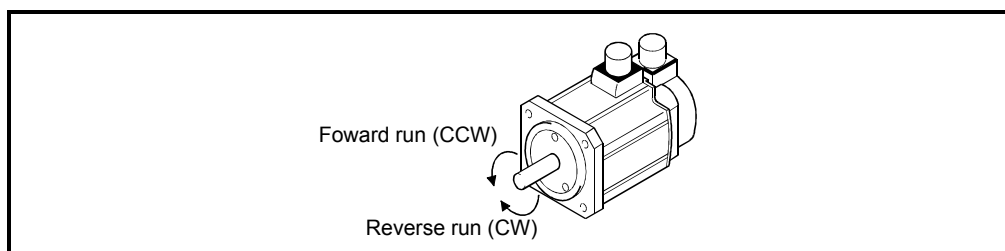

**Pr.108** Auto tuning

Select the auto tuning function.

**Pr.109** Servo response setting

Set this parameter to increase the response of the servo.

Machine type	Setting value	Description			Guideline for position settling time GDL <sup>2</sup> /GDM <sup>2</sup> guideline = within 5 times
		Response	Guideline for corresponding machine rigidity	GDL <sup>2</sup> /GDM <sup>2</sup> guideline for load inertia	
Normal (Standard mode)	1	Low response	Low rigidity	1 to 10 times	50 to 300ms
	2	}	}		10 to 70ms
	3	Middle response	Middle rigidity		10 to 30ms
	4	}	}		
	5	High response	High rigidity		
Large friction (Friction load reduction mode)	8	Low response	Low rigidity		70 to 400ms
	9	}	}		
	A	Middle response	Middle rigidity		10 to 100ms
	B	}	}		
	C	High response	High rigidity		10 to 50ms

## (2) Servo adjustment parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.112</b> Load inertia ratio	No.12	GD2	0.0 to 100.0 (%)	0 to 1000 (0.1%)	30	112	262	412
<b>Pr.113</b> Position loop gain 1	No.13	PG1	4 to 1000 (rad/s)	4 to 1000 (rad/s)	70	113	263	413
<b>Pr.114</b> Speed loop gain 1	No.14	VG1	20 to 5000 (rad/s)	20 to 5000 (rad/s)	1200	114	264	414
<b>Pr.115</b> Position loop gain 2	No.15	PG2	1 to 500 (rad/s)	1 to 500 (rad/s)	25	115	265	415
<b>Pr.116</b> Speed loop gain 2	No.16	VG2	20 to 8000 (rad/s)	20 to 8000 (rad/s)	600	116	266	416
<b>Pr.117</b> Speed integral compensation	No.17	VIC	1 to 1000 (ms)	1 to 1000 (ms)	20	117	267	417
<b>Pr.118</b> Notch filter selection	No.18	NCH	0 : Not used 1 : 1125 2 : 563 3 : 375 4 : 282 5 : 225 6 : 188 7 : 161	0 1 2 3 4 5 6 7	0	118	268	418
<b>Pr.119</b> Feed forward gain	No.19	FFC	0 to 100 (%)	0 to 100 (%)	0	119	269	419
<b>Pr.120</b> In-position range	No.20	INP	0 to 50000 (pulse)	0 to 50000 (pulse)	100	120	270	420
<b>Pr.121</b> Solenoid brake output	No.21	MBR	0 to 1000 (ms)	0 to 1000 (ms)	100	121	271	421

**POINT**

"**Pr.112** Load inertia ratio" to "**Pr.117** Speed integral compensation" are transferred to the servo amplifier when the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] turns ON. When auto tuning is executed and operation is performed, however, they are changed to the optimum values in the servo amplifier.

At this time, the auto tuning results are not reflected on the AD75.

Hence, if "**Pr.108** Auto tuning" is changed to "2: Invalid" and the programmable controller CPU is powered ON or reset or the PLC READY signal [Y1D] is turned ON, the settings return to the status before auto tuning, and the motor may vibrate. When it is desired to save the optimum values obtained by auto tuning, set the data read from the buffer memory addresses 858 to 863 (Axis 1), 958 to 963 (Axis 2), 1058 to 1063 (Axis 3) to **Pr.112** to **Pr.117**, and perform write to flash ROM.



**Pr.112** Load inertia ratio (Ratio of load inertia to servomotor inertia)

Set the ratio of load inertia to servomotor inertia.

When auto tuning is executed, this parameter is automatically changed to the auto tuning result in the servo amplifier.

**Pr.113** Position loop gain 1 (Model position gain)

Set the gain of the position loop.

Increase the position loop gain 1 to improve trackability in response to the position command.

**Pr.114** Speed loop gain 1 (Model speed gain)

Normally use this parameter at the initial value.

Higher setting of the speed loop gain 1 increases the response level, but is liable to generate vibration and/or noise.

**Pr.115** Position loop gain 2 (Actual position gain)

Set the gain of the position loop.

The response to load disturbance can be increased.

Higher setting of the position loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

**Pr.116** Speed loop gain 2 (Actual speed gain)

Set this parameter when vibration occurs on machines of low rigidity or large backlash.

Higher setting of the speed loop gain 2 increases the response level, but is liable to generate vibration and/or noise.

**Pr.117** Speed integral compensation

Set the time constant for integral compensation.

**Pr.118** Notch filter selection

Select the frequency that matches the resonance frequency of the mechanical system.

**Pr.119** Feed forward gain

Set the feed forward gain factor for position control.

When the setting is 0%, feed forward control is not performed.

When the setting is 100%, droop pulses are not generated during constant-speed operation.

However, if sudden acceleration/deceleration is made, overshoot increases. (The guideline of the acceleration/deceleration time at 100% is 1s or more.)

**POINT**

When setting this parameter, always set "**Pr.108** Auto tuning" to "2: Invalid".

**Pr.120** In-position range

Set the droop pulse range in which the in-position output is provided to the AD75.

**Pr.121** Solenoid brake output

Set a time delay from when the solenoid brake interlock signal (MBR) turns OFF until the servo amplifier shuts OFF the base circuit.


Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Pr.122</b> Monitor output mode selection	No.22	-	Use prohibited (set the default initial value)		0001H	122	272	422
<b>Pr.123</b> Option function 1	No.23	*OP1	Amplifier EMG selection		0000H	123	273	423
			0 : Valid	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 0H				
			1 : Invalid	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 1H				
			Serial encoder cable selection		Use prohibited (set "0")			
<b>Pr.124</b> Option function 2	No.24	*OP2	Slight vibration suppression function selection		0000H	124	274	424
			0 : Invalid	<input type="checkbox"/> <input type="checkbox"/> 0H				
			1 : Valid	<input type="checkbox"/> <input type="checkbox"/> 1H				
			Motor-less operation selection					
			0 : Invalid	<input type="checkbox"/> 0 <input type="checkbox"/> <input type="checkbox"/> H				
			1 : Valid	<input type="checkbox"/> 1 <input type="checkbox"/> <input type="checkbox"/> H				

\* This parameter is made valid when the servo amplifier is powered OFF, then ON again after it has been transferred from the AD75 to the servo amplifier.

**Pr.123** Option function 1

Set the option function 1 (amplifier EMG selection).

- Amplifier EMG selection  
The external emergency stop signal EM1 can be made invalid.




Amplifier EMG selection  
0: Valid  
1: Invalid

**Pr.124** Option function 2

Set the option function 2 (slight vibration suppression function selection, motor-less operation selection).

- Slight vibration suppression function selection  
When "**Pr.108** Auto tuning" is set to "2: Invalid", the function to suppress vibration at a stop can be made valid.
- Motor-less operation selection  
When motor-less operation is valid, signals can be output or the status displayed without connection of the servomotor.



Slight vibration suppression function selection  
0: Invalid  
1: Valid  
Motor-less operation selection  
0: Invalid  
1: Valid

## (3) Servo extension parameters

Item	Servo amplifier side parameter		Setting value, setting range		Default value	Setting value buffer memory address		
	No.	Abbreviation	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Pr.127 Monitor output 1 offset	No.27	–	Use prohibited (set the default value)		0	127	277	427
Pr.128 Monitor output 2 offset	No.28	–	Use prohibited (set the default value)		0	128	278	428
Pr.130 Zero speed	No.30	ZSP	0 to 10000 (r/min)	0 to 10000 (r/min)	50	130	280	430
Pr.131 Error excessive alarm level	No.31	ERZ	1 to 1000 (kpulse)	1 to 1000 (kpulse)	80	131	281	431
Pr.132 Option function 5	No.32	OP5	PI-PID control switching		0	132	282	432
			0 : PI control is always valid	0				
			1 : Switched to PID control when value set to "PI-PID switching position droop" is reached or exceeded during position control	1				
			2 : PID control is always valid	2				
Pr.134 PI-PID switching position droop	No.34	VPI	0 to 50000 (pulse)	0 to 50000 (pulse)	0	134	284	434
Pr.136 Speed differential compensation	No.36	VDC	0 to 1000	0 to 1000	980	136	286	436

**Pr.130** Zero speed

Set the servomotor speed at which the motor speed is judged as zero.

**Pr.131** Error excessive alarm level

Set the range in which a droop pulse excess alarm will be output.

**Pr.132** Option function 5

Select the PI-PID control switching.

**Pr.134** PI-PID switching position droop

Set the position droop amount at which PI control is switched to PID control during position control.

**Pr.136** Speed differential compensation

Set the differential compensation value of the actual speed loop.

5.3 List of positioning data


Before explaining the positioning data setting items [Da.1] to [Da.9], the configuration of the positioning data will be shown below.


The positioning data stored in the AD75 buffer memory has the following type of configuration.

Axis 1	Positioning data No.				2280	2290	
	1	2	3	...			
Positioning identifier [Da.1] to [Da.4]	1300	1310	1320	...	2281	2291	
	[Da.9] M code	1301	1311	1321	...	2282	2292
	[Da.8] Dwell time	1302	1312	1322	...	2284 2285	2294 2295
	[Da.7] Command speed	1304 1305	1314 1315	1324 1325	...	2286 2287	2296 2297
	[Da.5] Positioning address/ movement amount	1306 1307	1316 1317	1326 1327	...	2288 2289	2298 2299
	[Da.6] Arc address	1308 1309	1318 1319	1328 1329	...		
					99	100 *	

- Up to 100 positioning data items can be set (stored) for each axis in the buffer memory address shown on the left. This data is controlled as positioning data No. 1 to 100 for each axis.
- One positioning data item is configured of the items shown in the bold box.

Axis 2	Positioning data No.				3280	3290	
	1	2	3	...			
Positioning identifier [Da.1] to [Da.4]	2300	2310	2320	...	3281	3291	
	[Da.9] M code	2301	2311	2321	...	3282	3292
	[Da.8] Dwell time	2302	2312	2322	...	3284 3285	3294 3295
	[Da.7] Command speed	2304 2305	2314 2315	2324 2325	...	3286 3287	3296 3297
	[Da.5] Positioning address/ movement amount	2306 2307	2316 2317	2326 2327	...	3288 3289	3298 3299
	[Da.6] Arc address	2308 2309	2318 2319	2328 2329	...		
					99	100 *	

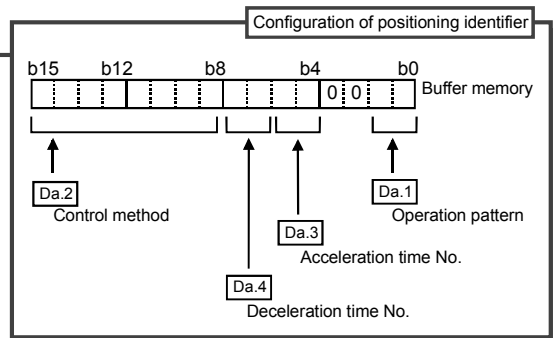

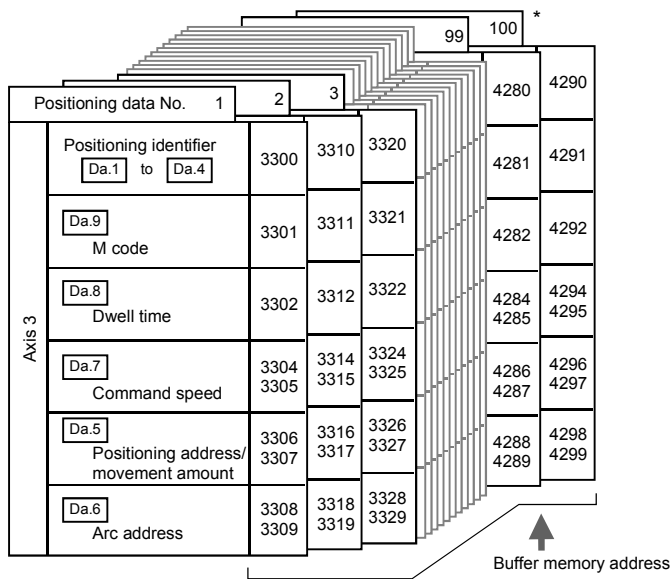

Da.

The positioning data setting items ( Da.1 to Da.9 ) are explained in the following section.  
 (The buffer memory addresses for the axis 1 to axis 3 "positioning data No. 1" are shown.)

**REMARK**


\*: Positioning data No. 101 to 600 cannot be set in the buffer memory.  
 The data set in positioning data No. 101 to 600 is directly set into the AD75 OS memory from a peripheral device using the AD75 software package.  
 (To set without using a peripheral device, transmission must be carried out using the block transmission memory.)

Item	Setting value		Default value	Setting value buffer memory address				
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3		
Positioning identifier	Da.1 Operation pattern	00 : Positioning complete	00		0000H	1300	2300	3300
		01 : Continuous positioning control	01					
		11 : Continuous path control	11					
	Da.2 Control method	ABS Linear 1 : 1-axis linear control (ABS)	01H					
		INC Linear 1 : 1-axis linear control (INC)	02H					
		Fixed-dimension feed 1 : 1-axis fixed-dimension feed control	03H					
		ABS Linear 2 : 2-axis linear interpolation control (ABS)	04H					
		INC Linear 2 : 2-axis linear interpolation control (INC)	05H					
		Fixed-dimension feed 2 : 2-axis fixed-dimension feed control	06H					
		ABS Circular interpolation : Circular interpolation control with auxiliary point designation (ABS)	07H					
		INC Circular interpolation : Circular interpolation control with auxiliary point designation (INC)	08H					
		ABS Circular right : Circular interpolation control with center point designation (ABS, CW)	09H					
		ABS Circular left : Circular interpolation control with center point designation (ABS, CCW)	0AH					
		INC Circular right : Circular interpolation control with center point designation (INC, CW)	0BH					
		INC Circular left : Circular interpolation control with center point designation (INC, CCW)	0CH					
		Forward run Speed limited : Speed control (forward run)	0DH					
		Reverse run Speed limited : Speed control (reverse run)	0EH					
		Forward run speed/position : Speed/position changeover control (forward run)	0FH					
		Reverse run speed/position : Speed/position changeover control (reverse run)	10H					
		Current value change : Current value change	11H					
		JUMP command : JUMP command	20H					
		Da.3 Acceleration time No.	0 : Pr.8 Acceleration time 0					
	1 : Pr.26 Acceleration time 1		01					
	2 : Pr.27 Acceleration time 2		10					
	3 : Pr.28 Acceleration time 3		11					
	Da.4 Deceleration time No.	0 : Pr.9 Deceleration time 0	00					
		1 : Pr.29 Deceleration time 1	01					
		2 : Pr.30 Deceleration time 2	10					
3 : Pr.31 Deceleration time 3		11						

**Da.1** Operation pattern

The operation pattern designates whether positioning of a certain data No. is to be ended with just that data, or whether the positioning for the next data No. is to be carried out in succession.

[Operation pattern]

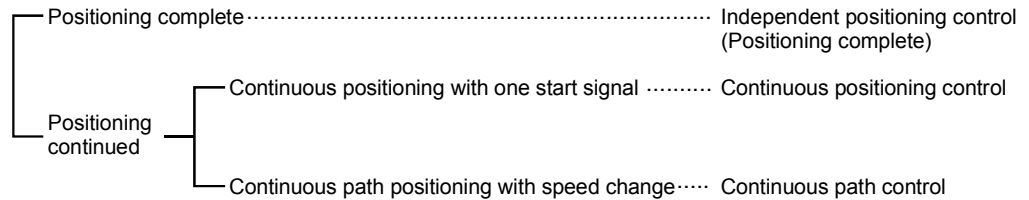

- 1) Positioning complete..... Set to execute positioning to the designated address, and then complete positioning.
- 2) Continuous positioning control ..... Positioning is carried out successively in order of data Nos. with one start signal. The operation stops once at each positioning data.
- 3) Continuous path control..... Positioning is carried out successively in order of data Nos. with one start signal. The operation does not stop at each positioning data.

**Da.2** Control method

Set the "control method" for carrying out positioning control.

- Note)
- When "JUMP command" is set for the control method, the "**Da.8** Dwell time" and "**Da.9** M code" setting details will differ.
  - Refer to "CHAPTER 9 MAIN POSITIONING CONTROL" for details on the control methods.
  - If "degree" is set for "**Pr.1** Unit setting", circular interpolation control cannot be carried out. (The "Control method setting error" (error code: 524) will occur when executed.)

**Da.3** Acceleration time No.

Set which of "acceleration time 0 to 3" to use for the acceleration time during positioning.

- 0 : Use the value set in "**Pr.8** Acceleration time 0".
- 1 : Use the value set in "**Pr.26** Acceleration time 1".
- 2 : Use the value set in "**Pr.27** Acceleration time 2".
- 3 : Use the value set in "**Pr.28** Acceleration time 3".

**Da.4** Deceleration time No.

Set which of "deceleration time 0 to 3" to use for the deceleration time during positioning.

- 0 : Use the value set in "**Pr.9** Deceleration time 0".
- 1 : Use the value set in "**Pr.29** Deceleration time 1".
- 2 : Use the value set in "**Pr.30** Deceleration time 2".
- 3 : Use the value set in "**Pr.31** Deceleration time 3".

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Da.5 Positioning address/movement amount	The setting value range differs according to the "Da.2 Control method". Here, the value within the following range of [Table 1] range is set. <div style="border: 1px solid black; padding: 5px; display: inline-block;">  [Table 1] on right page                 </div>		0	1306 1307	2306 2307	3306 3307


**Da.5** Positioning address/movement amount

Set the address to be used as the target value for positioning control. The setting value range differs according to the "Da.2 Control method". ((1) to (3))

There are restrictions for the absolute position detection system. Refer to section "12.6 Absolute position restoration function".

**(1) Absolute (ABS) system, Current value charge**

- The setting value (positioning address) for the ABS system and current value change is set with an absolute address (address from zero point).

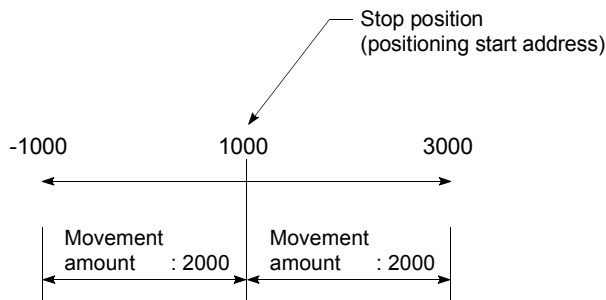


**(2) Incremental (INC) system, fixed-dimension feed 1, fixed-dimension feed 2**

- The setting value (movement amount) for the INC system is set as a movement amount with sign.

When movement amount is positive: Moves in the positive direction (address increment direction)

When movement amount is negative: Moves in the negative direction (address decrement direction)

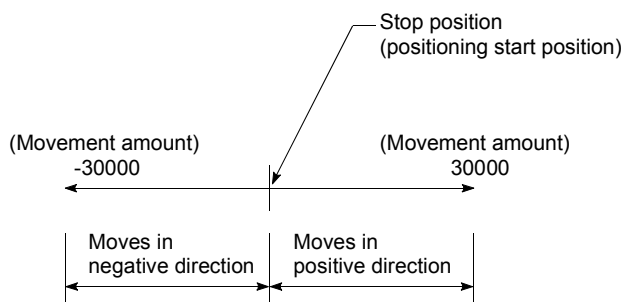



[Table 1]


■ When "Pr.1 Unit setting" is "mm"

Da.2 setting value	Value set with peripheral device (μm)	Value set with sequence program *1 (×10 <sup>-1</sup> μm)
ABS Linear 1 : 01H ABS Linear 2 : 04H Current value change : 11H	◇ Set the address -214748364.8 to 214748364.7	◇ Set the address -2147483648 to 2147483647
INC Linear 1 : 02H INC Linear 2 : 05H Fixed-dimension feed 1 : 03H Fixed dimension feed 2 : 06H	◇ Set the movement amount -214748364.8 to 214748364.7	◇ Set the movement amount -2147483648 to 2147483647
Forward run speed/position : 0FH Reverse run speed/position : 10H	◇ Set the movement amount 0 to 214748364.7	◇ Set the movement amount 0 to 2147483647
Forward run Speed control : 0DH Reverse run Speed control : 0EH JUMP command : 20H	(Setting not required)	(Setting not required)
ABS Circular interpolation : 07H ABS Circular right : 09H ABS Circular left : 0AH	◇ Set the address -214748364.8 to 214748364.7	◇ Set the address -2147483648 to 2147483647
INC Circular interpolation : 08H INC Circular right : 0BH INC Circular left : 0CH	◇ Set the movement amount -214748364.8 to 214748364.7	◇ Set the movement amount -2147483648 to 2147483647

\*1 Decimal points cannot be used in the sequence program, so input the setting value as an integer.  
(The value will be converted into the specified value within the system.)

(3) For speed/position changeover control

- Set the movement amount from when the control changes from the speed control to the position control.

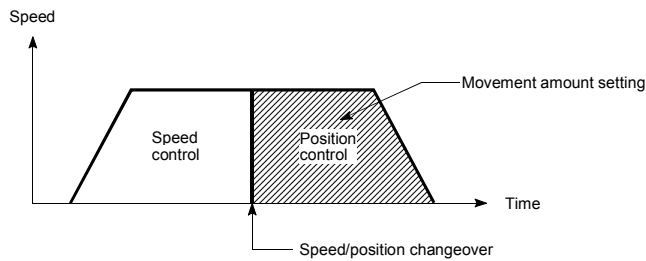

■ When "Pr.1 Unit setting" is "degree"

Da.2 setting value	Value set with peripheral device (degree)	Value set with sequence program *1 ( $\times 10^{-5}$ degree)
ABS Linear 1 : 01H ABS Linear 2 : 04H Current value change : 11H	◇ Set the address 0 to 359.99999	◇ Set the address 0 to 35999999
INC Linear 1 : 02H INC Linear 2 : 05H Fixed-dimension feed 1 : 03H Fixed-dimension feed 2 : 06H	◇ Set the movement amount -21474.83648 to 21474.83647	◇ Set the movement amount -2147483648 to 2147483647
Forward run speed/position : 0FH Reverse run speed/position : 10H	◇ Set the movement amount 0 to 21474.83647	◇ Set the movement amount 0 to 2147483647
Forward run Speed control : 0DH Reverse run Speed control : 0EH JUMP command : 12H	(Setting not required)	(Setting not required)
ABS Circular interpolation : 07H ABS Circular right : 09H ABS Circular left : 0AH INC Circular interpolation : 08H INC Circular right : 0BH INC Circular left : 0CH	Circular interpolation control is not possible	

■ When "Pr.1 Unit setting" is "pulse"

Da.2 setting value	Value set with peripheral device (pulse)	Value set with sequence program *1 (pulse)
ABS Linear 1 : 01H ABS Linear 2 : 04H Current value change : 11H	◇ Set the address -2147483648 to 2147483647	◇ Set the address -2147483648 to 2147483647
INC Linear 1 : 02H INC Linear 2 : 05H Fixed-dimension feed 1 : 03H Fixed-dimension feed 2 : 06H	◇ Set the movement amount -2147483648 to 2147483647	◇ Set the movement amount -2147483648 to 2147483647
Forward run speed/position : 0FH Reverse run speed/position : 10H	◇ Set the movement amount 0 to 2147483647	◇ Set the movement amount 0 to 2147483647
Forward run Speed control : 0DH Reverse run Speed control : 0EH JUMP command : 20H	(Setting not required)	(Setting not required)
ABS Circular interpolation : 07H ABS Circular right : 09H ABS Circular left : 0AH	◇ Set the address -2147483648 to 2147483647	◇ Set the address -2147483648 to 2147483647
INC Circular interpolation : 08H INC Circular right : 0BH INC Circular left : 0CH	◇ Set the movement amount -2147483648 to 2147483647	◇ Set the movement amount -2147483648 to 2147483647

■ When "Pr.1 Unit setting" is "inch"

Da.2 setting value	Value set with peripheral device (inch)	Value set with sequence program *1 ( $\times 10^{-5}$ inch)
ABS Linear 1 : 01H ABS Linear 2 : 04H Current value change : 11H	◇ Set the address -21474.83648 to 21474.83647	◇ Set the address -2147483648 to 2147483647
INC Linear 1 : 02H INC Linear 2 : 05H Fixed-dimension feed 1 : 03H Fixed-dimension feed 2 : 06H	◇ Set the movement amount -21474.83648 to 21474.83647	◇ Set the movement amount -2147483648 to 2147483647
Forward run speed/position : 0FH Reverse run speed/position : 10H	◇ Set the movement amount 0 to 21474.83647	◇ Set the movement amount 0 to 2147483647
Forward run Speed control : 0DH Reverse run Speed control : 0EH JUMP command : 20H	(Setting not required)	(Setting not required)
ABS Circular interpolation : 07H ABS Circular right : 09H ABS Circular left : 0AH	◇ Set the address -21474.83648 to 21474.83647	◇ Set the address -2147483648 to 2147483647
INC Circular interpolation : 08H INC Circular right : 0BH INC Circular left : 0CH	◇ Set the movement amount -21474.83648 to 21474.83647	◇ Set the movement amount -2147483648 to 2147483647


\*1 Decimal points cannot be used in the sequence program, so input the setting value as an integer.  
(The value will be converted into the specified value within the system.)

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Da.6 Arc address	The setting value range differs according to the "Da.2 Control method". Here, the value within the [Table 1] range is set.		0	1308 1309	2308 2309	3308 3309


Da.6 Arc address

The arc address is data required only when carrying out circular interpolation control.

- (1) When carrying out circular interpolation with auxiliary point designation, set the auxiliary point (passing point) address as the arc address.
- (2) When carrying out circular interpolation with center point designation, set the center point address of the arc as the arc address.

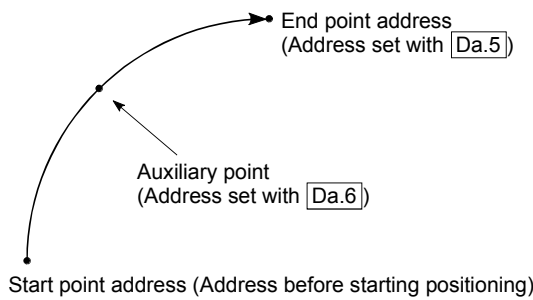

<(1) Circular interpolation with auxiliary point designation>

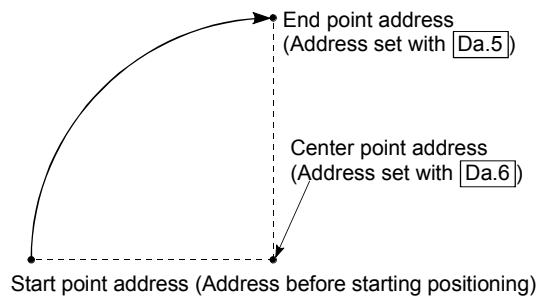

<(2) Circular interpolation with center point designation>

When not carrying out circular interpolation control, the value set in "Da.6 Arc address" will be invalid.

[Table 1]

■ When "Pr.1 Unit setting" is "mm"

Da.2 setting value	Value set with peripheral device ( $\mu\text{m}$ )	Value set with sequence program *1 ( $\times 10^{-1}\mu\text{m}$ )
ABS Circular interpolation : 07H ABS Circular right : 09H ABS Circular left : 0AH	◇ Set the address -214748364.8 to 214748364.7	◇ Set the address -2147483648 to 2147483647
INC Circular interpolation : 08H INC Circular right : 0BH INC Circular left : 0CH	◇ Set the movement amount -214748364.8 to 214748364.7	◇ Set the movement amount -2147483648 to 2147483647
ABS Linear 1 : 01H ABS Linear 2 : 04H INC Linear 1 : 02H INC Linear 2 : 05H Fixed-dimension feed 1 : 03H Fixed-dimension feed 2 : 06H Forward run Speed control : 0DH Reverse run Speed control : 0EH Forward run speed/position : 0FH Reverse run speed/position : 10H JUMP command : 20H Current value change : 11H	(Setting not required)	(Setting not required)

\*1 Decimal points cannot be used in the sequence program, so input the setting value as an integer.  
(The value will be converted into the specified value within the system.)

■ When "Pr.1 Unit setting" is "degree"

Da.2 setting value	Value set with peripheral device (degree)	Value set with sequence program *1 ( $\times 10^{-5}$ degree)
ABS Circular interpolation : 07H ABS Circular right : 09H ABS Circular left : 0AH	Circular interpolation control is not possible (If set, an error occurs.)	
INC Circular interpolation : 08H INC Circular right : 0BH INC Circular left : 0CH		
ABS Linear 1 : 01H ABS Linear 2 : 04H INC Linear 1 : 02H INC Linear 2 : 05H Fixed-dimension feed 1 : 03H Fixed-dimension feed 2 : 06H Forward run Speed control : 0DH Reverse run Speed control : 0EH Forward run speed/position : 0FH Reverse run speed/position : 10H JUMP command : 20H Current value change : 11H		

■ When "Pr.1 Unit setting" is "pulse"


Da.2 setting value	Value set with peripheral device (pulse)	Value set with sequence program *1 (pulse)
ABS Circular interpolation : 07H ABS Circular right : 09H ABS Circular left : 0AH	◇ Set the address -2147483648 to 2147483647	◇ Set the address -2147483648 to 2147483647
INC Circular interpolation : 08H INC Circular right : 0BH INC Circular left : 0CH	◇ Set the movement amount -2147483648 to 2147483647	◇ Set the movement amount -2147483648 to 2147483647
ABS Linear 1 : 01H ABS Linear 2 : 04H INC Linear 1 : 02H INC Linear 2 : 05H Fixed-dimension feed 1 : 03H Fixed-dimension feed 2 : 06H Forward run Speed control : 0DH Reverse run Speed control : 0EH Forward run speed/position : 0FH Reverse run speed/position : 10H JUMP command : 20H Current value change : 11H	(Setting not required)	(Setting not required)

\*1 Decimal points cannot be used in the sequence program, so input the setting value as an integer.  
(The value will be converted into the specified value within the system.)

■ When "Pr.1 Unit setting" is "inch"

Da.2 setting value	Value set with peripheral device (inch)	Value set with sequence program *1 ( $\times 10^{-5}$ inch)
ABS Circular interpolation : 07H ABS Circular right : 09H ABS Circular left : 0AH	◇ Set the address -21474.83648 to 21474.83647	◇ Set the address -2147483648 to 2147483647
INC Circular interpolation : 08H INC Circular right : 0BH INC Circular left : 0CH	◇ Set the movement amount -21474.83648 to 21474.83647	◇ Set the movement amount -2147483648 to 2147483647
ABS Linear 1 : 01H ABS Linear 2 : 04H INC Linear 1 : 02H INC Linear 2 : 05H Fixed-dimension feed 1 : 03H Fixed-dimension feed 2 : 06H Forward run Speed control : 0DH Reverse run Speed control : 0EH Forward run speed/position : 0FH Reverse run speed/position : 10H JUMP command : 20H Current value range : 11H	(Setting not required)	(Setting not required)

\*1 Decimal points cannot be used in the sequence program, so input the setting value as an integer.  
(The value will be converted into the specified value within the system.)

Item	Setting value, setting range		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
Da.7 Command speed	The setting value range differs depending on the " Pr.1 Unit setting". Here, the value within the [Table 1] range is set.		0	1304 1305	2304 2305	3304 3305
						
	-1: Current speed (Speed set for previous positioning data No.)	-1				
Da.8 Dwell time/ JUMP destination positioning data No.	Dwell time	The setting value range differs according to the " Da.2 Control method". Here, the value within the [Table 2] range is set.	0	1302	2302	3302
	JUMP destination positioning data No.					
Da.9 M code	M code	The setting value range differs according to the " Da.2 Control method". Here, the value within the [Table 3] range is set.	0	1301	2301	3301
	Condition data No.					

**Da.7 Command speed**

Set the command speed for positioning.

- (1) If the set command speed exceeds the speed limit value, positioning will be carried out at the speed limit value.
- (2) If "-1" is set for the command speed, the current speed (speed set for previous positioning data No.) will be used for positioning control. Use the current speed for uniform speed control, etc. If "-1" is set for continuing positioning data, and the speed is changed, the following speed will also change.

(Note that when starting positioning, if the "-1" speed is set for the positioning data that carries out positioning control first, the error "no command speed" (error code:503) will occur, and the positioning will not start. Refer to section "14.2 List of errors" for details on the errors.)

**Da.9 M code (condition data No.)**

Set an "M code" or "condition data No." corresponding to the " Da.2 Control method".

- When a method other than "JUMP command" is set for " Da.2 Control method"
  - .... Set an "M code". If an "M code" is not to be output, set "0" (default value).
- When "JUMP command" is set for " Da.2 Control method"
  - .... Set the "condition data No."\* for JUMP

- 0 : Unconditionally JUMP to the positioning data set in Da.8 .
- 1 to 10 : JUMP according to the condition data No. 1 to No. 10.

\* The condition data sets the conditions for executing the JUMP command. (The JUMP is established when the set conditions are satisfied.)



[Table 1]

Pr.1 setting value	Value set with peripheral device (unit)	Value set with sequence program (unit)
0 : mm	0.01 to 6000000.00 (mm/min)	1 to 600000000 ( $\times 10^{-2}$ mm/min)
1 : inch	0.001 to 600000.000 (inch/min)	1 to 600000000 ( $\times 10^{-3}$ inch/min)
2 : degree	0.001 to 600000.000 (degree/min)	1 to 600000000 ( $\times 10^{-3}$ degree/min)
3 : pulse	1 to 1000000 (pulse/s)	1 to 1000000 (pulse/s)

[Table 2]

Da.2 setting value	Setting item	Value set with peripheral device	Value set with sequence program
JUMP command : 20 <sub>H</sub>	Positioning data No.	1 to 600	1 to 600
Other than JUMP command * : 01 <sub>H</sub> to 10 <sub>H</sub>	Dwell time	0 to 65535 (ms)	0 to 65535 (ms)

[Table 3]

Da.2 setting value	Setting item	Value set with peripheral device	Value set with sequence program
JUMP command : 20 <sub>H</sub>	Condition data No.	0 to 10	0 to 10
Other than JUMP command * : 01 <sub>H</sub> to 10 <sub>H</sub>	M code	0 to 32767	0 to 32767


\* Setting is not required at the actual value modification(11<sub>H</sub>).

**Da.8** Dwell time/JUMP designation positioning data No.

Set the "dwell time" or "positioning data No." corresponding to the "**Da.2** Control method".

- When a method other than "JUMP command" is set for "**Da.2** Control method" ..... Set the "dwell time".
- When "JUMP command" is set for "**Da.2** Control method" ..... Set the "positioning data No." for the JUMP destination.


When the "dwell time" is set, the setting details of the "dwell time" will be as follows according to "**Da.1** Operation pattern".

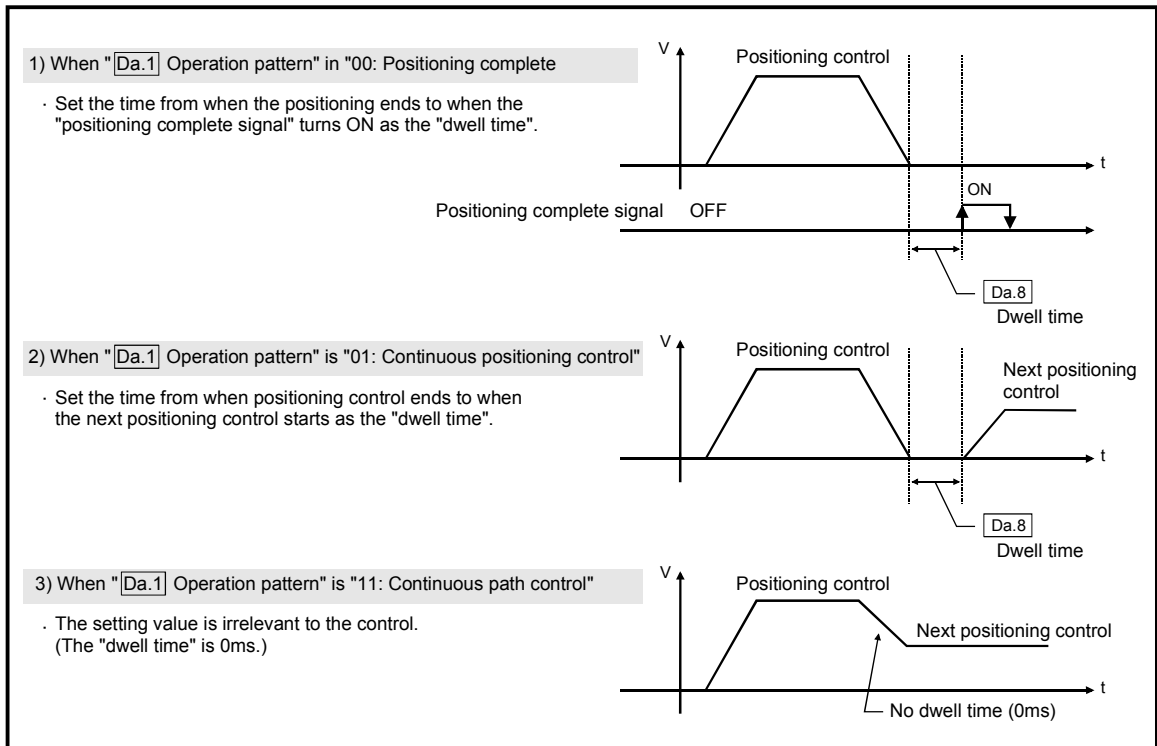


5.4 List of start block data


Before explaining the start block data setting items [Da.1] to [Da.13], the configuration of the start block data will be shown below.

The start block data stored in the AD75 buffer memory has the following type of configuration.

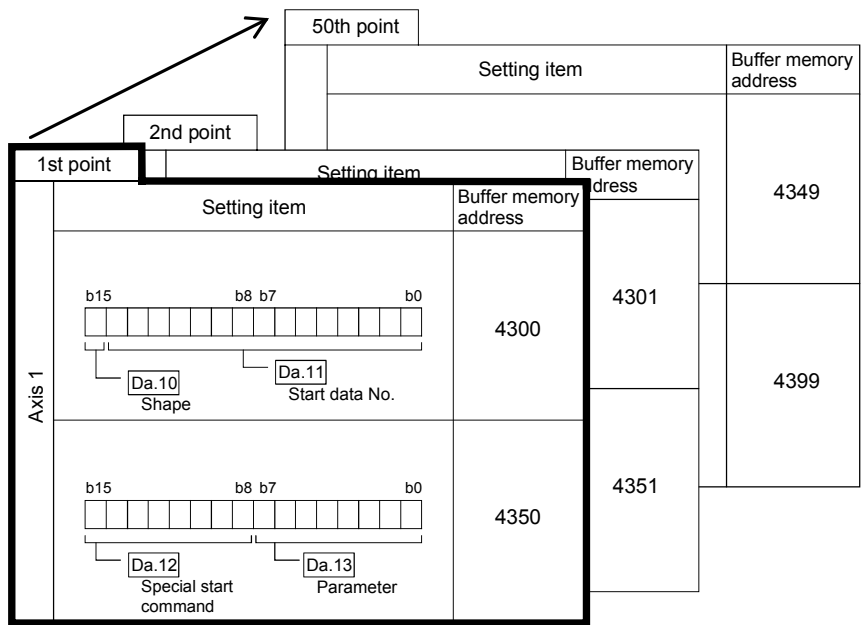

- Up to 50 start block data points can be set (stored) for each axis in the buffer memory address shown on the left.
- One start block data item is configured of the items shown in the bold box.

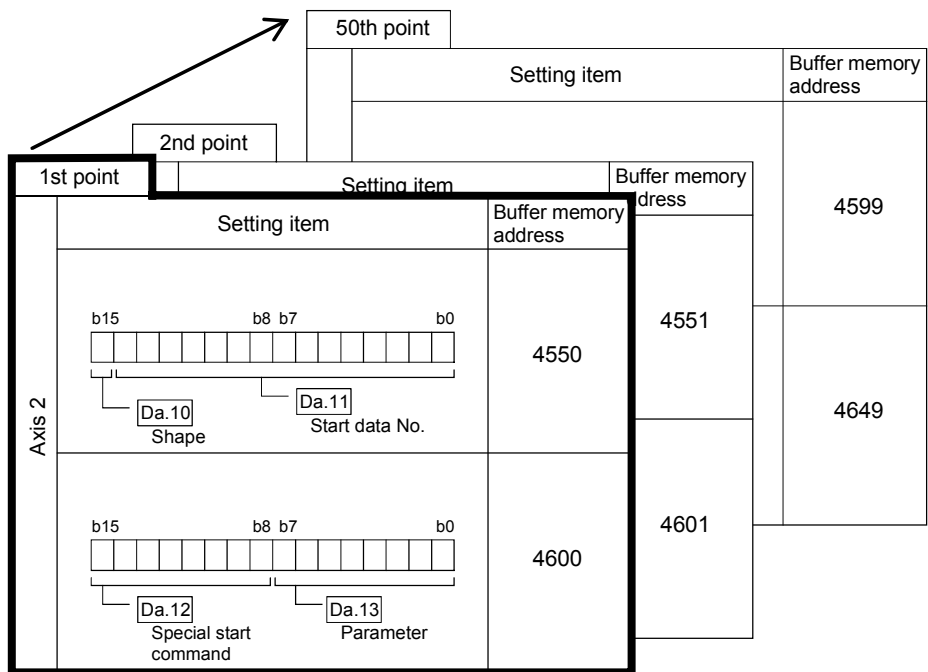

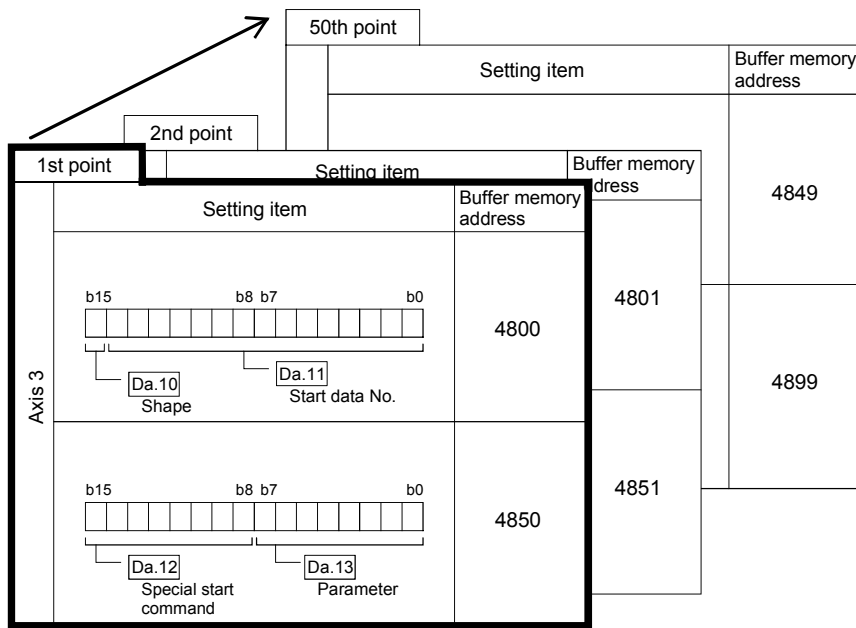

The start block data setting items (Da.10 to Da.13) are explained in the following section.

(The buffer memory addresses for the axis 1 to axis 3 "1st point start block data (block No. 7000)" are shown.)

**REMARK**

When carrying out advanced positioning control using the "positioning start information", set a number between "7000 and 7010" in "[Cd.11] Positioning start No.", and set the "start block data" for the nth point block between "1 and 50" in the "[Cd.31] Positioning starting point No."

This number between "7000 and 7010" is called the "block No."

With the AD75, the "start block data (50 points)" and "condition data (10 items)" can be set for each "block No."

\* Data corresponding to block No. 7001 to 7010 cannot be set in the buffer memory. The data corresponding to block No. 7001 to 7010 is directly set into the AD75 OS memory from a peripheral device using the AD75 software package.

Block No.	Axis	Start block data	Condition	Buffer memory	AD75 software package
7000	Axis 1	Start block data (1 to 50)	Condition data (1 to 10)	○	○
	Axis 2	Start block data (1 to 50)	Condition data (1 to 10)		
	Axis 3	Start block data (1 to 50)	Condition data (1 to 10)		
7001 to 7010	Axis 1	Start block data (1 to 50)	Condition data (1 to 10)	×	○
	Axis 2	Start block data (1 to 50)	Condition data (1 to 10)		
	Axis 3	Start block data (1 to 50)	Condition data (1 to 10)		

○ : Can be set, × : Cannot be set

Item	Setting value		Default value	Setting value buffer memory address		
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3
<b>Da.10</b> Shape	0 : End	0	0000H	4300	4550	4800
	1 : Continue	1				
<b>Da.11</b> Start data No.	Positioning data No.: 1 to 600 (01H to 258H)	01H to 258H				
<b>Da.12</b> Special start command	0 : Normal start	00H	0000H	4350	4600	4850
	1 : Condition start	01H				
	2 : Wait start	02H				
	3 : Simultaneous start	03H				
	4 : Stop	04H				
	5 : FOR loop	05H				
	6 : FOR condition	06H				
	7 : NEXT start	07H				
<b>Da.13</b> Parameter	Condition data No.: 1 to 10 (01H to 0AH) No. of repetitions: 0 to 255 (00H to FFH)	00H to FFH				

**Da.10** Shape

Set whether to carry out only the local "start block data" and then end control, or to execute the "start block data" set in the next point.

Setting value	Setting details
0 : End	Execute the designated point's "start block data", and then complete the control.
1 : Continue	Execute the designated point's "start block data", and after completing control, execute the next point's "start block data".

**Da.11** Start data No.

Set the "positioning data No." designated with the "start block data".

**Da.12** Special start command

Set the "special start command" for using "advanced positioning control". (Set how to start the positioning data set in [Da.11](#).)

Setting value	Setting details
00H : Block start (Normal start)	Execute the random block positioning data in the set order with one start.
01H : Condition start	Carry out the condition judgment set in "condition data" for the designated positioning data, and when the conditions are established, execute the "start block data". If not established, ignore that "start block data", and then execute the next point's "start block data".
02H : Wait start	Carry out the condition judgment set in "condition data" for the designated positioning data, and when the conditions are established, execute the "start block data". If not established, stop the control (wait) until the conditions are established.
03H : Simultaneous start	Simultaneous execute (output position/speed commands at same timing) the positioning data with the No. designated for the axis designated in the "condition data".
04H : Stop	Stop the positioning operation.
05H : Repeated start (FOR loop)	Repeat the program from the start block data with the "FOR loop" to the start block data with "NEXT" for the designated No. of times.
06H : Repeated start (FOR condition)	Repeat the program from the start block data with the "FOR condition" to the start block data with "NEXT" until the conditions set in the "condition data" are established.
07H : NEXT start	Set the end of the repetition when "05H: Repetition start (FOR loop)" or "06H: Repetition start (FOR condition)" is set.

Refer to "CHAPTER 10 ADVANCED POSITIONING CONTROL" for details on the control.

**Da.13** Parameter

Set the value as required for "[Da.12](#) Special start command".

<a href="#">Da.12</a> Special start command	Setting value	Setting details
Block start (Normal start)	–	Not used. (There is no need to set.)
Condition start	1 to 10	Set the condition data No. (No. of "condition data" set to perform condition judgment) (For details of the condition data, refer to Section 5.5.)
Wait start		
Simultaneous start		
Stop	–	Not used. (There is no need to set.)
Repeated start (FOR loop)	0 to 255	Set the No. of repetitions.
Repeated start (FOR condition)	1 to 10	Set the condition data No. (No. of "condition data" set to perform condition judgment) (For details of the condition data, refer to Section 5.5.)

5.5 List of condition data


Before explaining the condition data setting items [Da.14] to [Da.18], the configuration of the condition data will be shown below.

The condition data stored in the AD75 buffer memory has the following type of configuration.

		No.10	Setting item	Buffer memory address
Axis 1	No.1	No.2	Setting item	4490
			Setting item	4410
			Setting item	4401
			Setting item	4402
			Setting item	4403
			Setting item	4404
			Setting item	4405
			Setting item	4406
			Setting item	4407
			Setting item	4408
			Setting item	4409
			Setting item	4411
			Setting item	4412
			Setting item	4413
			Setting item	4414
		Setting item	4415	
		Setting item	4416	
		Setting item	4417	
		Setting item	4418	
		Setting item	4419	
		Setting item	4491	
		Setting item	4492	
		Setting item	4493	
		Setting item	4494	
		Setting item	4495	
		Setting item	4496	
		Setting item	4497	
		Setting item	4498	
		Setting item	4499	

- Up to 10 block start data points can be set (stored) for each block No. in the buffer memory addresses shown on the left.
- One condition data item is configured of the items shown in the bold box.

		No.10	Setting item	Buffer memory address
Axis 2	No.1	No.2	Setting item	4740
			Setting item	4660
			Setting item	4650
			Setting item	4651
			Setting item	4652
			Setting item	4653
			Setting item	4654
			Setting item	4655
			Setting item	4656
			Setting item	4657
			Setting item	4658
			Setting item	4659
			Setting item	4661
			Setting item	4662
			Setting item	4663
		Setting item	4664	
		Setting item	4665	
		Setting item	4666	
		Setting item	4667	
		Setting item	4668	
		Setting item	4669	
		Setting item	4741	
		Setting item	4742	
		Setting item	4743	
		Setting item	4744	
		Setting item	4745	
		Setting item	4746	
		Setting item	4747	
		Setting item	4748	
		Setting item	4749	

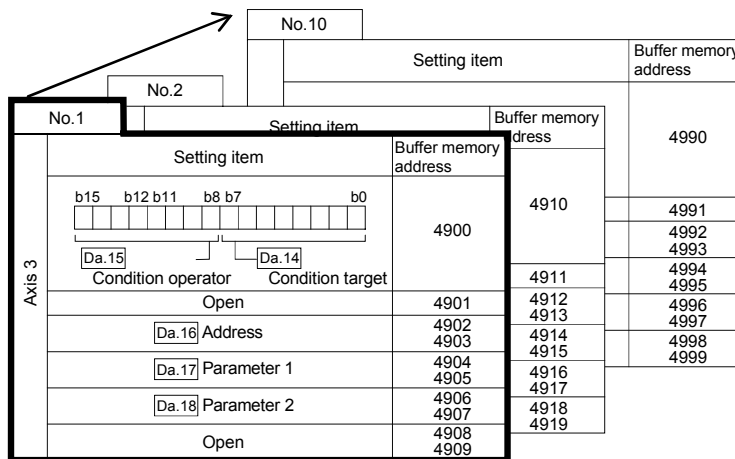

The condition data setting items (Da.14 to Da.18) are explained in the following section.  
 (The buffer memory addresses for the axis 1 to axis 3 "condition data No. 1 (block No. 7000)" are shown.)

**REMARK**

When carrying out advanced positioning control using the "positioning start information", set a number between "7000 and 7010" in "Cd.11 Positioning start No.", and set the "start block data" for the nth point block between "1 and 50" in the "Cd.31 Positioning starting point No."

This number between "7000 and 7010" is called the "block No."

With the AD75, the "start block data (50 points)" and "condition data (10 items)" can be set for each "block No."

\* Data corresponding to block No. 7001 to 7010 cannot be set in the buffer memory. The data corresponding to block No. 7001 to 7010 is directly set into the AD75 OS memory from a peripheral device using the AD75 software package.

Block No.	Axis	Start block data	Condition	Buffer memory	AD75 software package
7000	Axis 1	Start block data (1 to 50)	Condition data (1 to 10)	○	○
	Axis 2	Start block data (1 to 50)	Condition data (1 to 10)		
	Axis 3	Start block data (1 to 50)	Condition data (1 to 10)		
7001 to 7010	Axis 1	Start block data (1 to 50)	Condition data (1 to 10)	×	○
	Axis 2	Start block data (1 to 50)	Condition data (1 to 10)		
	Axis 3	Start block data (1 to 50)	Condition data (1 to 10)		

○ : Can be set, × : Cannot be set



Item	Setting value		Default value	Setting value buffer memory address			
	Value set with peripheral device	Value set with sequence program		Axis 1	Axis 2	Axis 3	
Condition identifier	Da.14 Condition target	01 : Device X	01H	0000H	4400	4650	4900
		02 : Device Y	02H				
		03 : Buffer memory (1-word)	03H				
		04 : Buffer memory (2-word)	04H				
		05 : Positioning data No.	05H				
	Da.15 Condition operator	01 : **=P1	01H				
		02 : **≠P1	02H				
		03 : **≤P1	03H				
		04 : **>P1	04H				
		05 : P1≤**≤P2	05H				
		06 : **≤P1, P2≤**	06H				
		07 : DEV=ON	07H				
		08 : DEV=OFF	08H				
		09 : Axis 1 designation	09H				
0A : Axis 2 designation	0AH						
0B : Axis 1 and axis 2 designation	0BH						
0C : Axis 3 designation	0CH						
0D : Axis 1 and axis 3 designation	0DH						
0E : Axis 2 and axis 3 designation	0EH						

Da.16	Address	Buffer memory address	Example) 	0000H	4402 4403	4652 4653	4902 4903
Da.17	Parameter 1	Value	Example) 	0000H	4404 4405	4654 4655	4904 4905
Da.18	Parameter 2	Value	Example) 	0000H	4406 4407	4656 4657	4906 4907

**Da.14** Condition target

Set the condition target as required for each control.

Setting value	Setting details
01H : Device X 02H : Device Y	Set the input/output signal ON/OFF as the conditions.
03H : Buffer memory (1-word) 04H : Buffer memory (2-word)	Set the value stored in the buffer memory as the condition. 03H: The target buffer memory is "1-word (16 bits)" 04H: The target buffer memory is "2-word (32 bits)"
05H : Positioning data No.	Select only for "simultaneous start".

**Da.15** Condition operator

Set the condition operator as required for the "**Da.14** Condition target".

<b>Da.14</b> Condition target	Setting value	Setting details
01H : Device X 02H : Device Y	07H : DEV=ON 08H : DEV=OFF	When the input/output signal ON/OFF is set as the condition, set "ON" or "OFF".
03H : Buffer memory (1-word) 04H : Buffer memory (2-word)	01H : **=P1 ↓ 06H : **≤P1, P2≤**	Set how to judge the conditions for the value (**) target stored in the buffer memory.
05H : Positioning data No.	09H : Axis 1 designation ↓ 0EH : Axis 2 and axis 3 designation	Set the axis to start simultaneously when "simultaneous start" is selected.

**Da.16** Address

Set the address as required for the "**Da.14** Condition target".

<b>Da.14</b> Condition target	Setting value	Setting details
01H : Device X 02H : Device Y	–	Not used. (There is no need to set.)
03H : Buffer memory (1-word) 04H : Buffer memory (2-word)	Value (Buffer memory address)	Set the target "buffer memory address". (For 2 word, set the low-order buffer memory address.)
05H : Positioning data No.	–	Not used. (There is no need to set.)

**Da.17** Parameter 1Set the parameters as required for the "**Da.15** Condition operator".

<b>Da.15</b> Condition operator	Setting value	Setting details
01H : **=P1	Value	Set the "P1" value.
↓		
06H : **≤P1, P2≤**	Value (Bit No.)	Set the device's bit No. X : 0H to FH, Y : 10H to 1DH
07H : DEV=ON 08H : DEV=OFF		
09H : Axis 1 designation	Value (Positioning data No.)	Set the positioning data No. for starting axis 1 and axis 2. Low-order 16-bit: Axis 1 positioning data No. 1 to 600 (01H to 258H) High-order 16-bit: Axis 2 positioning data No. 1 to 600 (01H to 258H)
↓		
0EH : Axis 2 and axis 3 designation		



**Da.18** Parameter 2Set the parameters as required for the "**Da.15** Condition operator".

<b>Da.15</b> Condition operator	Setting value	Setting details
01H : **=P1	-	Not used. (There is no need to set.)
↓		
04H : **≥P1	Value	Set the "P2" value.
05H : P1≤**≤ P2		
06H : **≤P1, P2≤**	-	Not used. (There is no need to set.)
07H : DEV=ON		
08H : DEV=OFF		
09H : Axis 1 designation		
0AH : Axis 2 designation		
0BH : Axis 1 and axis 2 designation		
0CH : Axis 3 designation	Value (Positioning data No.)	Set the positioning data No. for starting axis 3. Low-order 16-bit: Axis 3 positioning data No. 1 to 600 (01H to 258H) High-order 16-bit: No setting
0DH : Axis 1 and axis 3 designation		
0EH : Axis 2 and axis 3 designation		


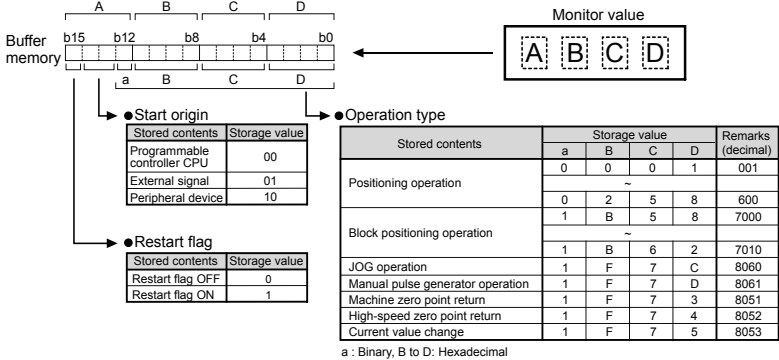
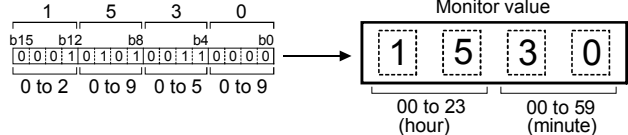
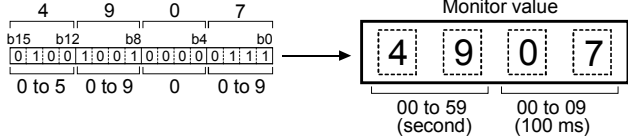
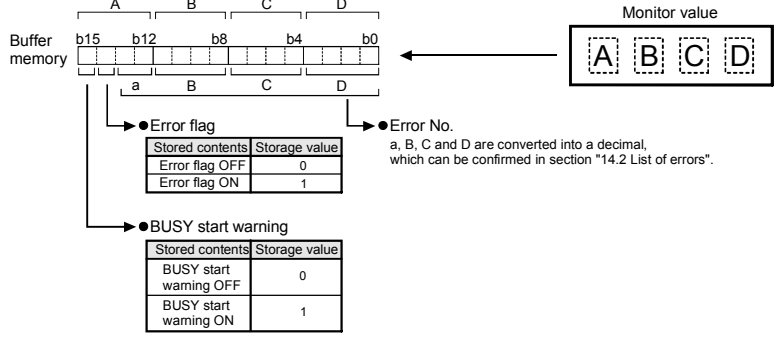

## 5.6 List of monitor data

## 5.6.1 System monitor data

Storage item	Storage details
Md.1 In test mode flag	Whether the mode is the test mode from the peripheral device or not is stored. <ul style="list-style-type: none"> <li>• When not in test mode : OFF</li> <li>• When in test mode : ON</li> </ul>
Md.2 Module name	The AD75 module name is stored.
Md.3 OS type	The AD75 OS type is stored. (Stored with an 8-character ASCII code.)
Md.4 OS version	The AD75 OS version is stored. (Stored with a 4-character ASCII code.)
Md.5 Clock data (hour: minute)	The software clock data created by the system in the AD75 is stored. <ul style="list-style-type: none"> <li>• This is used to record the history occurrence time.</li> </ul> Note) To utilize the clock data, the correct time must be set from the programmable controller CPU with Cd.1 to Cd.3. If this setting is not made, the clock data will start counting from "00 hours 00 minutes" when the AD75 power is turned ON.
Md.6 Clock data (second: 100 ms)	The software clock data created by the system in the AD75 is stored. <ul style="list-style-type: none"> <li>• This is used to record the history occurrence time.</li> </ul> Note) To utilize the clock data, the correct time must be set from the programmable controller CPU with Cd.1 to Cd.3. If this setting is not made, the clock data will start counting from "00 seconds 00 ms" when the AD75 power is turned ON.


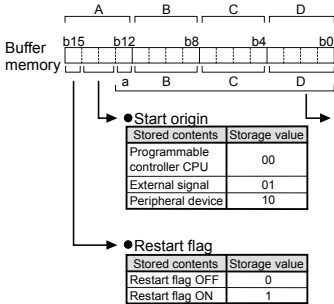

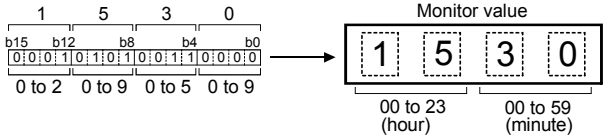

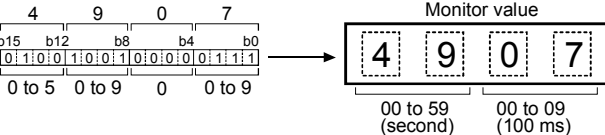

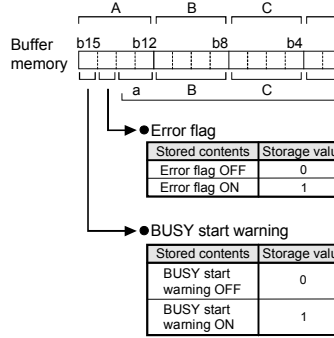


Reading the monitor value	Default value	Storage buffer memory address (common for axis 1 to axis 3)																																												
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value </p> <p>● Storage value 0: Not in test mode 1: In test mode</p>	0	450																																												
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value </p> <p>● Storage value 0: A1SD75M1/AD75M1 1: A1SD75M2/AD75M2 2: A1SD75M3/AD75M3</p>	— (Corresponding name)	451																																												
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Example) When name is "AD75" and OS type is "S000".</p> <p>Monitor value</p> <table border="1" data-bbox="582 768 807 1115"> <tr> <td>452</td> <td>3</td> <td>7</td> <td>3</td> <td>5</td> <td rowspan="2">Name → AD75</td> </tr> <tr> <td></td> <td>7</td> <td></td> <td>5</td> <td></td> </tr> <tr> <td>453</td> <td>4</td> <td>1</td> <td>4</td> <td>4</td> <td rowspan="2">A D</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>454</td> <td>3</td> <td>0</td> <td>3</td> <td>0</td> <td rowspan="2">OS type → S000</td> </tr> <tr> <td></td> <td>0</td> <td></td> <td>0</td> <td></td> </tr> <tr> <td>455</td> <td>5</td> <td>3</td> <td>3</td> <td>0</td> <td rowspan="2">S 0</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table> <p>(Converted with ASCII code)</p>	452	3	7	3	5	Name → AD75		7		5		453	4	1	4	4	A D						454	3	0	3	0	OS type → S000		0		0		455	5	3	3	0	S 0						— (Corresponding OS name)	452 453 454 455
452	3	7	3	5	Name → AD75																																									
	7		5																																											
453	4	1	4	4	A D																																									
454	3	0	3	0	OS type → S000																																									
	0		0																																											
455	5	3	3	0	S 0																																									
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Example) When OS version is "V00M".</p> <p>Monitor value</p> <table border="1" data-bbox="456 1261 635 1435"> <tr> <td>456</td> <td>3</td> <td>0</td> <td>4</td> <td>D</td> <td rowspan="2">OS version → V00M</td> </tr> <tr> <td></td> <td>0</td> <td></td> <td>M</td> <td></td> </tr> <tr> <td>457</td> <td>5</td> <td>6</td> <td>3</td> <td>0</td> <td rowspan="2">V 0</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table> <p>(Converted with ASCII code)</p>	456	3	0	4	D	OS version → V00M		0		M		457	5	6	3	0	V 0						— (Corresponding OS version)	456 457																						
456	3	0	4	D	OS version → V00M																																									
	0		M																																											
457	5	6	3	0	V 0																																									
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p> <table border="1" data-bbox="245 1570 544 1675"> <tr> <td>1</td> <td>5</td> <td>3</td> <td>0</td> </tr> <tr> <td>b15</td> <td>b12</td> <td>b8</td> <td>b4</td> </tr> <tr> <td>0:0:0:1</td> <td>0:1:0:1</td> <td>1:0:0:1</td> <td>1:0:0:0</td> </tr> <tr> <td>b0</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0:0:0:0</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0 to 2</td> <td>0 to 9</td> <td>0 to 5</td> <td>0 to 9</td> </tr> </table> <p>Monitor value</p> <table border="1" data-bbox="639 1592 938 1720"> <tr> <td>1</td> <td>5</td> <td>3</td> <td>0</td> </tr> <tr> <td colspan="2">00 to 23 (hour)</td> <td colspan="2">00 to 59 (minute)</td> </tr> </table>	1	5	3	0	b15	b12	b8	b4	0:0:0:1	0:1:0:1	1:0:0:1	1:0:0:0	b0				0:0:0:0				0 to 2	0 to 9	0 to 5	0 to 9	1	5	3	0	00 to 23 (hour)		00 to 59 (minute)		0000	460												
1	5	3	0																																											
b15	b12	b8	b4																																											
0:0:0:1	0:1:0:1	1:0:0:1	1:0:0:0																																											
b0																																														
0:0:0:0																																														
0 to 2	0 to 9	0 to 5	0 to 9																																											
1	5	3	0																																											
00 to 23 (hour)		00 to 59 (minute)																																												
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p> <table border="1" data-bbox="245 1821 544 1926"> <tr> <td>4</td> <td>9</td> <td>0</td> <td>7</td> </tr> <tr> <td>b15</td> <td>b12</td> <td>b8</td> <td>b4</td> </tr> <tr> <td>0:1:0:0</td> <td>1:0:0:1</td> <td>0:0:0:0</td> <td>0:1:1:1</td> </tr> <tr> <td>b0</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0:1:1:1</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0 to 5</td> <td>0 to 9</td> <td>0</td> <td>0 to 9</td> </tr> </table> <p>Monitor value</p> <table border="1" data-bbox="639 1843 938 1971"> <tr> <td>4</td> <td>9</td> <td>0</td> <td>7</td> </tr> <tr> <td colspan="2">00 to 59 (second)</td> <td colspan="2">00 to 09 (100 ms)</td> </tr> </table>	4	9	0	7	b15	b12	b8	b4	0:1:0:0	1:0:0:1	0:0:0:0	0:1:1:1	b0				0:1:1:1				0 to 5	0 to 9	0	0 to 9	4	9	0	7	00 to 59 (second)		00 to 09 (100 ms)		0000	461												
4	9	0	7																																											
b15	b12	b8	b4																																											
0:1:0:0	1:0:0:1	0:0:0:0	0:1:1:1																																											
b0																																														
0:1:1:1																																														
0 to 5	0 to 9	0	0 to 9																																											
4	9	0	7																																											
00 to 59 (second)		00 to 09 (100 ms)																																												

(Unless noted in particular, the monitor value is saved as binary data.)

Storage item	Storage details	Reading the monitor value																																																																					
Md.7 Start axis	The No. of the axis that started is stored.	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Storage value 1: Axis 1 2: Axis 2 3: Axis 3</p>																																																																					
Md.8 Operation type	<p>[Stored contents] The operation information (restart flag, start origin, operation type) is stored.</p> <ul style="list-style-type: none"> <li>Restart flag : Whether the operation restarted after stopping once</li> <li>Start origin : Where the start signal was input from</li> <li>Operation type : What type of operation was carried out</li> </ul> <p>[Reading the monitor value] ■ Monitoring is carried out with a hexadecimal.</p>  <table border="1"> <thead> <tr> <th>Stored contents</th> <th>Storage value</th> <th>Remarks (decimal)</th> </tr> </thead> <tbody> <tr> <td>Programmable controller CPU</td> <td>00</td> <td></td> </tr> <tr> <td>External signal</td> <td>01</td> <td></td> </tr> <tr> <td>Peripheral device</td> <td>10</td> <td></td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Stored contents</th> <th>a</th> <th>B</th> <th>C</th> <th>D</th> <th>Remarks (decimal)</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Positioning operation</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>001</td> </tr> <tr> <td>0</td> <td>2</td> <td>5</td> <td>8</td> <td>600</td> </tr> <tr> <td rowspan="2">Block positioning operation</td> <td>1</td> <td>B</td> <td>5</td> <td>8</td> <td>7000</td> </tr> <tr> <td>1</td> <td>B</td> <td>6</td> <td>2</td> <td>7010</td> </tr> <tr> <td>JOG operation</td> <td>1</td> <td>F</td> <td>7</td> <td>C</td> <td>8060</td> </tr> <tr> <td>Manual pulse generator operation</td> <td>1</td> <td>F</td> <td>7</td> <td>D</td> <td>8061</td> </tr> <tr> <td>Machine zero point return</td> <td>1</td> <td>F</td> <td>7</td> <td>3</td> <td>8051</td> </tr> <tr> <td>High-speed zero point return</td> <td>1</td> <td>F</td> <td>7</td> <td>4</td> <td>8052</td> </tr> <tr> <td>Current value change</td> <td>1</td> <td>F</td> <td>7</td> <td>5</td> <td>8053</td> </tr> </tbody> </table> <p>a : Binary, B to D: Hexadecimal</p>	Stored contents	Storage value	Remarks (decimal)	Programmable controller CPU	00		External signal	01		Peripheral device	10		Stored contents	a	B	C	D	Remarks (decimal)	Positioning operation	0	0	0	1	001	0	2	5	8	600	Block positioning operation	1	B	5	8	7000	1	B	6	2	7010	JOG operation	1	F	7	C	8060	Manual pulse generator operation	1	F	7	D	8061	Machine zero point return	1	F	7	3	8051	High-speed zero point return	1	F	7	4	8052	Current value change	1	F	7	5	8053
Stored contents	Storage value	Remarks (decimal)																																																																					
Programmable controller CPU	00																																																																						
External signal	01																																																																						
Peripheral device	10																																																																						
Stored contents	a	B	C	D	Remarks (decimal)																																																																		
Positioning operation	0	0	0	1	001																																																																		
	0	2	5	8	600																																																																		
Block positioning operation	1	B	5	8	7000																																																																		
	1	B	6	2	7010																																																																		
JOG operation	1	F	7	C	8060																																																																		
Manual pulse generator operation	1	F	7	D	8061																																																																		
Machine zero point return	1	F	7	3	8051																																																																		
High-speed zero point return	1	F	7	4	8052																																																																		
Current value change	1	F	7	5	8053																																																																		
Md.9 Start time (Hour: minute)	The starting time is stored. (Software clock data created by system in AD75.)	<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p>  <p>Monitor value: 1 5 3 0 00 to 23 (hour)    00 to 59 (minute)</p>																																																																					
Md.10 Start time (Second:100 ms)	The starting time is stored. (Software clock data created by system in AD75.)	<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p>  <p>Monitor value: 4 9 0 7 00 to 59 (second)    00 to 09 (100 ms)</p>																																																																					
Md.11 Error judgment	<p>[Stored contents] The error judgment results when starting (shown below) are stored.</p> <ul style="list-style-type: none"> <li>BUSY start warning flag</li> <li>Error flag</li> <li>Error No.</li> </ul> <p>[Reading the monitor value] ■ Monitoring is carried out with a hexadecimal.</p>  <table border="1"> <thead> <tr> <th>Stored contents</th> <th>Storage value</th> </tr> </thead> <tbody> <tr> <td>Error flag OFF</td> <td>0</td> </tr> <tr> <td>Error flag ON</td> <td>1</td> </tr> </tbody> </table> <p>a, B, C and D are converted into a decimal, which can be confirmed in section "14.2 List of errors".</p> <table border="1"> <thead> <tr> <th>Stored contents</th> <th>Storage value</th> </tr> </thead> <tbody> <tr> <td>BUSY start warning OFF</td> <td>0</td> </tr> <tr> <td>BUSY start warning ON</td> <td>1</td> </tr> </tbody> </table>	Stored contents	Storage value	Error flag OFF	0	Error flag ON	1	Stored contents	Storage value	BUSY start warning OFF	0	BUSY start warning ON	1																																																										
Stored contents	Storage value																																																																						
Error flag OFF	0																																																																						
Error flag ON	1																																																																						
Stored contents	Storage value																																																																						
BUSY start warning OFF	0																																																																						
BUSY start warning ON	1																																																																						
Md.12 Starting history pointer	The pointer No. following the pointer No. where the latest start history is stored is indicated.	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Storage value (Pointer No.) 0 to 15</p>																																																																					

Starting history (up to 16 items can be stored)






Default value	Storage buffer memory address (common for axis 1 to axis 3)																																																																																																																																																																																																							
0																																																																																																																																																																																																								
0000H	<div style="text-align: center;"> <table border="1" style="margin: auto;"> <tr> <td style="padding: 2px;">Md.12</td> <td style="padding: 2px;">Starting history pointer</td> <td style="padding: 2px;">542</td> </tr> </table> <p style="text-align: center;">↑ The pointer No. following the pointer No. where the latest start history is stored is stored.</p> </div>		Md.12	Starting history pointer	542																																																																																																																																																																																																			
Md.12	Starting history pointer	542																																																																																																																																																																																																						
0000	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> <p>Pointer No. ↓</p> </div> <table border="1" style="border-collapse: collapse; text-align: center;"> <tr> <td style="width: 100px; font-weight: bold;">Starting history</td> <td style="font-weight: bold;">Pointer No.</td> <td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Md.7</td> <td>462</td><td>467</td><td>472</td><td>477</td><td>482</td><td>487</td><td>492</td><td>497</td><td>502</td><td>507</td><td>512</td><td>517</td><td>522</td><td>527</td><td>532</td><td>537</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Start axis</td> <td>463</td><td>468</td><td>473</td><td>478</td><td>483</td><td>488</td><td>493</td><td>498</td><td>503</td><td>508</td><td>513</td><td>518</td><td>523</td><td>528</td><td>533</td><td>538</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Md.8</td> <td>463</td><td>468</td><td>473</td><td>478</td><td>483</td><td>488</td><td>493</td><td>498</td><td>503</td><td>508</td><td>513</td><td>518</td><td>523</td><td>529</td><td>534</td><td>539</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Operation type</td> <td>464</td><td>469</td><td>474</td><td>479</td><td>484</td><td>489</td><td>494</td><td>499</td><td>504</td><td>509</td><td>514</td><td>519</td><td>524</td><td>529</td><td>534</td><td>540</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Md.9</td> <td>465</td><td>470</td><td>475</td><td>480</td><td>485</td><td>490</td><td>495</td><td>500</td><td>505</td><td>510</td><td>515</td><td>520</td><td>525</td><td>530</td><td>535</td><td>541</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Start time (Hour: minute)</td> <td>466</td><td>471</td><td>476</td><td>481</td><td>486</td><td>491</td><td>496</td><td>501</td><td>506</td><td>511</td><td>516</td><td>521</td><td>526</td><td>531</td><td>536</td><td>541</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Md.10</td> <td>466</td><td>471</td><td>476</td><td>481</td><td>486</td><td>491</td><td>496</td><td>501</td><td>506</td><td>511</td><td>516</td><td>521</td><td>526</td><td>531</td><td>536</td><td>541</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Start time (Second: 100ms)</td> <td>466</td><td>471</td><td>476</td><td>481</td><td>486</td><td>491</td><td>496</td><td>501</td><td>506</td><td>511</td><td>516</td><td>521</td><td>526</td><td>531</td><td>536</td><td>541</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Md.11</td> <td>466</td><td>471</td><td>476</td><td>481</td><td>486</td><td>491</td><td>496</td><td>501</td><td>506</td><td>511</td><td>516</td><td>521</td><td>526</td><td>531</td><td>536</td><td>541</td> </tr> <tr> <td style="border: none;"></td> <td style="border: none;">Error judgment</td> <td>466</td><td>471</td><td>476</td><td>481</td><td>486</td><td>491</td><td>496</td><td>501</td><td>506</td><td>511</td><td>516</td><td>521</td><td>526</td><td>531</td><td>536</td><td>541</td> </tr> </table> </div>		Starting history	Pointer No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15		Md.7	462	467	472	477	482	487	492	497	502	507	512	517	522	527	532	537		Start axis	463	468	473	478	483	488	493	498	503	508	513	518	523	528	533	538		Md.8	463	468	473	478	483	488	493	498	503	508	513	518	523	529	534	539		Operation type	464	469	474	479	484	489	494	499	504	509	514	519	524	529	534	540		Md.9	465	470	475	480	485	490	495	500	505	510	515	520	525	530	535	541		Start time (Hour: minute)	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541		Md.10	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541		Start time (Second: 100ms)	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541		Md.11	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541		Error judgment	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541
Starting history	Pointer No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15																																																																																																																																																																																							
	Md.7	462	467	472	477	482	487	492	497	502	507	512	517	522	527	532	537																																																																																																																																																																																							
	Start axis	463	468	473	478	483	488	493	498	503	508	513	518	523	528	533	538																																																																																																																																																																																							
	Md.8	463	468	473	478	483	488	493	498	503	508	513	518	523	529	534	539																																																																																																																																																																																							
	Operation type	464	469	474	479	484	489	494	499	504	509	514	519	524	529	534	540																																																																																																																																																																																							
	Md.9	465	470	475	480	485	490	495	500	505	510	515	520	525	530	535	541																																																																																																																																																																																							
	Start time (Hour: minute)	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541																																																																																																																																																																																							
	Md.10	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541																																																																																																																																																																																							
	Start time (Second: 100ms)	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541																																																																																																																																																																																							
	Md.11	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541																																																																																																																																																																																							
	Error judgment	466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541																																																																																																																																																																																							
0000	<div style="display: flex; justify-content: center; gap: 20px;"> <div style="text-align: center;"> <p>↑ Item</p> </div> <div style="text-align: center;"> <p>↑ Buffer memory address</p> </div> </div> <ul style="list-style-type: none"> <li>A "pointer No." is assigned to each block of buffer memory that configures one start history.</li> </ul> <p>Example)</p> <ul style="list-style-type: none"> <li>Pointer No. 0 = Buffer memory 462 to 466</li> <li>Pointer No. 1 = Buffer memory 467 to 471</li> <li>Pointer No. 2 = Buffer memory 472 to 476</li> </ul>																																																																																																																																																																																																							
0000H	<ul style="list-style-type: none"> <li>The history is stored in order in pointer No. "0" to "15". If the No. of history items exceeds this, the history will return to "0" and be stored in order. (When newly storing history items, the previous history will be cleared.)</li> </ul>																																																																																																																																																																																																							
0	542																																																																																																																																																																																																							

Storage item	Storage details	Reading the monitor value																																																																												
<p><b>Md.13</b> Start axis</p>	<p>The No. of the axis for which an error was detected when starting is stored.</p>	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Storage value 1: Axis 1 2: Axis 2 3: Axis 3</p>																																																																												
<p><b>Md.14</b> Operation type</p>	<p>[Stored contents] The operation information (restart flag, start origin, operation type) is stored.</p> <ul style="list-style-type: none"> <li>Restart flag : Whether the operation restarted after stopping once</li> <li>Start origin : Where the start signal was input from</li> <li>Operation type : What type of operation was carried out</li> </ul> <p>[Reading the monitor value] ■ Monitoring is carried out with a hexadecimal.</p>  <table border="1"> <caption>Start origin</caption> <thead> <tr> <th>Stored contents</th> <th>Storage value</th> </tr> </thead> <tbody> <tr> <td>Programmable controller CPU</td> <td>00</td> </tr> <tr> <td>External signal</td> <td>01</td> </tr> <tr> <td>Peripheral device</td> <td>10</td> </tr> </tbody> </table> <table border="1"> <caption>Restart flag</caption> <thead> <tr> <th>Stored contents</th> <th>Storage value</th> </tr> </thead> <tbody> <tr> <td>Restart flag OFF</td> <td>0</td> </tr> <tr> <td>Restart flag ON</td> <td>1</td> </tr> </tbody> </table> <table border="1"> <caption>Operation type</caption> <thead> <tr> <th rowspan="2">Stored contents</th> <th colspan="4">Storage value</th> <th rowspan="2">Remarks (decimal)</th> </tr> <tr> <th>a</th> <th>B</th> <th>C</th> <th>D</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Positioning operation</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>001</td> </tr> <tr> <td>0</td> <td>2</td> <td>5</td> <td>8</td> <td>600</td> </tr> <tr> <td rowspan="2">Block positioning operation</td> <td>1</td> <td>B</td> <td>5</td> <td>8</td> <td>7000</td> </tr> <tr> <td>1</td> <td>B</td> <td>6</td> <td>2</td> <td>7010</td> </tr> <tr> <td>JOG operation</td> <td>1</td> <td>F</td> <td>7</td> <td>C</td> <td>8060</td> </tr> <tr> <td>Manual pulse generator operation</td> <td>1</td> <td>F</td> <td>7</td> <td>D</td> <td>8061</td> </tr> <tr> <td>Machine zero point return</td> <td>1</td> <td>F</td> <td>7</td> <td>3</td> <td>8051</td> </tr> <tr> <td>High-speed zero point return</td> <td>1</td> <td>F</td> <td>7</td> <td>4</td> <td>8052</td> </tr> <tr> <td>Current value change</td> <td>1</td> <td>F</td> <td>7</td> <td>5</td> <td>8053</td> </tr> </tbody> </table> <p>a : Binary, B to D: Hexadecimal</p>	Stored contents	Storage value	Programmable controller CPU	00	External signal	01	Peripheral device	10	Stored contents	Storage value	Restart flag OFF	0	Restart flag ON	1	Stored contents	Storage value				Remarks (decimal)	a	B	C	D	Positioning operation	0	0	0	1	001	0	2	5	8	600	Block positioning operation	1	B	5	8	7000	1	B	6	2	7010	JOG operation	1	F	7	C	8060	Manual pulse generator operation	1	F	7	D	8061	Machine zero point return	1	F	7	3	8051	High-speed zero point return	1	F	7	4	8052	Current value change	1	F	7	5	8053	<p>Monitor value </p>
Stored contents	Storage value																																																																													
Programmable controller CPU	00																																																																													
External signal	01																																																																													
Peripheral device	10																																																																													
Stored contents	Storage value																																																																													
Restart flag OFF	0																																																																													
Restart flag ON	1																																																																													
Stored contents	Storage value				Remarks (decimal)																																																																									
	a	B	C	D																																																																										
Positioning operation	0	0	0	1	001																																																																									
	0	2	5	8	600																																																																									
Block positioning operation	1	B	5	8	7000																																																																									
	1	B	6	2	7010																																																																									
JOG operation	1	F	7	C	8060																																																																									
Manual pulse generator operation	1	F	7	D	8061																																																																									
Machine zero point return	1	F	7	3	8051																																																																									
High-speed zero point return	1	F	7	4	8052																																																																									
Current value change	1	F	7	5	8053																																																																									
<p><b>Md.15</b> Start time (Hour: minute)</p>	<p>The error detection time is stored. (Software clock data created by system in AD75.)</p>	<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p>  <p>Monitor value </p> <p>00 to 23 (hour)      00 to 59 (minute)</p>																																																																												
<p><b>Md.16</b> Start time (Second:100 ms)</p>	<p>The error detection time is stored. (Software clock data created by system in AD75.)</p>	<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p>  <p>Monitor value </p> <p>00 to 59 (second)      00 to 09 (100 ms)</p>																																																																												
<p><b>Md.17</b> Error judgment</p>	<p>[Stored contents] The error judgment results when starting (shown below) are stored.</p> <ul style="list-style-type: none"> <li>BUSY start warning flag</li> <li>Error flag</li> <li>Error No.</li> </ul> <p>[Reading the monitor value] ■ Monitoring is carried out with a hexadecimal.</p>  <table border="1"> <caption>Error flag</caption> <thead> <tr> <th>Stored contents</th> <th>Storage value</th> </tr> </thead> <tbody> <tr> <td>Error flag OFF</td> <td>0</td> </tr> <tr> <td>Error flag ON</td> <td>1</td> </tr> </tbody> </table> <table border="1"> <caption>BUSY start warning</caption> <thead> <tr> <th>Stored contents</th> <th>Storage value</th> </tr> </thead> <tbody> <tr> <td>BUSY start warning OFF</td> <td>0</td> </tr> <tr> <td>BUSY start warning ON</td> <td>1</td> </tr> </tbody> </table> <p>a, B, C and D are converted into a decimal, which can be confirmed in section "14.2 List of errors".</p>	Stored contents	Storage value	Error flag OFF	0	Error flag ON	1	Stored contents	Storage value	BUSY start warning OFF	0	BUSY start warning ON	1	<p>Monitor value </p>																																																																
Stored contents	Storage value																																																																													
Error flag OFF	0																																																																													
Error flag ON	1																																																																													
Stored contents	Storage value																																																																													
BUSY start warning OFF	0																																																																													
BUSY start warning ON	1																																																																													
<p><b>Md.18</b> Starting history pointer at error</p>	<p>The pointer No. following the pointer No. where the latest start history during errors is stored is indicated.</p>	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Storage value (Pointer No.) 0 to 15</p>																																																																												

Error at start history (up to 16 items can be stored)








Default value	Storage buffer memory address (common for axis 1 to axis 3)																																																																																																											
0																																																																																																												
0000H	<div style="text-align: center;"> <table border="1" style="margin: auto;"> <tr> <td style="padding: 2px;">Md.18</td> <td style="padding: 2px;">Starting history pointer at error</td> <td style="padding: 2px;">623</td> </tr> </table> <p>▲ The pointer No. following the pointer No. where the latest start history during errors is stored is stored.</p> </div>	Md.18	Starting history pointer at error	623																																																																																																								
Md.18	Starting history pointer at error	623																																																																																																										
0000	<div style="display: flex; align-items: center;"> <div style="writing-mode: vertical-rl; transform: rotate(180deg); font-weight: bold; margin-right: 10px;">Start history during errors</div> <table border="1" style="border-collapse: collapse; text-align: center;"> <tr> <td style="width: 100px;">Pointer No.</td> <td style="width: 100px;">0</td> <td style="width: 100px;">1</td> <td style="width: 100px;">2</td> <td style="width: 100px;">3</td> <td style="width: 100px;">4</td> <td style="width: 100px;">5</td> <td style="width: 100px;">6</td> <td style="width: 100px;">7</td> <td style="width: 100px;">8</td> <td style="width: 100px;">9</td> <td style="width: 100px;">10</td> <td style="width: 100px;">11</td> <td style="width: 100px;">12</td> <td style="width: 100px;">13</td> <td style="width: 100px;">14</td> <td style="width: 100px;">15</td> </tr> <tr> <td></td> <td style="border: 2px solid black;">Md.7 Start axis</td> <td style="border: 2px solid black;">543</td> <td style="border: 2px solid black;">548</td> <td style="border: 2px solid black;">553</td> <td style="border: 2px solid black;">558</td> <td style="border: 2px solid black;">563</td> <td style="border: 2px solid black;">568</td> <td style="border: 2px solid black;">573</td> <td style="border: 2px solid black;">578</td> <td style="border: 2px solid black;">583</td> <td style="border: 2px solid black;">588</td> <td style="border: 2px solid black;">593</td> <td style="border: 2px solid black;">598</td> <td style="border: 2px solid black;">603</td> <td style="border: 2px solid black;">608</td> <td style="border: 2px solid black;">613</td> <td style="border: 2px solid black;">618</td> </tr> <tr> <td></td> <td style="border: 2px solid black;">Md.8 Operation type</td> <td style="border: 2px solid black;">544</td> <td style="border: 2px solid black;">549</td> <td style="border: 2px solid black;">554</td> <td style="border: 2px solid black;">559</td> <td style="border: 2px solid black;">564</td> <td style="border: 2px solid black;">569</td> <td style="border: 2px solid black;">574</td> <td style="border: 2px solid black;">579</td> <td style="border: 2px solid black;">584</td> <td style="border: 2px solid black;">589</td> <td style="border: 2px solid black;">594</td> <td style="border: 2px solid black;">599</td> <td style="border: 2px solid black;">604</td> <td style="border: 2px solid black;">609</td> <td style="border: 2px solid black;">614</td> <td style="border: 2px solid black;">619</td> </tr> <tr> <td></td> <td style="border: 2px solid black;">Md.9 Start time (Hour: minute)</td> <td style="border: 2px solid black;">545</td> <td style="border: 2px solid black;">550</td> <td style="border: 2px solid black;">555</td> <td style="border: 2px solid black;">560</td> <td style="border: 2px solid black;">565</td> <td style="border: 2px solid black;">570</td> <td style="border: 2px solid black;">575</td> <td style="border: 2px solid black;">580</td> <td style="border: 2px solid black;">585</td> <td style="border: 2px solid black;">590</td> <td style="border: 2px solid black;">595</td> <td style="border: 2px solid black;">600</td> <td style="border: 2px solid black;">605</td> <td style="border: 2px solid black;">610</td> <td style="border: 2px solid black;">615</td> <td style="border: 2px solid black;">620</td> </tr> <tr> <td></td> <td style="border: 2px solid black;">Md.10 Start time (Second: 100ms)</td> <td style="border: 2px solid black;">546</td> <td style="border: 2px solid black;">551</td> <td style="border: 2px solid black;">556</td> <td style="border: 2px solid black;">561</td> <td style="border: 2px solid black;">566</td> <td style="border: 2px solid black;">571</td> <td style="border: 2px solid black;">576</td> <td style="border: 2px solid black;">581</td> <td style="border: 2px solid black;">586</td> <td style="border: 2px solid black;">591</td> <td style="border: 2px solid black;">596</td> <td style="border: 2px solid black;">601</td> <td style="border: 2px solid black;">606</td> <td style="border: 2px solid black;">611</td> <td style="border: 2px solid black;">616</td> <td style="border: 2px solid black;">621</td> </tr> <tr> <td></td> <td style="border: 2px solid black;">Md.11 Error judgment</td> <td style="border: 2px solid black;">547</td> <td style="border: 2px solid black;">552</td> <td style="border: 2px solid black;">557</td> <td style="border: 2px solid black;">562</td> <td style="border: 2px solid black;">567</td> <td style="border: 2px solid black;">572</td> <td style="border: 2px solid black;">577</td> <td style="border: 2px solid black;">582</td> <td style="border: 2px solid black;">587</td> <td style="border: 2px solid black;">592</td> <td style="border: 2px solid black;">597</td> <td style="border: 2px solid black;">602</td> <td style="border: 2px solid black;">607</td> <td style="border: 2px solid black;">612</td> <td style="border: 2px solid black;">617</td> <td style="border: 2px solid black;">622</td> </tr> </table> <div style="margin-left: 100px; margin-top: 10px;"> <p>↑ Item</p> <p>↑ Buffer memory address</p> </div> </div>	Pointer No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15		Md.7 Start axis	543	548	553	558	563	568	573	578	583	588	593	598	603	608	613	618		Md.8 Operation type	544	549	554	559	564	569	574	579	584	589	594	599	604	609	614	619		Md.9 Start time (Hour: minute)	545	550	555	560	565	570	575	580	585	590	595	600	605	610	615	620		Md.10 Start time (Second: 100ms)	546	551	556	561	566	571	576	581	586	591	596	601	606	611	616	621		Md.11 Error judgment	547	552	557	562	567	572	577	582	587	592	597	602	607	612	617	622
Pointer No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15																																																																																												
	Md.7 Start axis	543	548	553	558	563	568	573	578	583	588	593	598	603	608	613	618																																																																																											
	Md.8 Operation type	544	549	554	559	564	569	574	579	584	589	594	599	604	609	614	619																																																																																											
	Md.9 Start time (Hour: minute)	545	550	555	560	565	570	575	580	585	590	595	600	605	610	615	620																																																																																											
	Md.10 Start time (Second: 100ms)	546	551	556	561	566	571	576	581	586	591	596	601	606	611	616	621																																																																																											
	Md.11 Error judgment	547	552	557	562	567	572	577	582	587	592	597	602	607	612	617	622																																																																																											
0000	<ul style="list-style-type: none"> <li>• A "pointer No." is assigned to each block of buffer memory that configures one start history.</li> </ul> <p>Example)</p> <p>Pointer No. 0 = Buffer memory 543 to 547</p> <p>Pointer No. 1 = Buffer memory 548 to 552</p> <p>Pointer No. 2 = Buffer memory 553 to 557</p> <p style="text-align: center;">⋮</p>																																																																																																											
0000H	<ul style="list-style-type: none"> <li>• The history is stored in order in pointer No. "0" to "15". If the No. of history items exceeds this, the history will return to "0" and be stored in order. (When newly storing history items, the previous history will be cleared.)</li> </ul>																																																																																																											
0	623																																																																																																											

Storage item	Storage details	Reading the monitor value																
<p><b>Md.19</b> Axis in which the error occurred</p>	<p>The axis No. for which an error was detected is stored.</p>	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Storage value 1: Axis 1 2: Axis 2 3: Axis 3</p>																
<p><b>Md.20</b> Axis error No.</p>	<p>The axis error No. is stored</p>	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Error No. Refer to section "14.2 List of errors" for details on the error Nos. (error codes).</p>																
<p><b>Md.21</b> Axis error occurrence time (Hour: minute)</p>	<p>The axis error detection time is stored. (Software clock data created by system in AD75.)</p>	<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p> <table border="1" data-bbox="766 1064 1109 1176"> <tr> <td>1</td> <td>5</td> <td>3</td> <td>0</td> </tr> <tr> <td>b15</td> <td>b12</td> <td>b8</td> <td>b4</td> </tr> <tr> <td>0:0:0:1</td> <td>1:0:1:1</td> <td>0:0:1:1</td> <td>0:0:0:0</td> </tr> <tr> <td>0 to 2</td> <td>0 to 9</td> <td>0 to 5</td> <td>0 to 9</td> </tr> </table> <p>Monitor value </p> <p>00 to 23 (hour)      00 to 59 (minute)</p>	1	5	3	0	b15	b12	b8	b4	0:0:0:1	1:0:1:1	0:0:1:1	0:0:0:0	0 to 2	0 to 9	0 to 5	0 to 9
1	5	3	0															
b15	b12	b8	b4															
0:0:0:1	1:0:1:1	0:0:1:1	0:0:0:0															
0 to 2	0 to 9	0 to 5	0 to 9															
<p><b>Md.22</b> Axis error occurrence time (Second: 100 ms)</p>	<p>The axis error detection time is stored. (Software clock data created by system in AD75.)</p>	<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p> <table border="1" data-bbox="766 1377 1109 1489"> <tr> <td>4</td> <td>9</td> <td>0</td> <td>7</td> </tr> <tr> <td>b15</td> <td>b12</td> <td>b8</td> <td>b4</td> </tr> <tr> <td>0:1:0:0</td> <td>1:0:0:1</td> <td>0:0:0:0</td> <td>0:1:1:1</td> </tr> <tr> <td>0 to 5</td> <td>0 to 9</td> <td>0</td> <td>0 to 9</td> </tr> </table> <p>Monitor value </p> <p>00 to 59 (second)      00 to 09 (100 ms)</p>	4	9	0	7	b15	b12	b8	b4	0:1:0:0	1:0:0:1	0:0:0:0	0:1:1:1	0 to 5	0 to 9	0	0 to 9
4	9	0	7															
b15	b12	b8	b4															
0:1:0:0	1:0:0:1	0:0:0:0	0:1:1:1															
0 to 5	0 to 9	0	0 to 9															
<p><b>Md.23</b> Error history pointer</p>	<p>The pointer No. following the pointer No. where the latest error history is stored is indicated.</p>	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Storage value (Pointer No.) 0 to 15</p>																

Error history (up to 16 items can be stored)


Default value	Storage buffer memory address (common for axis 1 to axis 3)				
0	<div style="text-align: center;"> <table border="1" style="margin: auto;"> <tr> <td style="padding: 5px;">Md.23</td> <td style="padding: 5px;">Error history pointer</td> <td style="padding: 5px;">688</td> </tr> </table> <p style="text-align: center;">▲ The pointer No. following the pointer No. where the latest error history is stored.</p> </div>		Md.23	Error history pointer	688
Md.23	Error history pointer	688			
0	<p>Pointer No. ↓</p>				
0000	<ul style="list-style-type: none"> <li>• A "pointer No." is assigned to each block of buffer memory that configures one start history.</li> </ul> <p>Example)</p> <p>Pointer No. 0 = Buffer memory 624 to 627            Pointer No. 1 = Buffer memory 628 to 631            Pointer No. 2 = Buffer memory 632 to 635            ⋮</p> <ul style="list-style-type: none"> <li>• The history is stored in order in pointer No. "0" to "15". If the No. of history items exceeds this, the history will return to "0" and be stored in order. (When newly storing history items, the previous history will be cleared.)</li> </ul>				
0000	<p style="text-align: center;">↑ Item      ↑ Buffer memory address</p>				
0	688				

	Storage item	Storage details	Reading the monitor value																																			
Warning history (up to 16 items can be stored)	<p><b>Md.24</b> Axis in which the warning occurred</p>	<p>The axis No. for which a warning was detected is stored.</p>	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Storage value 1: Axis 1 2: Axis 2 3: Axis 3</p>																																			
	<p><b>Md.25</b> Axis warning No.</p>	<p>The axis warning No. is stored.</p>	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Warning No. Refer to section "14.3 List of warnings" for details on the warning Nos. (error codes).</p>																																			
	<p><b>Md.26</b> Axis warning occurrence time (Hour: minute)</p>	<p>The axis warning detection time is stored. (Software clock data created by system in AD75.)</p>	<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p> <table border="1" data-bbox="750 1075 1037 1187"> <tr> <td>1</td> <td>5</td> <td>3</td> <td>0</td> </tr> <tr> <td>b15</td> <td>b12</td> <td>b8</td> <td>b4</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> </table> <p>0 to 2    0 to 9    0 to 5    0 to 9</p> <p>Monitor value  00 to 23 (hour)    00 to 59 (minute)</p>	1	5	3	0	b15	b12	b8	b4	0	1	0	1	0	1	0	1	0	0	1	1	0	0	0	0	0	0	1	1	0	0	0	0			
	1	5	3	0																																		
	b15	b12	b8	b4																																		
0	1	0	1																																			
0	1	0	1																																			
0	0	1	1																																			
0	0	0	0																																			
0	0	1	1																																			
0	0	0	0																																			
<p><b>Md.27</b> Axis warning occurrence time (Second: 100 ms)</p>	<p>The axis warning detection time is stored. (Software clock data created by system in AD75.)</p>	<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Buffer memory (stored with BCD code)</p> <table border="1" data-bbox="750 1388 1037 1500"> <tr> <td>4</td> <td>9</td> <td>0</td> <td>7</td> </tr> <tr> <td>b15</td> <td>b12</td> <td>b8</td> <td>b4</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> </table> <p>0 to 5    0 to 9    0    0 to 9</p> <p>Monitor value  00 to 59 (second)    00 to 09 (100 ms)</p>	4	9	0	7	b15	b12	b8	b4	0	1	0	0	1	0	0	1	0	0	0	0	0	0	1	1	0	0	0	0	0	0	1	1	0	0	0	0
4	9	0	7																																			
b15	b12	b8	b4																																			
0	1	0	0																																			
1	0	0	1																																			
0	0	0	0																																			
0	0	1	1																																			
0	0	0	0																																			
0	0	1	1																																			
0	0	0	0																																			
<p><b>Md.28</b> Warning history pointer</p>	<p>The pointer No. following the pointer No. where the latest warning history is stored is indicated.</p>	<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Storage value (Pointer No.) 0 to 15</p>																																				

Default value	Storage buffer memory address (common for axis 1 to axis 3)				
0	<div style="text-align: center;"> <table border="1" style="margin: auto;"> <tr> <td style="padding: 2px;">Md.28</td> <td style="padding: 2px;">Warning history pointer</td> <td style="padding: 2px;">753</td> </tr> </table> </div>		Md.28	Warning history pointer	753
Md.28	Warning history pointer	753			
0	<p>Pointer No. ↓</p> <p style="text-align: right;">↑ The pointer No. following the pointer No. where the latest warning history is stored.</p>				
0000	<ul style="list-style-type: none"> <li>• A "pointer No." is assigned to each block of buffer memory that configures one start history.</li> </ul> <p>Example)</p> <p>Pointer No. 0 = Buffer memory 689 to 692            Pointer No. 1 = Buffer memory 693 to 696            Pointer No. 2 = Buffer memory 697 to 700            ⋮</p>				
0000	<ul style="list-style-type: none"> <li>• The history is stored in order in pointer No. "0" to "15". If the No. of history items exceeds this, the history will return to "0" and be stored in order. (When newly storing history items, the previous history will be cleared.)</li> </ul>				
0	753				





## 5.6.2 Axis monitor data

Storage item	Storage details
<p>[Md.29] Current feed value</p>	<p>The currently commanded address is stored. (Different from the actual motor position during operation)</p> <p>The current position address is stored.</p> <ul style="list-style-type: none"> <li>• Update timing : 56.8ms</li> <li>• The zero point address is stored when the machine zero point return is completed.</li> <li>• When the current value is changed with the current value charge function, the changed value is stored.</li> </ul>
<p>[Md.30] Machine feed value</p>	<p>The address of the current position obtained with the machine coordinates is stored. (Different from the actual motor position during operation)</p> <ul style="list-style-type: none"> <li>• Machine coordinates: Characteristic coordinates determined with machine</li> <li>• Update timing: 56.8ms</li> </ul>
<p>[Md.31] Feedrate</p>	<p>The output speed (average value per 910ms) commanded by the AD75 is stored. (May be different from the actual motor speed during operation)</p> <ul style="list-style-type: none"> <li>• During interpolation operation, the speed is stored in the following manner. Reference axis : Composite speed or reference axis speed (Set with [Pr.21]) Interpolation axis : 0</li> <li>• Update timing: 910ms</li> </ul>
<p>[Md.32] Valid M code</p>	<p>The currently valid M code (set in the positioning data currently operating) is stored.</p> <ul style="list-style-type: none"> <li>• Update timing : When M code ON signal turns ON</li> </ul>
<p>[Md.33] Axis error No.</p>	<p>When an axis error is detected, the error code corresponding to the error details is stored.</p> <ul style="list-style-type: none"> <li>• The latest error code is always stored. (When a new axis error occurs, the error code is overwritten.)</li> <li>• When "axis error reset" (axis control data) turns ON, the axis error No. is cleared (set to 0).</li> </ul>

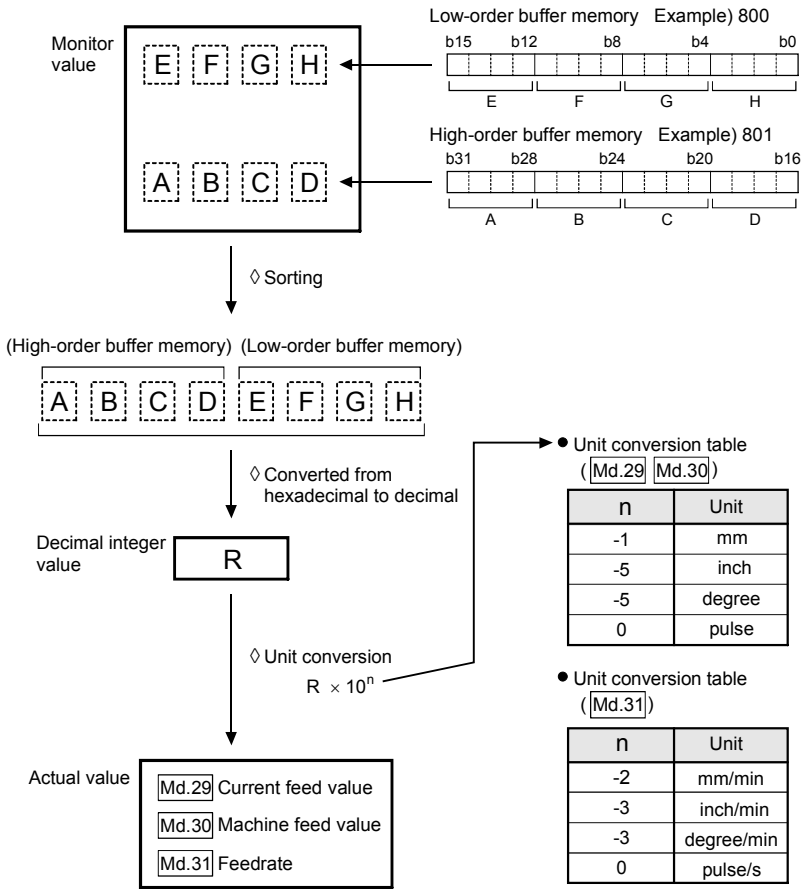Reading the monitor value	Default value	Storage buffer memory address																						
		Axis 1	Axis 2	Axis 3																				
<p>■ Monitoring is carried out with a hexadecimal.</p>  <p>Low-order buffer memory Example) 800 b15 b12 b8 b4 b0 E F G H</p> <p>High-order buffer memory Example) 801 b31 b28 b24 b20 b16 A B C D</p> <p>Monitor value E F G H A B C D</p> <p>◇ Sorting</p> <p>(High-order buffer memory) (Low-order buffer memory) A B C D E F G H</p> <p>◇ Converted from hexadecimal to decimal</p> <p>Decimal integer value R</p> <p>◇ Unit conversion <math>R \times 10^n</math></p> <p>Actual value [Md.29] Current feed value [Md.30] Machine feed value [Md.31] Feedrate</p> <p>• Unit conversion table ([Md.29] [Md.30])</p> <table border="1"> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>-1</td> <td>mm</td> </tr> <tr> <td>-5</td> <td>inch</td> </tr> <tr> <td>-5</td> <td>degree</td> </tr> <tr> <td>0</td> <td>pulse</td> </tr> </tbody> </table> <p>• Unit conversion table ([Md.31])</p> <table border="1"> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>-2</td> <td>mm/min</td> </tr> <tr> <td>-3</td> <td>inch/min</td> </tr> <tr> <td>-3</td> <td>degree/min</td> </tr> <tr> <td>0</td> <td>pulse/s</td> </tr> </tbody> </table>	n	Unit	-1	mm	-5	inch	-5	degree	0	pulse	n	Unit	-2	mm/min	-3	inch/min	-3	degree/min	0	pulse/s	0000H	800 801	900 901	1000 1001
n	Unit																							
-1	mm																							
-5	inch																							
-5	degree																							
0	pulse																							
n	Unit																							
-2	mm/min																							
-3	inch/min																							
-3	degree/min																							
0	pulse/s																							
	0000H	802 803	902 903	1002 1003																				
	0000H	804 805	904 905	1004 1005																				
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value □□□□□□</p> <p>• M code No. (0 to 32767)</p>	0	806	906	1006																				
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value □□□□□□</p> <p>• Error No. Refer to section "14.2 List of errors" for details on the error Nos. (error codes).</p>	0	807	907	1007																				

Storage item	Storage details
<p>[Md.34] Axis warning No.</p>	<p>When an axis warning is detected, the warning code corresponding to the details of the warning is stored.</p> <ul style="list-style-type: none"> <li>• The latest warning code is always stored. (When a new axis warning occurs, the warning code is overwritten.)</li> <li>• When "[Cd.12] Axis error reset" (axis control data) turns ON, the axis warning No. is cleared (set to 0).</li> </ul>
<p>[Md.35] Axis operation status</p>	<p>The axis operation state is stored.</p>
<p>[Md.36] Current speed</p>	<p>"[Da.7] Command speed" of the positioning data currently in execution is stored.</p> <ul style="list-style-type: none"> <li>• When "-1" is set for "[Da.7] Command speed": The command speed of the previous positioning data is stored.</li> <li>• When a value other than "-1" is set for "[Da.7] Command speed": The command speed of the positioning data currently being executed is stored.</li> <li>• When the speed change function is executed: "[Cd.16] New speed value" is stored. (For details of the speed change function, refer to Section 12.5.1.)</li> </ul>



Reading the monitor value	Default value	Storage buffer memory address												
		Axis 1	Axis 2	Axis 3										
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Warning No. Refer to section "14.3 List of warnings" for details on the warning Nos. (warning codes).</p>	0	808	908	1008										
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ● Axis operation state</p> <ul style="list-style-type: none"> <li>-4 : Step error occurring</li> <li>-3 : Step stopped</li> <li>-2 : In step wait</li> <li>-1 : Error occurring</li> <li>0 : Waiting</li> <li>1 : Stopped</li> <li>2 : Interpolating</li> <li>3 : In JOG operation</li> <li>4 : In manual pulse generator operation</li> <li>5 : Analyzing</li> <li>6 : Special start waiting</li> <li>7 : In zero point return</li> <li>8 : In position control</li> <li>9 : In speed control</li> <li>10 : In speed control for speed/position control</li> <li>11 : In position control for speed/position control</li> <li>20 : Servo has not been connected</li> <li>21 : In servo OFF</li> </ul>	0	809	909	1009										
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  (Decimal integer value)</p> <p>◇ Unit conversion <math>R \times 10^n</math></p> <p>Actual value </p> <p>● Unit conversion table (Md.36)</p> <table border="1" data-bbox="726 1713 949 1870"> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>-2</td> <td>mm/min</td> </tr> <tr> <td>-3</td> <td>inch/min</td> </tr> <tr> <td>-3</td> <td>degree/min</td> </tr> <tr> <td>0</td> <td>pulse/s</td> </tr> </tbody> </table>	n	Unit	-2	mm/min	-3	inch/min	-3	degree/min	0	pulse/s	0	810 811	910 911	1010 1011
n	Unit													
-2	mm/min													
-3	inch/min													
-3	degree/min													
0	pulse/s													

Storage item	Storage details
<p><b>Md.37</b> Axis feedrate</p>	<ul style="list-style-type: none"> <li>• The output speed (average value per 910ms) commanded by the AD75 to each axis is stored. (May be different from the actual motor speed.)</li> <li>• "0" is stored when the axis is stopped.</li> <li>• The update timing is 910ms.</li> </ul>
<p><b>Md.38</b> Speed/position changeover control positioning amount</p>	<ul style="list-style-type: none"> <li>• The value set as the movement amount for the position control to end after changing to position control with the speed/position changeover control is stored.</li> </ul>
<p><b>Md.39</b> External input signal</p>	<p>The ON/OFF state of the external input signal is stored. The following items are stored.</p> <ul style="list-style-type: none"> <li>• Near-point dog signal</li> <li>• Stop signal</li> <li>• Upper limit signal</li> <li>• Lower limit signal</li> <li>• External start signal</li> <li>• Speed/position changeover signal</li> </ul>

Reading the monitor value	Default value	Storage buffer memory address																						
		Axis 1	Axis 2	Axis 3																				
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Low-order buffer memory Example) 812 b15 b12 b8 b4 b0 E F G H</p> <p>High-order buffer memory Example) 813 b31 b28 b24 b20 b16 A B C D</p> <p>◇ Sorting</p> <p>(High-order buffer memory) (Low-order buffer memory) A B C D E F G H</p> <p>◇ Converted from hexadecimal to decimal</p> <p>Decimal integer value R</p> <p>◇ Unit conversion <math>R \times 10^n</math></p> <p>Actual value</p> <ul style="list-style-type: none"> <li>[Md.37] Axis feedrate</li> <li>[Md.38] Speed/position changeover control positioning amount</li> </ul> <table border="1"> <caption>Unit conversion table (Md.37)</caption> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>-2</td> <td>mm/min</td> </tr> <tr> <td>-3</td> <td>inch/min</td> </tr> <tr> <td>-3</td> <td>degree/min</td> </tr> <tr> <td>0</td> <td>pulse/s</td> </tr> </tbody> </table> <table border="1"> <caption>Unit conversion table (Md.38)</caption> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>-1</td> <td>mm</td> </tr> <tr> <td>-5</td> <td>inch</td> </tr> <tr> <td>-5</td> <td>degree</td> </tr> <tr> <td>0</td> <td>pulse</td> </tr> </tbody> </table>	n	Unit	-2	mm/min	-3	inch/min	-3	degree/min	0	pulse/s	n	Unit	-1	mm	-5	inch	-5	degree	0	pulse	0000H	812 813	912 913	1012 1013
n	Unit																							
-2	mm/min																							
-3	inch/min																							
-3	degree/min																							
0	pulse/s																							
n	Unit																							
-1	mm																							
-5	inch																							
-5	degree																							
0	pulse																							
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Monitor value</p> <p>Buffer memory</p> <p>b15 b12 b8 b4 b0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0</p> <p>Not used Not used</p> <table border="1"> <thead> <tr> <th>Stored items</th> <th>Default value</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>b3 Near-point dog signal</td> <td>0</td> <td rowspan="6">0: OFF 1: ON</td> </tr> <tr> <td>b4 Stop signal</td> <td>0</td> </tr> <tr> <td>b5 Upper limit signal</td> <td>0</td> </tr> <tr> <td>b6 Lower limit signal</td> <td>0</td> </tr> <tr> <td>b7 External start signal</td> <td>0</td> </tr> <tr> <td>b8 Speed/position changeover signal</td> <td>0</td> </tr> </tbody> </table>	Stored items	Default value	Meaning	b3 Near-point dog signal	0	0: OFF 1: ON	b4 Stop signal	0	b5 Upper limit signal	0	b6 Lower limit signal	0	b7 External start signal	0	b8 Speed/position changeover signal	0	0000H	816	916	1016				
Stored items	Default value	Meaning																						
b3 Near-point dog signal	0	0: OFF 1: ON																						
b4 Stop signal	0																							
b5 Upper limit signal	0																							
b6 Lower limit signal	0																							
b7 External start signal	0																							
b8 Speed/position changeover signal	0																							

Storage item	Storage details
<p>[Md.40] Status</p>	<p>The ON/OFF state of each flag is stored. The following items are stored.</p> <ul style="list-style-type: none"> <li>● In speed control flag : This signal is used to judge whether the system is in speed control or position control. This turns ON during speed control. This signal is OFF when the power is turned ON, during position control, during JOG operation and during manual pulse generator operation. During speed/position changeover control, this signal turns ON during speed control, and turns OFF when speed control to position control changeover is executed with the speed/position changeover signal.</li> <li>● Speed/position changeover latch flag : This signal is used for the movement amount change enable interlock during speed/position changeover control. This signal turns ON when position control is changed to during speed/position changeover control. This signal turns OFF when the next positioning data is executed, during JOG operation and during manual pulse generator operation.</li> <li>● Command in-position flag : This signal turns ON when the remaining distance is less than the command in-position range (set with the detailed parameters). The position is checked every 56.8ms, and is not checked during speed control or controlling speed of speed/position changeover control. This signal turns OFF during axis movement in each operation.</li> <li>● Zero point return request flag : This signal turns ON when communication with the servo amplifier is broken, when the PLC READY signal [Y1D] turns ON, or when a machine zero point return is started. This signal turns OFF when the machine zero point return is completed.</li> <li>● Zero point return complete flag : This signal turns ON when the machine zero point return is completed normally. It turns OFF when operation is started or communication with the servo amplifier is broken.</li> <li>● Axis warning detection : This signal turns ON when an axis warning occurs, and turns OFF when axis error reset is turned ON.</li> <li>● Speed change 0 flag : This signal turns ON when a speed change is requested at the new speed value 0, and turns OFF when the speed change is requested at a new speed value other than 0.</li> <li>● Zero point absolute position overflow/underflow flag : This turns ON if the zero point absolute position overflows or underflows when the current value change function is executed. This turns OFF when the current value change function is executed in the reverse direction of the flowing direction.</li> </ul>
<p>[Md.41] Target value</p>	<p>The target value ([Da.5] Positioning address/movement amount) during positioning operation is stored.</p> <ul style="list-style-type: none"> <li>• During positioning start : The "[Da.5] Positioning address/movement amount" is stored.</li> <li>• Other times : "0" is stored.</li> </ul>






Reading the monitor value	Default value	Storage buffer memory address																								
		Axis 1	Axis 2	Axis 3																						
<p>■ Monitoring is carried out with a hexadecimal.</p> <table border="1"> <thead> <tr> <th>Stored items</th> <th>Default value</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>b0 In speed control flag</td> <td>0</td> <td rowspan="12">0: OFF 1: ON</td> </tr> <tr> <td>b1 Speed/position changeover latch flag</td> <td>0</td> </tr> <tr> <td>b2 Command in-position flag</td> <td>0</td> </tr> <tr> <td>b3 Zero point return request flag</td> <td>0</td> </tr> <tr> <td>b4 Zero point return complete flag</td> <td>0</td> </tr> <tr> <td>b9 Axis warning detection</td> <td>0</td> </tr> <tr> <td>b10 Speed change 0 flag</td> <td>0</td> </tr> <tr> <td>b11 Zero point absolute position overflow flag</td> <td>0</td> </tr> <tr> <td>b12 Zero point absolute position underflow flag</td> <td>0</td> </tr> </tbody> </table>	Stored items	Default value	Meaning	b0 In speed control flag	0	0: OFF 1: ON	b1 Speed/position changeover latch flag	0	b2 Command in-position flag	0	b3 Zero point return request flag	0	b4 Zero point return complete flag	0	b9 Axis warning detection	0	b10 Speed change 0 flag	0	b11 Zero point absolute position overflow flag	0	b12 Zero point absolute position underflow flag	0	0000H	817	917	1017
Stored items	Default value	Meaning																								
b0 In speed control flag	0	0: OFF 1: ON																								
b1 Speed/position changeover latch flag	0																									
b2 Command in-position flag	0																									
b3 Zero point return request flag	0																									
b4 Zero point return complete flag	0																									
b9 Axis warning detection	0																									
b10 Speed change 0 flag	0																									
b11 Zero point absolute position overflow flag	0																									
b12 Zero point absolute position underflow flag	0																									
<p>■ Monitoring is carried out with a decimal.</p> <table border="1"> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>-1</td> <td>mm</td> </tr> <tr> <td>-5</td> <td>inch</td> </tr> <tr> <td>-5</td> <td>degree</td> </tr> <tr> <td>0</td> <td>pulse</td> </tr> </tbody> </table>	n		Unit	-1	mm		-5	inch	-5	degree	0	pulse	0	818 819	918 919	1018 1019										
n	Unit																									
-1	mm																									
-5	inch																									
-5	degree																									
0	pulse																									

Storage item	Storage details
<p>[Md.42] Target speed</p>	<ul style="list-style-type: none"> <li>• During operation with positioning data : The actual target speed, considering the override and speed limit value, etc., is stored. "0" is stored when positioning is completed.</li> <li>• During interpolation : The composite speed or reference axis speed is stored in the reference axis address, and "0" is stored in the interpolation axis address.</li> <li>• During JOG operation : The actual target speed, considering the JOG speed limit value for the JOG speed, is stored.</li> <li>• During manual pulse generator operation : "0" is stored.</li> </ul>
<p>[Md.43] Zero point absolute position</p>	<ul style="list-style-type: none"> <li>• The "zero point absolute position" address is stored.</li> <li>• "0" is stored when the power is turned ON, and the zero point return basic parameter "[Pr.47] Zero point address" is stored when the machine zero point return is completed.</li> <li>• The zero point absolute position value is changed when the current value charge function is executed.</li> </ul>
<p>[Md.44] Movement amount after near-point dog ON</p>	<ul style="list-style-type: none"> <li>• "0" is stored when machine zero point return starts.</li> <li>• After machine zero point return starts, the movement amount from the near-point dog ON to the machine zero point return completion is stored. (Movement amount: Movement amount to machine zero point return completion using near-point dog ON as "0".)</li> </ul>
<p>[Md.45] Torque limit stored value</p>	<p>The "[Pr.18] Torque limit setting value" or "[Cd.30] New torque value" is stored.</p> <ul style="list-style-type: none"> <li>• During positioning start, JOG operation start, manual pulse generator operation ...The "[Pr.18] Torque limit setting value" is stored.</li> <li>• When value is changed to "[Cd.30] New torque value" during operation ...The "[Cd.30] New torque value" is stored.</li> </ul>






Reading the monitor value	Default value	Storage buffer memory address		
		Axis 1	Axis 2	Axis 3
<p>■ Monitoring is carried out with a hexadecimal display.</p> <p>Low-order buffer memory Example) 820</p> <p>High-order buffer memory Example) 821</p> <p>Monitor value</p> <p>◇ Sorting</p> <p>(High-order buffer memory) (Low-order buffer memory)</p> <p>◇ Converted from hexadecimal to decimal</p> <p>Decimal integer value</p> <p>◇ Unit conversion <math>R \times 10^n</math></p> <p>Actual value</p> <ul style="list-style-type: none"> <li>Unit conversion table (Md.42)</li> <li>Unit conversion table (Md.43   Md.44)</li> </ul>	0000H	820 821	920 921	1020 1021
	0000H	822 823	922 923	1022 1023
	0000H	824 825	924 925	1024 1025
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value</p> <p>Storage value 0 to 500 (%)</p>	0	826	926	1026

Storage item	Storage details
<p>[Md.46] Special start data command code setting value</p>	<ul style="list-style-type: none"> <li>The "command code" used with special start and indicated by the start data pointer currently being executed is stored.</li> </ul>
<p>[Md.47] Special start data command parameter setting value</p>	<p>The "command parameter" used with special start and indicated by the start data pointer currently being executed is stored. The stored value differs according to the value set for [Md.46].</p>
<p>[Md.48] Start positioning data No. setting value</p>	<ul style="list-style-type: none"> <li>The "positioning data No." indicated by the start data pointer currently being executed is stored.</li> </ul>
<p>[Md.49] In speed limit flag</p>	<ul style="list-style-type: none"> <li>If the speed exceeds the "[Pr.7] Speed limit value" due to a speed change or override, the speed limit functions, and the in speed limit flag turns ON.</li> <li>When the speed drops to less than "[Pr.7] Speed limit value", or when the axis stops, the in speed limit flag turns OFF.</li> </ul>
<p>[Md.50] In speed change processing flag</p>	<ul style="list-style-type: none"> <li>The speed change process flag turns ON when the speed is changed during positioning control.</li> <li>After the speed change process is completed or when deceleration starts with the stop signal during the speed change process, the in speed change process flag turns OFF.</li> </ul>



Reading the monitor value	Default value	Storage buffer memory address														
		Axis 1	Axis 2	Axis 3												
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value </p> <p>● Storage value                      00: Block start (Normal start)                      01: Condition start                      02: Wait start                      03: Simultaneous start                      04: Stop                      05: FOR loop                      06: FOR condition                      07: NEXT</p>	0	827	927	1027												
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value </p> <p>● Storage value</p> <table border="1" data-bbox="542 806 1013 1108"> <thead> <tr> <th>Md.46 setting value</th> <th>Stored contents</th> <th>Storage value</th> </tr> </thead> <tbody> <tr> <td>00 04 07</td> <td>None</td> <td>None</td> </tr> <tr> <td>01 02 03 06</td> <td>Condition data No.</td> <td>1 to 10</td> </tr> <tr> <td>05</td> <td>No. of repetitions</td> <td>0 to 255</td> </tr> </tbody> </table>	Md.46 setting value	Stored contents	Storage value	00 04 07	None	None	01 02 03 06	Condition data No.	1 to 10	05	No. of repetitions	0 to 255	0	828	928	1028
Md.46 setting value	Stored contents	Storage value														
00 04 07	None	None														
01 02 03 06	Condition data No.	1 to 10														
05	No. of repetitions	0 to 255														
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value </p> <p>● Storage value 1 to 600</p>	0	829	929	1029												
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value </p> <p>● Storage value                      0: Not in speed limit (OFF)                      1: In speed limit (ON)</p>	0	830	930	1030												
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value </p> <p>● Storage value                      0: Not in speed change (OFF)                      1: In speed change (ON)</p>	0	831	931	1031												




Storage item	Storage details	
<p>[Md.51] Start data pointer being executed</p>	<ul style="list-style-type: none"> <li>• The point No. (1 to 50) of the start data currently being executed is stored.</li> <li>• "0" is stored when positioning is completed.</li> </ul>	
<p>[Md.52] Last executed positioning data No.</p>	<ul style="list-style-type: none"> <li>• The positioning data No. executed last is stored.</li> <li>• The value is held until the next positioning is executed.</li> </ul>	
<p>[Md.53] Repeat counter</p>	<ul style="list-style-type: none"> <li>• During "repetitive" execution, the remaining No. of repetitions is stored.</li> <li>• This value is decremented (-1) at the end of the repetition loop.</li> <li>• The loop ends when "0" is reached.</li> <li>• "0" is stored for an infinite loop.</li> </ul>	
<p>[Md.54] Positioning data No. being executed</p>	<ul style="list-style-type: none"> <li>• The positioning data No. currently being executed is stored.</li> <li>• For an indirectly specified positioning data No., the data No. converted to 1 to 600 is stored.</li> </ul>	
<p>[Md.55] Block No. being executed</p>	<ul style="list-style-type: none"> <li>• When controlling using the "start block data", the block No. "7000" to "7010" currently being executed is stored.</li> <li>• In all other cases, "0" is stored.</li> </ul>	
<p>[Md.56] Positioning data being executed</p>	<ul style="list-style-type: none"> <li>• The details of the positioning data currently being executed (data of positioning data No. stored in [Md.54]) are stored in the addresses shown on the right.</li> </ul>	

Reading the monitor value	Default value	Storage buffer memory address																																																						
		Axis 1	Axis 2	Axis 3																																																				
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value  ● Storage value 1 to 50</p>	0	832	932	1032																																																				
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value  ● Storage value 1 to 600</p>	0	833	933	1033																																																				
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value  ● Storage value 0 to 255</p>	0	834	934	1034																																																				
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value  ● Storage value 1 to 600</p>	0	835	935	1035																																																				
<p>■ Monitoring is carried out with a decimal display.</p> <p>Monitor value  ● Storage value 0, 7000 to 7010</p>	0	836	936	1036																																																				
<p>Each storage item is stored in the following storage address.</p> <table border="1" data-bbox="301 1505 880 1975"> <thead> <tr> <th colspan="3">Storage address</th> <th rowspan="2">Stored item</th> <th rowspan="2">Reference</th> </tr> <tr> <th>Axis 1</th> <th>Axis 2</th> <th>Axis 3</th> </tr> </thead> <tbody> <tr> <td>838</td> <td>938</td> <td>1038</td> <td>Positioning identifier</td> <td>Da.1 to Da.4</td> </tr> <tr> <td>839</td> <td>939</td> <td>1039</td> <td>M code</td> <td>Da.9</td> </tr> <tr> <td>840</td> <td>940</td> <td>1040</td> <td>Dwell time</td> <td>Da.8</td> </tr> <tr> <td>841</td> <td>941</td> <td>1041</td> <td>Not used</td> <td></td> </tr> <tr> <td>842</td> <td>942</td> <td>1042</td> <td rowspan="2">Command speed</td> <td rowspan="2">Da.7</td> </tr> <tr> <td>843</td> <td>943</td> <td>1043</td> </tr> <tr> <td>844</td> <td>944</td> <td>1044</td> <td>Positioning address</td> <td>Da.5</td> </tr> <tr> <td>845</td> <td>945</td> <td>1045</td> <td rowspan="3">Arc address</td> <td rowspan="3">Da.6</td> </tr> <tr> <td>846</td> <td>946</td> <td>1046</td> </tr> <tr> <td>847</td> <td>947</td> <td>1047</td> </tr> </tbody> </table>	Storage address			Stored item	Reference	Axis 1	Axis 2	Axis 3	838	938	1038	Positioning identifier	Da.1 to Da.4	839	939	1039	M code	Da.9	840	940	1040	Dwell time	Da.8	841	941	1041	Not used		842	942	1042	Command speed	Da.7	843	943	1043	844	944	1044	Positioning address	Da.5	845	945	1045	Arc address	Da.6	846	946	1046	847	947	1047	0	838 to 847	938 to 947	1038 to 1047
Storage address			Stored item			Reference																																																		
Axis 1	Axis 2	Axis 3																																																						
838	938	1038	Positioning identifier	Da.1 to Da.4																																																				
839	939	1039	M code	Da.9																																																				
840	940	1040	Dwell time	Da.8																																																				
841	941	1041	Not used																																																					
842	942	1042	Command speed	Da.7																																																				
843	943	1043																																																						
844	944	1044	Positioning address	Da.5																																																				
845	945	1045	Arc address	Da.6																																																				
846	946	1046																																																						
847	947	1047																																																						

Storage item	Storage details
[Md.100] Zero point return re-movement amount	<ul style="list-style-type: none"> <li>The movement amount (signed) of movement up to the zero point by re-movement is stored.</li> </ul>
[Md.101] Real current value	<ul style="list-style-type: none"> <li>The current value of actual movement (current feed value - droop value of deviation counter) is stored.</li> </ul>
[Md.102] Deviation counter value	<ul style="list-style-type: none"> <li>The droop pulse count of the deviation counter is stored.</li> <li>The update timing is 56.8ms.</li> </ul>
[Md.103] Motor speed	<ul style="list-style-type: none"> <li>The motor speed is stored with a sign. (Unit: 0.1r/min)</li> <li>The update timing is 56.8ms.</li> </ul>
[Md.104] Motor current	<ul style="list-style-type: none"> <li>The motor current is stored in % to the rated current. (Unit: 0.1%)</li> <li>The update timing is 56.8ms. (For the rated current value, refer to the Instruction Manual of the used servo amplifier.)</li> </ul>
[Md.105] Auto tuning	<ul style="list-style-type: none"> <li>The "[Pr.108] Auto tuning" servo parameter value set to the servo amplifier is stored.</li> <li>The update timing is 56.8ms.</li> </ul>






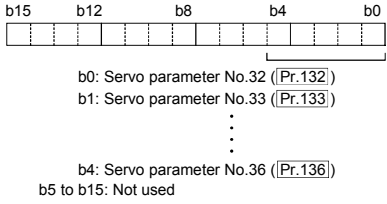

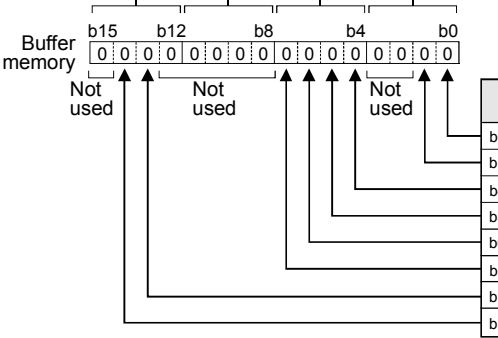
Reading the monitor value	Default value	Storage buffer memory address												
		Axis 1	Axis 2	Axis 3										
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Low-order buffer memory Example) 848 b15 b12 b8 b4 b0 E F G H</p> <p>High-order buffer memory Example) 849 b31 b28 b24 b20 b16 A B C D</p> <p>Monitor value E F G H A B C D</p> <p>◇ Sorting (High-order buffer memory) (Low-order buffer memory) A B C D E F G H</p> <p>◇ Converted from hexadecimal to decimal Decimal integer value R</p> <p>◇ Unit conversion <math>R \times 10^n</math></p> <p>● Unit conversion table</p> <table border="1"> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>-1</td> <td>μm</td> </tr> <tr> <td>-5</td> <td>inch</td> </tr> <tr> <td>-5</td> <td>degree</td> </tr> <tr> <td>0</td> <td>pulse</td> </tr> </tbody> </table> <p>Actual value [Md.100] Zero point return re-movement amount [Md.101] Real current value</p>	n	Unit	-1	μm	-5	inch	-5	degree	0	pulse	0	848 849	948 949	1048 1049
n	Unit													
-1	μm													
-5	inch													
-5	degree													
0	pulse													
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> ← ● Storage value (pulse)</p>	0	852 853	952 953	1052 1053										
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> ← ● Storage value (0.1r/min)</p>	0	854 855	954 955	1054 1055										
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> ← ● Storage value (0.1%)</p>	0	856	956	1056										
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value <input type="text"/> <input type="text"/> ← ● Storage value Value set in [Pr.108]</p>	0	857	957	1057										

Storage item	Storage details	
Md.106 Load inertia ratio	<ul style="list-style-type: none"> <li>The "Pr.112 Load inertia ratio" servo parameter value set to the servo amplifier is stored. (Unit: 0.1%) (When auto tuning is valid, the value calculated by auto tuning is stored.)</li> </ul>	
Md.107 Position loop gain 1	<ul style="list-style-type: none"> <li>The "Pr.113 Position loop gain 1" servo parameter value set to the servo amplifier is stored. (Unit: rad/s) (When auto tuning is valid, the value calculated by auto tuning is stored.)</li> </ul>	
Md.108 Speed loop gain 1	<ul style="list-style-type: none"> <li>The "Pr.114 Speed loop gain 1" servo parameter value set to the servo amplifier is stored. (Unit: rad/s) (When auto tuning is valid, the value calculated by auto tuning is stored.)</li> </ul>	
Md.109 Position loop gain 2	<ul style="list-style-type: none"> <li>The "Pr.115 Position loop gain 2" servo parameter value set to the servo amplifier is stored. (Unit: rad/s) (When auto tuning is valid, the value calculated by auto tuning is stored.)</li> </ul>	
Md.110 Speed loop gain 2	<ul style="list-style-type: none"> <li>The "Pr.116 Speed loop gain 2" servo parameter value set to the servo amplifier is stored. (Unit: rad/s) (When auto tuning is valid, the value calculated by auto tuning is stored.)</li> </ul>	
Md.111 Speed integral compensation	<ul style="list-style-type: none"> <li>The "Pr.117 Speed integral compensation" servo parameter value set to the servo amplifier is stored. (Unit: ms) (When auto tuning is valid, the value calculated by auto tuning is stored.)</li> </ul>	
Md.112 Servo amplifier software No.	<ul style="list-style-type: none"> <li>The used servo amplifier software No. is stored.</li> </ul>	

Reading the monitor value	Default value	Storage buffer memory address		
		Axis 1	Axis 2	Axis 3
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ← ● Storage value (0.1%)</p>	0	858	958	1058
	0	859	959	1059
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ← ● Storage value (rad/s)</p>	0	860	960	1060
	0	861	961	1061
	0	862	962	1062
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ← ● Storage value (ms)</p>	0	863	963	1063
<p>■ Monitoring is carried out with a hexadecimal.</p>	0	864 to 869	964 to 969	1064 to 1069

Storage item	Storage details
<p>[Md.113] Parameter error (No.1 to 15)</p>	<ul style="list-style-type: none"> <li>When a servo parameter error occurs, the bit corresponding to any of the servo parameter No. 1 to 15 ([Pr.101] to [Pr.115]) in error turns ON.</li> </ul>
<p>[Md.114] Parameter error (No.16 to 31)</p>	<ul style="list-style-type: none"> <li>When a servo parameter error occurs, the bit corresponding to any of the servo parameter No. 16 to 31 ([Pr.116] to [Pr.131]) in error turns ON.</li> </ul>
<p>[Md.115] Parameter error (No.32 to 36)</p>	<ul style="list-style-type: none"> <li>When a servo parameter error occurs, the bit corresponding to any of the servo parameter No. 32 to 36 ([Pr.132] to [Pr.136]) in error turns ON.</li> </ul>
<p>[Md.116] Servo status</p>	<ul style="list-style-type: none"> <li>The ON/OFF states of the servo status flags are stored. The following data are stored. <ul style="list-style-type: none"> <li>READY ON Indicates the ready status of the servo amplifier. ON indicates that the servo amplifier is ready, and OFF indicates that the servo amplifier is not ready.</li> <li>Servo ON Indicates the servo ON status. ON indicates servo ON, and OFF indicates servo OFF.</li> <li>Zero point pass Indicates whether the zero point (Z phase) of the pulse encoder installed on the servomotor has been passed or not after a start. ON indicates that the zero point has been passed at least once after a start. OFF indicates that the zero point has never been passed after a start.</li> <li>In-position ON indicates that the droop pulse value of the deviation counter is within the setting range of "[Pr.120] In-position range". OFF indicates any other case.</li> <li>Zero speed ON indicates the speed (speed at which the motor speed is judged as 0) is equal to or lower than the speed set in "[Pr.130] Zero speed". OFF indicates that the speed is higher than the zero speed.</li> <li>Torque limit ON indicates that the servo amplifier is limiting the torque. OFF indicates that the servo amplifier is not limiting the torque.</li> <li>Servo alarm ON indicates that an alarm has occurred in the servo amplifier. OFF indicates that no alarm has occurred.</li> <li>Servo warning ON indicates that a warning has occurred in the servo amplifier. OFF indicates that no warning has occurred.</li> </ul> </li> </ul>

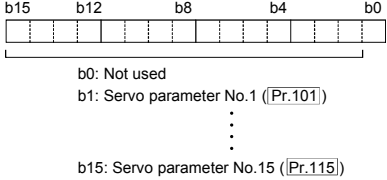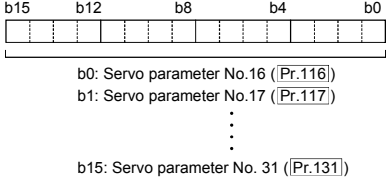


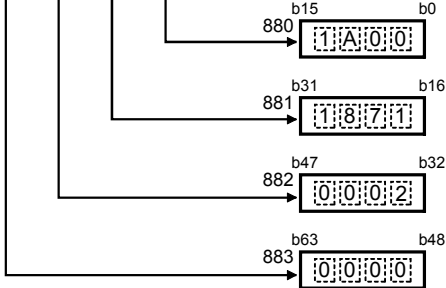

Reading the monitor value	Default value	Storage buffer memory address																						
		Axis 1	Axis 2	Axis 3																				
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Monitor value  → </p> <p>b0: Not used b1: Servo parameter No.1 (Pr.101) ⋮ b15: Servo parameter No.15 (Pr.115)</p>	0000H	870	970	1070																				
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Monitor value  → </p> <p>b0: Servo parameter No.16 (Pr.116) b1: Servo parameter No.17 (Pr.117) ⋮ b15: Servo parameter No. 31 (Pr.131)</p>	0000H	871	971	1071																				
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>Monitor value  → </p> <p>b0: Servo parameter No.32 (Pr.132) b1: Servo parameter No.33 (Pr.133) ⋮ b4: Servo parameter No.36 (Pr.136) b5 to b15: Not used</p>	0000H	872	972	1072																				
<p>■ Monitoring is carried out with a hexadecimal.</p> <p> Monitor value</p> <p></p> <table border="1" data-bbox="646 1568 1013 1825"> <thead> <tr> <th>Storage item</th> <th>Default value</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>b0</td> <td>0</td> <td rowspan="8">0: OFF 1: ON</td> </tr> <tr> <td>b1</td> <td>0</td> </tr> <tr> <td>b4</td> <td>0</td> </tr> <tr> <td>b5</td> <td>0</td> </tr> <tr> <td>b6</td> <td>0</td> </tr> <tr> <td>b7</td> <td>0</td> </tr> <tr> <td>b13</td> <td>0</td> </tr> <tr> <td>b14</td> <td>0</td> </tr> </tbody> </table>	Storage item	Default value	Meaning	b0	0	0: OFF 1: ON	b1	0	b4	0	b5	0	b6	0	b7	0	b13	0	b14	0	0000H	873	973	1073
Storage item	Default value	Meaning																						
b0	0	0: OFF 1: ON																						
b1	0																							
b4	0																							
b5	0																							
b6	0																							
b7	0																							
b13	0																							
b14	0																							

Storage item	Storage details
[Md.117] Regenerative load ratio *1	<ul style="list-style-type: none"> <li>The average value of the ratios of the regenerative load to the allowable value of the regenerative brake resistor selected in the servo basic parameter for the past 15 seconds is stored. (Unit: 1%)</li> <li>The update timing is 1 second interval.</li> </ul>
[Md.118] Effective load ratio *1	<ul style="list-style-type: none"> <li>The average value of the ratios of the load to the rated torque of the servomotor for the past 15 seconds is stored. (Unit: 1%)</li> <li>The update timing is 1 second interval.</li> </ul>
[Md.119] Peak load ratio *1	<ul style="list-style-type: none"> <li>The held value of the ratio of the peak load to the rated torque of the servomotor is stored. (Unit: 1%)</li> <li>The update timing is 1 second interval.</li> </ul>
[Md.120] FeRAM access count	<ul style="list-style-type: none"> <li>The FeRAM access count is stored.</li> <li>The value is incremented by "3" at power-on.</li> <li>Increase of the value at a machine zero point return in the absolute position detection system               <ol style="list-style-type: none"> <li>When "[Md.121] Absolute position restoration mode" is switched between the "standard mode" and "infinite length mode", the value is incremented by "4".</li> <li>When "[Md.121] Absolute position restoration mode" is not switched, the value is incremented by "2".</li> </ol> </li> <li>The update timing is 56.8ms.</li> </ul>
[Md.121] Absolute position restoration mode	<ul style="list-style-type: none"> <li>The mode for absolute position restoration is stored in the axis where "[Pr.1] Unit setting" is "2: degree" and absolute position detection is valid. (Set timing)               <ul style="list-style-type: none"> <li>At power-on</li> <li>At completion of machine zero point return</li> </ul> </li> <li>The update timing is 56.8ms.</li> </ul> <p>Refer to section 12.6.2 for details of mode switching for absolute position restoration.</p>

\*1: During any of the following processings, "[Md.117] Regenerative load ratio", "[Md.118] Effective load ratio" and "[Md.119] Peak load ratio" storage buffer memory data are not updated.

During the processing, therefore, a delay may occur in the updating of the "[Md.117] Regenerative load ratio", "[Md.118] Effective load ratio" and "[Md.119] Peak load ratio" storage buffer memory data.

- When a machine zero point return is made (when ZCT is read, when the absolute position reference point is read)
- When initial communication is being made with the servo amplifier
- When the PLC READY signal [Y1D] is turned from OFF to ON
- When the servo parameters are updated with the "AD75M servo position control gain function" of GX Configurator-AP (For details of GX Configurator-AP, refer to the GX Configurator-AP Operating Manual.)









Reading the monitor value	Default value	Storage buffer memory address		
		Axis 1	Axis 2	Axis 3
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ← ● Storage value (%)</p>	0	876	976	1076
	0	877	977	1077
	0	878	978	1078
<p>■ Monitoring is carried out with a hexadecimal.</p> <p>&lt;Reference&gt;                      Buffer memory status at the access count of 9,000,000,000 times                      9,000,000,000 = (0000 0002 1871 1A00)<sub>16</sub> &lt;Address&gt;</p> 	0	880 to 883	980 to 983	1080 to 1083
<p>■ Monitoring is carried out with a decimal.</p> <p>Monitor value  ← ● Storage value                      0: Standard mode                      1: Infinite length mode</p>	0	879	979	1079

## 5.7 List of control data

## 5.7.1 System control data

Setting item	Setting details
<p><input type="checkbox"/> Cd.1 Clock data setting (hour)</p>	<ul style="list-style-type: none"> <li>• The clock data (hour) from the programmable controller CPU is set after the AD75 power is turned ON.</li> </ul>
<p><input type="checkbox"/> Cd.2 Clock data setting (minute, second)</p>	<ul style="list-style-type: none"> <li>• The clock data (minute, second) from the programmable controller CPU is set after the AD75 power is turned ON.</li> </ul>
<p><input type="checkbox"/> Cd.3 Clock data writing</p>	<ul style="list-style-type: none"> <li>• After setting the clock data in <input type="checkbox"/> Cd.1 and <input type="checkbox"/> Cd.2, when setting the data in <input type="checkbox"/> Md.5 and <input type="checkbox"/> Md.6 as the AD75 clock data, set "1".</li> <li>• When the setting is completed, the OS sets "0".</li> </ul>
<p><input type="checkbox"/> Cd.4 Target axis*</p>	<ul style="list-style-type: none"> <li>• Set the axis targeted for reading or writing.</li> </ul>




\*  Cd.4 to  Cd.8 are data used to transmit the positioning data between the OS memory and buffer memory. (Refer to section "7.2 Data transmission process".)

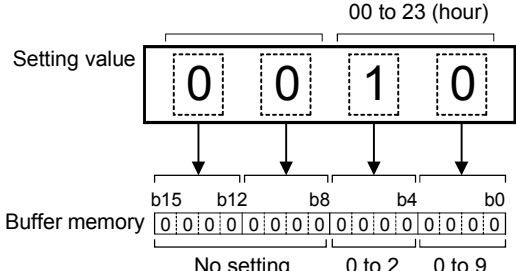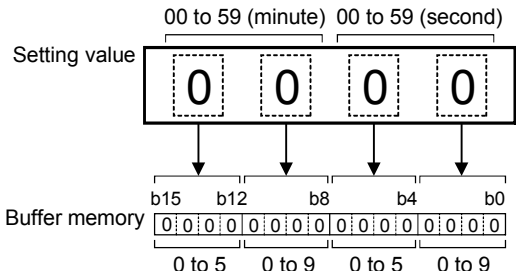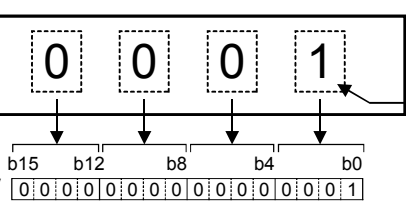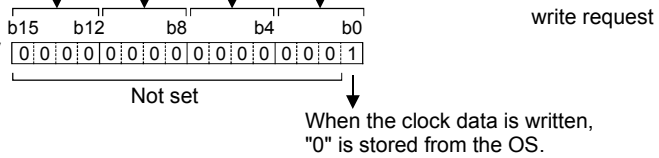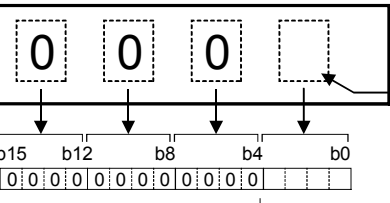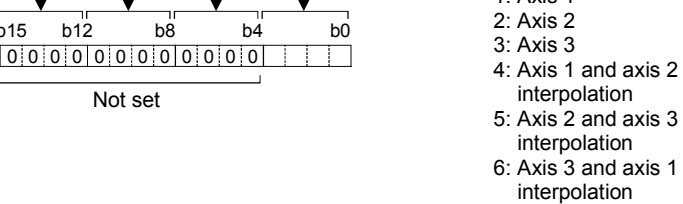Setting value	Default value	Storage buffer memory address (common for axis 1 to axis 3)
<p>■ Set with a BCD code.</p> <p style="text-align: center;">00 to 23 (hour)</p> <p>Setting value </p> <p>Buffer memory </p>	0000	1100
<p>■ Set with a BCD code.</p> <p style="text-align: center;">00 to 59 (minute) 00 to 59 (second)</p> <p>Setting value </p> <p>Buffer memory </p>	0000	1101
<p>■ Set with a hexadecimal.</p> <p>Setting value </p> <p>Buffer memory </p>	0000H	1102
<p>■ Set with a hexadecimal.</p> <p>Setting value </p> <p>Buffer memory </p>	0000H	1103

Cd.

Setting item	Setting details
<p><input type="text" value="Cd.5"/> Positioning data No.</p>	<ul style="list-style-type: none"> <li>• Set the positioning data No. targeted for reading or writing.</li> </ul>
<p><input type="text" value="Cd.6"/> Write pattern</p>	<ul style="list-style-type: none"> <li>• When writing the positioning data stored in the <input type="text" value="Cd.8"/> data storage address into the positioning data designated with <input type="text" value="Cd.5"/>, set the type of the data targeted for writing. <ul style="list-style-type: none"> <li>* When reading, all data types are unconditionally read.</li> </ul> </li> <li>• Address field <ul style="list-style-type: none"> <li>Set how to write data into the positioning address and arc address of the positioning data.</li> </ul> </li> <li>• Positioning data field <ul style="list-style-type: none"> <li>Set how to write the data other than the positioning address and arc address in the positioning data.</li> </ul> </li> </ul>
<p><input type="text" value="Cd.7"/> Read/write request</p>	<ul style="list-style-type: none"> <li>• When reading the positioning data, set "1". When writing, set "2".</li> <li>• Reading and writing are also carried out simultaneously for the interpolation axis.</li> <li>• Issue the write or read request when the PLC READY signal is OFF.</li> </ul>



\*  to  are data used to transmit the positioning data between the OS memory and buffer memory. (Refer to section "7.2 Data transmission process".)

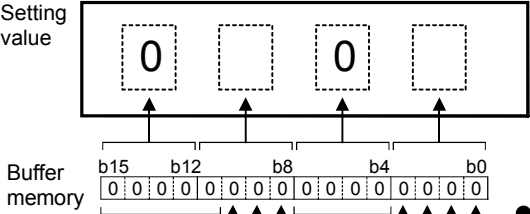Setting value	Default value	Storage buffer memory address (common for axis 1 to axis 3)																		
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● Positioning data 1 to 600</p>	0	1104																		
<p>■ Set with a hexadecimal.</p> <p>Setting value</p>  <p>Buffer memory</p> <p>b15 b12 b8 b4 b0</p> <p>0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0</p> <p>Not set</p> <p>● Positioning data field</p> <table border="1" data-bbox="694 1041 1013 1182"> <thead> <tr> <th>Stored item</th> <th>Setting value</th> </tr> </thead> <tbody> <tr> <td>Positioning identifier</td> <td></td> </tr> <tr> <td>M code</td> <td>0: Write 1: Do not write</td> </tr> <tr> <td>Dwell time</td> <td></td> </tr> <tr> <td>Command speed</td> <td></td> </tr> </tbody> </table> <p>● Address field</p> <table border="1" data-bbox="694 1220 1013 1429"> <thead> <tr> <th>Stored item</th> <th>Setting value</th> </tr> </thead> <tbody> <tr> <td>Arc address</td> <td>0: Write 1: Do not write</td> </tr> <tr> <td>Positioning address</td> <td></td> </tr> <tr> <td>Target of transfer</td> <td>0: Positioning data I/F for reading or writing is transferred. 1: The current feed value is transferred.</td> </tr> </tbody> </table>	Stored item	Setting value	Positioning identifier		M code	0: Write 1: Do not write	Dwell time		Command speed		Stored item	Setting value	Arc address	0: Write 1: Do not write	Positioning address		Target of transfer	0: Positioning data I/F for reading or writing is transferred. 1: The current feed value is transferred.	0000H	1105
Stored item	Setting value																			
Positioning identifier																				
M code	0: Write 1: Do not write																			
Dwell time																				
Command speed																				
Stored item	Setting value																			
Arc address	0: Write 1: Do not write																			
Positioning address																				
Target of transfer	0: Positioning data I/F for reading or writing is transferred. 1: The current feed value is transferred.																			
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● Read/write request</p> <p>1: Read request (Set by sequence program) 2: Write request (Set by sequence program)</p> <p>When reading/writing is completed, "0" is stored by the OS. (Indicates that the reading/writing is completed.)</p>	0	1106																		

Setting item	Setting details			
<p><input type="checkbox"/> Cd.8 Read/write positioning data I/F</p>	<ul style="list-style-type: none"> <li>• Store the data when reading or writing.</li> </ul>			
<p><input type="checkbox"/> Cd.9 Flash ROM write request</p>	<ul style="list-style-type: none"> <li>• Write the OS memory contents into the flash ROM.</li> </ul>			
<p><input type="checkbox"/> Cd.10 Parameter initialization request</p>	<ul style="list-style-type: none"> <li>• Set whether the setting data will be initialized or not.</li> </ul> <p>Initialization: Indicates that the setting values of the setting data are returned to the default values.</p> <p>Note) After completion of the setting data initialization processing, reset the programmable controller or power on the programmable controller again.</p> <p>Initialized setting data</p> <table border="1" data-bbox="588 1581 1099 1702"> <tr> <td>Parameter (<input type="checkbox"/> Pr.1 to <input type="checkbox"/> Pr.150)</td> </tr> <tr> <td>Positioning data (No. 1 to 600)</td> </tr> <tr> <td>Positioning start information (No. 7000 to 7010)</td> </tr> </table>	Parameter ( <input type="checkbox"/> Pr.1 to <input type="checkbox"/> Pr.150)	Positioning data (No. 1 to 600)	Positioning start information (No. 7000 to 7010)
Parameter ( <input type="checkbox"/> Pr.1 to <input type="checkbox"/> Pr.150)				
Positioning data (No. 1 to 600)				
Positioning start information (No. 7000 to 7010)				





\*  Cd.4 to  Cd.8 are data used to transmit the positioning data between the OS memory and buffer memory. (Refer to section "7.2 Data transmission process".)

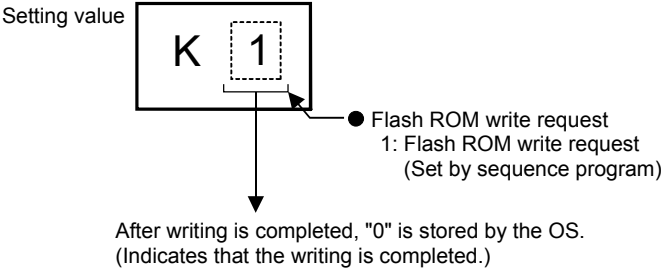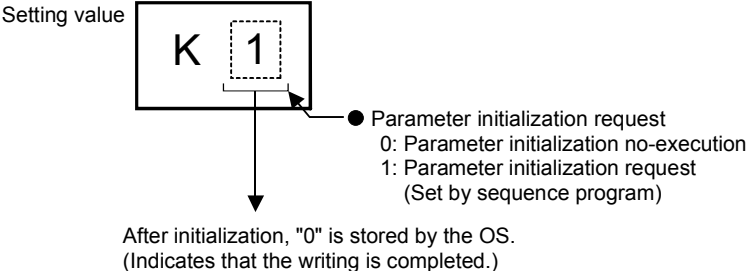

Setting value	Default value	Storage buffer memory address (common for axis 1 to axis 3)																																																				
<p>Each stored item is stored in the following storage address.</p> <table border="1" data-bbox="316 450 895 864"> <thead> <tr> <th colspan="3">Storage address</th> <th rowspan="2">Stored item</th> <th rowspan="2">Reference</th> </tr> <tr> <th>Axis 1</th> <th>Axis 2</th> <th>Axis 3</th> </tr> </thead> <tbody> <tr> <td>1108</td> <td>1118</td> <td>1128</td> <td>Positioning identifier</td> <td>Da.1 to Da.4</td> </tr> <tr> <td>1109</td> <td>1119</td> <td>1129</td> <td>M code</td> <td>Da.9</td> </tr> <tr> <td>1110</td> <td>1120</td> <td>1130</td> <td>Dwell time</td> <td>Da.8</td> </tr> <tr> <td>1111</td> <td>1121</td> <td>1131</td> <td>Not used</td> <td></td> </tr> <tr> <td>1112</td> <td>1122</td> <td>1132</td> <td rowspan="2">Command speed</td> <td rowspan="2">Da.7</td> </tr> <tr> <td>1113</td> <td>1123</td> <td>1133</td> </tr> <tr> <td>1114</td> <td>1124</td> <td>1134</td> <td rowspan="2">Positioning address</td> <td rowspan="2">Da.5</td> </tr> <tr> <td>1115</td> <td>1125</td> <td>1135</td> </tr> <tr> <td>1116</td> <td>1126</td> <td>1136</td> <td rowspan="2">Arc address</td> <td rowspan="2">Da.6</td> </tr> <tr> <td>1117</td> <td>1127</td> <td>1137</td> </tr> </tbody> </table>	Storage address			Stored item	Reference	Axis 1	Axis 2	Axis 3	1108	1118	1128	Positioning identifier	Da.1 to Da.4	1109	1119	1129	M code	Da.9	1110	1120	1130	Dwell time	Da.8	1111	1121	1131	Not used		1112	1122	1132	Command speed	Da.7	1113	1123	1133	1114	1124	1134	Positioning address	Da.5	1115	1125	1135	1116	1126	1136	Arc address	Da.6	1117	1127	1137	0	1108 to 1137
Storage address			Stored item			Reference																																																
Axis 1	Axis 2	Axis 3																																																				
1108	1118	1128	Positioning identifier	Da.1 to Da.4																																																		
1109	1119	1129	M code	Da.9																																																		
1110	1120	1130	Dwell time	Da.8																																																		
1111	1121	1131	Not used																																																			
1112	1122	1132	Command speed	Da.7																																																		
1113	1123	1133																																																				
1114	1124	1134	Positioning address	Da.5																																																		
1115	1125	1135																																																				
1116	1126	1136	Arc address	Da.6																																																		
1117	1127	1137																																																				
<p>■ Set with a decimal.</p> <p>Setting value</p> 	0	1138																																																				
<p>■ Set with a decimal.</p> <p>Setting value</p> 	0	1139																																																				

## 5.7.2 Axis control data

Setting item	Setting details	
Cd.11 Positioning start No.	<ul style="list-style-type: none"><li>• Set the positioning start No.</li></ul>	
Cd.12 Axis error reset	<ul style="list-style-type: none"><li>• Clears the axis error detection, axis error No., axis warning detection and axis warning No.</li><li>• When the AD75 axis operation state is "in error occurrence", the error is cleared and the AD75 is returned to the "waiting" state.</li></ul>	
Cd.13 Restart command	<ul style="list-style-type: none"><li>• When positioning is stopped for any reason (when axis operation state is "stopped"), set "1" in Cd.13. Positioning will be carried out again from the stopped position to the end point of the stopped positioning data.</li></ul>	
Cd.14 M code OFF request	<ul style="list-style-type: none"><li>• The M code ON signal turns OFF.</li></ul>	

Setting value	Default value	Storage buffer memory address		
		Axis 1	Axis 2	Axis 3
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● Positioning data No.                      · 1 to 600 : Positioning data No.                      · 7000 to 7010 : Block start designation                      · 8001 to 8050 : Indirectly specification                      · 9001 : Machine zero point return                      · 9002 : High-speed zero point return                      · 9003 : Current value change</p>	0	1150	1200	1250
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● Error reset request                      Axis 1: Axis error is reset.                      (Set by sequence program)</p> <p>After the axis error reset is completed, "0" is stored by the OS.                      (Indicates that the axis error reset is completed.)</p>	0	1151	1201	1251
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● Restart command                      1: Restarts                      (Set by sequence program)</p> <p>After restart acceptance is completed, "0" is stored by the OS.                      (Indicates that the restart acceptance is completed.)</p>	0	1152	1202	1252
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● M code OFF request                      1: M code ON signal turns OFF                      (Set by sequence program)</p> <p>After the M code ON signal turns OFF, "0" is stored by the OS.                      (Indicates that the OFF request is completed.)</p>	0	1153	1203	1253

Setting item	Setting details								
<p><b>Cd.15</b> New current value</p>	<ul style="list-style-type: none"> <li>When changing the current feed value using the start No. "9003", set the new current feed value.</li> <li>The value is set within the following range.</li> </ul> <table border="1" data-bbox="584 517 1406 660"> <thead> <tr> <th>mm (<math>\times 10^{-1}\mu\text{m}</math>)</th> <th>inch (<math>\times 10^{-5}\text{inch}</math>)</th> <th>degree (<math>\times 10^{-5}\text{degree}</math>)</th> <th>pulse (pulse)</th> </tr> </thead> <tbody> <tr> <td>-2147483648 to +2147483647</td> <td>-2147483648 to +2147483647</td> <td>0 to 35999999</td> <td>-2147483648 to +2147483647</td> </tr> </tbody> </table>	mm ( $\times 10^{-1}\mu\text{m}$ )	inch ( $\times 10^{-5}\text{inch}$ )	degree ( $\times 10^{-5}\text{degree}$ )	pulse (pulse)	-2147483648 to +2147483647	-2147483648 to +2147483647	0 to 35999999	-2147483648 to +2147483647
mm ( $\times 10^{-1}\mu\text{m}$ )	inch ( $\times 10^{-5}\text{inch}$ )	degree ( $\times 10^{-5}\text{degree}$ )	pulse (pulse)						
-2147483648 to +2147483647	-2147483648 to +2147483647	0 to 35999999	-2147483648 to +2147483647						
<p><b>Cd.16</b> New speed value</p>	<ul style="list-style-type: none"> <li>When changing the speed, set the new speed.</li> <li>The operation will stop when "0" is set.</li> <li>The value is set within the following range.</li> </ul> <table border="1" data-bbox="584 887 1406 1019"> <thead> <tr> <th>mm (<math>\times 10^{-2}\text{mm/min}</math>)</th> <th>inch (<math>\times 10^{-3}\text{inch/min}</math>)</th> <th>degree (<math>\times 10^{-3}\text{degree/min}</math>)</th> <th>pulse (pulse/s)</th> </tr> </thead> <tbody> <tr> <td>0 to 600000000</td> <td>0 to 600000000</td> <td>0 to 600000000</td> <td>0 to 1000000</td> </tr> </tbody> </table>	mm ( $\times 10^{-2}\text{mm/min}$ )	inch ( $\times 10^{-3}\text{inch/min}$ )	degree ( $\times 10^{-3}\text{degree/min}$ )	pulse (pulse/s)	0 to 600000000	0 to 600000000	0 to 600000000	0 to 1000000
mm ( $\times 10^{-2}\text{mm/min}$ )	inch ( $\times 10^{-3}\text{inch/min}$ )	degree ( $\times 10^{-3}\text{degree/min}$ )	pulse (pulse/s)						
0 to 600000000	0 to 600000000	0 to 600000000	0 to 1000000						
<p><b>Cd.17</b> Speed change request</p>	<p>To request the speed change process (to validate the <b>Cd.16</b> value) after setting the "<b>Cd.16</b> New speed value", set "1".</p>								
<p><b>Cd.18</b> Positioning operation speed override</p>	<ul style="list-style-type: none"> <li>When applying an override on the speed during positioning operation, set the "override" value.</li> </ul> <p>* Refer to section "12.5.2 Override function" for details on the "override".</p>								






Setting value	Default value	Storage buffer memory address																						
		Axis 1	Axis 2	Axis 3																				
<p>■ Set with a decimal.</p> <p>Actual value</p> <div style="border: 1px solid black; padding: 5px; display: inline-block;"> <span style="border: 1px solid black; padding: 2px;">Cd.15</span> New current value  <span style="border: 1px solid black; padding: 2px;">Cd.16</span> New speed value         </div> <p style="text-align: center;">↓</p> <p>◇ Integer value <math>\times 10^n</math></p> <p>Setting value (decimal) <span style="border: 1px solid black; padding: 2px 10px;">R</span></p> <div style="border: 1px dashed black; padding: 5px; margin-top: 10px;"> <p>Example)</p> <p>When setting "10000.00mm/min" in the "<span style="border: 1px solid black; padding: 2px;">Cd.16</span> New speed value", set "1000000" in the buffer memory.</p> </div> <div style="margin-top: 10px;"> <p>● Unit conversion table (<span style="border: 1px solid black; padding: 2px;">Cd.15</span>)</p> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr><td>1</td><td>mm</td></tr> <tr><td>5</td><td>inch</td></tr> <tr><td>5</td><td>degree</td></tr> <tr><td>0</td><td>pulse</td></tr> </tbody> </table> <p>● Unit conversion table (<span style="border: 1px solid black; padding: 2px;">Cd.16</span>)</p> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr><td>2</td><td>mm/min</td></tr> <tr><td>3</td><td>inch/min</td></tr> <tr><td>3</td><td>degree/min</td></tr> <tr><td>0</td><td>pulse/s</td></tr> </tbody> </table> </div>	n	Unit	1	mm	5	inch	5	degree	0	pulse	n	Unit	2	mm/min	3	inch/min	3	degree/min	0	pulse/s	0	1154 1155	1204 1205	1254 1255
n	Unit																							
1	mm																							
5	inch																							
5	degree																							
0	pulse																							
n	Unit																							
2	mm/min																							
3	inch/min																							
3	degree/min																							
0	pulse/s																							
<p>■ Set with a decimal.</p> <p>Setting value <span style="border: 1px solid black; padding: 5px;">K <span style="border: 1px dashed black; padding: 2px 5px;">1</span></span></p> <p style="margin-left: 100px;">● <span style="border: 1px solid black; padding: 2px;">Cd.17</span> Speed change request 1: Change speed (Set by sequence program)</p> <p style="margin-left: 40px;">↓</p> <p>After accepting the speed change, "0" is stored by the OS. (Indicates that the speed change acceptance is completed.)</p>	0	1158	1208	1258																				
<p>■ Set with a decimal.</p> <p>Setting value <span style="border: 1px solid black; padding: 5px;">K <span style="border: 1px dashed black; padding: 2px 5px;"> </span> <span style="border: 1px dashed black; padding: 2px 5px;"> </span> <span style="border: 1px dashed black; padding: 2px 5px;"> </span></span></p> <p style="margin-left: 100px;">● Override value (%) 1 to 300</p>	0	1159	1209	1259																				

Setting item	Setting details								
<p><b>Cd.19</b> JOG speed</p>	<ul style="list-style-type: none"> <li>• Set the JOG speed for JOG operation.</li> <li>• The value is set within the following range.</li> </ul> <table border="1" data-bbox="584 562 1406 719"> <thead> <tr> <th data-bbox="584 562 791 636">mm (<math>\times 10^{-2}</math>mm/min)</th> <th data-bbox="791 562 999 636">inch (<math>\times 10^{-3}</math>inch/min)</th> <th data-bbox="999 562 1206 636">degree (<math>\times 10^{-3}</math>degree/min)</th> <th data-bbox="1206 562 1406 636">pulse (pulse/s)</th> </tr> </thead> <tbody> <tr> <td data-bbox="584 636 791 719">0 to 600000000</td> <td data-bbox="791 636 999 719">0 to 600000000</td> <td data-bbox="999 636 1206 719">0 to 600000000</td> <td data-bbox="1206 636 1406 719">0 to 1000000</td> </tr> </tbody> </table>	mm ( $\times 10^{-2}$ mm/min)	inch ( $\times 10^{-3}$ inch/min)	degree ( $\times 10^{-3}$ degree/min)	pulse (pulse/s)	0 to 600000000	0 to 600000000	0 to 600000000	0 to 1000000
mm ( $\times 10^{-2}$ mm/min)	inch ( $\times 10^{-3}$ inch/min)	degree ( $\times 10^{-3}$ degree/min)	pulse (pulse/s)						
0 to 600000000	0 to 600000000	0 to 600000000	0 to 1000000						
<p><b>Cd.20</b> Speed/position changeover enable flag</p>	<ul style="list-style-type: none"> <li>• Set whether to validate the control signal (speed/position changeover signal) from an external source.</li> </ul>								
<p><b>Cd.21</b> Speed/position changeover control movement amount change register</p>	<ul style="list-style-type: none"> <li>• To change the movement amount for the position control during speed control of speed/position changeover control, set the movement amount after changing to position control.</li> <li>• Make the setting during the speed control of speed/positioning changeover control.</li> <li>• The setting value is cleared to 0 at the next start.</li> <li>• Set the value within the following range.</li> </ul> <table border="1" data-bbox="584 1592 1406 1749"> <thead> <tr> <th data-bbox="584 1592 791 1666">mm (<math>\times 10^{-1}</math>μmm)</th> <th data-bbox="791 1592 999 1666">inch (<math>\times 10^{-5}</math>inch)</th> <th data-bbox="999 1592 1206 1666">degree (<math>\times 10^{-5}</math>degree)</th> <th data-bbox="1206 1592 1406 1666">pulse (pulse)</th> </tr> </thead> <tbody> <tr> <td data-bbox="584 1666 791 1749">0 to 2147483647</td> <td data-bbox="791 1666 999 1749">0 to 2147483647</td> <td data-bbox="999 1666 1206 1749">0 to 2147483647</td> <td data-bbox="1206 1666 1406 1749">0 to 2147483647</td> </tr> </tbody> </table>	mm ( $\times 10^{-1}$ μmm)	inch ( $\times 10^{-5}$ inch)	degree ( $\times 10^{-5}$ degree)	pulse (pulse)	0 to 2147483647	0 to 2147483647	0 to 2147483647	0 to 2147483647
mm ( $\times 10^{-1}$ μmm)	inch ( $\times 10^{-5}$ inch)	degree ( $\times 10^{-5}$ degree)	pulse (pulse)						
0 to 2147483647	0 to 2147483647	0 to 2147483647	0 to 2147483647						






Setting value	Default value	Storage buffer memory address												
		Axis 1	Axis 2	Axis 3										
<p>■ Set with a decimal.</p> <p>Actual value <span style="border: 1px solid black; padding: 2px;">Cd.19 JOG speed</span></p> <p style="text-align: center;">↓</p> <p style="text-align: center;">◇ Integer value × 10<sup>n</sup></p> <p>Setting value (decimal) <span style="border: 1px solid black; padding: 2px;">R</span></p> <p style="text-align: right;">● Unit conversion table (Cd.19)</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>2</td> <td>mm/min</td> </tr> <tr> <td>3</td> <td>inch/min</td> </tr> <tr> <td>3</td> <td>degree/min</td> </tr> <tr> <td>0</td> <td>pulse/s</td> </tr> </tbody> </table> <p style="border: 1px dashed black; padding: 5px; margin-top: 10px;">Example) When setting "20000.00mm/min" in the "Cd.19 JOG speed", set "2000000" in the buffer memory.</p>	n	Unit	2	mm/min	3	inch/min	3	degree/min	0	pulse/s	0	1160 1161	1210 1211	1260 1261
n	Unit													
2	mm/min													
3	inch/min													
3	degree/min													
0	pulse/s													
<p>■ Set with a decimal.</p> <p>Setting value <span style="border: 1px solid black; padding: 5px; display: inline-block;">K <span style="border: 1px dashed black; padding: 2px 10px;"> </span></span></p> <p style="text-align: right;">● Cd.20 Speed/position changeover enable flag</p> <p>0: Even if the speed/position changeover signal turns ON, the control does not change from speed to position control. 1: When the speed/position changeover signal turns ON, the control changes from speed to position control.</p>	0	1163	1213	1263										
<p>■ Set with a decimal.</p> <p>Actual value <span style="border: 1px solid black; padding: 2px;">Cd.21 Speed/position changeover control movement amount change register</span></p> <p style="text-align: center;">↓</p> <p style="text-align: center;">◇ Integer value × 10<sup>n</sup></p> <p>Setting value (decimal) <span style="border: 1px solid black; padding: 2px;">R</span></p> <p style="text-align: right;">● Unit conversion table (Cd.21)</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>n</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>mm</td> </tr> <tr> <td>5</td> <td>inch</td> </tr> <tr> <td>5</td> <td>degree</td> </tr> <tr> <td>0</td> <td>pulse</td> </tr> </tbody> </table> <p style="border: 1px dashed black; padding: 5px; margin-top: 10px;">Example) When setting "20000.0mm" in the "Cd.21 Speed/position changeover control movement amount change register", set "200000" in the buffer memory.</p>	n	Unit	1	mm	5	inch	5	degree	0	pulse	0	1164 1165	1214 1215	1264 1265
n	Unit													
1	mm													
5	inch													
5	degree													
0	pulse													

Setting item	Setting details	
Cd.22 Manual pulse generator enable flag	<ul style="list-style-type: none"><li>• Set whether or not to carry out manual pulse generator operation.</li></ul>	
Cd.23 Manual pulse generator 1 pulse input magnification	<ul style="list-style-type: none"><li>• Set the magnification of the No. of pulses input from the manual pulse generator.</li><li>• When setting value is 0 or less: Processed as "1"</li><li>• When setting value is 101 or more: Processed as "100"</li></ul>	
Cd.24 Zero point return request flag OFF request	<ul style="list-style-type: none"><li>• When the zero point return request flag is ON, set the request to turn this OFF forcibly with the sequence program.</li></ul>	
Cd.25 External start valid	<ul style="list-style-type: none"><li>• Set whether external starting is valid.</li></ul>	
Cd.26 Step valid flag	<ul style="list-style-type: none"><li>• Set whether to carry out step operation.</li></ul>	








Setting value	Default value	Storage buffer memory address		
		Axis 1	Axis 2	Axis 3
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>● Manual pulse generator enable flag 0: Disable manual pulse generator operation 1: Enable manual pulse generator operation</p>	0	1167	1217	1267
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>● Manual pulse generator 1 pulse input magnification 1 to 100</p>	1	1168 1169	1218 1219	1268 1269
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>● Zero point return request flag OFF request 1: Turn OFF the "zero point return request flag" that is ON. (Set by sequence program)</p> <p>After the zero point return request turns OFF, "0" is stored by the OS. (Indicates that the zero point return request flag OFF request is completed.)</p>	0	1170	1220	1270
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>● External start valid 0: Invalidate external start 1: Validate external start</p>	0	1171	1221	1271
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>● Step valid flag 0: Do not carry out step operation 1: Carry out step operation</p>	0	1172	1222	1272

Setting item	Setting details
[Cd.27] Step mode	<ul style="list-style-type: none"> <li>• When using step operation, set which unit to step with.</li> </ul>
[Cd.28] Step start information	<ul style="list-style-type: none"> <li>• When using step operation, set whether to continue or restart operation.</li> </ul>
[Cd.29] Skip command	<ul style="list-style-type: none"> <li>• Set "1" to skip the current positioning.</li> </ul>
[Cd.30] New torque value	<ul style="list-style-type: none"> <li>• To change the "[Md.45] Torque limit stored value", set the new estimated torque limit stored value.</li> <li>• Set the value within the "[Pr.18] Torque limit setting value" range.</li> </ul>
[Cd.31] Positioning starting point No.	<ul style="list-style-type: none"> <li>• Set the "start point No. (1 to 50)" for executing block start (positioning).</li> </ul>

Setting value	Default value	Storage buffer memory address		
		Axis 1	Axis 2	Axis 3
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● Step mode 0: Carry out step operation with deceleration unit 1: Carry out step operation with data No. unit</p>	0	1173	1223	1273
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● Step start information 1: Step continue 2: Restart</p> <p>After the step start request is accepted, "0" is stored by the OS.</p>	0	1174	1224	1274
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● Skip command 1: Decelerate to a stop, and then carry out the next positioning. (Skip request) (Set by sequence program)</p> <p>After the skip request is accepted, "0" is stored by the OS.</p>	0	1175	1225	1275
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● New torque value 1 to [Pr.18] Torque limit setting value</p>	0	1176	1226	1276
<p>■ Set with a decimal.</p> <p>Setting value</p>  <p>● Positioning starting point No. 1 to 50</p> <p>When continuous operation is interrupted, "0" is stored automatically.</p>	0	1178	1228	1278

Setting item	Setting details						
<p>[Cd.32] Interrupt request during continuous operation</p>	<ul style="list-style-type: none"> <li>To interrupt the operation during continuous operation, set "1".</li> <li>If the interrupt request is received after setting "1", "0" will be automatically stored by the OS.</li> </ul>						
<p>[Cd.33] New acceleration time value</p>	<ul style="list-style-type: none"> <li>When changing the acceleration time during speed change, set the new acceleration time.</li> </ul> <table border="1" data-bbox="596 792 1251 940"> <thead> <tr> <th data-bbox="596 792 874 864">[Pr.25] setting</th> <th data-bbox="874 792 1251 864">[Cd.33] setting range (unit)</th> </tr> </thead> <tbody> <tr> <td data-bbox="596 864 874 900">1-word type</td> <td data-bbox="874 864 1251 900">0 to 65535 (mm)</td> </tr> <tr> <td data-bbox="596 900 874 940">2-word type</td> <td data-bbox="874 900 1251 940">0 to 8388608 (ms)</td> </tr> </tbody> </table>	[Pr.25] setting	[Cd.33] setting range (unit)	1-word type	0 to 65535 (mm)	2-word type	0 to 8388608 (ms)
[Pr.25] setting	[Cd.33] setting range (unit)						
1-word type	0 to 65535 (mm)						
2-word type	0 to 8388608 (ms)						
<p>[Cd.34] New deceleration time value</p>	<ul style="list-style-type: none"> <li>When changing the deceleration time during speed change, set the new deceleration time.</li> </ul> <table border="1" data-bbox="596 1057 1251 1205"> <thead> <tr> <th data-bbox="596 1057 874 1128">[Pr.25] setting</th> <th data-bbox="874 1057 1251 1128">[Cd.33] setting range (unit)</th> </tr> </thead> <tbody> <tr> <td data-bbox="596 1128 874 1164">1-word type</td> <td data-bbox="874 1128 1251 1164">0 to 65535 (mm)</td> </tr> <tr> <td data-bbox="596 1164 874 1205">2-word type</td> <td data-bbox="874 1164 1251 1205">0 to 8388608 (ms)</td> </tr> </tbody> </table>	[Pr.25] setting	[Cd.33] setting range (unit)	1-word type	0 to 65535 (mm)	2-word type	0 to 8388608 (ms)
[Pr.25] setting	[Cd.33] setting range (unit)						
1-word type	0 to 65535 (mm)						
2-word type	0 to 8388608 (ms)						
<p>[Cd.35] Acceleration/deceleration time change during speed change, enable/disable selection</p>	<ul style="list-style-type: none"> <li>Set whether to enable/disable the acceleration/deceleration time change during speed change.</li> </ul>						
<p>[Cd.100] Servo OFF command</p>	<ul style="list-style-type: none"> <li>Set "1" when it is desired to switch the servo OFF (free run status) during positioning standby.</li> <li>During positioning operation, the servo OFF command is invalid. (However, if the servo amplifier results in error during positioning operation, the servo OFF command is made valid immediately.)</li> </ul>						
<p>[Cd.101] Torque output setting value</p>	<ul style="list-style-type: none"> <li>Set the torque to be output by the servomotor.</li> <li>This value is the torque limit setting value when the setting value is greater than "[Pr.18] Torque limit setting value".</li> <li>When this value is "0", "[Pr.18] Torque limit setting value" is output.</li> </ul>						

Setting value	Default value	Storage buffer memory address		
		Axis 1	Axis 2	Axis 3
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>● Continuous operation interrupt request 1: Interrupt continuous control or continuous path control. (Set by sequence program)</p> <p>After the control interrupt request is accepted, "0" is stored by the OS. (Indicates that the continuous operation interrupt request is completed.)</p>	0	1181	1231	1281
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>Example) To set "60000ms" for the "Cd.33 New acceleration time value", set "60000" in the buffer memory.</p>	0	1184 1185	1234 1235	1284 1285
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>● Acceleration/deceleration time change during speed change, enable/disable selection 1: Enable acceleration/deceleration time change Other than 1: Disable acceleration/deceleration time change</p>	0	1188	1238	1288
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>● Servo OFF command 0: Servo ON 1: Servo OFF</p>	0	1179	1229	1279
<p>■ Set with a decimal.</p> <p>Setting value </p> <p>● Torque output setting value 0 to 500 (%)</p>	0	1180	1230	1280

MEMO

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

# CHAPTER 6

---

## SEQUENCE PROGRAM USED FOR POSITIONING CONTROL

The programs required to carry out positioning control with the AD75 are explained in this chapter.

The sequence program required for control is created allowing for the "start conditions", "start time chart", "device settings" and general control configuration. (The parameters, positioning data, start block data and condition data, etc., must be set in the AD75 according to the control to be executed, and program for setting the control data or a program for starting the various control must be created.)

The first half of this chapter explains the program configuration of general control, and the latter half explains the program details. Create the required program while referring to the various control details explained in "SECTION 2", and to "CHAPTER 5 DATA USED FOR POSITIONING CONTROL".

6.1	Precautions for creating program .....	6- 2
6.2	List of devices used .....	6- 4
6.3	Creating a program .....	6- 8
6.3.1	General configuration of program .....	6- 8
6.3.2	Positioning control operation program .....	6- 9
6.4	Positioning program examples.....	6- 12
6.5	Program details .....	6- 21
6.5.1	Initialization program.....	6- 21
6.5.2	Start details setting program.....	6- 22
6.5.3	Start program .....	6- 23
6.5.4	Continuous operation interrupt program .....	6- 31
6.5.5	Restart program .....	6- 33
6.5.6	Stop program .....	6- 36

## 6.1 Precautions for creating program

The common precautions to be taken when writing data from the programmable controller CPU to the AD75 buffer memory are described below.

Note) Connect the upper and lower limit switches to the directions of increasing and decreasing current feed values respectively. When these switches are connected in wrong directions, the hardware stroke limit function does not operate properly and the motor does not stop.

## (1) Reading/writing the data


Setting the data explained in this chapter (various parameters, positioning data, positioning start information) should be set using the AD75 software package. When set with the sequence program, many sequence programs and devices must be used. This will not only complicate the program, but will also increase the scan time.

When rewriting the positioning data during continuous path control or continuous positioning control, rewrite the data four positioning data items before the actual execution. If the positioning data is not rewritten before the positioning data four items earlier is executed, the process will be carried out as if the data was not rewritten.

## (2) Programming with the A0J2CPU

When using the AD75 with the A0J2CPU, there are commands that cannot be used, such as TOP/FROMP.

Change these as shown below.

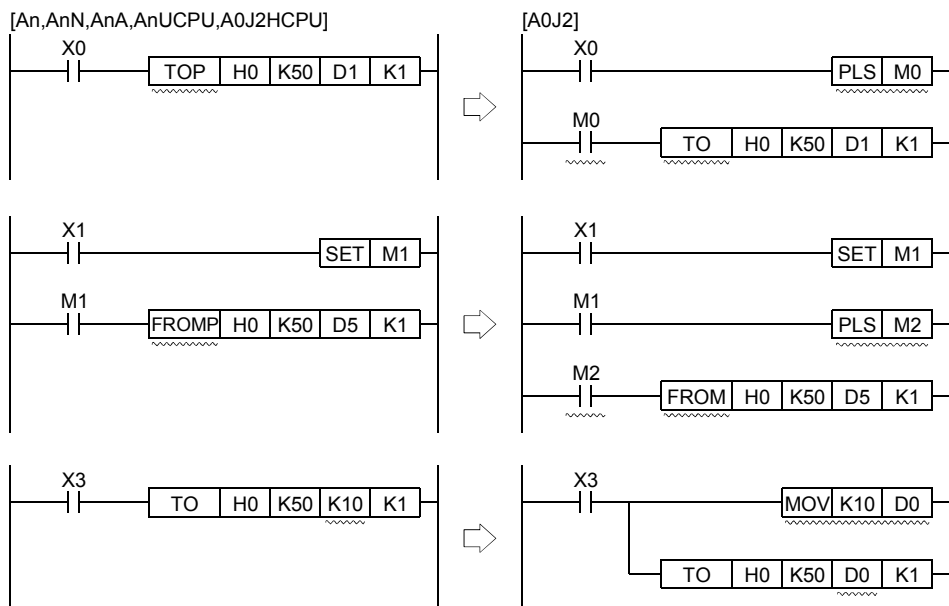

## (3) Unusable commands

When the QnACPU is used, the dedicated commands for A1SD75P□-S3/AD75P□-S3 (AD75 control commands) are unavailable.

## (4) Restrictions to No. of FROM/TO commands executed in one scan

The FROM/TO command (during 16-bit data transmission), the DFRO/DTO command (during 32-bit data transmission), and the command using the special function module device (U□\G□) that can be executed with one programmable controller CPU scan using the AD75 are as follows.

- (a) With the 1-axis and 2-axis module, the FROM/TO command, the DFRO/DTO command, and the command using the special function module device can be executed up to 10 times per axis.



- (b) With the 3-axis module, the number of times the FROM/TO command, the DFRO/DTO command, and the command using the special function module device are executed changes depending on the function to be executed.
- When carrying out circular interpolation control and S-curve acceleration/deceleration : 4 times/axis
  - When CHG input is input simultaneously for two axes during speed/position changeover control : 4 times/axis
  - When not carrying out the above control : 10 times/axis

	Circular interpolation control	S-curve acceleration/deceleration	Speed/position changeover control (CHG input simultaneously for two axes)	Control other than that on left
A1SD75M1 AD75M1	10 times/axis	10 times/axis	10 times/axis	10 times/axis
A1SD75M2 AD75M2	10 times/axis	10 times/axis	10 times/axis	10 times/axis
A1SD75M3 AD75M3	4 times/axis	4 times/axis	4 times/axis	10 times/axis

(5) Restrictions to speed change execution interval

Provide an interval of 100ms or more when changing the speed with the AD75.


(6) Process during overrun

Overrun is prevented with the AD75's upper and lower stroke limit. However, this applies only when the AD75 is operating correctly. In terms of the entire system's safety, it is recommended to provide a boundary limit switch and provide an external circuit that will power OFF the motor when the limit switch operates.

(7) AD75 mounting position

Unless particularly designated following this chapter, the sequence program for the following conditions is shown.

- Programmable controller CPU module : A3UCPU
- AD75 input/output signal : X/Y00H to X/Y1FH  
(When AD75 is mounted in slot 0 of the main base unit.)

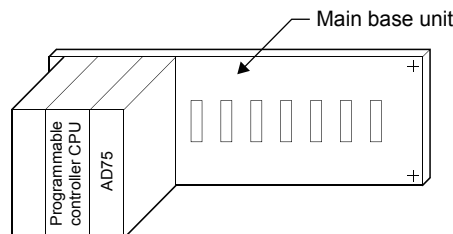

**POINT**

During the various processes of the special function module, the access from the programmable controller CPU is processed as a priority. Thus, if the special function module's buffer memory is frequently accessed from the programmable controller CPU, the programmable controller CPU scan time will increase and a delay will occur in the special function module's processes. Access the buffer memory from the programmable controller CPU with the FROM/TO command, etc., only when necessary.

6.2 List of devices used

The application of the input/output Nos. [X] [Y], internal relays [M] and data registers [D] used in this chapter are shown below.

Device name	Device			Application	Details when ON	
	Axis 1	Axis 2	Axis 3			
AD75	Input	X0		AD75 READY signal	Preparation incomplete/WDT error	
		X1	X2	X3	Positioning start complete signal	Start completed
		X4	X5	X6	BUSY signal	BUSY (operating)
		X7	X8	X9	Positioning complete signal	Positioning completed
		XA	XB	XC	Error detection signal	Error detected
		XD	XE	XF	M code ON signal	Outputting M code
	Output	Y10	Y11	Y12	Positioning start signal	Requesting start
		Y13	Y14	Y1C	Axis stop signal	Requesting stop
		Y15			All axes servo ON signal	Requesting all axes servo ON
		Y16	Y18	Y1A	Forward run JOG start signal	Starting forward run JOG
		Y17	Y19	Y1B	Reverse run JOG start signal	Starting reverse run JOG
Y1D			PLC READY signal	Programmable controller CPU preparation completed		
Command	X20	—		Zero point return request OFF command	Commanding zero point return request OFF	
	X21	—		External start valid setting command	Commanding external start valid setting	
	X22	—		External start invalid command	Commanding external start invalid command	
	X23	—		Machine zero point return command	Commanding machine zero point return	
	X24	—		High-speed zero point return command	Commanding high-speed zero point return	
	X25	—		Positioning start command	Commanding positioning start	
	X26	—		Speed/position changeover operation command	Commanding speed/position changeover operation	
	X27	—		Speed/position changeover enable command	Commanding speed/position changeover enable	
	X28	—		Speed/position changeover prohibit command	Commanding speed/position changeover prohibit	
	X29	—		Movement amount change command	Commanding movement amount change	
	X2A	—		Advanced positioning control start command	Commanding advanced positioning control start	
	X2B	—		Positioning start command	Commanding positioning start	
	X2C	—		M code OFF command	Commanding M code OFF	
	X2D	—		JOG operation speed setting command	Commanding JOG operation speed setting	
	X2E	—		Forward run JOG command	Commanding forward run JOG operation	
	X2F	—		Reverse run JOG command	Commanding reverse run JOG	
	X30	—		Manual pulse generator operation enable command	Commanding manual pulse generator operation enable	
	X31	—		Manual pulse generator operation disable command	Commanding manual pulse generator operation disable	
X32	—		Speed change command	Commanding speed change		
X33	—		Override command	Commanding override		
X34	—		Acceleration/deceleration time change command	Commanding acceleration/deceleration time change		

Device name	Device			Application	Details when ON	
	Axis 1	Axis 2	Axis 3			
Command	X35	-		Acceleration/deceleration time change disable command	Commanding acceleration/deceleration time change disable	
	X36			Torque change command	Commanding torque change	
	X37			Step operation command	Commanding step operation	
	X38			Skip command	Commanding skip	
	X39			Teaching command	Commanding teaching	
	X3A			Continuous operation interrupt command	Commanding continuous operation interrupt	
	X3B			Restart command	Commanding restart	
	X3C			Parameter initialization command	Commanding parameter initialization	
	X3D			Flash ROM write command	Commanding flash ROM write	
	X3E			-		Error reset command
	X3F	Stop command	Commanding stop			
	X40		All axes servo OFF command	All axes servo OFF		
	X41	-		Axis 1 servo OFF command	Axis 1 servo OFF	
Internal relay	M0	-		Zero point return request OFF command	Commanding zero point return request OFF	
	M1			Zero point return request OFF command pulse	Zero point return request OFF commanded	
	M2			Zero point return request OFF command storage	Zero point return request OFF command held	
	M3			Clock data write command pulse	Clock data write commanded	
	M4		Clock data write command storage	Clock data write command held		
	M5	-		High-speed zero point return command	Requesting high-speed zero point return	
	M6			High-speed zero point return command storage	High-speed zero point return command held	
	M7			Positioning start command pulse	Positioning start commanded	
	M8			Positioning start command storage	Positioning start command held	
	M9			In JOG flag	In JOG flag	
	M10			Manual pulse generator operation enable command	Requesting manual pulse generator operation enable	
	M11			Manual pulse generator operating flag	Manual pulse generator operating flag	
	M12			Manual pulse generator operation disable command	Requesting manual pulse generator operation disable	
	M13			Speed change command pulse	Speed change commanded	
	M14			Speed change command storage	Speed change command held	
	M15			Override command	Requesting override	
	M16			Acceleration/deceleration time change command	Requesting acceleration/deceleration time change	
	M17			Torque change command	Requesting torque change	
	M18			Step operation command pulse	Step operation commanded	
	M19			Skip operation command pulse	Skip operation commanded	
	M20			Skip operation command storage	Skip operation command held	
	M21	Teaching command pulse	Teaching commanded			
	M22	Teaching command storage	Teaching command held			
	M23	Continuous operation interrupt command	Requesting continuous operation interrupt			
	M24	Restart command	Requesting restart			
M25	Restart command storage	Restart command held				

Device name	Device			Application	Details when ON		
	Axis 1	Axis 2	Axis 3				
Internal relay	M26			Parameter initialization command pulse	Parameter initialization commanded		
	M27			Parameter initialization command storage	Parameter initialization command held		
	M28			Flash ROM write command pulse	Flash ROM write commanded		
	M29			Flash ROM write command storage	Flash ROM write command held		
	M30	-		Error code read complete	Error code read completed		
	M31			Error reset	Error reset completed		
	M32			Stop command pulse	Stop commanded		
	M9028			Clock data read command	Requesting clock data read		
	M9036			Always ON contact	Always ON contact		
	M9038			1 scan ON after RUN	1 scan turned ON after RUN		
	M9039			1 scan OFF after RUN	1 scan turned OFF after RUN		
Data register	D0	-		Status information	( [Md.40] Status)		
	D1			Zero point return request flag	( [Md.40] Status (bit3))		
	D2			Zero point return request OFF results	( [Cd.24] Zero point return request flag OFF request)		
	D3			Date/hour data	Programmable controller CPU clock data		
	D4			Minute/second data			
	D5	-		Clock data write request	( [Cd.3] Clock data writing)		
	D6			Clock data write results	( [Cd.3] Clock data writing)		
	D7			Positioning data No.	Positioning data No.		
	D8			Movement amount (low-order 16 bits)	( [Cd.21] Speed/position changeover control movement amount change register)		
	D9			Movement amount (high-order 16 bits)			
	D10			JOG operation speed (low-order 16 bits)	( [Cd.19] JOG speed)		
	D11			JOG operation speed (high-order 16 bits)			
	D12			Manual pulse generator 1 pulse input magnification (low-order)	( [Cd.23] Manual pulse generator 1 pulse input magnification)		
	D13			Manual pulse generator 1 pulse input magnification (high-order)			
	D14			Speed change value (low-order 16 bits)	( [Cd.16] New speed value)		
	D15			Speed change value (high-order 16 bits)			
	D16			Speed change request	( [Cd.17] Speed change request)		
	D17			Speed change result	( [Cd.17] Speed change request)		
	D18			Override value	( [Cd.18] Positioning operation speed override)		
	D19			Acceleration time setting (low-order 16 bits)	( [Cd.33] New acceleration time value)		
	D20			Acceleration time setting (high-order 16 bits)			
	D21			Deceleration time setting (low-order 16 bits)	( [Cd.34] New deceleration time value)		
	D22			Deceleration time setting (high-order 16 bits)			
	D23			Torque output setting value	( [Cd.101] Torque output setting value)		
	D24			Step valid flag	( [Cd.26] Step valid flag)		
	D25			Step mode	( [Cd.27] Step mode)		
	D26			Skip operation results	( [Cd.29] Skip command)		
	D27			Target axis	( [Cd.4] Target axis)		
	D28			Positioning data No.	( [Cd.5] Positioning data No.)		
D29				Write pattern	( [Cd.6] Write pattern)		


Device name	Device			Application	Details when ON			
	Axis 1	Axis 2	Axis 3					
Data register		D30		Read/write request	( [Cd.7] Read/write request)			
		D31		Teaching results	( [Cd.7] Read/write request)			
		D32		Axis state	( [Md.35] Axis operation status)			
		D33		Restart command	( [Cd.13] Restart command)			
		D34		Parameter initialization results	( [Cd.10] Parameter initialization request)			
		D35		Flash ROM write results	( [Cd.9] Flash ROM write request)			
		D36	-	Positioning data No.1	Error code	( [Md.33] Axis error No.)		
		D40			Positioning identifier	For teaching	( [Da.1] to [Da.4])	
		D41			M code		( [Da.9] M code)	
		D42			Dwell time		( [Da.8] Dwell time)	
		D43			Blank		Blank	
		D44			Speed command (low-order 16 bits)		( [Da.7] Command speed)	
		D45			Speed command (high-order 16 bits)			
		D50			Unit setting	( [Pr.1] Unit setting)		
		D51			No. of pulses per rotation	( [Pr.2] No. of pulses per rotation)		
		D52			Movement amount per rotation	( [Pr.3] Movement amount per rotation)		
		D53			Unit magnification	( [Pr.4] Unit magnification )		
		D56			-	Positioning data No.1	Positioning identifier	( [Da.1] Operation pattern) ( [Da.2] Control method) ( [Da.3] Acceleration time No.) ( [Da.4] Deceleration time No.)
		D57					M code	( [Da.9] M code)
		D58					Dwell time	( [Da.8] Dwell time)
		D59					(Dummy)	-
		D60	Command speed (low-order 16 bits)	( [Da.7] Command speed)				
		D61	Command speed (high-order 16 bits)					
		D62	Positioning address/movement amount	(low-order 16 bits)			( [Da.5] Positioning address/movement amount)	
		D63		(high-order 16 bits)				
		D64	Arc address	(low-order 16 bits)			( [Da.6] Arc address)	
		D65		(high-order 16 bits)				
		D66	-	Positioning start information (Start block data)			1st point (Shape, start No.)	( [Da.10] Shape)
		D67					2nd point (Shape, start No.)	
		D68					3rd point (Shape, start No.)	
		D69					4th point (Shape, start No.)	
		D70					5th point (Shape, start No.)	
		D71			1st point (Special start command)	( [Da.12] Special start command)	( [Da.13] Parameter)	
		D72			2nd point (Special start command)			
		D73			3rd point (Special start command)			
		D74			4th point (Special start command)			
		D75			5th point (Special start command)			
		D9026			Date/hour data		Clock data	
		D9027			Minute/second data			
	Timer	T0			-	PLC READY signal OFF confirmation		PLC READY signal OFF
		T1				PLC READY signal OFF confirmation		

### 6.3 Creating a program

The "positioning control operation program" actually used is explained in this chapter. The functions and programs explained in "SECTION 2" are assembled into the "positioning control operation program" explained here. (To monitor the control, add the required monitor program that matches the system. Refer to section "5.6 List of monitor data" for details on the monitor items.)


#### 6.3.1 General configuration of program


The general configuration of the "positioning control operation program" is shown below.

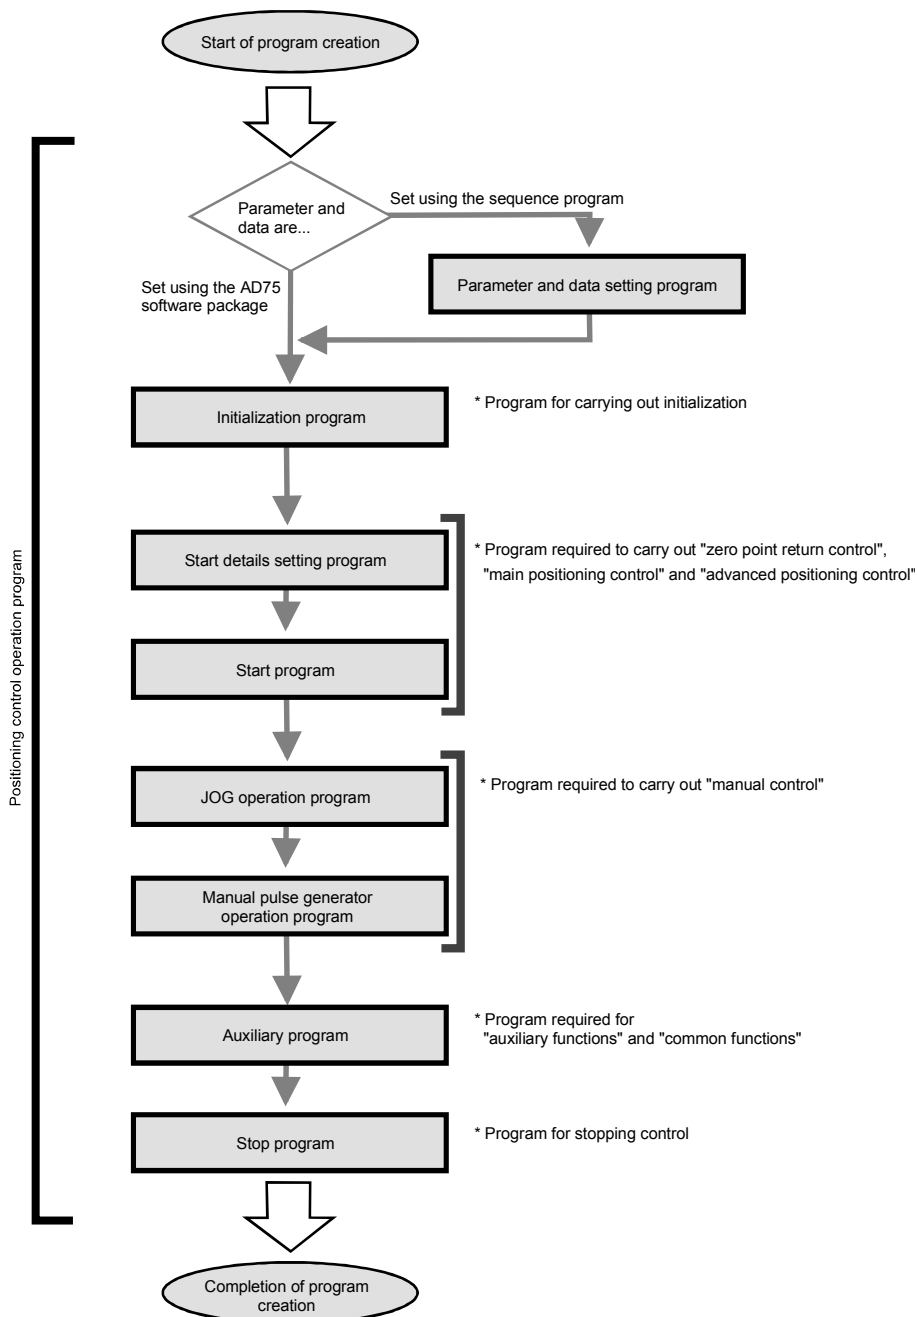


6.3.2 Positioning control operation program

The various programs that configure the "positioning control operation program" are shown below. When creating the program, refer to the explanation of each program and section "6.4 Positioning program examples", and create an operation program that matches the positioning system. (Numbers are assigned to the following programs. Configuring the program in the order of these numbers is recommended.)

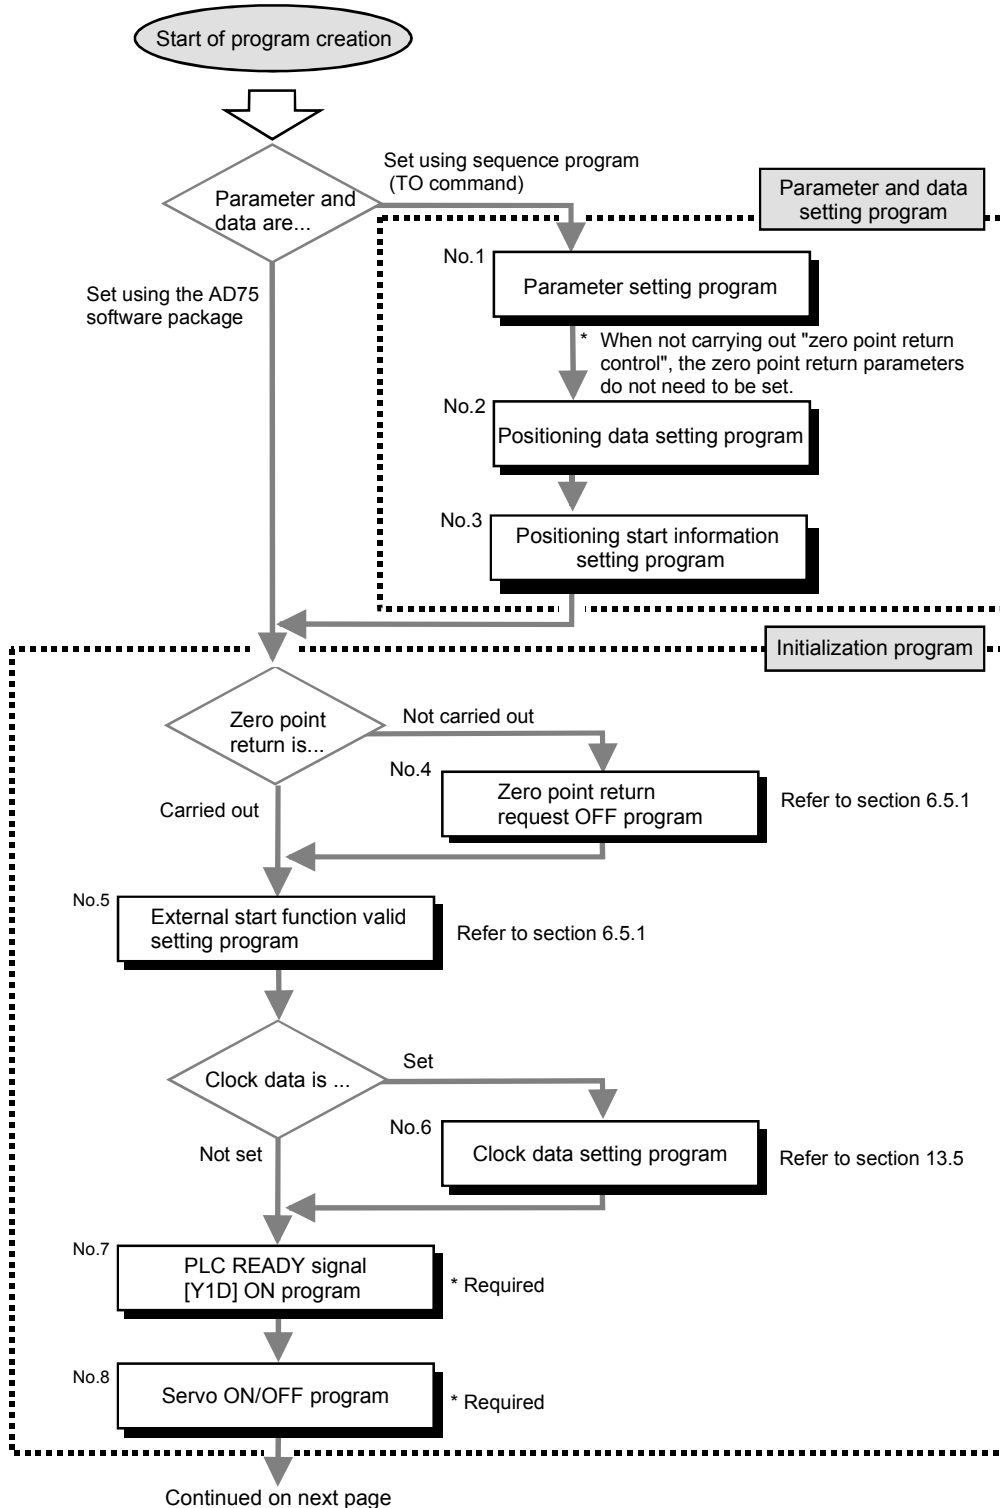

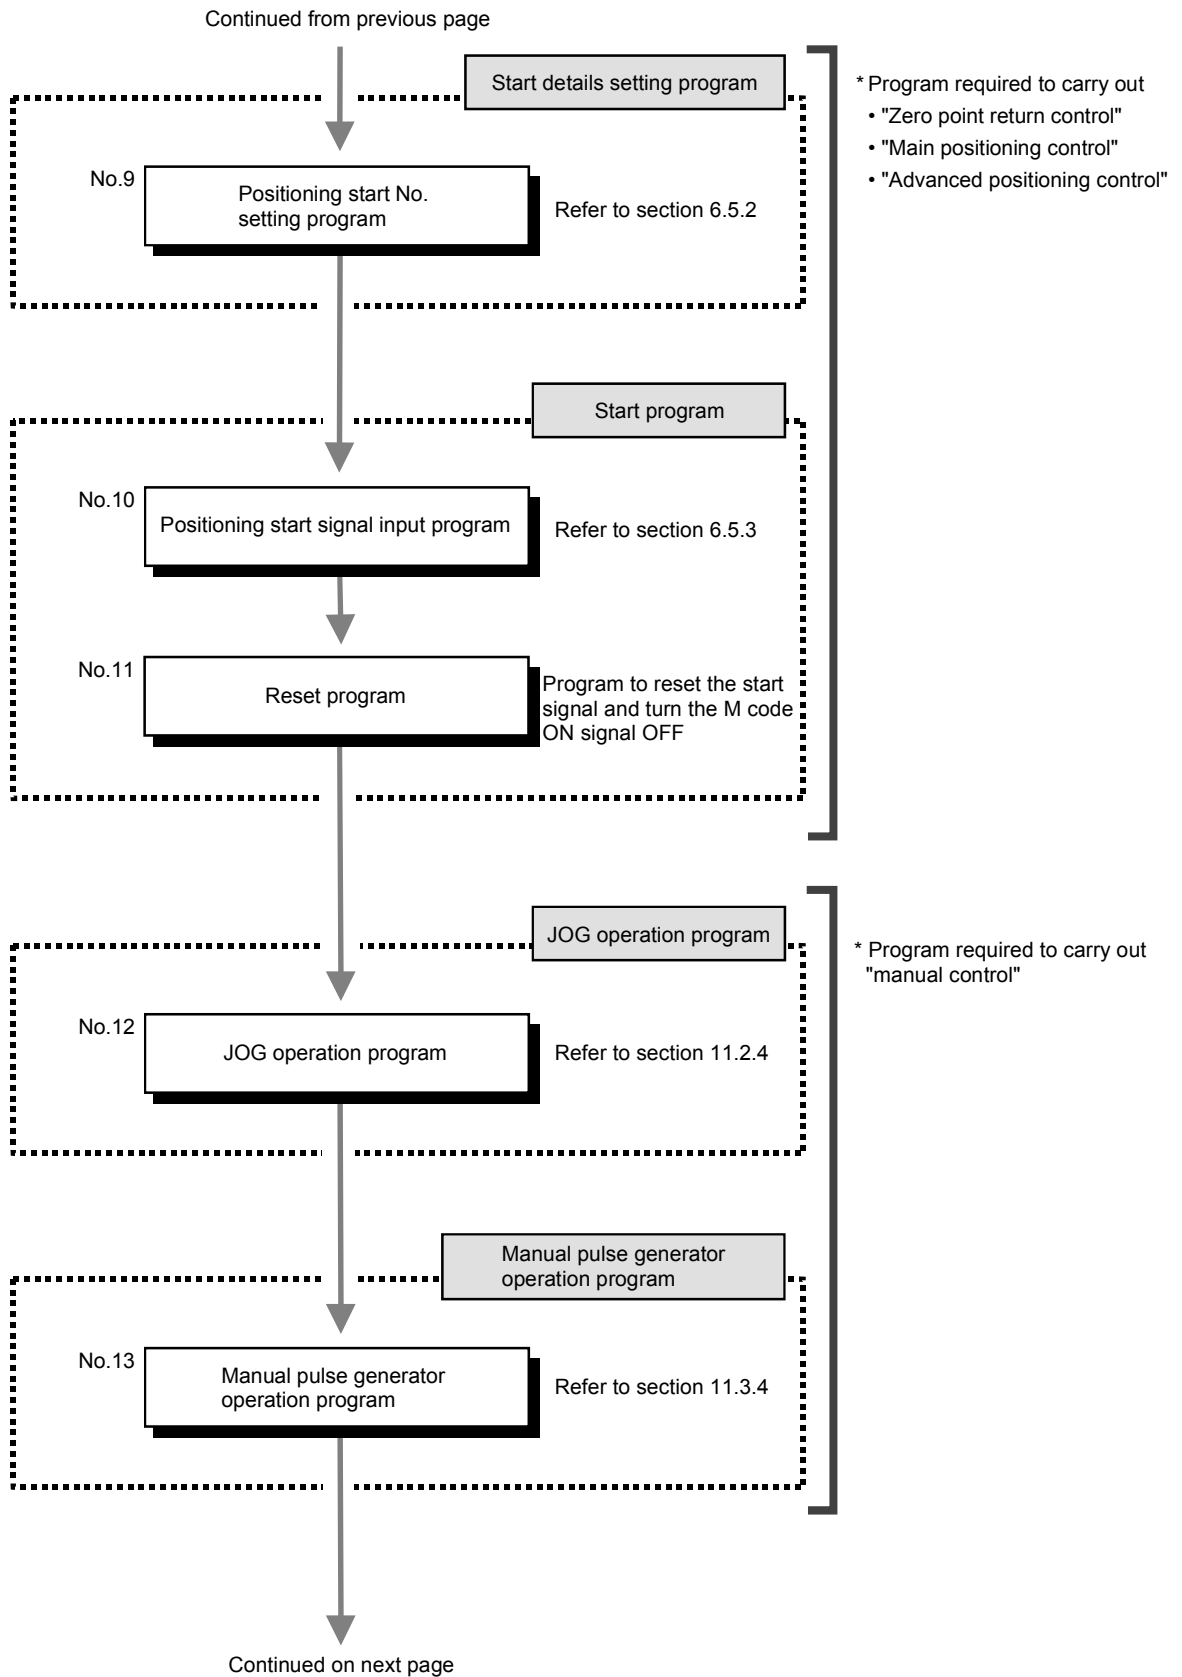



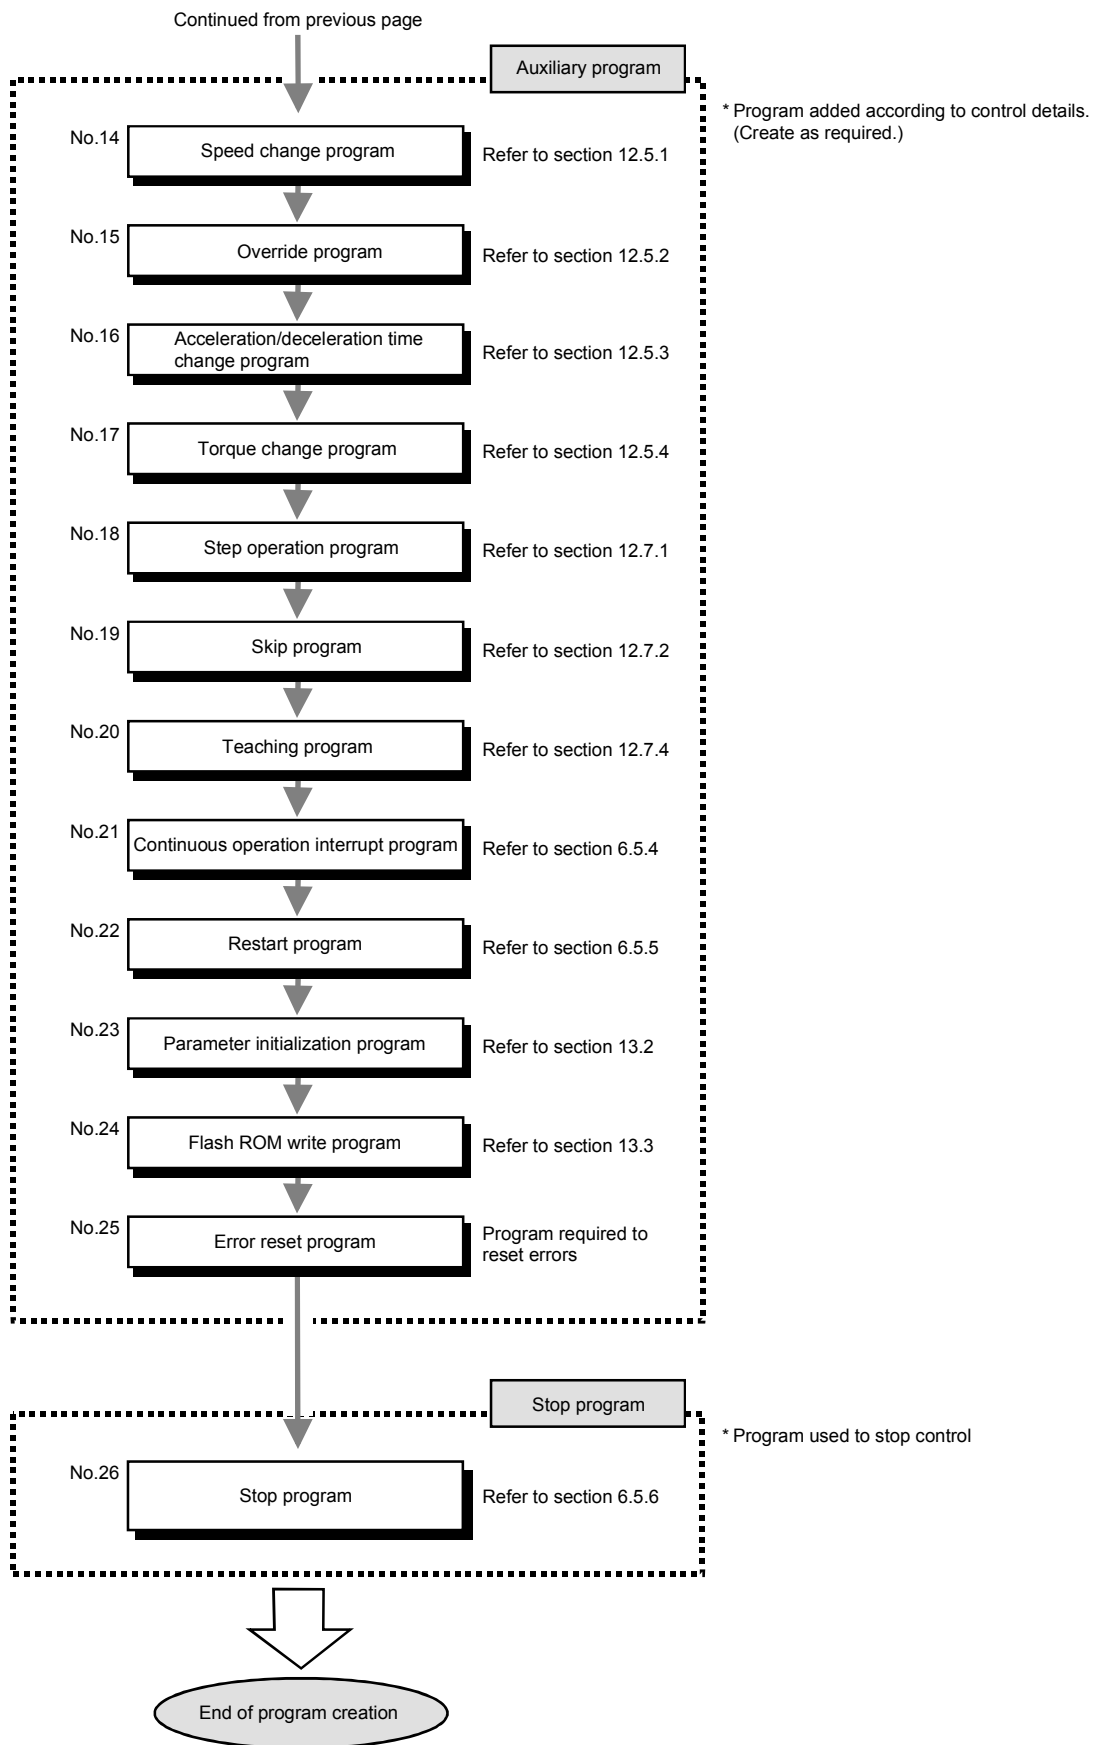

6.4 Positioning program examples


An example of the "Axis 1" positioning program is given in this section.

----- [No. 1] to [No. 3] parameter and data setting program -----

\* When setting the parameters or data with the sequence program, set them in the AD75 using the TO command from the PLC CPU. (Carry out the settings while the PLC READY signal [Y1D] is OFF.)

\* When setting the parameters or data with the AD75 software package, the [No. 1] to [No. 3] program is not necessary.

\* No.1 Parameter setting program  
 \* (For basic parameter 1 axis 1)

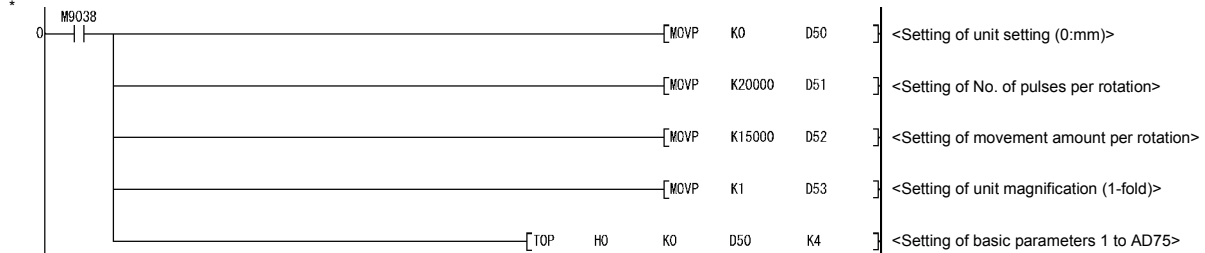


\* No.2 Positioning data setting program  
 \* (For positioning data No.1 axis 1)

<Positioning identifier>

\* Operation pattern : Positioning complete


\* Control method : 1-axis liner control (ABS)

\* Acceleration time No.:1, Deceleration time No.:2

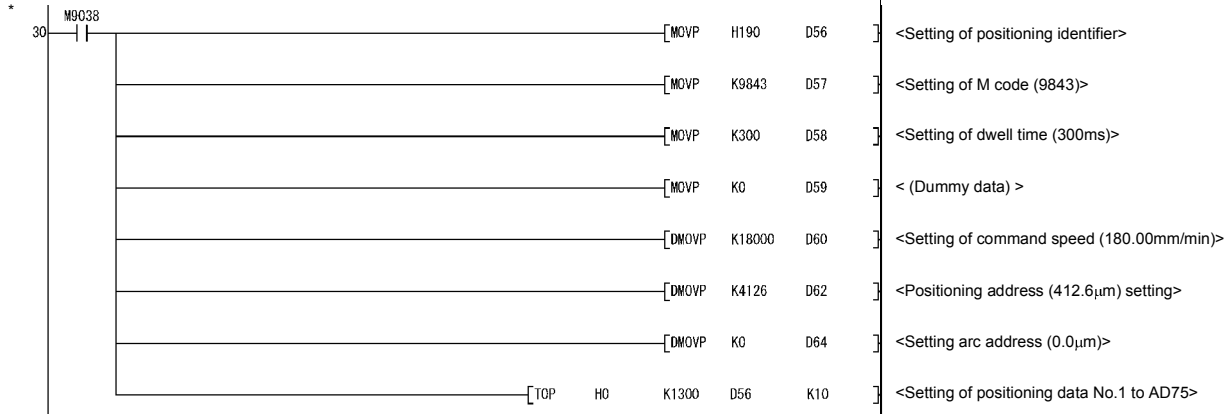


\*  
 \* No.3 Positioning start information setting program  
 \* Start block data of block No.7000 (axis 1)  
 \* For setting of points 1 to 5  
 \* (Conditions)  
 \* Shapes: Continued at points 1 to 4, ended at point 5  
 \* Special start command : Normal start at all of points 1 to 5  
 \* <Positioning data are already preset>


\* [Setting of shape and start data No.]

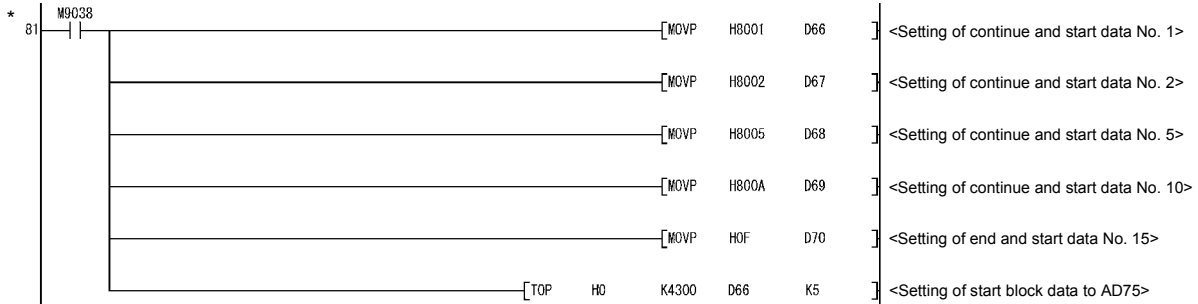


\* [Setting of special start command to normal start]

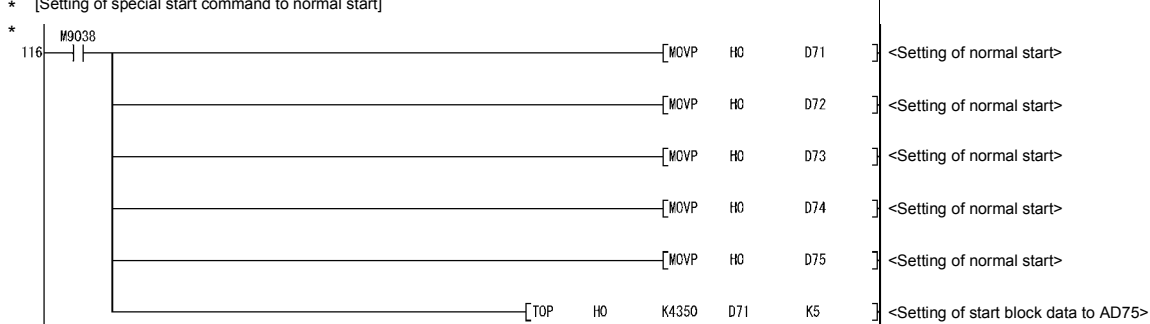


\* No.4 Zero point return request OFF program

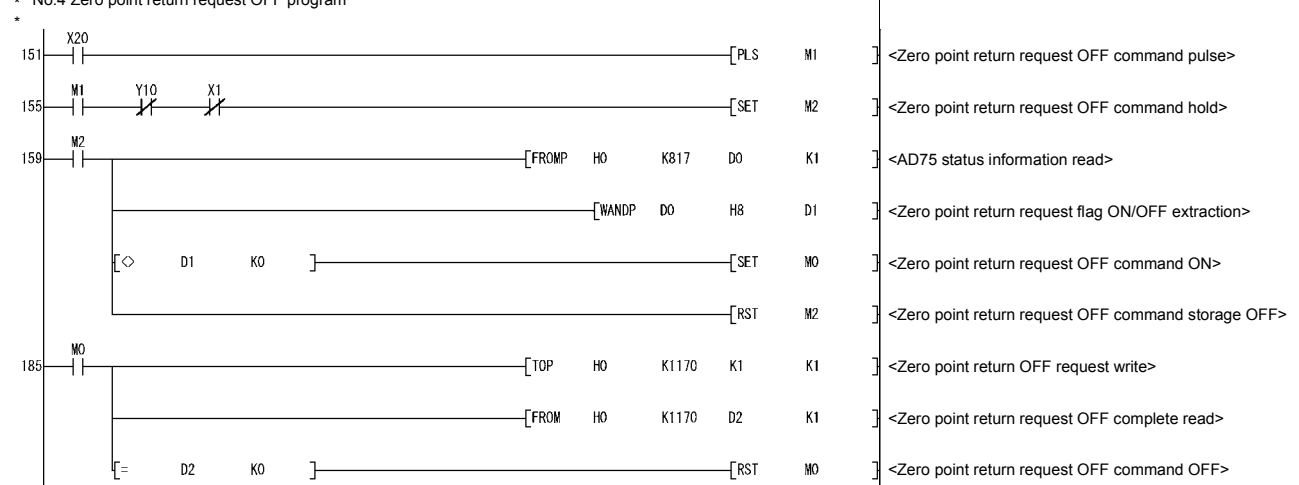

\* No.5 External start function valid setting program



\* No.6 Clock data setting program

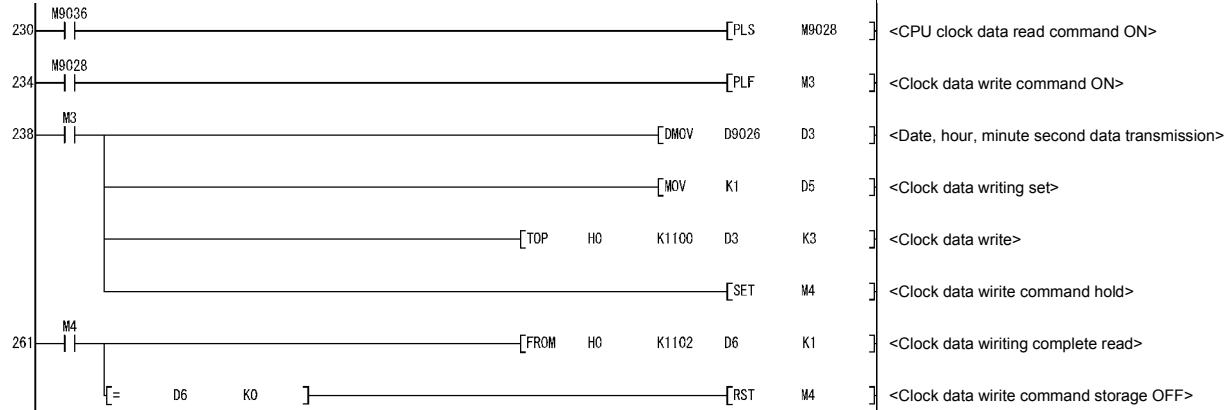


\* No.7 PLC READY signal [Y1D] ON program  
 \* (The M27 contact is not required when the parameters are not be initialized.)  
 \* (The M29 contact is not required when not writing to the flash ROM.)




\* No.8 Servo ON/OFF program

\* (1) All axes servo ON/OFF program




\* (2) Axis 1 servo ON/OFF program  
 \* (Unnecessary when servo ON/OFF is not performed on an axis basis)




\* No.9 Positioning start No. setting program


\* (1) Machine zero point return




\* (2) High-speed zero point return

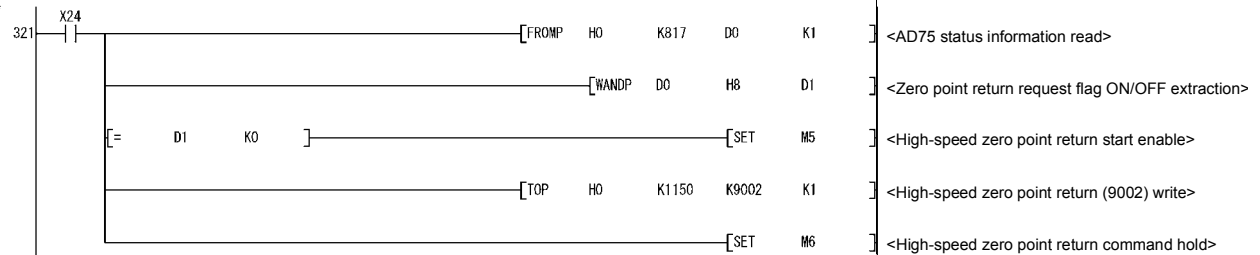


\* (3) Positioning with positioning data No.1 (Control other than speed/position changeover control)




\* (4) Positioning with positioning data No.1 (Speed/position changeover control)

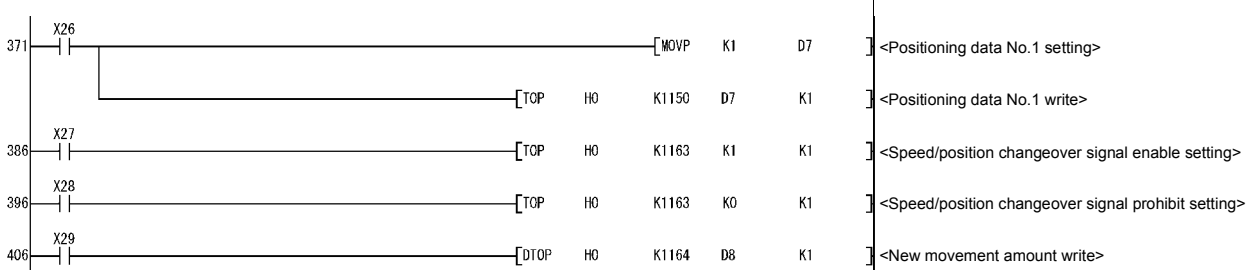


\* (5) Advanced positioning control




\* (6) High-speed zero point return command and high-speed zero point return command storage OFF  
(Not required when high-speed zero point return is not used)

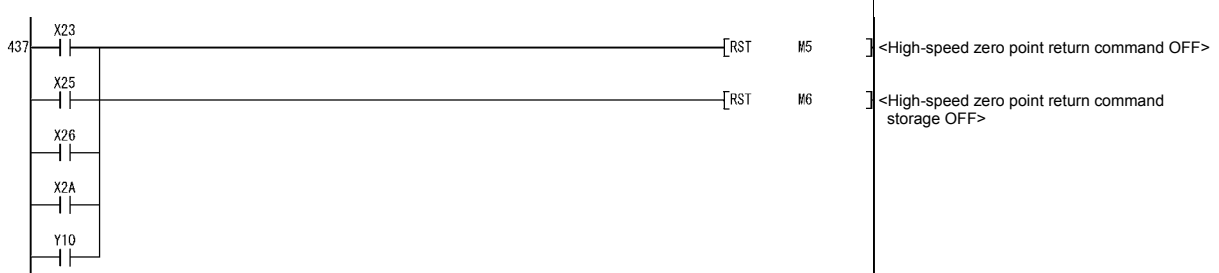


\* No.10 Positioning start signal input program  
 \* (When high-speed zero point return is not made, contacts of M5 and M6 are not needed.)  
 \* (When M code is not used, contact of X0D is not needed.)  
 \* (When JOG operation is not performed, contact of M9 is not needed.)  
 \* (When manual pulse generator operation is not performed, contact of M11 is not needed.)

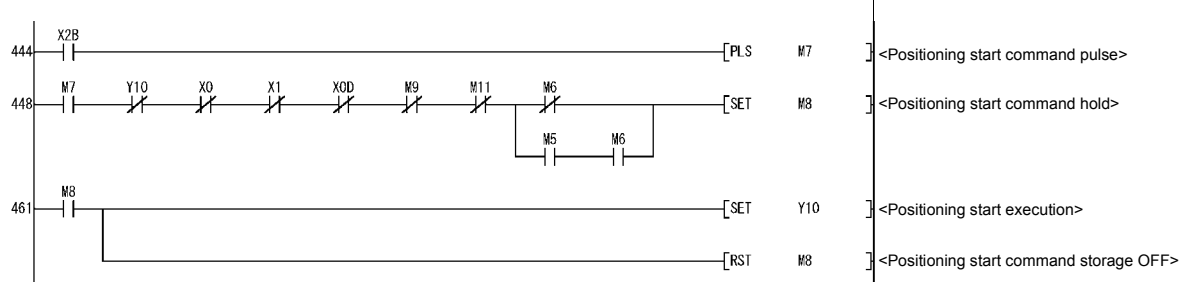


\* No.11 Reset program

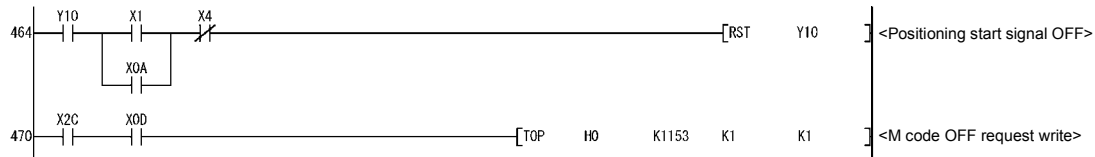


\* No.12 JOG operation program

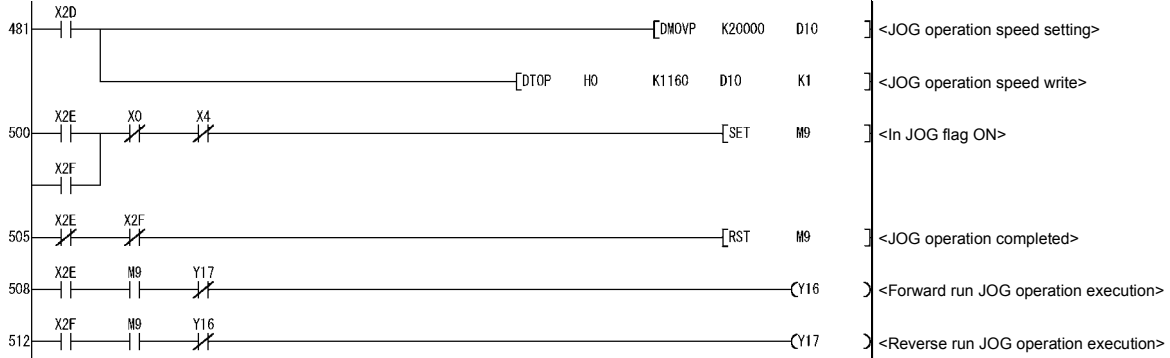


\* No.13 Manual pulse generator operation program

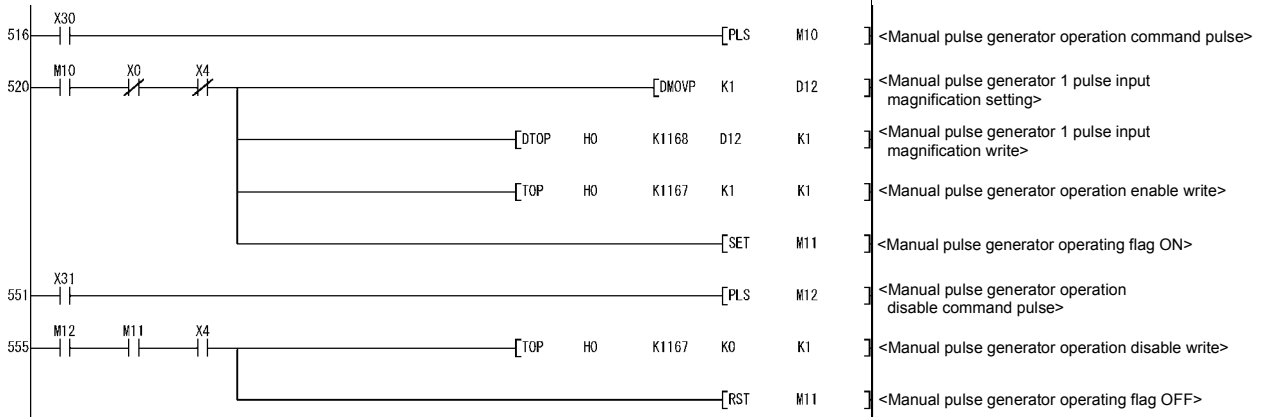


\* No.14 Speed change program

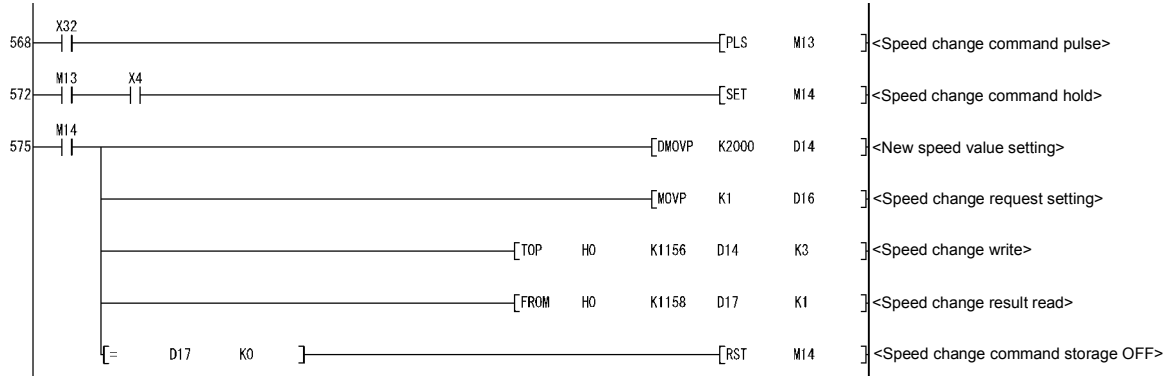


\* No.15 Override program

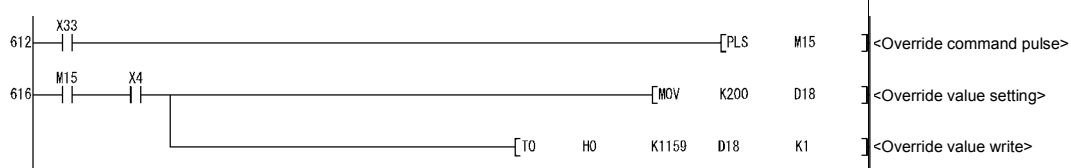


\* No.16 Acceleration / deceleration time change program

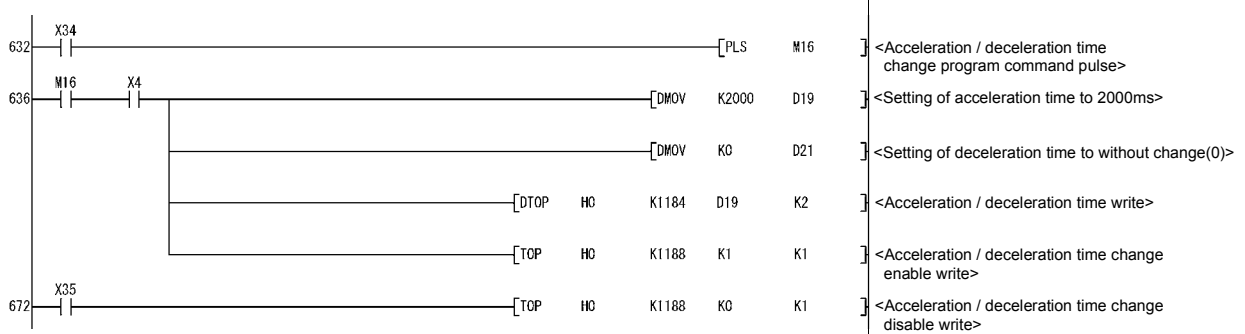


\* No.17 Torque change program

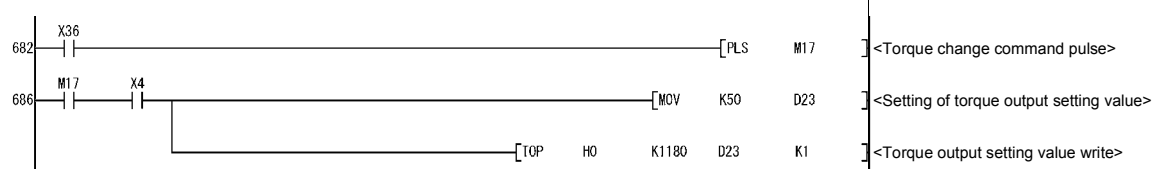

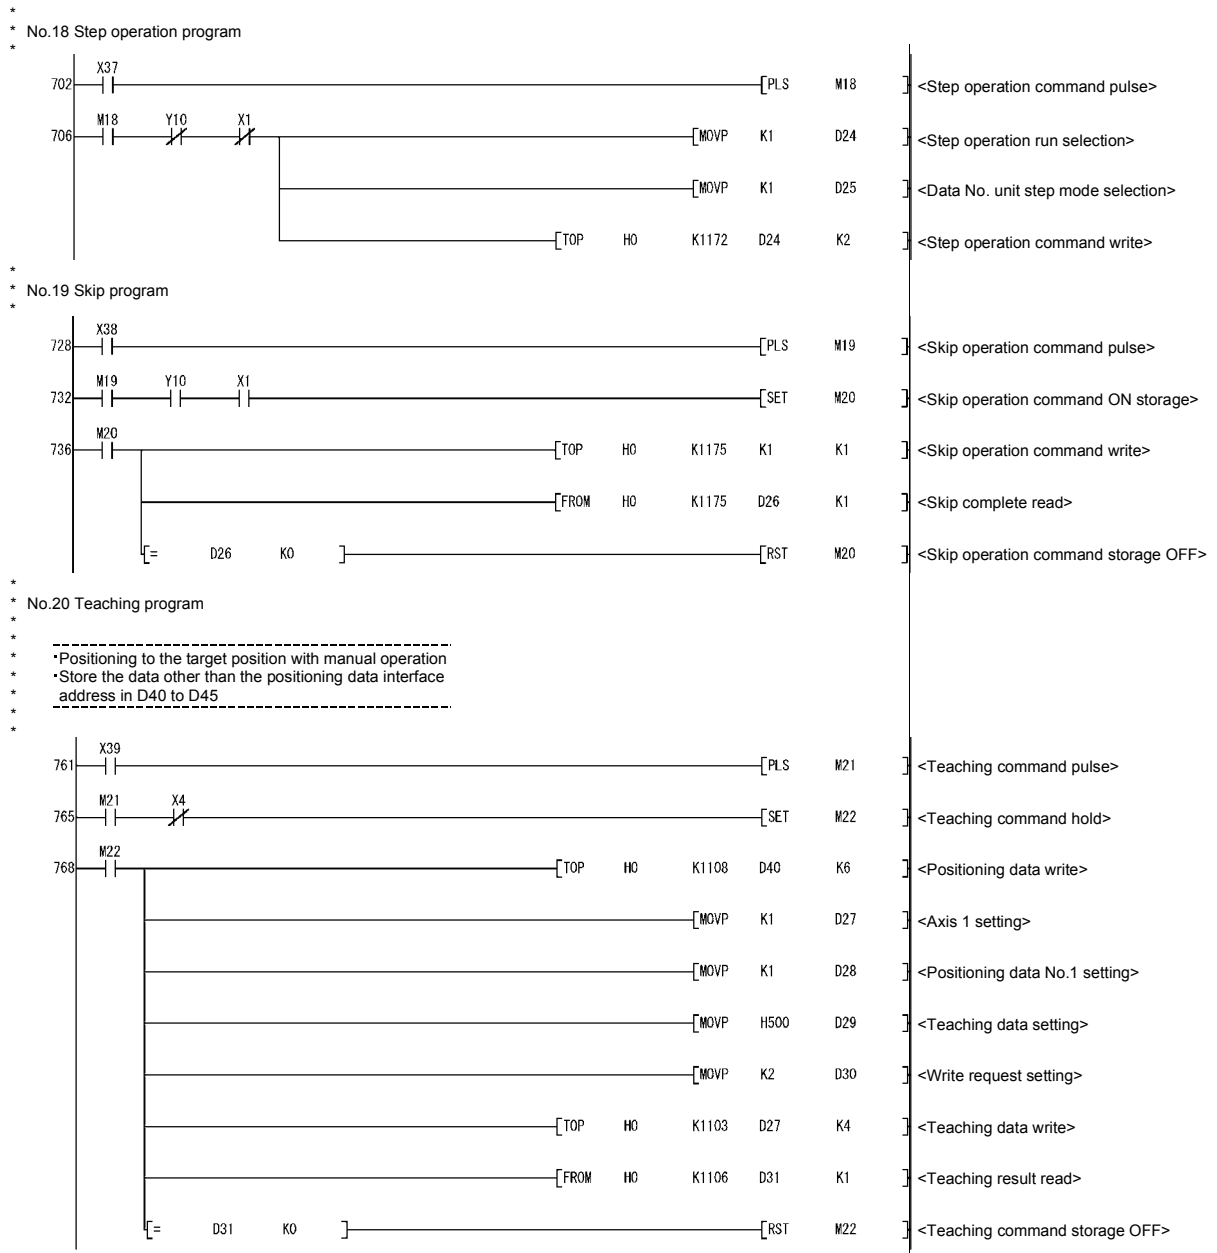





\* No.21 Continuous operation interrupt program




\* No.22 Restart program

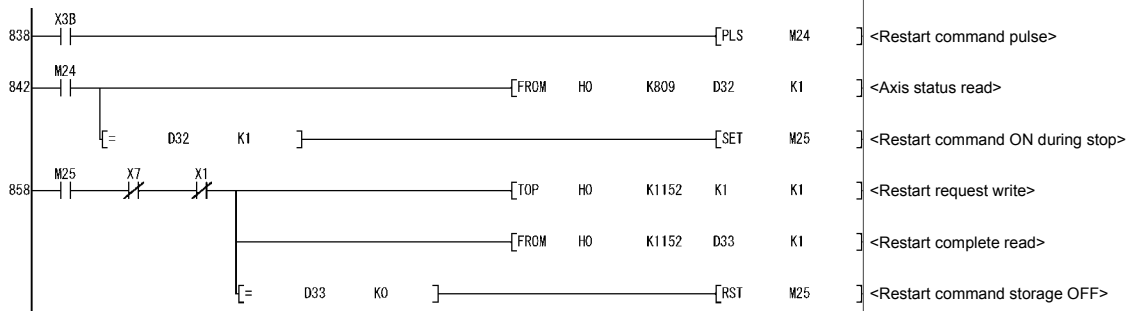


\* No.23 Parameter initialization program

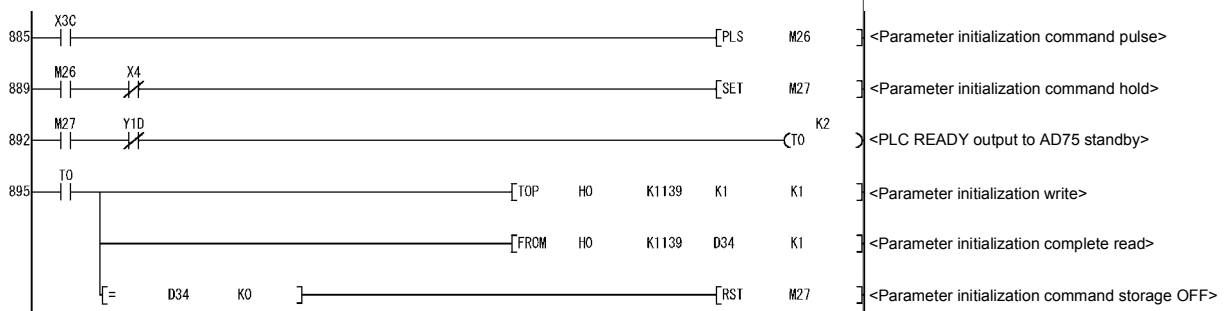


\* No.24 Flash ROM write program

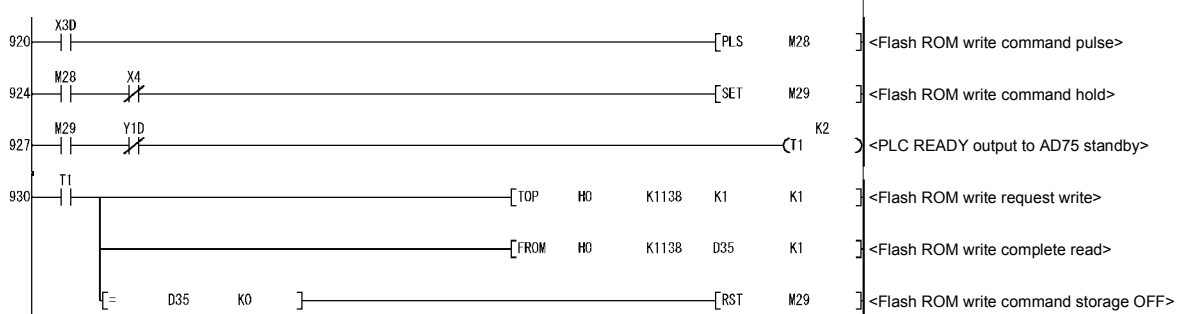

\*  
\* No.25 Error reset program  
\*

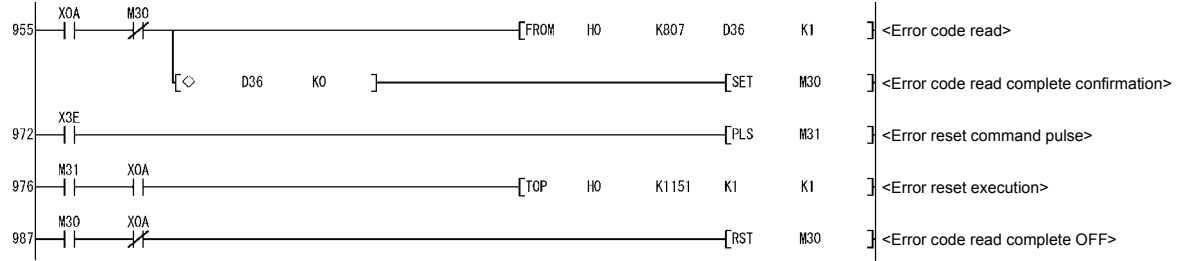

\*  
\* No.26 Stop program  
\*

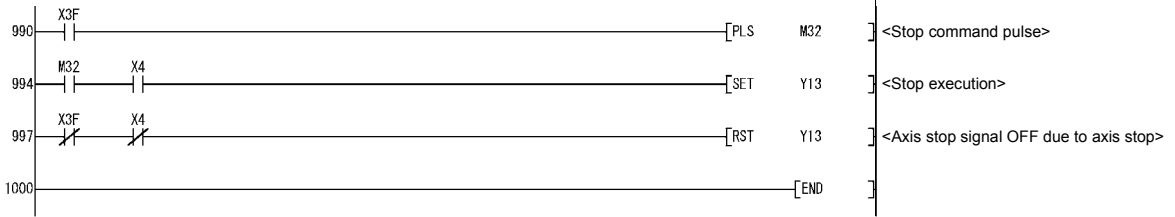

6.5 Program details

6.5.1 Initialization program

(1) Zero point return request OFF program

This program forcibly turns OFF the "zero point return request flag" ([Md.40] Status: b3) which is ON.

When using a system that does not require zero point return, assemble the program to cancel the "zero point return request" made by the AD75 when the power is turned ON, etc.

■ Data requiring setting

Set the following data to use the zero point return flag OFF request.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
[Cd.24] Zero point return request flag OFF request	1	Set to "1: Turn zero point return request flag OFF".	1170	1220	1270

\* Refer to section "5.7 List of control data" for details on the setting details.

■ Time chart for zero point return OFF request

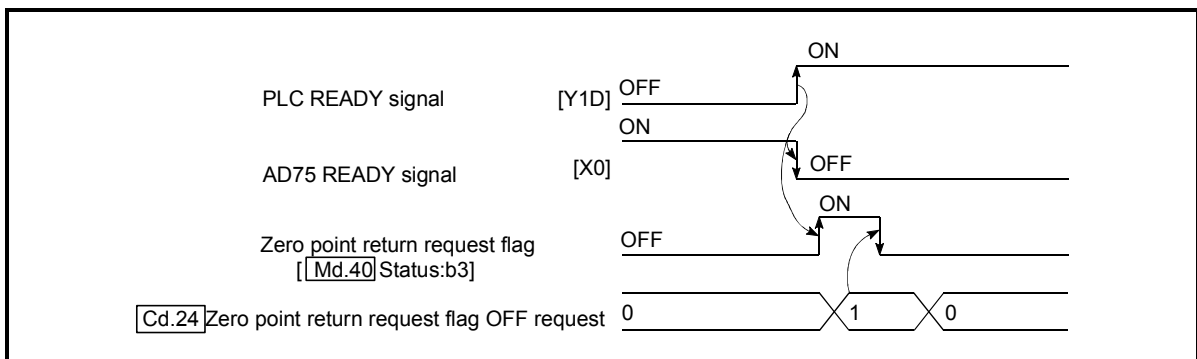


Fig. 6.1 Time chart for zero point return OFF request

(2) External start function valid setting program

This program is used to validate the "external signal" beforehand when using the external start function (external start, speed change, skip). (Set which function to use beforehand in "[Pr.43] External start function selection".)

Set the following data to validate the "external signal".

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
[Cd.25] External start valid	1	Set to "1: Validate external start".	1171	1221	1271

\* Refer to section "5.7 List of control data" for details on the setting details.

## 6.5.2 Start details setting program

This program sets which control, out of "zero point control", "main positioning control" or "advanced positioning control" to execute. For "advanced positioning control", "high-speed zero point return" and "speed/position changeover control", add the respectively required sequence program.

(Refer to "CHAPTER 10" for details on starting the "advanced positioning control.")

■ Procedures for setting the starting details

- (1) Set the "positioning start No." corresponding to the control to be started in "[Cd.11] Positioning start No."

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
[Cd.11] Positioning start No.	→	1 to 600 : Positioning data No. 9001 : Machine zero point return 9002 : High-speed zero point return 9003 : Current value change 7000 to 7010 : Block No. (For "advanced positioning control")	1150	1200	1250

\* Refer to section "5.7 List of control data" for details on the setting details.

- (2) For "advanced positioning control", set the "positioning start point No." of the block to be started in "[Cd.31] Positioning start point No."

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
[Cd.31] Positioning start point No.	→	1 to 50 : Point No. of start block data	1178	1228	1278

\* Refer to section "5.7 List of control data" for details on the setting details.

- (3) For "high-speed zero point return", confirm that the "zero point absolute position overflow flag/underflow flag" is OFF.

- (4) Set the following control data for "speed/position changeover control".  
(Set "[Cd.21] Speed/position changeover control movement amount change register" as required.)

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
[Cd.20] Speed/position changeover enable flag	1	When "1" is set, the speed/position changeover signal will be validated.	1163	1213	1263
[Cd.21] Speed/position changeover control movement amount change register	→	Set the new value when the position control's movement amount is to be changed during speed control.	1164 1165	1214 1215	1264 1265

\* Refer to section "5.7 List of control data" for details on the setting details.

6.5.3 Start program

This program is used to start the control with start commands.  
 The control can be started with the following two methods.

- (1) Starting by inputting positioning start signal [Y10, Y11, Y12]
- (2) Starting by inputting external start signal

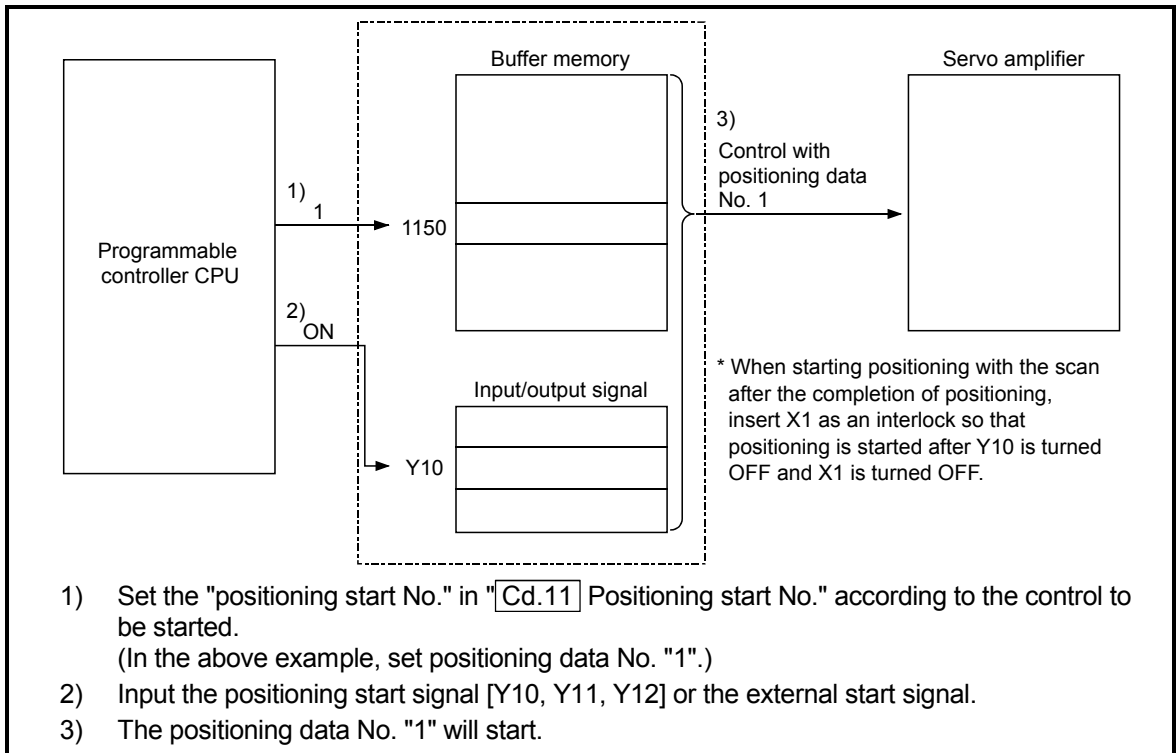


Fig. 6.2 Procedures for starting control

■ Starting conditions

When starting, the following conditions must be satisfied. The program must be configured by adding the required conditions into the sequence program so that the operation does not start until the conditions are satisfied.

Signal name		Signal state		Device		
				Axis 1	Axis 2	Axis 3
Interface signal	All axes servo ON signal	ON	Servo operation possible	Y15		
	PLC READY signal	ON	Programmable controller CPU preparation completed	Y1D		
	AD75 READY signal	OFF	AD75 preparation completed	X0		
	Axis stop signal	OFF	Axis stop signal is OFF	Y13	Y14	Y1C
	Start complete signal	OFF	Start complete signal is OFF	X1	X2	X3
	BUSY signal	OFF	BUSY signal is OFF	X4	X5	X6
	Error detection signal	OFF	There is no error	XA	XB	XC
	M code ON signal	OFF	M code ON signal is OFF	XD	XE	XF
External signal	Stop signal	OFF	Stop signal is OFF	-		
	Upper limit (FLS)	ON	Within limit range	-		
	Lower limit (RLS)	ON	Within limit range	-		
Monitor data	Servo ON	ON	Servo ON is ON	Md.116 Servo status: b1		

## (1) Starting by inputting positioning start signal

## ■ Operation when starting

- (1) When the positioning start signal turns ON, the start complete signal and BUSY signal turn ON, and the positioning operation starts.  
It can be seen that the axis is operating when the BUSY signal is ON.
- (2) When the positioning start signal turns OFF, the start complete signal also turns OFF.  
If the positioning start signal is ON even after positioning is completed, the start complete signal will remain ON.
- (3) If the positioning start signal turns ON again while the BUSY signal is ON, a warning "start during operation" (warning code: 100) is caused.
- (4) The process taken when positioning is completed will differ according to case (a) and (b) below.
  - (a) When next positioning is not to be carried out
    - If a dwell time is set, the system will wait for the set time to pass, and then positioning will be completed.
    - When positioning is completed, the BUSY signal will turn OFF and the positioning complete signal will turn ON. However, when using speed control or when the positioning complete signal ON time is "0", the signal will not turn ON.
    - When the positioning complete signal ON time is passed, the positioning complete signal will turn OFF.
  - (b) When next positioning is to be carried out
    - If a dwell time is set, the system will wait for the set time to pass.
    - When the set dwell time is passed, the next positioning will start.

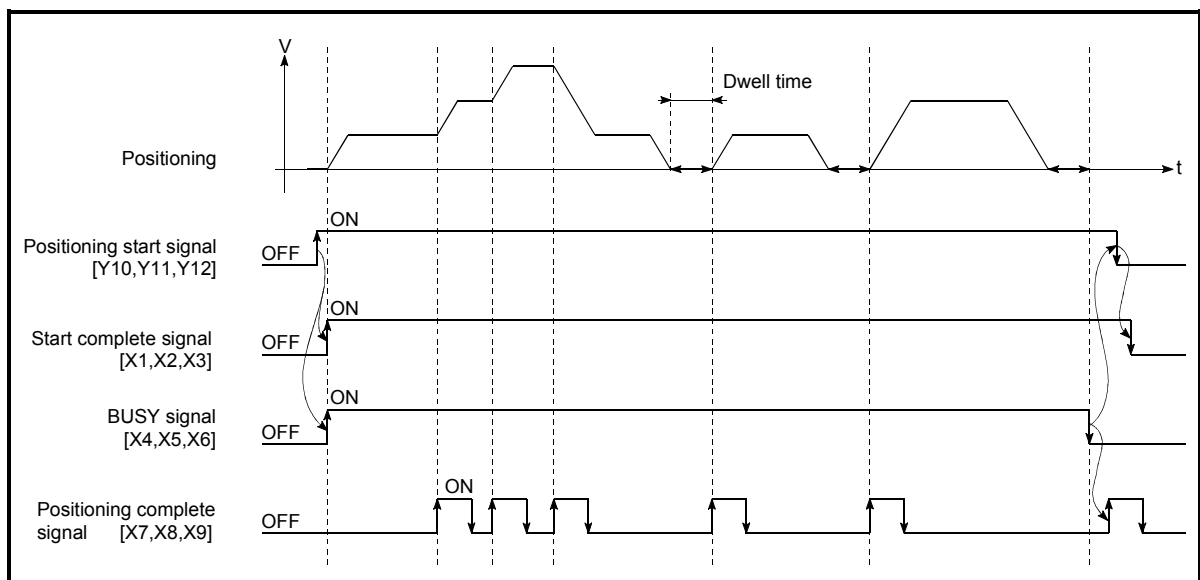


Fig. 6.3 ON/OFF timing of each signal at start of positioning

**POINT**

When position control of movement amount 0 is executed, the BUSY signal [X4, X5, X6] also turns ON. However, since the ON time is short, the ON status may not be detected in the sequence program.  
(The ON statuses of the start complete signal [X1, X2, X3], positioning complete signal [X7, X8, X9] and M code ON signal [XD, XE, XF] can be detected in the sequence program.)

■ Starting time chart

The time chart for starting each control is shown below.

(1) Time chart for starting "machine zero point return"

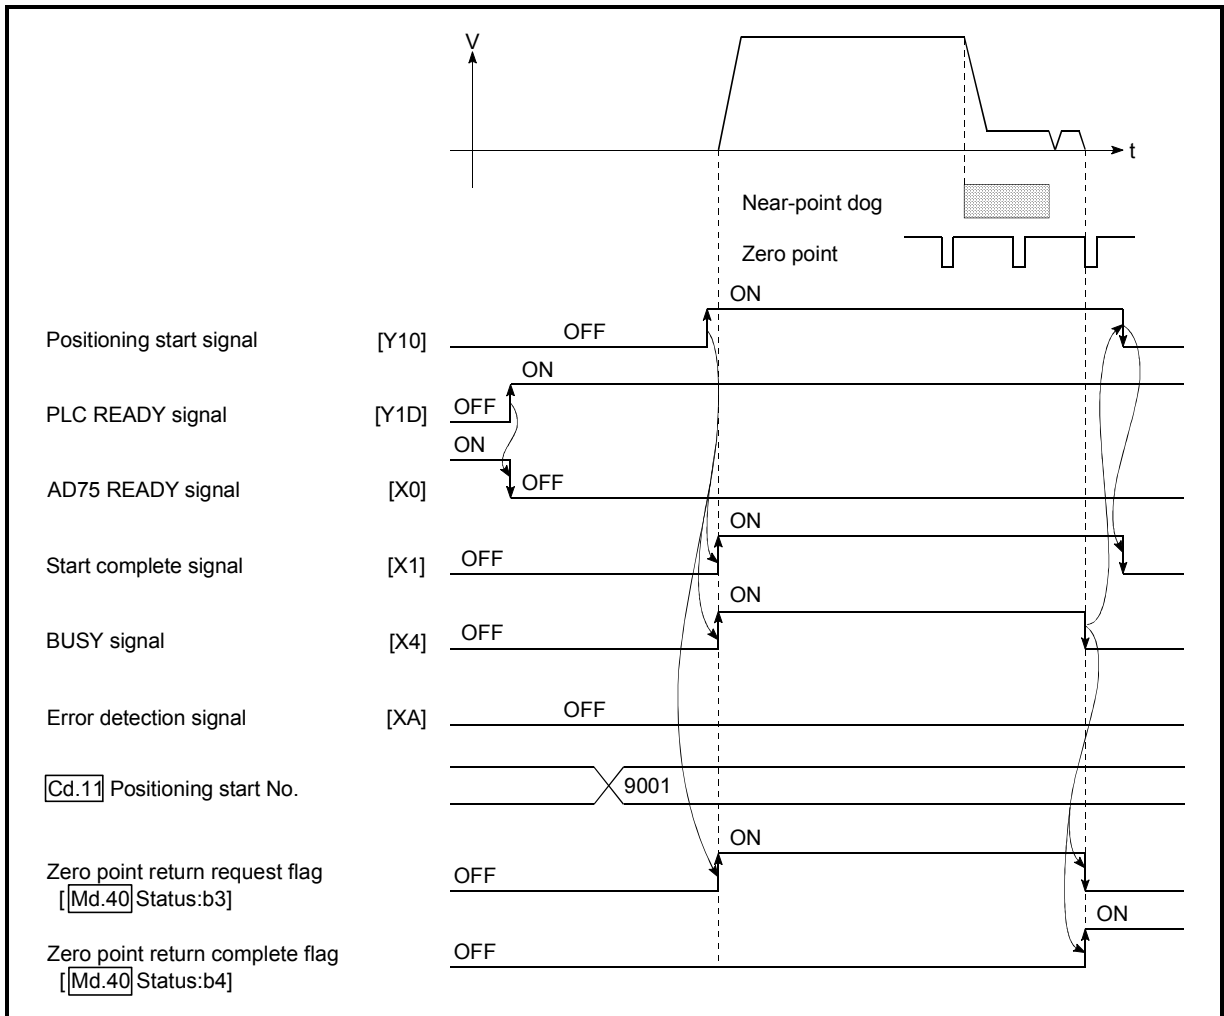


Fig. 6.4 Time chart for starting "machine zero point return"

(2) Time chart for starting "high-speed zero point return"

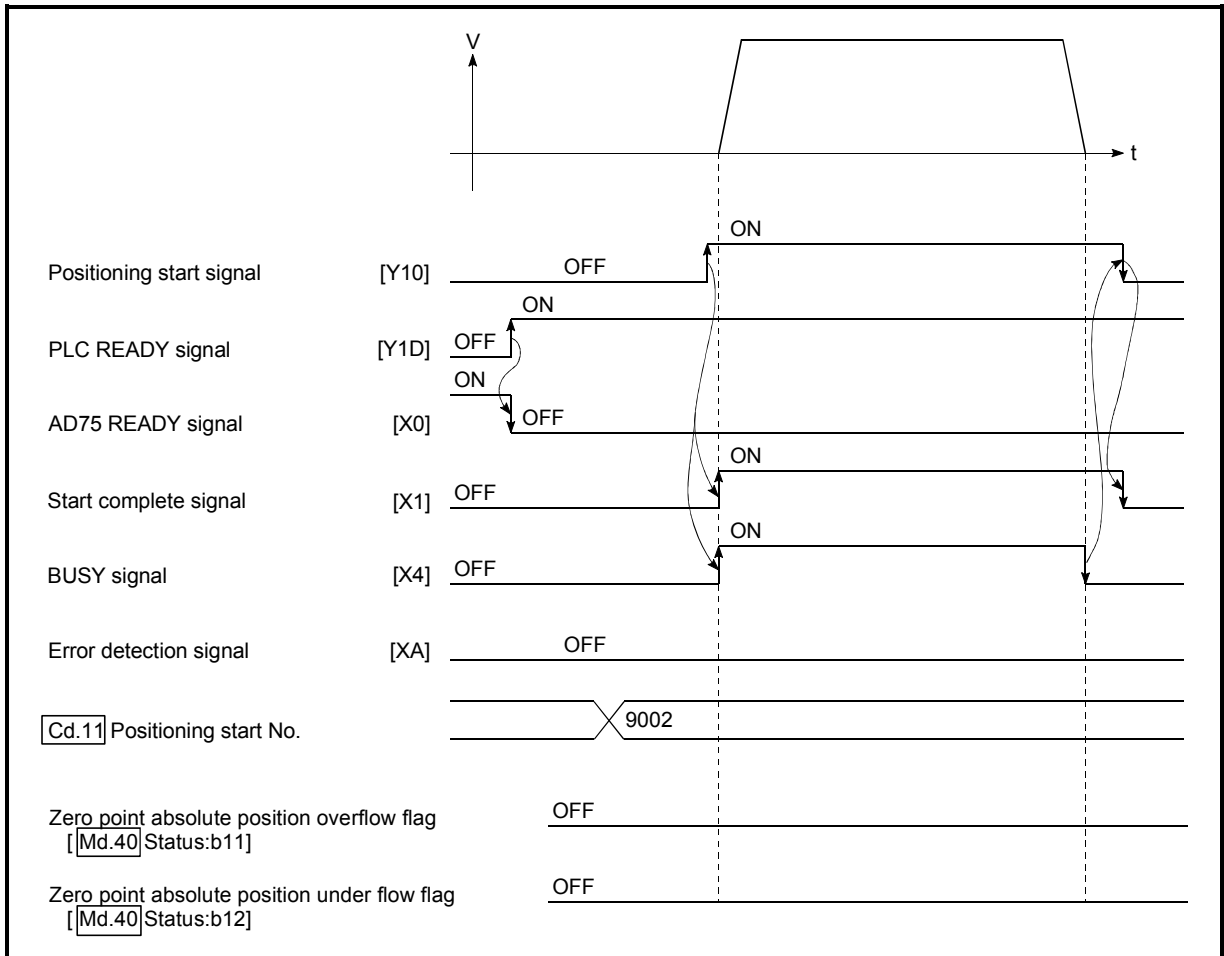


Fig. 6.5 Time chart for starting "high-speed zero point return"



(3) Time chart for starting "main positioning control"

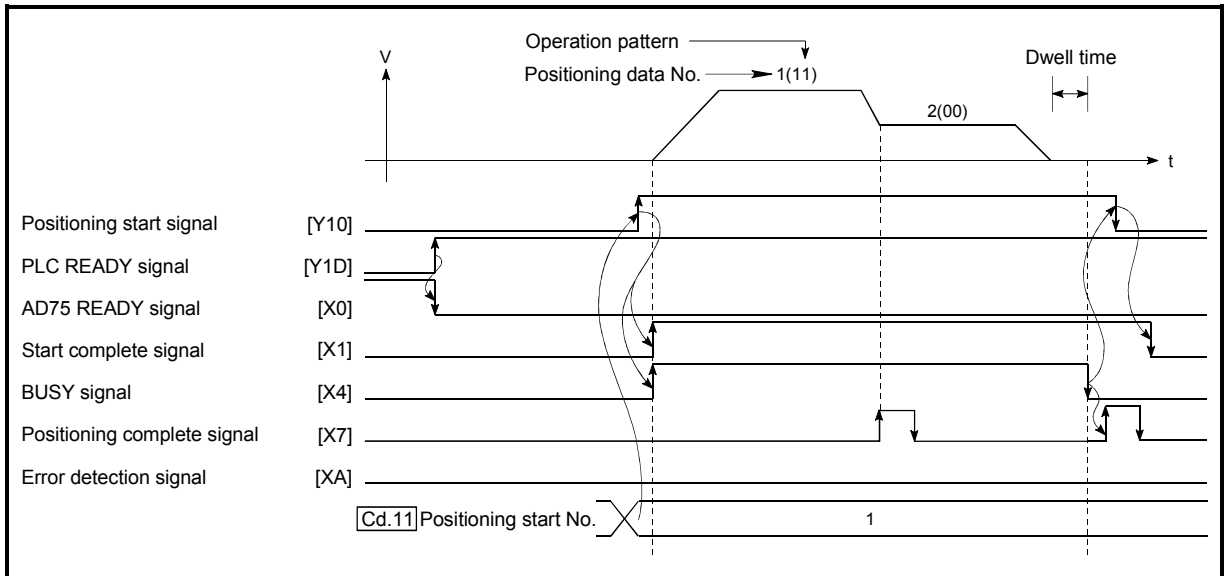


Fig. 6.6 Time chart for starting "main positioning control"

(4) Time chart for starting "speed/position changeover control"

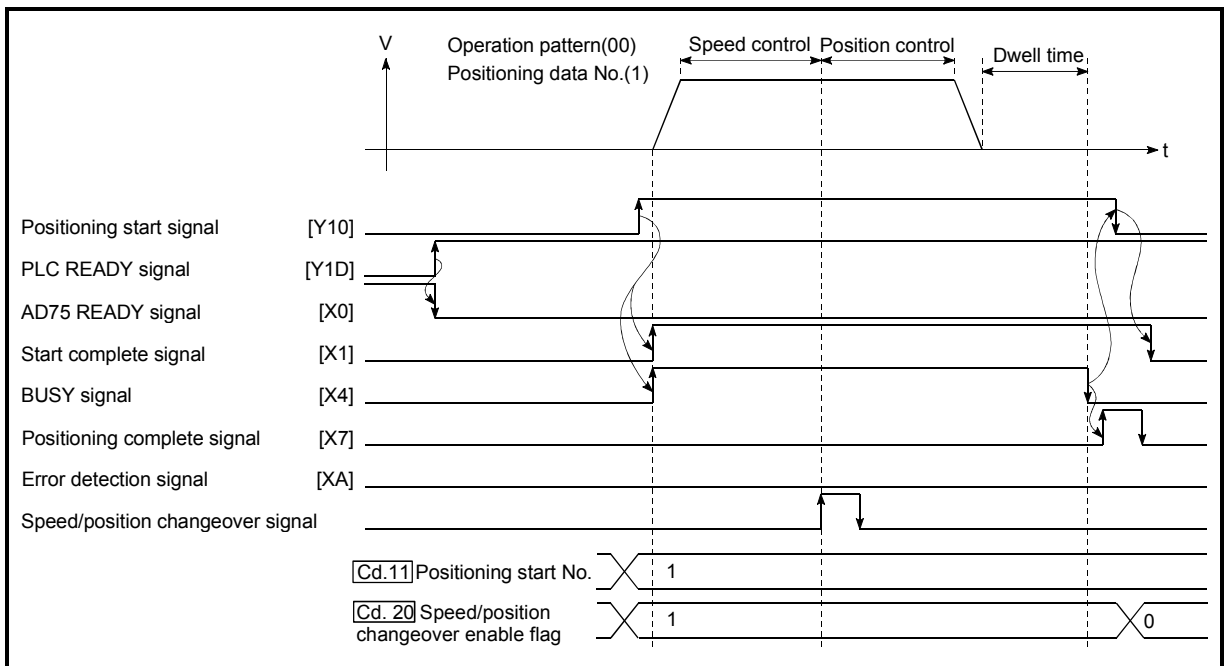


Fig. 6.7 Time chart for starting "speed/position changeover control"

■ Machine zero point return operation timing and process time

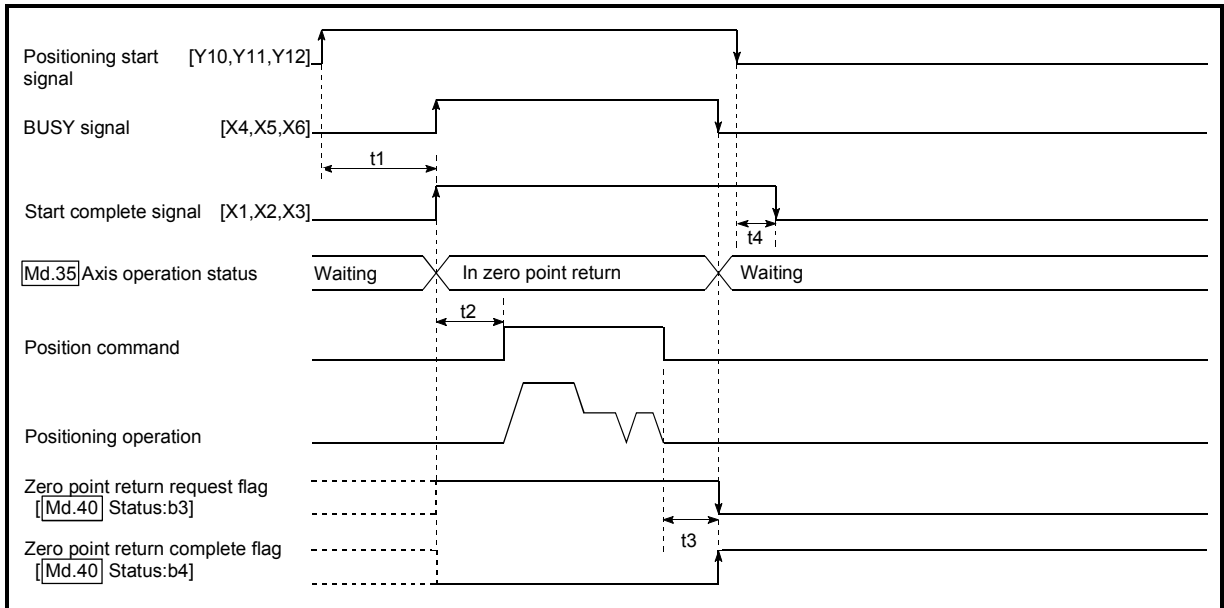


Fig. 6.8 Machine zero point return operation timing and process time

Normal timing time Unit: ms

t1	t2	t3	t4
5 to 15	0 to 3.5		

- The t1 timing time could be delayed by the following factors.
  - 1) Presence of FROM/TO command execution during start process
  - 2) Operation state of other axes
  - 3) Presence of intervention from peripheral device during start process
  - 4) Details of positioning data to be started

■ Position control operation timing and process time

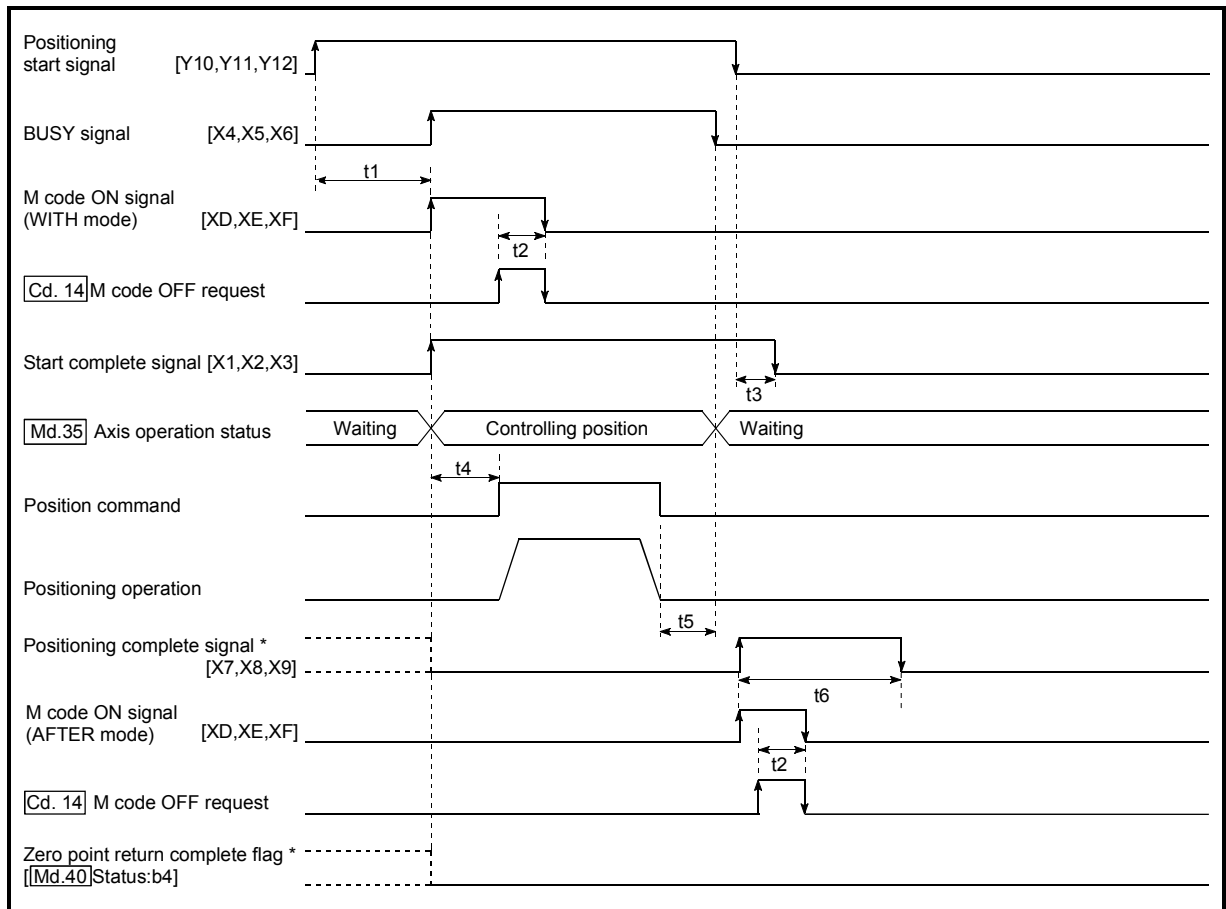


Fig. 6.9 Position control operation timing and process time

- When the positioning start signal turns ON, if all signals marked with an asterisk (\*) are already ON, the signals marked with an asterisk (\*) will turn OFF when the positioning start signal turns ON.

Normal timing time

Unit: ms

t1	t2	t3	t4	t5	t6
5 to 15	0 to 3.5				Follows parameters

- The t1 timing time could be delayed by the following factors.
  - 1) Presence of FROM/TO command execution during start process
  - 2) Operation state of other axes
  - 3) Presence of intervention from peripheral device during start process
  - 4) Details of positioning data to be started

(2) Starting by inputting external start signal

When starting positioning control by inputting the external start signal, the start command can be directly input into the AD75. This allows the variation time equivalent to one scan time of the programmable controller CPU to be eliminated. This is an effective procedure when operation is to be started as quickly as possible with the start command or when the starting variation time is to be suppressed. To start positioning control by inputting the external start signal, set the "data required to be set" and then turn ON the external start signal.

■ Restrictions

When starting by inputting the external start signal, the start complete signal [X1, X2, X3] will not turn ON.

■ Data required to be set

To execute positioning start with the external start signal, set parameter (Pr.43) beforehand, and validate the "external start signal" with the "external start function valid setting program (program No. 5).

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Pr.43 External start function selection	0	Set to "0: External positioning start".	62	212	362
Cd.25 External start valid	1	Set to "1: Validate external start".	1171	1221	1271

\* Refer to CHAPTER "5 DATA USED FOR POSITIONING CONTROL" for details on the setting details.

■ Starting time chart

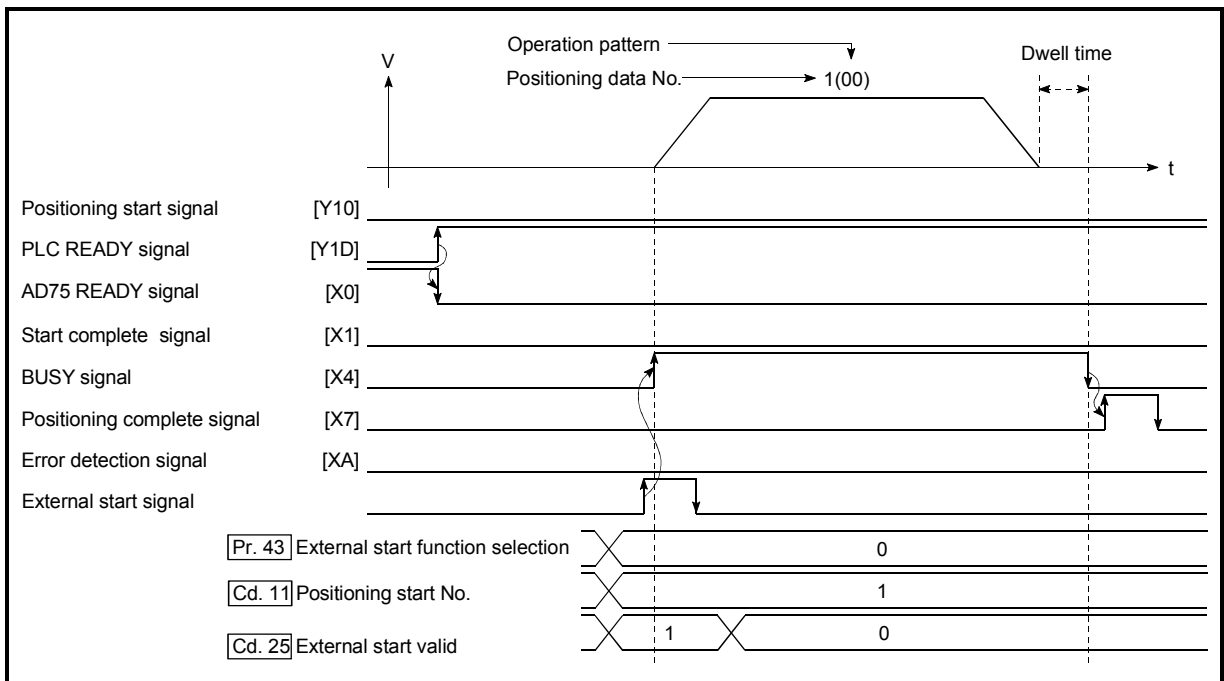


Fig. 6.10 Time chart for starting with external start signal

### 6.5.4 Continuous operation interrupt program

During positioning control, the control can be interrupted during continuous positioning control and continuous path control (continuous operation interrupt function). When "continuous operation interruption" is execution, the control will stop when the operation of the positioning data being executed ends. To execute continuous operation interruption, set "1: Continuous operation interrupt request" for "[Cd.32](#) Interrupt request during continuous operation.

#### (1) Operation during continuous operation interruption


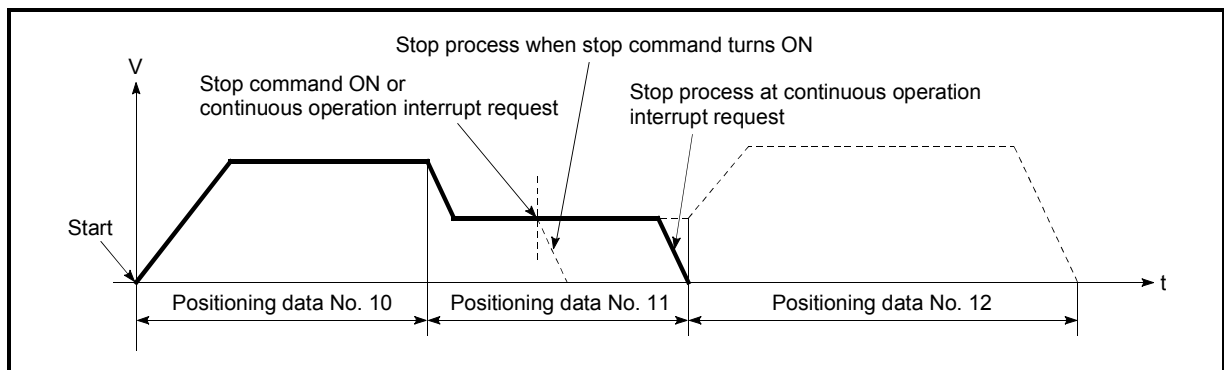


Fig. 6.11 Operation during continuous operation interruption


#### (2) Restrictions

- (1) When the "continuous operation interrupt request" is executed, the positioning will end.  
Thus, after stopping, the operation cannot be "restarted".  
When "[Cd.13](#) Restart command" is issued, a warning "Restart not possible" (warning code:104) will occur.
- (2) Even if the stop command is turned ON after executing the "continuous operation interrupt request", the "continuous operation interrupt request" cannot be canceled.  
Thus, if "restart" is executed after stopping by turning the stop command ON, the operation will stop when the positioning data No. where "continuous operation interrupt request" was executed is completed.

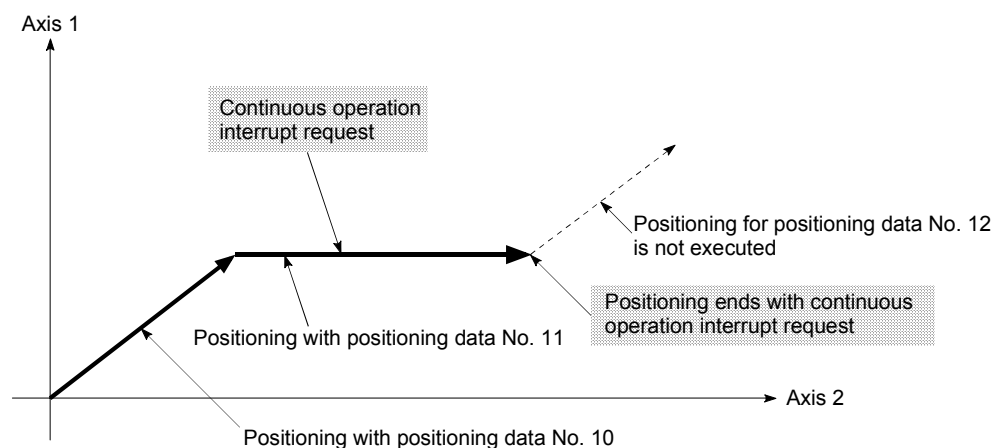

- (3) If the operation cannot be decelerated to a stop because the remaining distance is insufficient when "continuous operation interrupt request" is executed with continuous path control, the interruption of the continuous operation will be postponed until the positioning data shown below.
  - Positioning data No. have sufficient remaining distance
  - Positioning data No. for positioning complete (pattern: 00)
  - Positioning data No. for continuous positioning control (pattern: 01)
- (4) When operation is not performed (BUSY signals [X4, X5, X6] are OFF), the continuous operation interrupt request is not accepted. It is cleared to zero at a start or at a restart.

Even when the continuous operation interrupt is requested, the remaining distance is insufficient, and thus, the operation cannot stop at the positioning No. being executed.

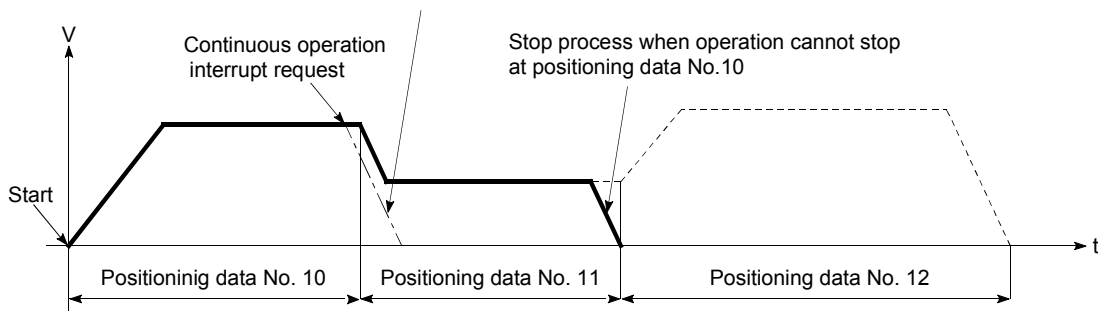

(3) Control data requiring settings

Set the following data to interrupt continuous operation.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.32 Interrupt request during continuous operation	1	Set "1: Interrupt request during continuous operation".	1181	1231	1281

\* Refer to section "5.7 List of control data" for details on the setting details.

## 6.5.5 Restart program

When a stop factor occurs during position control and the operation stops, the positioning can be restarted from the stopped position to the position control end point by using the "restart command" (Cd.13 Restart command).  
("Restarting" is not possible when "continuous operation is interrupted.")

## (1) Restart operation

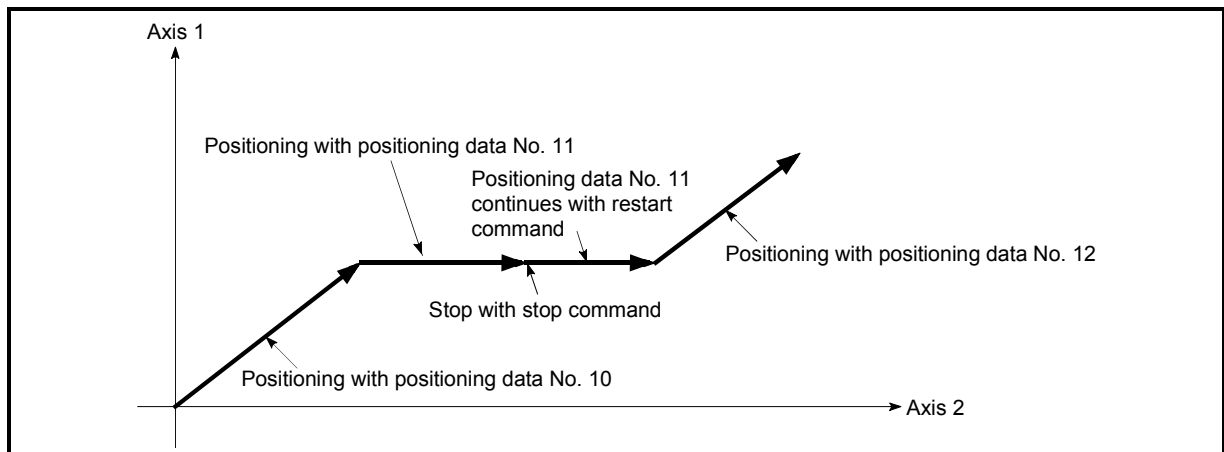


Fig. 6.12 Restart operation

## (2) Restrictions

- (1) Restarting can be executed only when the "Md.35 Axis operation status" is "stopped".  
If the axis operation is not "stopped", restarting is not possible.
- (2) Do not execute restart while the stop command is ON.  
If restart is executed while stopped, an error "Stop signal ON at start" (error code:106) will occur, and the "Md.35 Axis operation status" will change to "error occurring".  
Thus, even if the error is reset, the operation cannot be restarted.
- (3) Restarting can be executed even while the positioning start signal is ON.  
However, make sure that the positioning start signal does not change from OFF to ON while stopped.  
If the positioning start signal changes from OFF to ON, positioning will start from the positioning data No. of designated point's positioning data No. set in "Cd.11 Positioning start No.".
- (4) If positioning is ended with the continuous operation interrupt request, the operation cannot be restarted.  
If restart is requested, a warning "Restart not possible" (warning code:104) will occur.
- (5) When stopped with interpolation operation, write "1: restarts" into "Cd.13 Restart command" for the reference axis, and then restart.
- (6) If the "Md.35 Axis operation status" is not "stopped" when restarting, a multiple start warning will occur, and the process at that time will be continued.

**REMARK**

Restarting after stopping is possible even for the following control.

- Incremental type position control
- Continuous positioning control
- Continuous path control
- Block start

(3) Control data requiring setting

Set the following data to execute restart.

Setting item	Setting value	Setting details	Buffer memory address			
			Axis 1	Axis 2	Axis 3	
Cd.13	Restart command	1	Set "1: restarts".	1152	1202	1252

\* Refer to section "5.7 List of control data" for details on the setting details.

(4) Starting conditions

The following conditions must be satisfied when restarting. (Assemble the required conditions into the sequence program as an interlock.)

(1) Operation state

"Md.35 Axis operation status" is "1: Stopped"

(2) Signal state

Signal name	Signal state	Device					
		Axis 1	Axis 2	Axis 3			
Interface signal	All axes servo ON signal	ON	Servo operation possible		Y15		
	PLC READY signal	ON	Programmable controller CPU preparation completed		Y1D		
	AD75 READY signal	OFF	AD75 preparation completed		X0		
	Axis stop signal	OFF	Axis stop signal is OFF		Y13	Y14	Y1C
	Start complete signal	OFF	Start complete signal is OFF		X1	X2	X3
	BUSY signal	OFF	BUSY signal is OFF		X4	X5	X6
	Error detection signal	OFF	There is no error		XA	XB	XC
External signal	M code ON signal	OFF	M code ON signal is OFF		XD	XE	XF
	Stop signal	OFF	Stop signal is OFF		-		
	Upper limit (FLS)	ON	Within limit range		-		
Monitor data	Lower limit (RLS)	ON	Within limit range		-		
	Servo ON	ON	Servo ON is ON		Md.116 Servo status: b1		



(5) Time chart for restarting

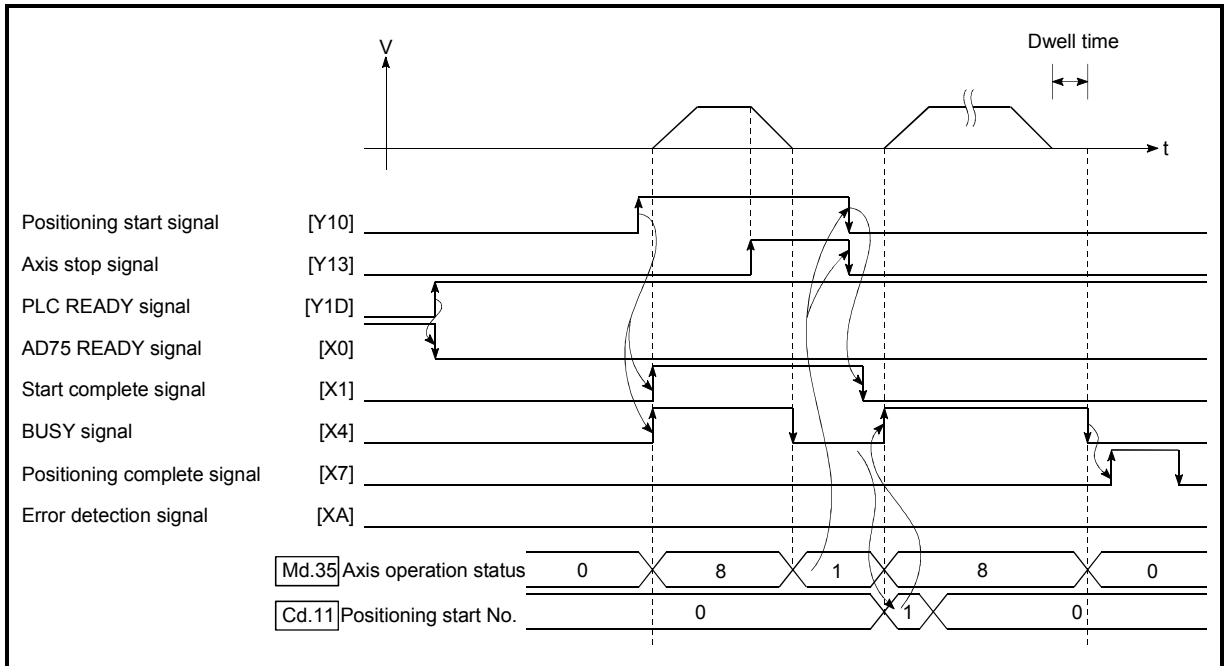


Fig. 6.13 Time chart for restarting

6.5.6 Stop program

The axis stop signal [Y13, Y14, Y1C] or a stop signal from an external source is used to stop the control. Create a program to turn the axis stop signal [Y13, Y14, Y1C] ON as the stop program.

The process for stopping control is explained below.  
Each control is stopped in the following cases.

- (a) When each control is completed normally.
- (b) When Servo alarm (Md.116 Servo status: b13) turns ON.
- (c) When the PLC READY signal is turned OFF.
- (d) When an error occurs.
- (e) When control is intentionally stopped. (Stop signal from programmable controller CPU turned ON, stop from peripheral device, etc.)

The stop process for the above cases is shown below. (Excluding (a) when the operation stops normally.)

(1) Stop process

Stop cause		Stop axis	Axis operation status (Md.35) after stopping	Stop process					
				Zero point return control		Main positioning control	Advanced positioning control	Manual control	
				Machine zero point return control	High-speed zero point return control			JOG operation	Manual pulse generator operation
Forced stop	Servo alarm is ON and Servo ON is OFF (Md.116 Servo status: b1, b13)	Each axis	During error	Immediate stop				Immediate stop	
Fatal stop (Stop group 1)	Hardware stroke limit upper/lower limit error occurrence	Each axis	During error	Deceleration stop/sudden stop (Select with Pr.38)				Deceleration stop	
Emergency stop (Stop group 2)	PLC READY signal OFF "Stop" input from external device	All axes	During error	Deceleration stop/sudden stop (Select with Pr.39)				Deceleration stop	
Relatively safe stop (Stop group 3)	Axis error detection (Error other than stop group 1 or 2) Error in test mode	Each axis	During error	Deceleration stop/sudden stop (Select with Pr.40)				Deceleration stop	
Intentional stop (Stop group 3)	"Stop signal" ON from external source "Axis stop signal" ON from programmable controller CPU	Each axis	When stopped						

## (2) Types of stop processes

The operation can be stopped with deceleration stop, sudden stop or immediate stop.

## (1) Deceleration stop

The operation stops with "deceleration time 0 to 3" (, , , )

Which time from "deceleration time 0 to 3" to use for control is set in positioning data ()

## (2) Sudden stop

The operation stops with " Sudden stop deceleration time".

## (3) Immediate stop

The operation does not decelerate.

The AD75 immediately stops the position/speed command output, but the operation will coast for the droop pulses accumulated in the servo amplifier's deviation counter.

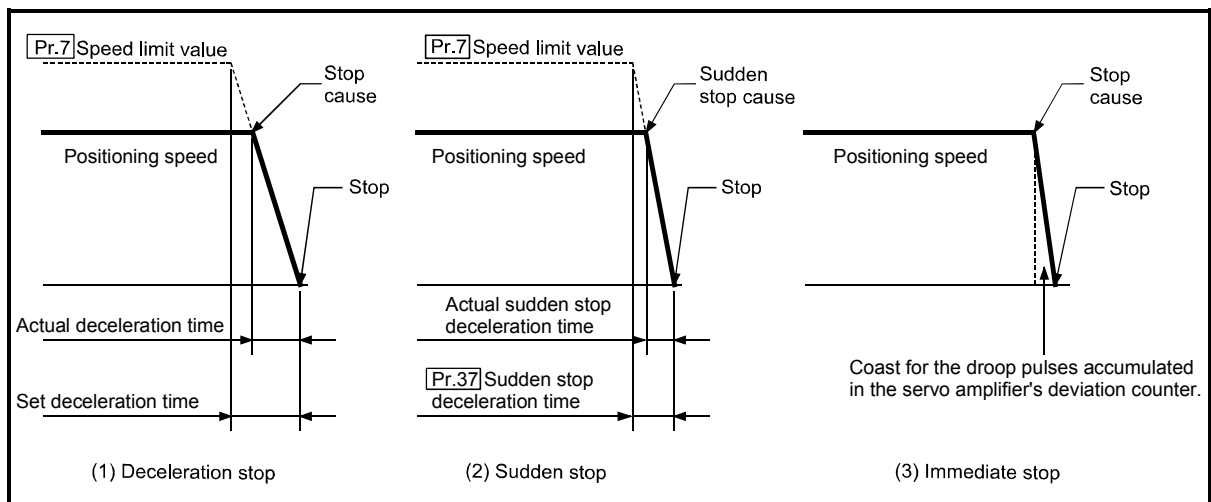


Fig. 6.14 Types of stop processes

**REMARK**

- \*1 "Deceleration stop" and "sudden stop" are selected with the details parameter "stop group 1 to 3 sudden stop selection". (The default setting is "deceleration stop".)

(3) Order of priority for stop process


The order of priority for the AD75 stop process is as follows.

Deceleration stop < Sudden stop < Immediate stop

- (1) During deceleration (including automatic deceleration), the operation will stop at that deceleration speed even if the decelerations to command turns ON (stop signal turns ON) or a deceleration stop cause occurs.
- (2) If the stop signal designated for sudden stop turns ON or a stop cause occurs during deceleration, the sudden stop process will start from that point. However, if the sudden stop deceleration time is longer than the deceleration time, the deceleration stop process will be continued even if a sudden stop cause occurs during the deceleration stop process.

Example

The process when a sudden stop cause occurs during deceleration stop is shown below.

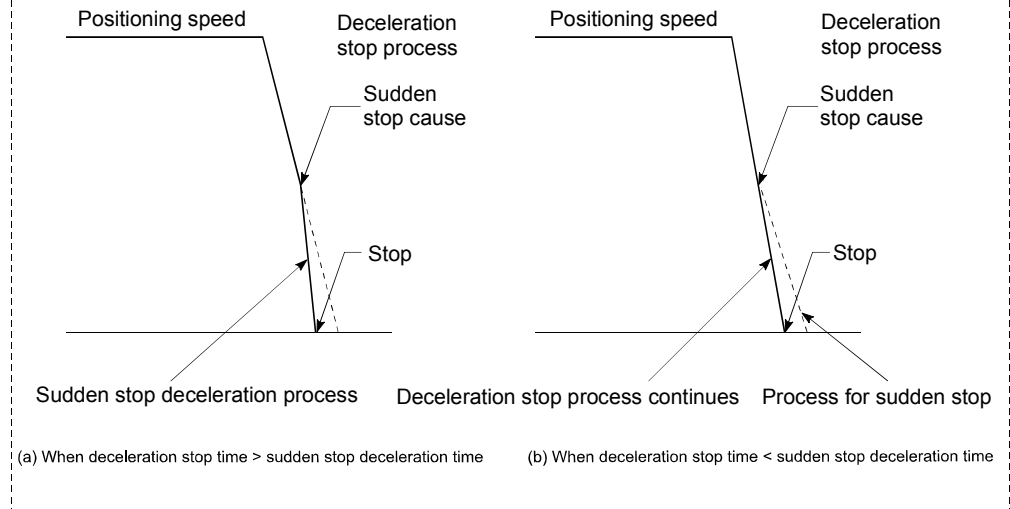

---

# CHAPTER 7

---

## MEMORY CONFIGURATION AND DATA PROCESS

The AD75 memory configuration and data transmission are explained in this chapter.

The AD75 is configured of three memories. By understanding the configuration and roles of these memories, the AD75 internal data transmission process, such as "when the power is turned ON" or "when the PLC READY signal changes from OFF to ON" can be easily understood. This also allows the transmission process to be carried out correctly when storage or changing the data.

7.1	Configuration and roles of AD75 memory .....	7- 2
7.1.1	Configuration and roles of AD75 memory.....	7- 2
7.1.2	Buffer memory area configuration.....	7- 5
7.2	Data transmission process.....	7- 6

## 7.1 Configuration and roles of AD75 memory

## 7.1.1 Configuration and roles of AD75 memory

The AD75 is configured of the following three memories.


Memory configuration	Role	Area configuration									Backup
		Parameter area	Positioning data area (No.1 to 100)	Positioning data area (No.101 to 600)	Positioning start information area (No.7000)	Positioning start information area (No.7001 to 7010)	Monitor data area	Control data area	PLC CPU memo area	Block transmission area	
• Buffer memory	Area that can be directly accessed with sequence program from programmable controller CPU.	○	○	-	○	-	○	○	○	○	Not possible
• Flash ROM	Area for backing up data required for positioning.	○	○	○	○	○	-	-	-	-	Possible
• OS memory	Area used by system.	○	○	○	○	○	-	-	-	-	Not possible

○ : Setting and storage area provided, Not possible: Data is lost when power is turned OFF

- : Setting and storage area not provided, Possible: Data is held even when power is turned OFF

**■ Details of areas**

- **Parameter area**  
Area where the parameters, such as the positioning parameters, zero point return parameters and servo parameters, required for positioning control are set and stored.  
(Set the items indicated with Pr.1 to Pr.59, Pr.100 to Pr.138, Pr.149 and Pr.150 for each axis.)
  - **Positioning data area (No.1 to 100)**  
Area where positioning data No.1 to 100 is set and stored.  
(Set the items indicated with Da.1 to Da.9 for each positioning data.)
  - **Positioning data area (No.101 to 600)**  
Area where positioning data No.101 to 600 is set and stored.  
(Set the items indicated with Da.1 to Da.9 for each positioning data.)
  - **Positioning start information area (No.7000)**  
Area where information required only when carrying out block No. 7000 advanced positioning is set and stored. (Set the items indicated with Da.10 to Da.18.)
  - **Positioning start information area (No.7001 to 7010)**  
Area where information required only when carrying out block No. 7001 to 7010 advanced positioning is set and stored. (Set the items indicated with Da.10 to Da.18.)
  - **Monitor data area**  
Area where positioning system or AD75 operation state is stored.  
(Set the items indicated with Md.1 to Md.56 and Md.100 to Md.121.)
  - **Control data area**  
Area where data for operating and controlling positioning system is set and stored. (Set the items indicated with Cd.1 to Cd.35, Cd.100 and Cd.101.)
  - **PLC CPU memo area**  
Area where condition judgment values required for special positioning, etc., are set and stored.
  - **Block transmission area**  
Memory area used for setting the "positioning data No. 101 to 600" with sequence program.
- \* When using a peripheral device, the "positioning data No. 101 to 600" is set with the same method as "positioning data No. 1 to 100".

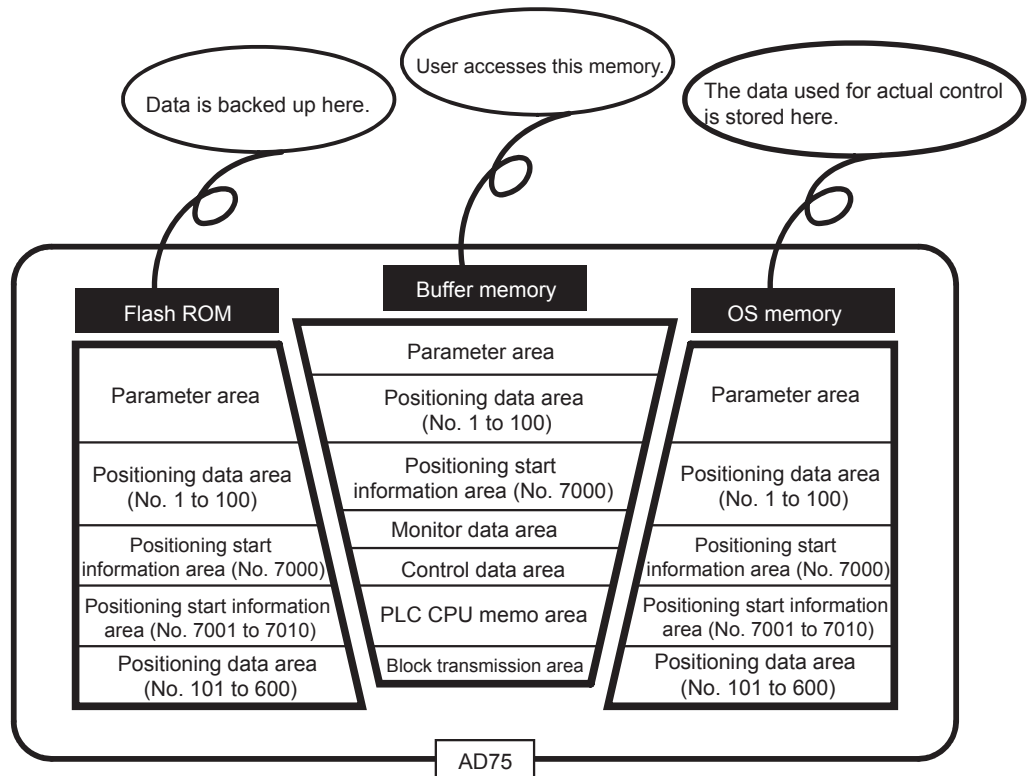



## 7.1.2 Buffer memory area configuration

The AD75 buffer memory is configured of the following types of areas.


Buffer memory area configuration		Buffer memory address			Writing possibility
		Axis 1	Axis 2	Axis 3	
Parameter area	Basic parameter area	0 to 13	150 to 163	300 to 313	Possible
	Detailed parameter area	15 to 66	165 to 216	315 to 366	
	Zero point return basic parameter area	70 to 78	220 to 228	370 to 378	
	Zero point return detailed parameter area	80 to 91	230 to 241	380 to 391	
	Servo basic parameter area	100 to 109	250 to 259	400 to 409	
	Servo adjustment parameter area	112 to 125	262 to 275	412 to 425	
	Servo extension parameter area	127 to 149	277 to 299	427 to 449	
Monitor data area	System monitor area	450 to 753			Not possible
	Axis monitor area	800 to 883	900 to 983	1000 to 1083	
Control data area	System control data area	1100 to 1139			Possible
	Axis control data area	1150 to 1188	1200 to 1238	1250 to 1288	
Positioning data area (No.1 to 100)	Positioning data area	1300 to 2299	2300 to 3299	3300 to 4299	Possible
Positioning start information area (No.7000)	Start block data area	4300 to 4349	4550 to 4599	4800 to 4849	
		4350 to 4399	4600 to 4649	4850 to 4899	
	Condition data area	4400 to 4499	4650 to 4749	4900 to 4999	
	Indirectly specification data area	4500 to 4549	4750 to 4799	5000 to 5049	
PLC CPU memo area	PLC CPU memo area	5050 to 5099			Possible
Block transmission area	Block transmission area	5100 to 5103 5110 to 6109			Possible


\* Use of address Nos. skipped above is prohibited. If used, the system may not operate correctly.  
(For details of the buffer memory address, refer to Appendix 7.)

7.2 Data transmission process

The data is transmitted between the AD75 memories with steps (1) to (11) shown below.


- The data transmission patterns numbered (1) to (11) on the right page correspond to the numbers (1) to (11) on the left page.

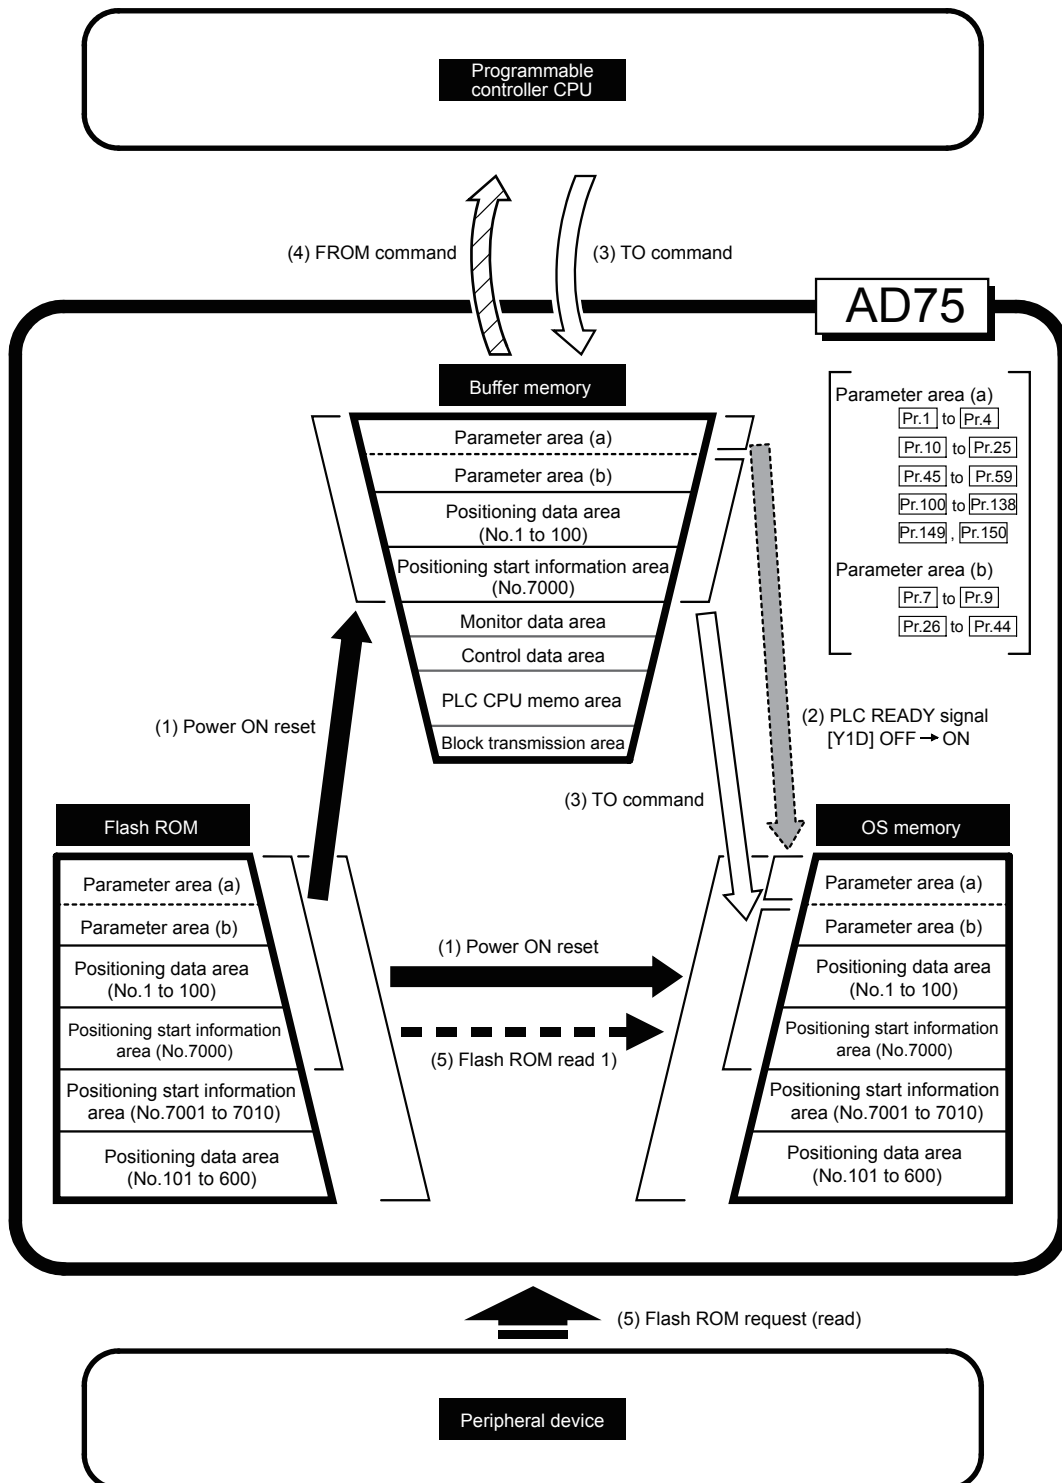

- (1) Transmitting data when power is turned ON or programmable controller CPU is reset (  )

When the power is turned ON or the programmable controller CPU is reset, the "parameters", "positioning data" and "positioning start information" stored (backed up) in the flash ROM is transmitted to the buffer memory and OS memory.


(The "positioning data (No. 101 to 600)" and "positioning start information (No. 7001 to 7010)" data is not transmitted to the buffer memory.)

- (2) Transmitting data when PLC READY signal [Y1D] changes from OFF to ON (  )

When the PLC READY signal [Y1D] changes from OFF to ON, the data stored in the buffer memory's "parameter area (a) \*1" is transmitted to the OS memory.

\*1 Parameter area (a) ..... Parameters transmitted to OS memory when PLC READY signal [Y1D] changes from OFF to ON

( Pr.1 to Pr.4 , Pr.10 to Pr.25 , Pr.45 to Pr.59 , Pr.100 to Pr.138 , Pr.149 , Pr.150 )


- (3) Transmitting data with TO command from programmable controller CPU (  )

The parameters or data is written from the programmable controller CPU to the buffer memory using the TO command. At this time, when the "parameter area (b) \*2", "positioning data (No. 1 to 100)" and "positioning start information (No. 7000)" is written into the buffer memory with the TO command, it is simultaneously transmitted to the OS memory.

\*2 Parameter area (b) ..... Parameters transmitted to the OS memory simultaneously with the writing to the buffer memory with the TO command. ( Pr.7 to Pr.9 , Pr.26 to Pr.44 )

#### POINT

The setting values of the parameters that correspond to parameter area (b) are valid when written into the buffer memory with the TO command. However, the setting values of the parameters that correspond to parameter area (a) are not validated until the PLC READY signal [Y1D] changes from OFF to ON.


- (4) Accessing with FROM command from programmable controller CPU (  )


The data is read from the buffer memory to the programmable controller CPU using the FROM command.

- (5) Flash ROM request (reading) (  )

The following transmission process is carried out with the "flash ROM request" from the peripheral device.

- 1) The "parameters", "positioning data (No. 1 to 600)", and "positioning start information (No. 7000 to 7010)" in the flash ROM is transmitted to the OS memory.

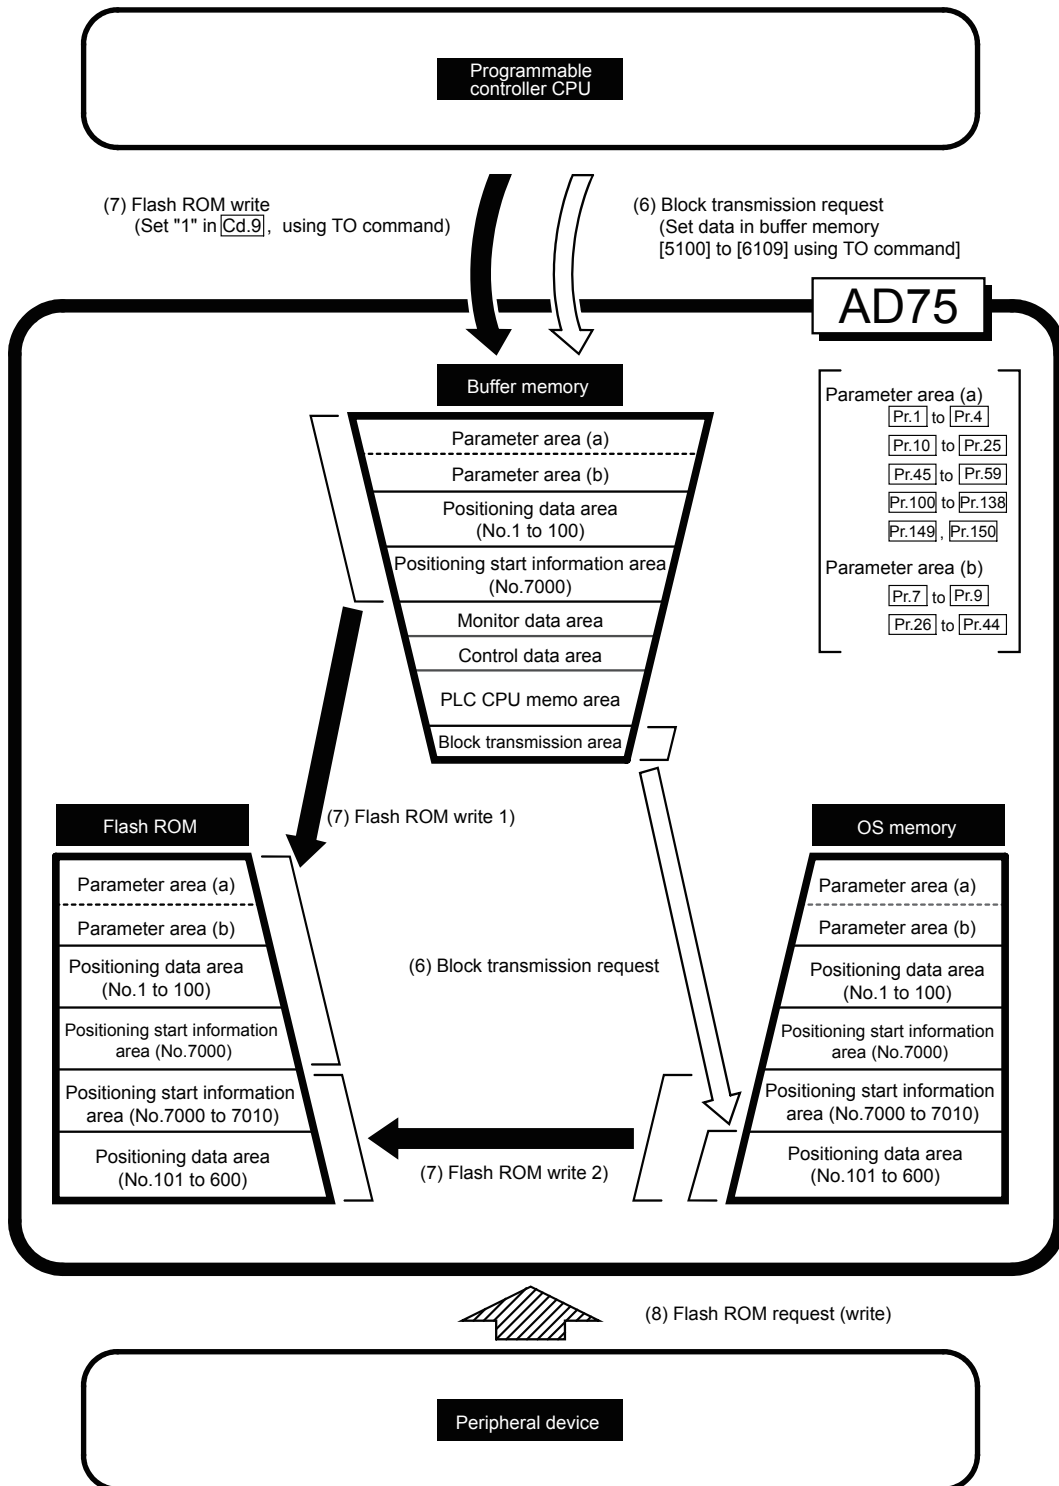

(6) Transmitting blocks from programmable controller CPU (  )

When setting data in positioning data No. 101 to 600 using the sequence program, first the data is set in the "block transmission area" (buffer memory address [5100] to [6109]). Then, the data is set in positioning data No. 101 to 600 by transmitting the data to the OS memory. Refer to section "7.2 Data transmission process (B)" for the procedures.

Note 1) Block transmission from the programmable controller CPU can be executed only when the PLC READY signal [Y1D] is OFF.

If it is executed when the PLC READY signal [Y1D] is ON, warning "in PLC READY" (warning code: 111) will occur.

Note 2) The buffer memory does not have an area to store the positioning data No. 101 to 600, so when setting data in the positioning data No. 101 to 600 using the sequence program, the procedures and settings will be complicated. Use of the AD75 software package when setting positioning data No. 101 to 600 is recommended.

(7) Flash ROM write (  )

The following transmission process is carried out by setting "1" in " Cd.9 Flash ROM write request" (buffer memory [1138]).

- 1) The "parameters", "positioning data (No. 1 to 100)" and "positioning start information (No. 7000)" in the buffer memory area are transmitted to the flash ROM.
- 2) The "positioning data (No. 101 to 600)" and "positioning start information (No. 7001 to 7010)" in the OS memory are transmitted to the flash ROM.

**POINT**

The following two types of parameters are stored in the buffer memory.

- Parameters transmitted to the OS memory when the PLC READY signal [Y1D] changes from OFF to ON
- Parameters transmitted simultaneously to the OS memory when written into the buffer memory with the TO command

With type 1) of the flash ROM write, the "parameters and data set in the buffer memory" (including parameters not transmitted to the OS memory) are written into the flash ROM.

**IMPORTANT**

- Do not turn the power OFF or reset the programmable controller CPU while writing to the flash ROM. If the power is turned OFF or the programmable controller CPU is reset to forcibly end the process, the data backed up in the flash ROM will be lost.
- Do not write data to the buffer memory while data is written to a flash ROM. The AD75 may not operate normally.

# MEMO

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

(8) Flash ROM request (writing) (  )


The following transmission processes are carried out with the [flash ROM request] from the peripheral device.

- 1) The "parameters", "positioning data (No. 1 to 100)" and "positioning start information (No. 7000)" in the buffer memory area are transmitted to the flash ROM.
- 2) The "positioning data (No. 101 to 600)" and "positioning start information (No. 7001 to 7010)" in the OS memory are transmitted to the flash ROM.


Note) This transmission process is the same as (7) above.

**IMPORTANT**

- Do not turn the power OFF or reset the programmable controller CPU while writing to the flash ROM. If the power is turned OFF or the programmable controller CPU is reset to forcibly end the process, the data backed up in the flash ROM will be lost.
- Do not write data to the buffer memory while data is written to a flash ROM. The AD75 may not operate normally.

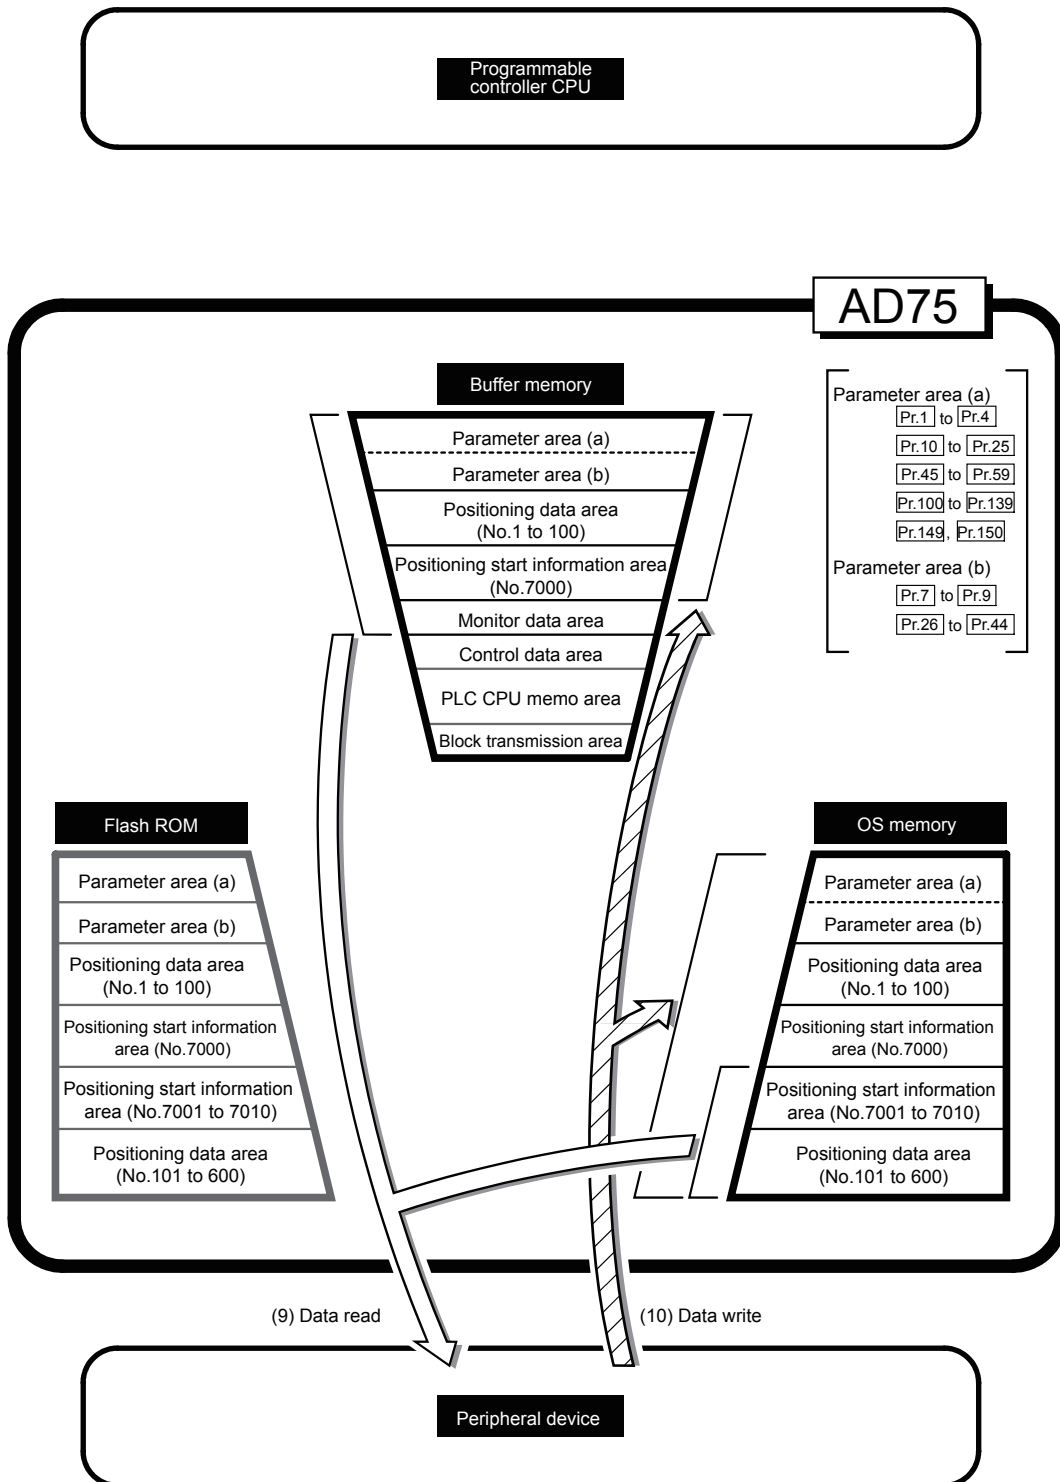




(9) Reading data from buffer memory or OS memory to peripheral device (  )

The following transmission processes are carried out with the [AD75 read] from the peripheral device.

- 1) The "parameters", "positioning data (No. 1 to 100)" and "positioning start information (No. 7000)" in the buffer memory area are transmitted to the peripheral device.
- 2) The "positioning data (No. 101 to 600)" and "positioning start information (No. 7001 to 7010)" in the OS memory are transmitted to the peripheral device.


(10) Writing data from peripheral device to buffer memory or OS memory (  )

The following transmission processes are carried out with the [AD75 write] from the peripheral device.

- 1) The "parameters", "positioning data (No. 1 to 100)" and "positioning start information (No. 7000)" in the peripheral device area transmitted to the buffer memory.
- 2) The "positioning data (No. 101 to 600)" and "positioning start information (No. 7001 to 7010)" in the peripheral device are transmitted to the OS memory.

At this time, when [Flash ROM Write] is set with the peripheral device, the transmission processes indicated with the following are carried out.

- (7) Flash ROM write 1
- (7) Flash ROM write 2

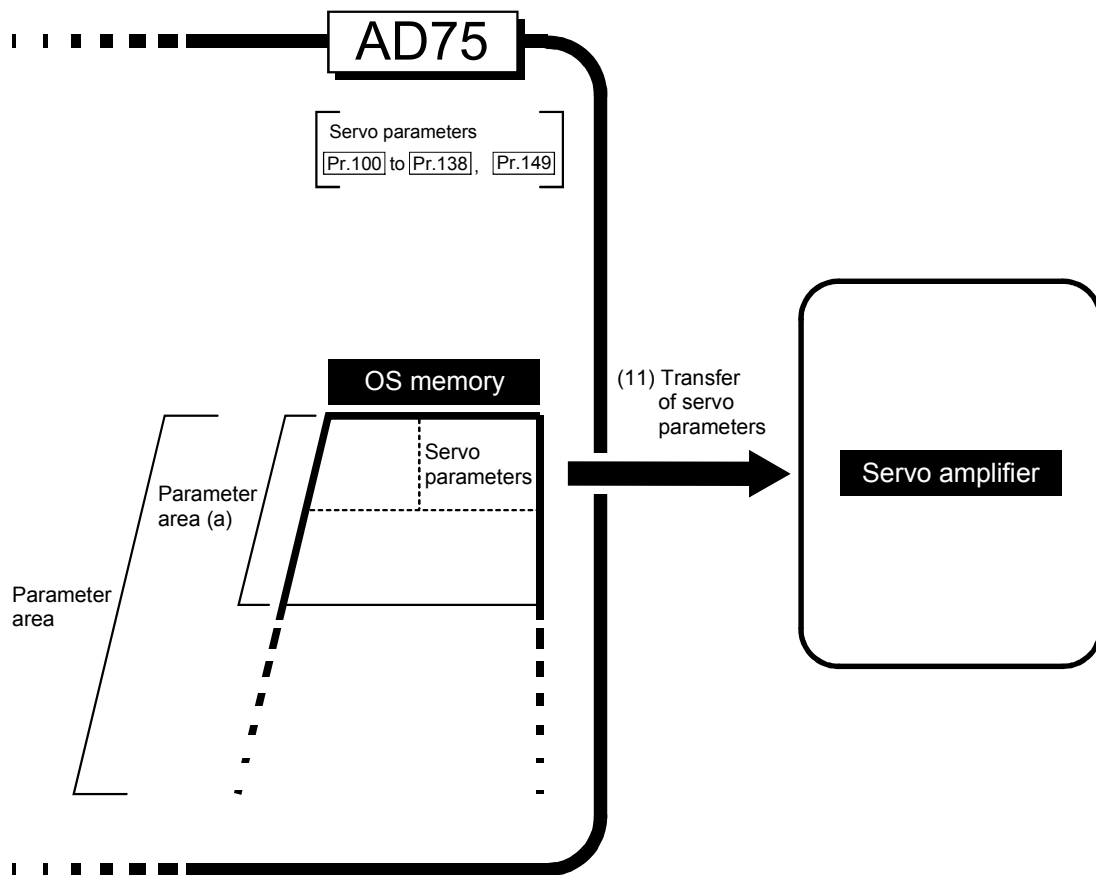

### (11) Transfer of servo parameters ( )

#### Servo parameter transfer timing

The servo parameters transferred to the servo amplifier are the data of the OS memory. Transfer is made at the timings 1), 2) indicated below.

- 1) When communication with the servo amplifier is started\*  
All servo parameters are transferred to the servo amplifier.
- 2) When the PLC READY signal [Y1D] turns from OFF to ON  
The following servo parameters are transferred to the servo amplifier.
  - Auto tuning (servo basic parameter)
  - Load inertia ratio (servo adjustment parameter)
  - Position loop gain 1 (servo adjustment parameter)
  - Speed loop gain 1 (servo adjustment parameter)
  - Position loop gain 2 (servo adjustment parameter)
  - Speed loop gain 2 (servo adjustment parameter)
  - Speed integral compensation (servo adjustment parameter)
  - Feed forward gain (servo adjustment parameter)

**\*: About start of communication with the servo amplifier**

Communication with the servo amplifier starts when the following two conditions hold.

(Conditions)

- The AD75 and servo amplifier has been powered on and started.
- The servo basic parameter "motor capacity" in the AD75 OS memory is other than "0".  
(Communication is continued if the servo basic parameter "motor capacity" of the OS memory is set to "0" after establishment of communication.)

At power-on or programmable controller CPU reset, the data stored (backed up) in the flash ROM are transferred to the OS memory. (Refer to section 7.2 (1).)

Therefore, when the servo basic parameter "motor capacity" stored in the flash ROM is not "0" and the servo amplifier has started earlier than the AD75, communication with the servo amplifier starts before the programmable controller CPU starts RUN, so the servo parameters transferred to the servo amplifier are the data stored in the flash ROM.

**[How to transfer the servo parameters, which were set from the sequence program, to the servo amplifier]**

(Method 1)

Set the value of the servo basic parameter "motor capacity" stored in the flash ROM to "0". (The factory setting is 0.)

This turns the servo basic parameter "motor capacity" in the flash ROM to "0" at power-on or programmable controller CPU reset, disabling communication from starting since the communication starting condition does not hold.

When the servo parameters ("motor capacity" is not "0") are set from the sequence program and the PLC READY signal [Y1D] is turned from OFF to ON, the servo parameters in the buffer memory are transferred to the OS memory, and communication starts since the communication start conditions have held.

Therefore, the servo parameters transferred to the servo amplifier are the values set from the sequence program.

(Method 2)

Turn the PLC READY signal [Y1D] from OFF to ON using the sequence program. When the AD75 READY signal [X0] then turns from ON to OFF, power on the servo amplifier.

When the AD75 READY signal [X0] turns OFF, the servo parameters set from the sequence program are reflected on the OS memory.


Therefore, the servo parameters transferred to the servo amplifier are the values set from the sequence program.

**[How to transfer the servo parameters, which were written to the flash ROM, to the servo amplifier]**

Set the servo parameters to the buffer memory and write them to the flash ROM. After that, switch power on again or reset the programmable controller CPU.

After the servo parameters to be transferred to the servo amplifier have been written to the flash ROM, the setting of the servo parameters from the sequence program is not necessary.

## [Servo parameters in the buffer memory and OS memory]

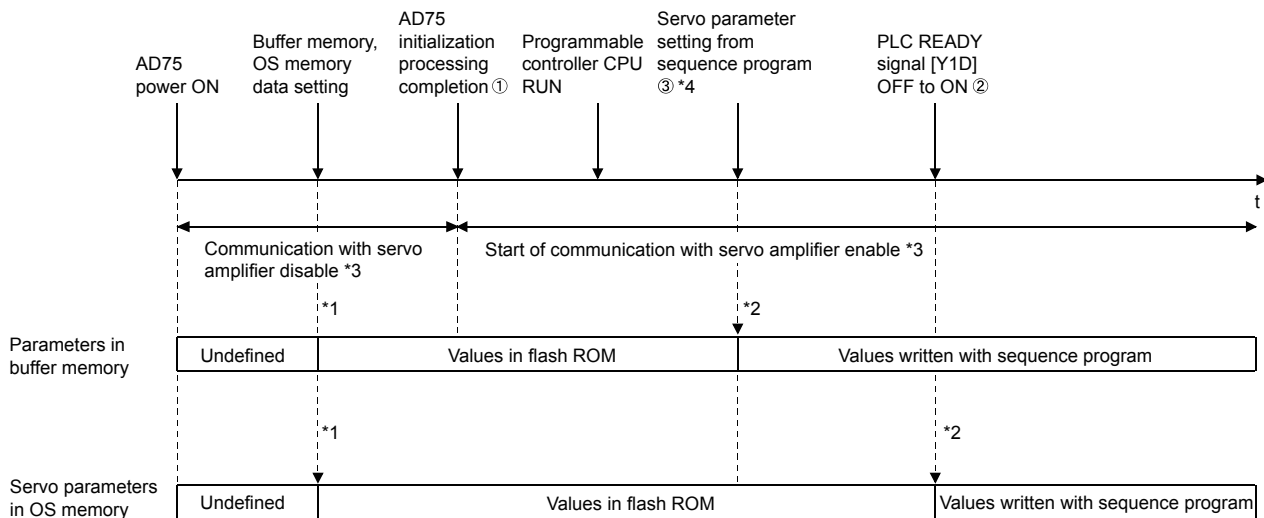

## (Operation)

(1) Servo parameter transfer made when the AD75 is powered on with the servo amplifier started up

(a) The servo basic parameter "motor capacity" in the flash ROM is not "0"

Timing of starting communication with servo amplifier : At completion of AD75 initialization processing  
(① in the above chart)

Transferred servo parameters : Data stored (saved) in the flash ROM

(b) The servo basic parameter "motor capacity" in the flash ROM is "0"

Timing of starting communication with servo amplifier : When the PLC READY signal [Y1D] turns from OFF to ON (② in the above chart)

Transferred servo parameters : Data written from the sequence program before the PLC READY signal [Y1D] turns ON (data written in ③ in the above chart)

(2) Servo parameter transfer made when the servo amplifier starts up after the PLC READY signal [Y1D] has turned from OFF to ON (② in the above chart)

Timing of starting communication with servo amplifier : At startup of the servo amplifier

Transferred servo parameters : Data written from the sequence program before the PLC READY signal [Y1D] turns ON (data written in ③ in the above chart)

\*1: The servo parameters stored in the flash ROM are transferred to the buffer memory and OS memory by the AD75 initialization processing performed at power-on.

\*2: The servo parameters written to the buffer memory using the sequence program are not reflected on the OS memory.

When the PLC READY signal (Y1D) turns from OFF to ON, the values set in the buffer memory are transferred to the OS memory.

\*3: Communication with the servo amplifier is not made until the AD75 initialization processing is completed after power-on.


Communication is started when the communication starting conditions hold after completion of the AD75 initialization processing.

\*4: When the servo parameters to be transferred to the servo amplifier have been written to the flash ROM in advance, setting from the sequence program is not necessary.

The data transmission is carried out as shown in the previous pages, but the main method of using this data process is shown below.


(A) Correcting the execution data (OS memory)

The following methods can be used to correct the OS memory.

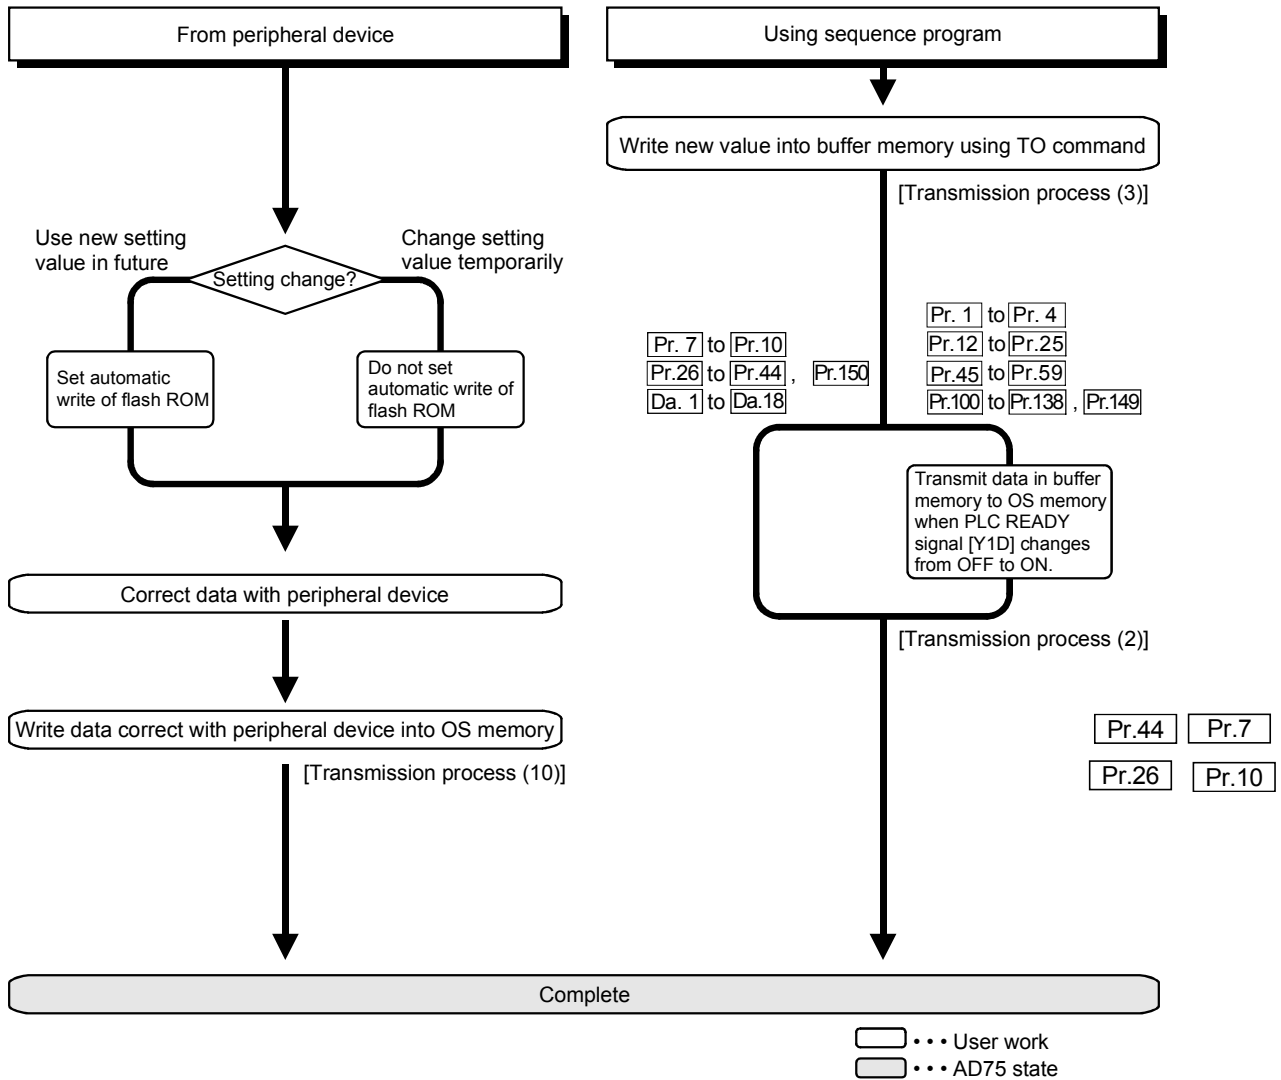

(B) Setting positioning data No. 101 to 600 data

The positioning data is set with the following procedures.

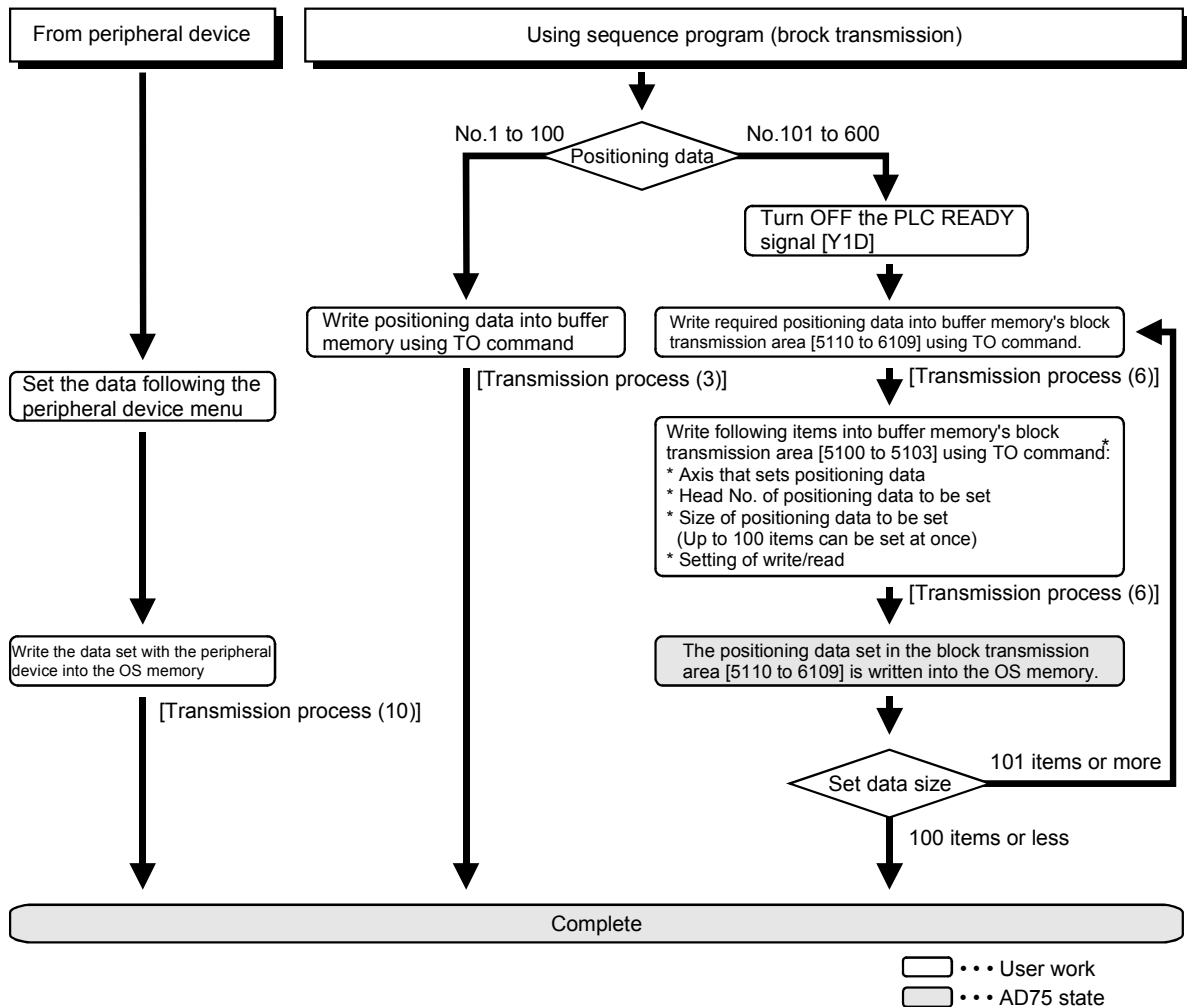


\* The details written with the TO command are shown below.

Block transmission memory	5100	Target axis (1: axis 1, 2: axis 2, 3: axis 3)
	5101	Head positioning data No. (1 to 600)
	5102	No. of read/write data (1 to 100)
	5103	Read/write request 0: Read/write complete (set by OS) 1: Read request 2: Write request
	5110 to 6109	Read/write block (Positioning data storage area)

- Which axis
- From nth positioning data in OS memory
- How many data
- Whether to read or write
- When reading, the data is read from the OS memory into here, and when writing, the data set and stored here is written into the OS memory.

\* The default value is "0".

(Example) When setting the positioning data No. 101 to 300 of axis 1 to the OS memory  
 (The number of data that can be set for block transmission at one time is up to 100 pieces.)

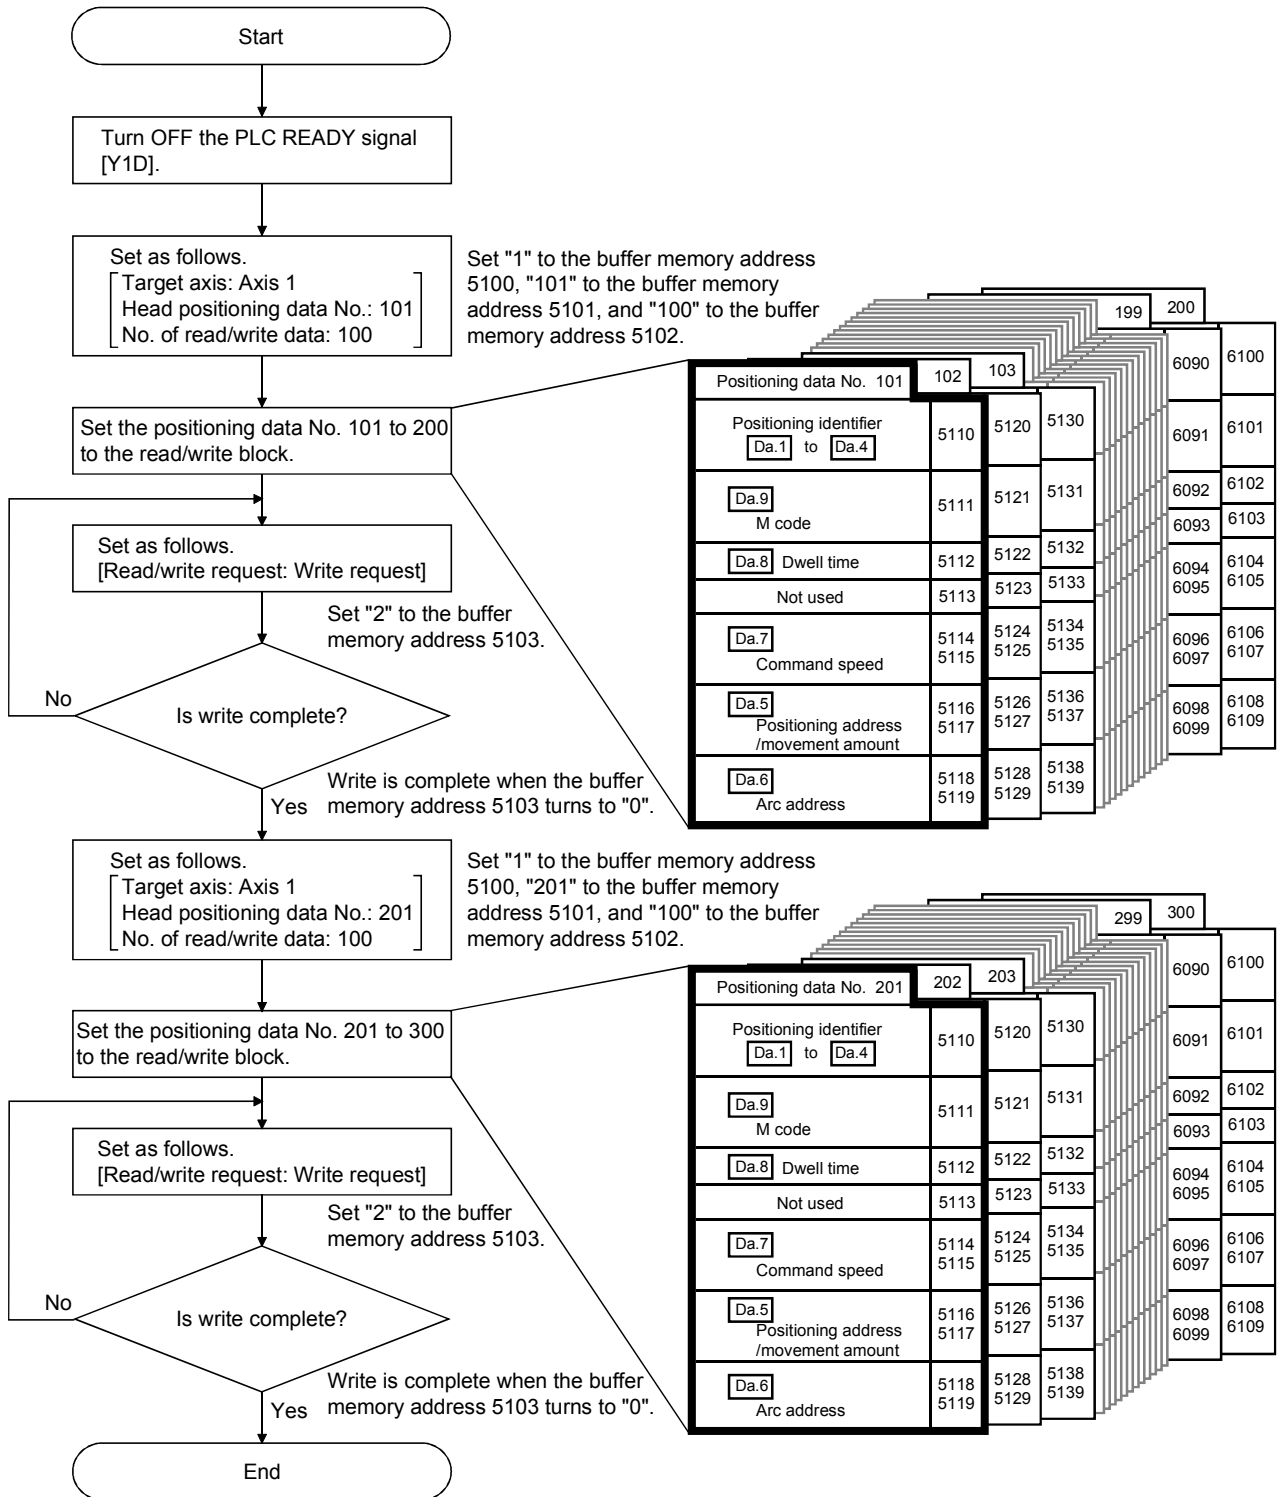





---

## SECTION 2

---

### CONTROL DETAILS AND SETTING

SECTION 2 is configured for the following purposes shown in (1) to (3).

- (1) Understanding of the operation and restrictions of each control.
- (2) Carrying out the required settings in each control
- (3) Dealing with errors

The required settings in each control include parameter setting, positioning data setting, control data setting by a sequence program, etc.

Carry out these settings while referring to "CHAPTER 5 DATA USED FOR POSITIONING CONTROL".

Also refer to "CHAPTER 6 SEQUENCE PROGRAM USED IN POSITIONING CONTROL" when creating the sequence programs required in each control, and consider the entire control program configuration when creating each program.

CHAPTER 8	ZERO POINT RETURN CONTROL .....	8- 1 to 8- 24
CHAPTER 9	MAIN POSITIONING CONTROL.....	9- 1 to 9- 64
CHAPTER 10	ADVANCED POSITIONING CONTROL .....	10- 1 to 10- 24
CHAPTER 11	MANUAL CONTROL.....	11- 1 to 11- 26
CHAPTER 12	CONTROL AUXILIARY FUNCTIONS .....	12- 1 to 12- 104
CHAPTER 13	COMMON FUNCTIONS .....	13- 1 to 13- 12
CHAPTER 14	TROUBLESHOOTING .....	14- 1 to 14- 80



---

# CHAPTER 8

---

## ZERO POINT RETURN CONTROL

The details and usage of "zero point return control" are explained in this chapter.

Zero point return control includes "machine zero point returns" that establish a machine zero point without using address data, and "high-speed zero point returns" that store the coordinates established by the machine zero point return, and carry out positioning to that position.

Zero point returns carried out by sequence programs from the programmable controller CPU are explained in this chapter.

Refer to the AD75 Software Package Operating Manual for details on zero point returns using the AD75 software package.

8.1	Outline of zero point return control.....	8- 2
8.1.1	Two types of zero point return control.....	8- 2
8.2	Machine zero point return .....	8- 4
8.2.1	Outline of the machine zero point return operation .....	8- 4
8.2.2	Machine zero point return method .....	8- 5
8.2.3	Zero point return method (1): Near-point dog method .....	8- 7
8.2.4	Zero point return method (2): Near-point dog method 2) .....	8- 9
8.2.5	Zero point return method (3): Count method 1).....	8- 11
8.2.6	Zero point return method (4): Count method 2).....	8- 14
8.2.7	Zero point return method (5): Count method 3).....	8- 16
8.2.8	Zero point return method (6): Data setting method .....	8- 18
8.3	High-speed zero point return .....	8- 19
8.3.1	Outline of the high-speed zero point return operation .....	8- 19
8.4	Positioning to the zero point.....	8- 21

## 8.1 Outline of zero point return control

### 8.1.1 Two types of zero point return control

In "zero point return control" a position is established as the starting point (or "zero point") when carrying out positioning control, and positioning is carried out toward that starting point.

It is used to return a machine system at any position other than the zero point to the zero point, such as, when the AD75 issues a "zero point return request"\*, after a positioning stop, etc.

In the AD75, the two types of controls shown below are defined as "zero point return control", following the flow of the zero point return work.

These two types of zero point return control can be executed by setting the "zero point return parameters", setting "Positioning start No. 9001" and "Positioning start No. 9002" prepared beforehand in the AD75 to "Cd.11 Positioning start No.", and turning ON the positioning start signal.

- (1) Establish a positioning control zero point
  - "Machine zero point return" (positioning start No. 9001)
- (2) Carry out positioning toward the zero point
  - "High-speed zero point return" (positioning start No. 9002).

\* The "machine zero point return" in (1) above must always be carried out before executing the "high-speed zero point return" in (2).  
When an absolute position detection system is used, however, performing a zero point return once at the installation of a machine eliminates the need for a "machine zero point return" in (1) after that.

#### REMARK

Zero point return request \*

The "zero point return request flag" ([Md.40](#) Status: b3) must be turned ON in the AD75, and a machine point return must be executed in the following cases.

- At the ON → OFF of the servo ON signal ([Md.116](#) Servo status: b1)
- At the OFF → ON of the PLC READY signal [Y1D]

The address information stored in the AD75 cannot be guaranteed while the "zero point return request flag" is ON.

The "zero point return request flag" turns OFF and the "zero point return complete flag" ([Md.40](#) Status: b4) turns ON if the machine zero point return is executed and is completed normally.

In the absolute position detection system, ignore the zero point return request flag.

### ■ Zero point return auxiliary functions

Refer to section "3.3.4 Combination of AD75 main functions and auxiliary functions" for details on "auxiliary functions" that can be combined with zero point return control. Also refer to "CHAPTER 12 CONTROL AUXILIARY FUNCTIONS" for details on each auxiliary function.

#### [Remarks]

The following two auxiliary functions are only related to machine zero point returns.

Auxiliary function name	Machine zero point return	High-speed zero point return	Reference
Zero point return retry function	△	×	Section 12.2.1
Zero point shift function	○	×	Section 12.2.2

○ : Combination possible, △: Restricted, ×: Combination not possible

### ■ When a zero point return is not required

Control can be carried out ignoring the "zero point return request flag" (Md.40 Status: b3) in systems that do not require a zero point return.

In this case, the "zero point return parameters (Pr.45 to Pr.59)" must all be set to their initial values or a value at which an error does not occur.

### ■ Zero point returns from peripheral devices

"Machine zero point returns" and "high-speed zero point returns" can be executed from the AD75 software package test mode.

Refer to the AD75 software package operating manual for details on zero point returns from the AD75 software package.

### ■ Zero point return in absolute position detection system

When machine zero point return control is executed in the absolute position detection system, access is made to the FeRAM (Ferroelectric Random Access Memory).

The FeRAM access count is maximum  $9.9999 \times 10^9$  times.

When the "Md.120 FeRAM access count" exceeds  $9.0000 \times 10^9$  times, a warning "FeRAM count warning" (warning code: 10) occurs.

When the FeRAM access count exceeds  $9.9999 \times 10^9$  times, an error "FeRAM count over" (error code: 10) occurs. In this case, the AD75 has reached the end of its service life. Therefore, replace the module.

When the FeRAM access count exceeds  $9.9999 \times 10^9$  times, the absolute position (zero point position) cannot be restored normally at a system startup (power on, reset, etc.).

8.2 Machine zero point return

8.2.1 Outline of the machine zero point return operation

**Important**

Use the zero point return retry function when the zero point position is not always in the same direction from the workpiece operation area (when the zero point is not set near the upper or lower limit of the machine).

\* The machine zero point return may not complete unless the zero point return retry function is used.

■ Machine zero point return operation

In a machine zero point return, establish a machine zero point.  
 In the zero point return methods (1) to (5), the address information stored in the AD75, programmable controller CPU and servo amplifier is never used.  
 In the zero point return method (6): data setting method, the address information of the servo held by the absolute position detection system is used.  
 The position mechanically established after the machine zero point return is regarded as the "zero point" to be the starting point for positioning control.  
 The method for establishing a "zero point" by a machine zero point return differs according to the method set in "[Pr.45] Zero point return method".  
 The following shows the operation when starting a machine zero point return.

1)	The machine zero point return is started.
2)	The operation starts according to the speed and direction set in the zero point return parameters ([Pr.45] to [Pr.59]).
3)	The "zero point" is established by the method set in "[Pr.45] Zero point return method", and the machine stops. (Refer to sections 8.2.2 to 8.2.8)
4)	If "a" is set in "[Pr.47] Zero point address", "a" will be stored as the current position in the "[Md.29] Current feed value" and "[Md.30] Machine feed value" which are monitoring the position.
5)	"[Pr.47] Zero point address" ("a") is stored in the "[Md.43] Zero point absolute position".
6)	The machine zero point return is completed.

\* The "[Pr.47] Zero point address" is a fixed value set by the user, but the "[Md.43] Zero point absolute position" is constantly changed by the AD75 to indicate the "zero point", even if there is a change in the address information.

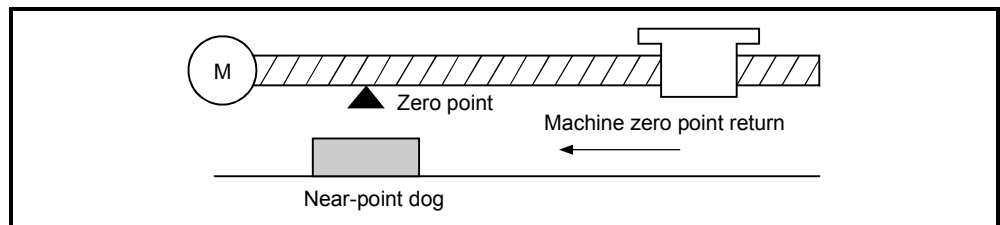


Fig. 8.1 Example of a machine zero point return

## 8.2.2 Machine zero point return method

The method by which the machine zero point is established (method for judging the zero point position and machine zero point return completion) is designated in the machine zero point return according to the configuration and application of the positioning method.

The following table shows the six methods that can be used for this zero point return method.

(The zero point return method is one of the items set in the zero point return parameters. It is set in "[Pr.45] Zero point return method" of the basic parameters for zero point returns.)

[Pr.45] Zero point return method	Operation details	Remarks
Near-point dog method	<ul style="list-style-type: none"> <li>When the zero point is passed between a machine zero point return start and deceleration to a stop by the near-point dog ON to OFF When the near-point dog turns from OFF to ON, the machine starts deceleration. (The machine decelerates to "[Pr.49] Creep speed".) After the near-point dog has turned from ON to OFF, the machine stops at the first zero point*<sup>2</sup>, completing the machine zero point return.</li> <li>When the zero point is not passed between a machine zero point return start and deceleration to a stop by the near-point dog ON to OFF When the near-point dog turns from OFF to ON, the machine starts deceleration. (The machine decelerates to "[Pr.49] Creep speed".) When the near-point dog turns from ON to OFF, the machine decelerates to a stop, resulting in "Zero point not pass at zero point return" (error code: 210).</li> </ul>	Use this method in the system where the zero point can always be passed between a machine zero point return start and the near-point dog ON to OFF.
Near-point dog method 2) * <sup>1</sup>	<ul style="list-style-type: none"> <li>When the zero point is passed between a machine zero point return start and deceleration to a stop by the near-point dog ON to OFF Same as in the "near-point dog method".</li> <li>When the zero point is not passed between a machine zero point return start and deceleration to a stop by the near-point dog ON to OFF When the near-point dog turns from OFF to ON, the machine starts deceleration. (The machine decelerates to "[Pr.49] Creep speed".) When the near-point dog turns from ON to OFF, the machine decelerates to a stop, and the servomotor is rotated one turn in the opposite direction. (The zero point is passed.) The machine moves in the zero point direction again, and after the near-point dog has turned from ON to OFF, the machine stops at the first zero point*<sup>2</sup>, completing the machine zero point return. (The machine moves at "[Pr.48] Zero point return speed".)</li> </ul>	Use this method in the system where the "near-point dog method" cannot be used.
Count method 1)	<ul style="list-style-type: none"> <li>When the zero point is passed from a machine zero point return start until the machine moves the distance set to "[Pr.52] Setting for the movement amount after near-point dog ON" When the near-point dog turns from OFF to ON, the machine starts deceleration and moves at "[Pr.49] Creep speed". After the machine has moved the distance set to "[Pr.52] Setting for the movement amount after near-point dog ON" from the position where the near-point dog turned from OFF to ON, the machine stops at the first zero point*<sup>2</sup>, completing the machine zero point return.</li> <li>When the zero point is not passed from a machine zero point return start until the machine moves the distance set to "[Pr.52] Setting for the movement amount after near-point dog ON" When the near-point dog turns from OFF to ON, the machine starts deceleration (The machine decelerates to "[Pr.49] Creep speed".) When the near-point dog turns from ON to OFF, the machine decelerates to a stop, resulting in "Zero point not pass at zero point return" (error code: 210).</li> </ul>	Use this method in the system where the zero point can always be passed between a machine zero point return start and the near-point dog ON to OFF.
Count method 2)	<p>When the near-point dog turns from OFF to ON, the machine starts deceleration and moves at "[Pr.49] Creep speed". The machine stops in the position where the distance set to "[Pr.52] Setting for the movement amount after near-point dog ON" is reached from the position where the near-point dog turned from OFF to ON, completing the machine zero point return.</p>	—

Pr.45 Zero point return method	Operation details	Remarks
Count method 3) *1	<ul style="list-style-type: none"> <li>When the zero point is passed from a machine zero point return start until the machine moves the distance set to "Pr.52 Setting for the movement amount after near-point dog ON" Same as in the "count method 1)".</li> <li>When the zero point is not passed from a machine zero point return start until the machine moves the distance set to "Pr.52 Setting for the movement amount after near-point dog ON" When the near-point dog turns from OFF to ON, the machine starts deceleration. (The machine decelerates to "Pr.49 Creep speed".) After the machine has moved the distance set to "Pr.52 Setting for the movement amount after near-point dog ON", the servomotor is rotated one turn in the opposite direction. (The zero point is passed.) The machine moves in the zero point direction again, and after the machine has moved the distance set to "Pr.52 Setting for the movement amount after near-point dog ON" from the position where the near-point dog turned from ON to OFF, the machine stops at the first zero point*2, completing the machine zero point return. (The machine moves at "Pr.48 Zero point return speed".)</li> </ul>	Use this method in the system where the "count method 1)" cannot be used.
Data setting method	The position reached by JOG operation or manual pulse generator operation in the absolute position detection system is registered to the AD75 as the zero point. The current feed value and machine feed value are rewritten to the value set to "Pr.47 Zero point address", and the machine zero point return is completed.	—

\*1: The "near-point dog method 2)" and "count method 3)" are the functions added to the AD75 of software version "Q" and later.

\*2: Signal input as the zero point to the AD75 (one-pulse output signal per servomotor revolution <Z phase signal output by the servo amplifier to the AD75 via the SSCNET cable>) in any of the zero point return methods, near-point dog method, near-point dog method 2), count method 1), and count method 3).

### REMARK

#### Creep speed

The stopping accuracy is poor when the machine suddenly stops from high speeds. To improve the machine's stopping accuracy, it must change over to a low speed before stopping. This speed is set in the "Pr.49 Creep speed".



8.2.3 Zero point return method (1): Near-point dog method

The following shows an operation outline of the "near-point dog method" zero point return method.

■ Operation chart

1)	The machine zero point return is started. (The machine begins the acceleration designated in "[Pr.53] Zero point return acceleration time selection", in the direction designated in "[Pr.46] Zero point return direction". It then moves at the "[Pr.48] Zero point return speed" when the acceleration is completed.)
2)	The machine begins decelerating when the near-point dog ON is detected.
3)	The machine decelerates to the "[Pr.49] Creep speed", and subsequently moves at that speed.
4)	At detection of the near-point dog OFF, the machine decelerates to a stop. The machine accelerates to "[Pr.49] Creep speed" again and stops at the first zero point.
5)	The zero point return complete flag ([Md.40] Status: b4) turns from OFF to ON, and the zero point return request flag ([Md.40] Status: b3) turns from ON to OFF.

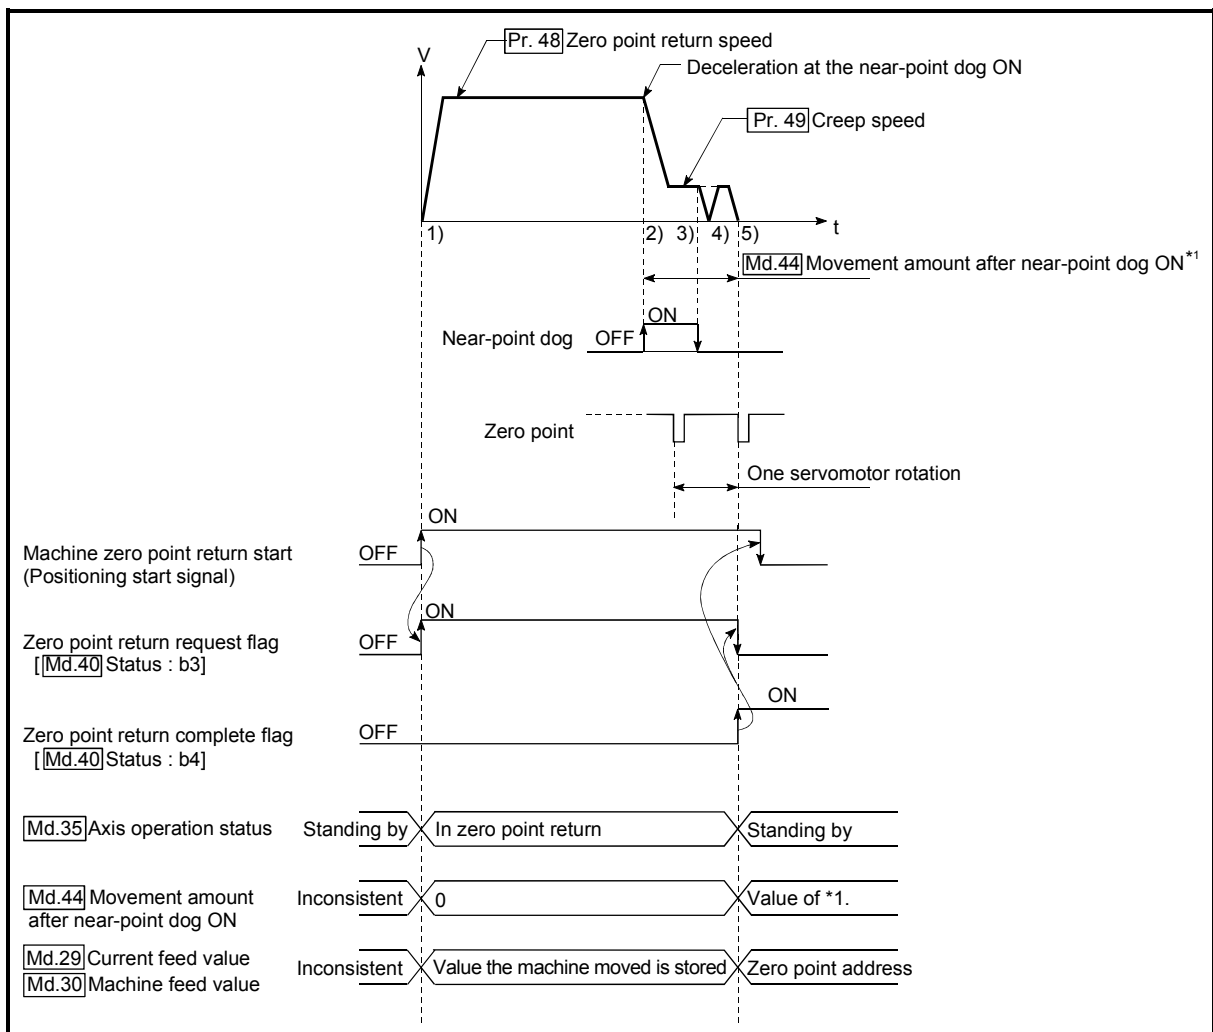


Fig. 8.2 Near-point dog method machine zero point return

■ Restrictions

The system where the zero point can always be passed between a machine zero point return start and the near-point dog ON to OFF, is required.

■ Precautions during operation

- (1) An error "Start at zero point" (error code: 201) will occur if another machine zero point return is attempted after a machine zero point return completion when the zero point return retry function is not set ("0" is set in "[Pr.50] Zero point return retry").
- (2) Machine zero point returns carried out from the near-point dog ON position will start at the "[Pr.49] Creep speed".
- (3) The near-point dog must be ON during deceleration from the zero point return speed "[Pr.49] Creep speed".
- (4) If the zero point has never been passed between a machine zero point return start and the near-point dog ON to OFF, an error "zero point not pass at zero point return" (error code: 210) occurs, resulting in deceleration to a stop. In the system where the distance between the machine zero point return starting position and zero point is too short to pass the zero point, select the zero point return method (2): "near-point dog method 2".

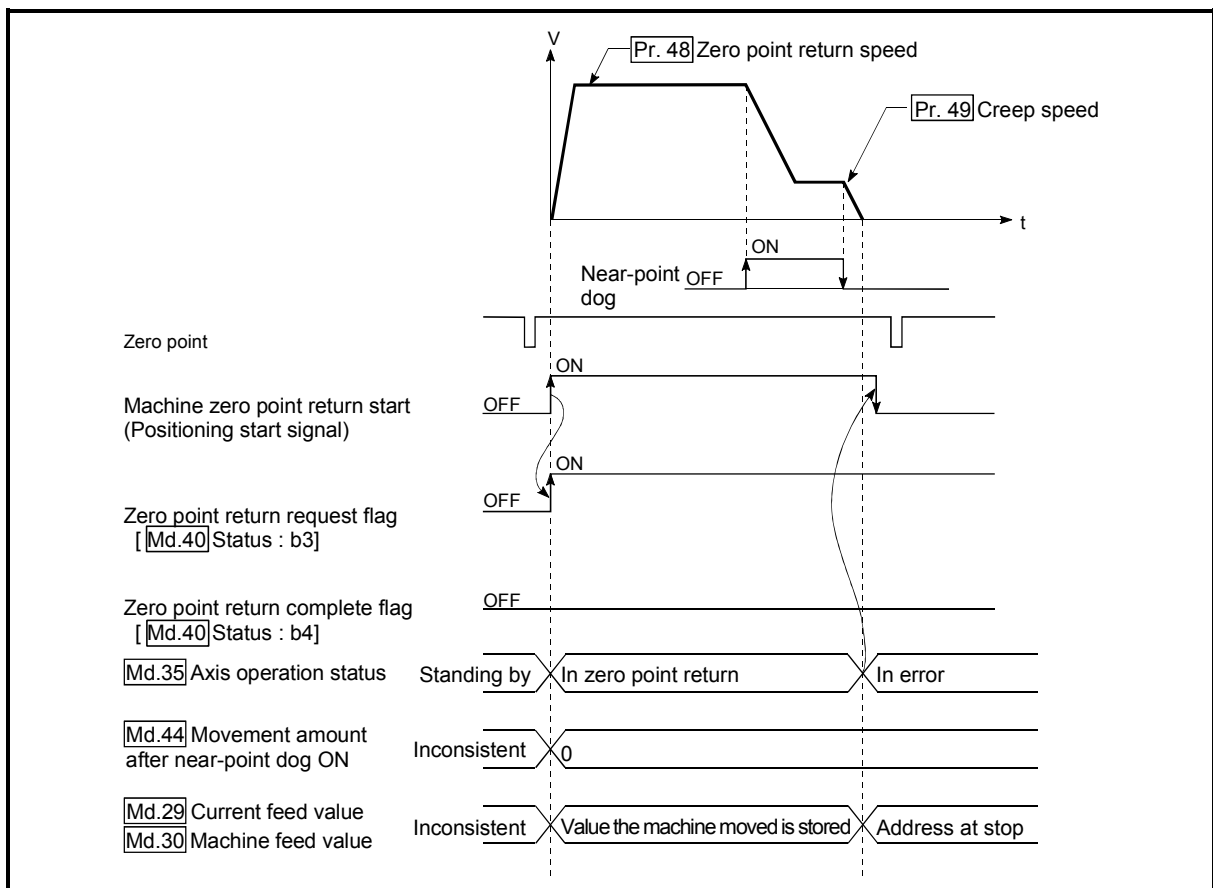


Fig. 8.3 Operation performed when the zero point is not passed in the near-point dog method

- (5) If the restart command is turned ON after machine zero point return is stopped upon a stop signal, an error "zero point return restart not possible" (error code: 209) occurs.

8.2.4 Zero point return method (2): Near-point dog method 2)

When the zero point is passed between a machine zero point return start and deceleration to a stop by the near-point dog ON to OFF, the operation outline of the zero point return method "near-point dog method 2)" is the same as that of the zero point return method (1) "near-point dog method". (Refer to section 8.2.3.) The following shows the operation outline of the case where the zero point is not passed.

■ Operation chart

1)	The machine zero point return is started. (The machine starts acceleration designated in "[Pr.53] Zero point return acceleration time selection" in the direction designated in "[Pr.46] Zero point return direction", and moves at "[Pr.48] Zero point return speed".)
2)	At detection of the near-point dog ON, the machine decelerates to "[Pr.49] Creep speed", and then moves at the creep speed.
3)	At detection of the near-point dog ON, the machine decelerates to a stop.
4)	After stopping, the machine moves by the amount of one servomotor revolution at "[Pr.48] Zero point return speed" in the direction opposite to the designated zero point return direction.
5)	The machine moves at "[Pr.48] Zero point return speed" in the designated zero point return direction, and completes the machine zero point return in the position of the first zero point after near-point dog ON to OFF. (At this time, the machine does not decelerate to "[Pr.49] Creep speed" when the near-point dog turns from OFF to ON.)

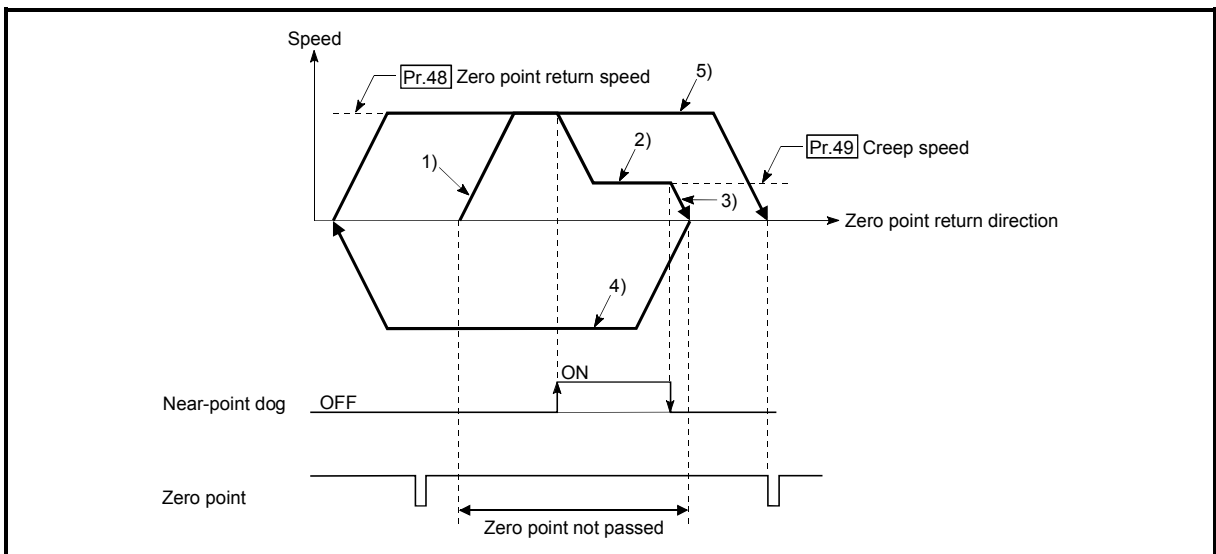


Fig. 8.4 Operation performed when the zero point is not passed in the near-point dog method 2)

**■ Restrictions**

- The system where the machine can move by the movement amount of more than one servomotor revolution is required.
- The system where the upper/lower limit stroke limit signal does not turn OFF when the servomotor rotates one turn in the opposite direction following a stop made when the designated condition holds after the near-point dog has turned ON, is required.

**■ Precautions during operation**

- (1) When the zero point return retry function is not set ("Pr.50 Zero point return retry" setting is "0"), making a machine zero point return again after completion of a machine zero point return results in an error "start at zero point" (error code: 201).
- (2) When a machine zero point return is started while the near-point dog is ON, the machine starts at "Pr.49 Creep speed".
- (3) The near-point dog must be kept ON while the machine decelerates from the zero point return speed to "Pr.49 Creep speed".
- (4) When the zero point is not passed between a machine zero point return start and the near-point dog ON to OFF, do not touch the servomotor and positioning system until the machine zero point return is completed. (When the servomotor rotates one turn in the opposite direction, the AD75 waits until the in-position signal and zero speed signal of the servo amplifier turn ON. If the servomotor or positioning system is touched in the status where the stop position has not yet been reached, the in-position signal and zero speed signal may turn ON due to the motor side load, rotating the servomotor suddenly in the opposite direction and positioning the machine to the zero point.)
- (5) If the restart command is turned ON after the machine zero point return is stopped by the stop signal, an error "zero point return restart not possible" (error code: 209) occurs.

8.2.5 Zero point return method (3): Count method 1)

The following shows the outline of the zero point return method "count method 1)".

■ Operation chart

1)	The machine zero point return is started. (The machine starts acceleration designated in "[Pr.53] Zero point return acceleration time selection" in the direction designated in "[Pr.46] Zero point return direction", and moves at "[Pr.48] Zero point return speed".)
2)	At detection of the near-point dog ON, the machine starts deceleration.
3)	The machine decelerates to "[Pr.49] Creep speed", and then moves at the creep speed.
4)	The machine decelerates to a stop as soon as it moves the movement amount set to "[Pr.52] Setting for the movement amount after near-point dog ON" after the near-point dog has turned ON. The machine accelerates to "[Pr.49] Creep speed" again, and stops at the first zero point.
5)	The zero point return complete flag ([Md.40] Status: b4) turns from OFF to ON, and the zero point return request flag ([Md.40] Status: b3) turns from ON to OFF.

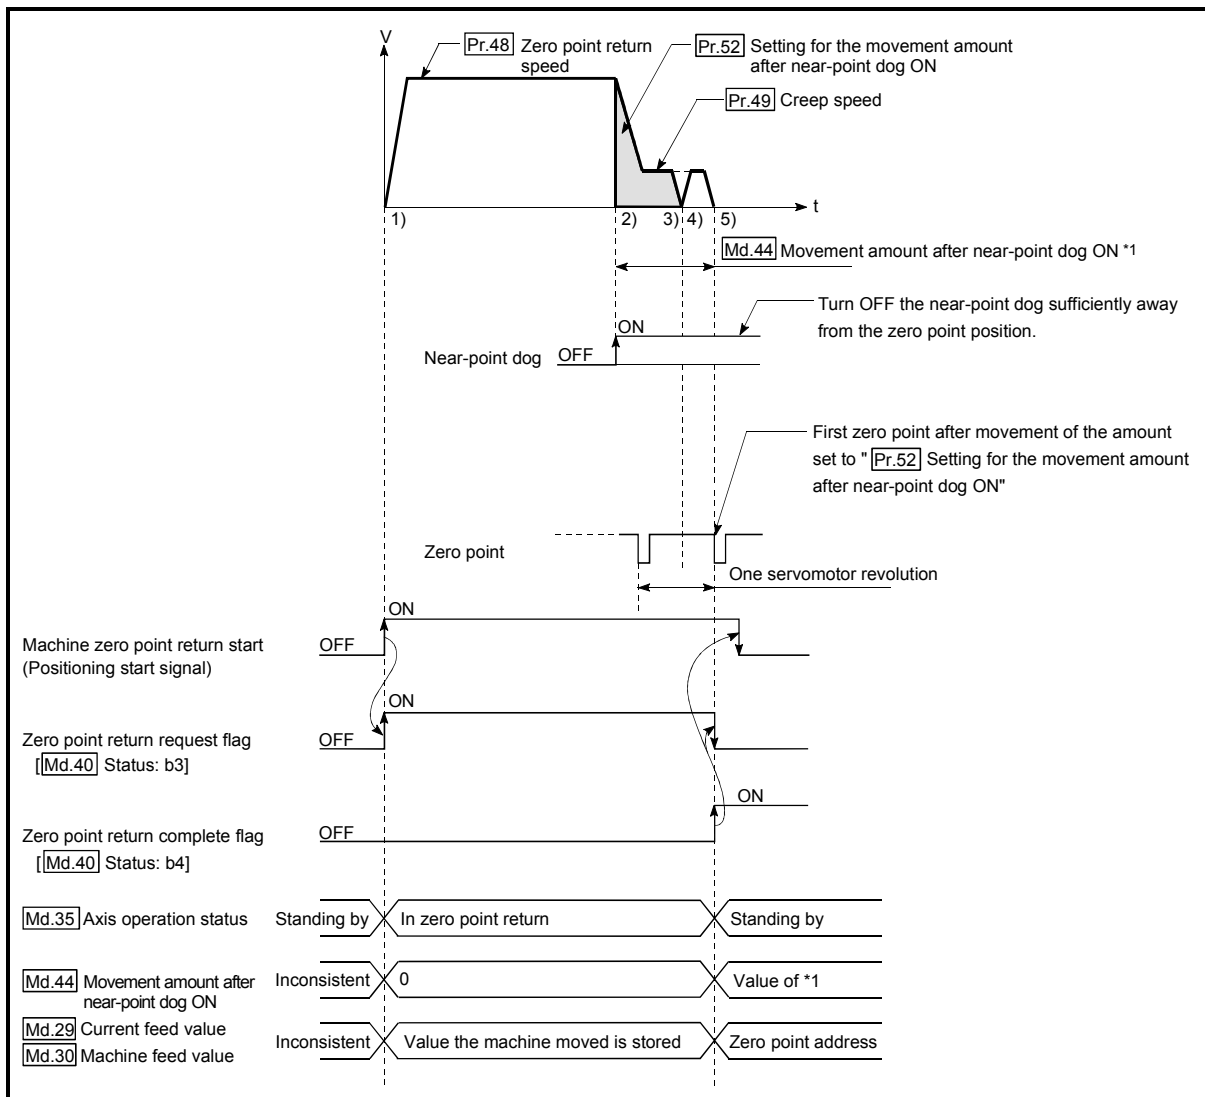


Fig. 8.5 Count method 1) machine zero point return

### ■ Precautions during operation

- (1) If "Pr.52 Setting for the movement amount after near-point dog ON" is less than the distance of deceleration from "Pr.48 Zero point return speed" to "Pr.49 Creep speed", an error "count method movement amount fault" (error code: 206) occurs, disabling a start.
- (2) The operation performed when a machine zero point return is started while the near-point dog is ON is shown below.

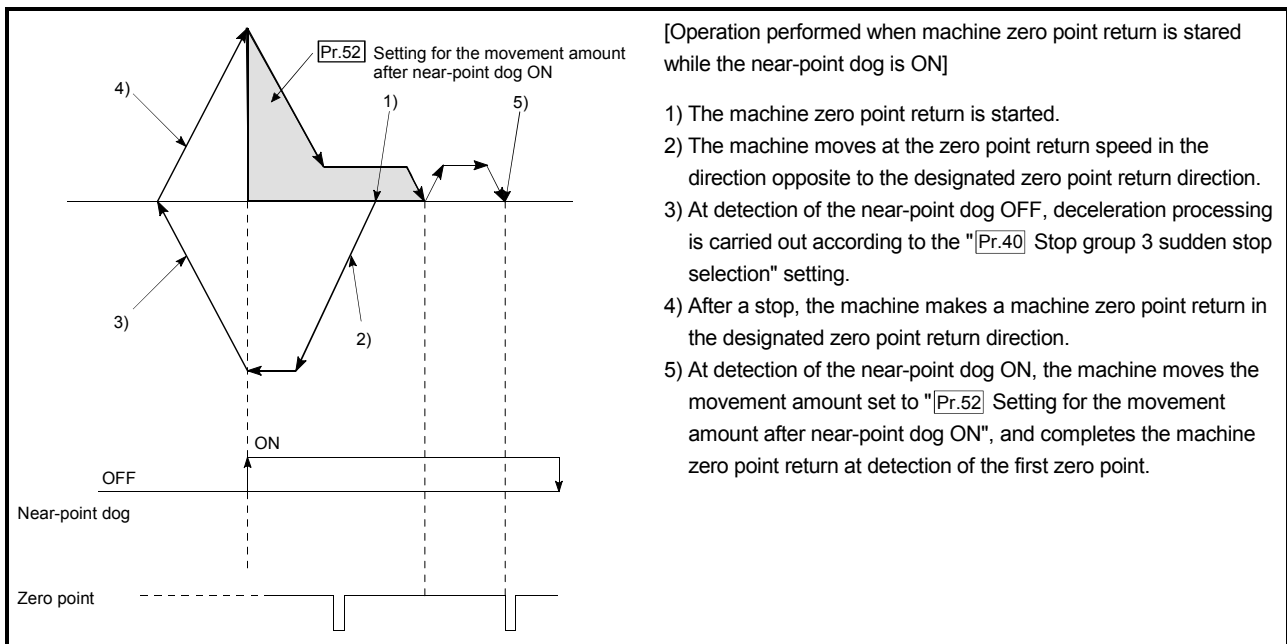


Fig. 8.6 Count method 1) machine zero point return with near-point dog ON

- (3) Turn OFF the near-point dog sufficiently away from the zero point position. If the near-point dog is turned OFF during a machine zero point return, there is no harm in operation. For the following reason, however, it is recommended to turn OFF the near-point dog sufficiently away from the zero point position.

Reason: If a machine zero point return is made continuously after the near-point dog is turned OFF at completion of a machine zero point return, the machine operates at the zero point return speed until it reaches the hardware stroke limit (upper/lower limit).

- (4) If the zero point has never been passed from a machine zero point return start until the machine moves the movement amount set to "[ Pr.52 ] Setting for the movement amount after near-point dog ON" after the near-point dog ON, an error "zero point not pass at zero point return" (error code: 210) occurs and the machine decelerates to a stop.

In the system where the distance between the machine zero point return starting position and zero point is too short to detect the zero point, select the zero point return method (5): "count method 3)".

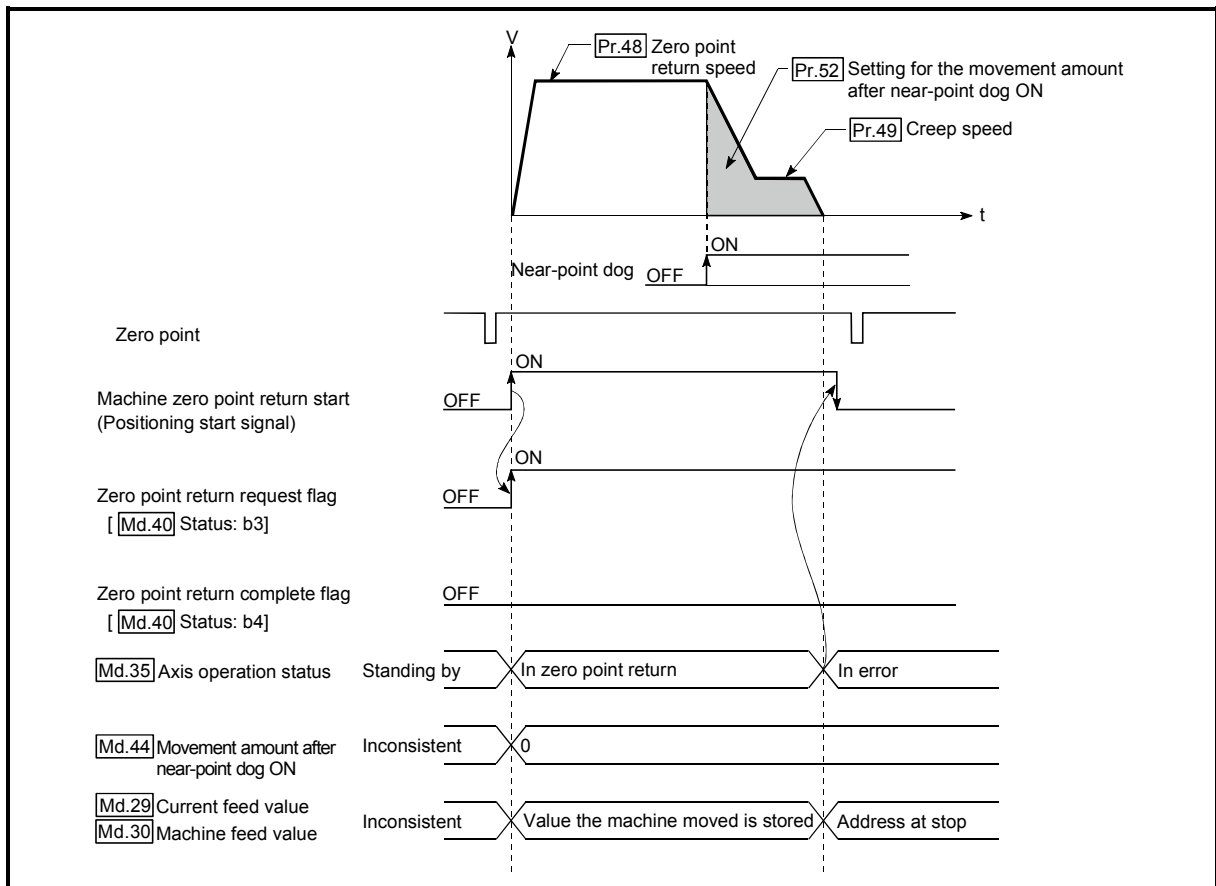


Fig. 8.7 Operation performed when the zero point is not passed in the count method 1)

- (5) If the restart command is turned ON after the machine zero point return is stopped by the stop signal, an error "zero point return restart not possible" (error code: 209) occurs.

**REMARK**

- In the "count method 1)" zero point return method, a machine zero point return can be made while the near-point dog is ON.
- In the "count method 1)" zero point return method, a continuous start can be made after completion of a machine zero point return.

8.2.6 Zero point return method (4): Count method 2)

The following shows the operation outline of the zero point return method "count method 2)".

■ Operation chart

1)	The machine zero point return is started. (The machine starts acceleration designated in "[Pr.53] Zero point return acceleration time selection" in the direction designated in "[Pr.46] Zero point return direction", and moves at "[Pr.48] Zero point return speed".)
2)	At detection of the near-point dog ON, the machine starts deceleration.
3)	The machine decelerates to "[Pr.49] Creep speed", and then moves at the creep speed.
4)	The machine stops as soon as it moves the movement amount set to "[Pr.52] Setting for the movement amount after near-point dog ON" after the near-point dog has turned ON, completing the machine zero point return.

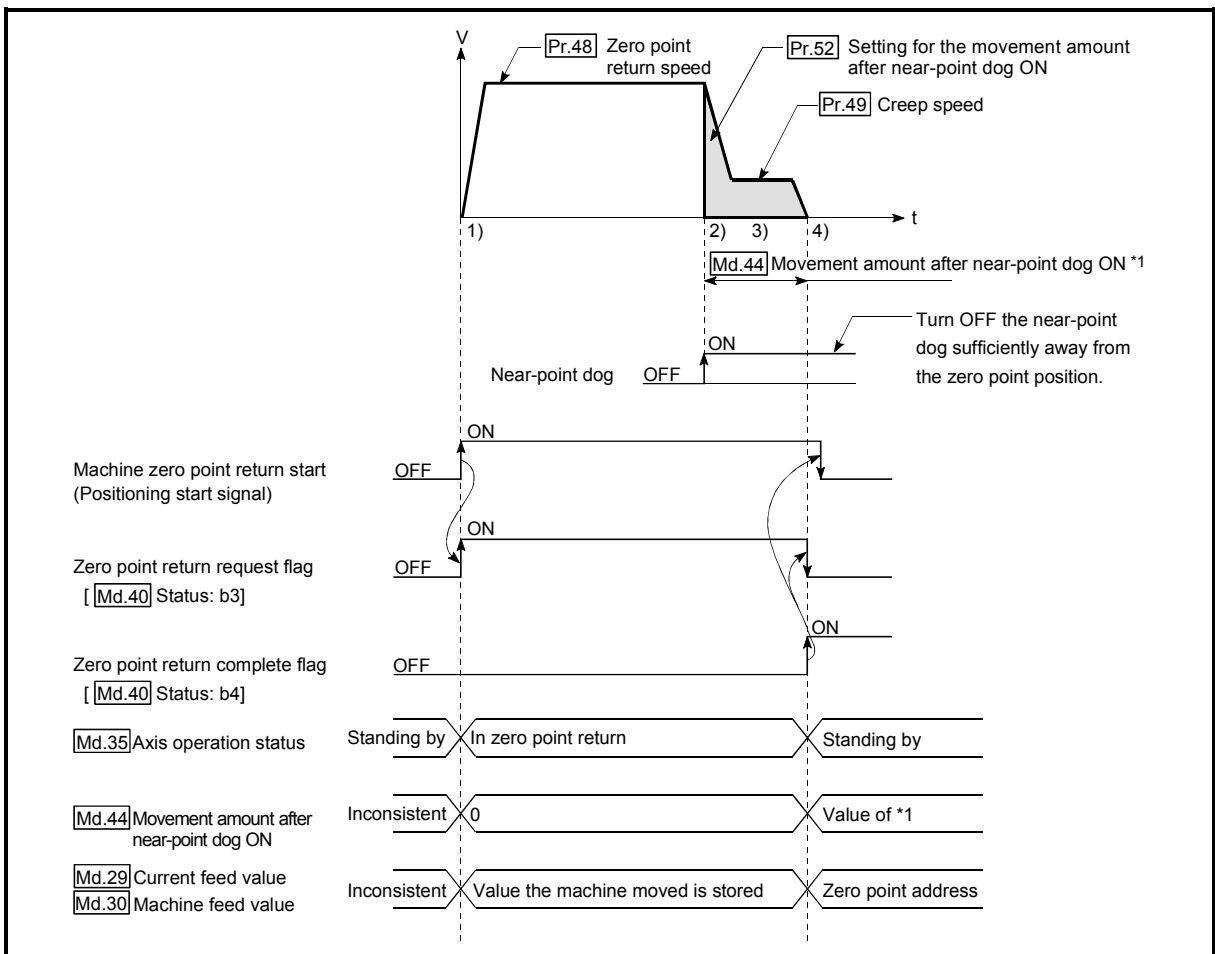


Fig. 8.8 Count method 2) machine zero point return



### ■ Restrictions

Since there is a variation of about 1ms in import of near-point dog ON, the stopping position (zero point) will vary as compared with the other zero point return methods.

### ■ Precautions during operation

- (1) If "Pr.52 Setting for the movement amount after near-point dog ON" is less than the distance of deceleration from "Pr.48 Zero point return speed" to "Pr.49 Creep speed", an error "count method movement amount fault" (error code: 206) occurs, disabling a start.
- (2) The operation performed when a machine zero point return is started while the near-point dog is ON is shown below.

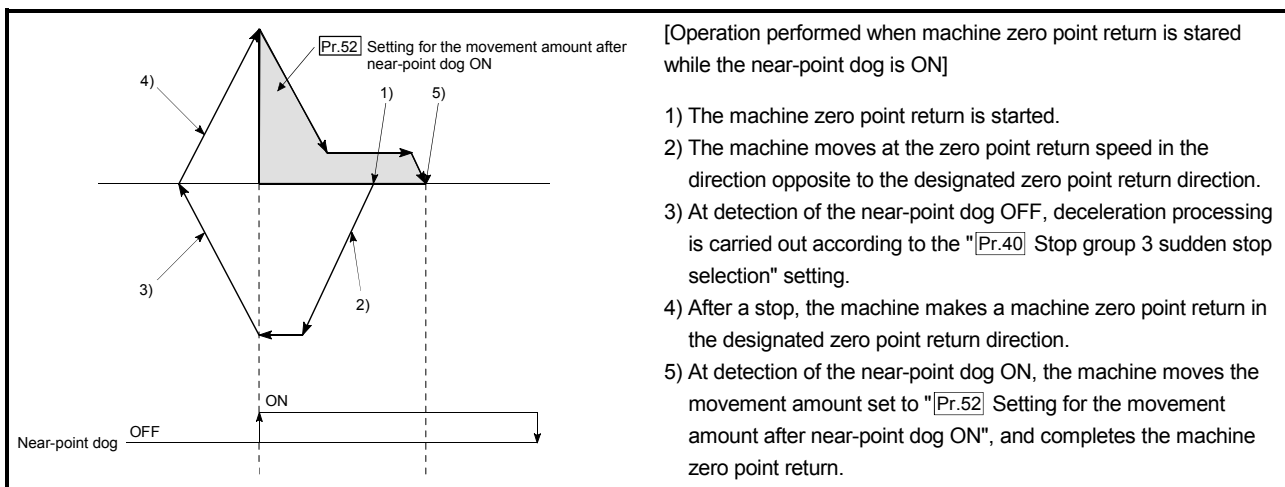


Fig. 8.9 Count method 2) machine zero point return with near-point dog ON

- (3) Turn OFF the near-point dog sufficiently away from the zero point position. If the near-point dog is turned OFF during a machine zero point return, there is no harm in operation. For the following reason, however, it is recommended to turn OFF the near-point dog sufficiently away from the zero point position.

Reason: If a machine zero point return is made continuously after the near-point dog is turned OFF at completion of a machine zero point return, the machine operates at the zero point return speed until it reaches the hardware stroke limit (upper/lower limit).

- (4) If the restart command is turned ON after the machine zero point return is stopped by the stop signal, an error "zero point return restart not possible" (error code: 209) occurs.

8.2.7 Zero point return method (5): Count method 3)

When the zero point is passed from a machine zero point return start until the machine moves the movement amount set to "[Pr.52] Setting for the movement amount after near-point dog ON", the operation outline of the zero point return method "count method 3)" is the same as that of the zero point return method (1) "count method 1)". (Refer to section 8.2.5.)

The following shows the operation outline of the case where the zero point is not passed from a machine zero point return start until the machine moves the movement amount set to "[Pr.52] Setting for the movement amount after near-point dog ON".

■ Operation chart

1)	The machine zero point return is started. (The machine starts acceleration designated in "[Pr.53] Zero point return acceleration time selection" in the direction designated in "[Pr.46] Zero point return direction", and moves at "[Pr.48] Zero point return speed".)
2)	At detection of the near-point dog ON, the machine decelerates to "[Pr.49] Creep speed", and then moves at the creep speed.
3)	The machine decelerates to a stop in the position where the movement amount set to "[Pr.52] Setting for the movement amount after near-point dog ON" is reached.
4)	After stopping, the machine moves by the amount of one servomotor revolution at "[Pr.48] Zero point return speed" in the direction opposite to the designated zero point return direction.
5)	The machine moves at "[Pr.48] Zero point return speed" in the designated zero point return direction, and completes the machine zero point return in the position of the first zero point following the movement of the movement amount set to "[Pr.52] Setting for the movement amount after near-point dog ON" after near-point dog ON. (At this time, the machine does not decelerate to "[Pr.49] Creep speed" when the near-point dog turns from OFF to ON.)

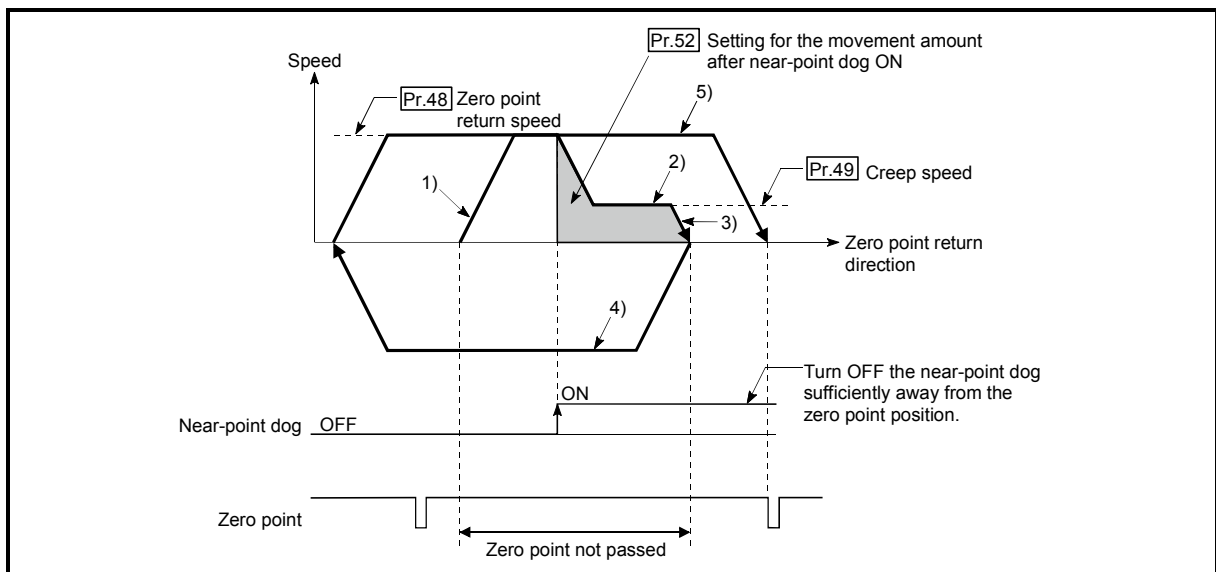


Fig. 8.10 Operation performed when the zero point is not passed in the count method 3)

**■ Restrictions**

- The system where the machine can move by the movement amount of more than one servomotor revolution is required.
- The system should satisfy the condition that the upper/lower limit stroke limit signal does not turn OFF when the servomotor rotates one turn in the opposite direction following a stop made when the machine has moved the movement amount set to "[Pr.52] Setting for the movement amount after near-point dog ON" after the near-point dog has turned ON.

**■ Precautions during operation**

- (1) If "[Pr.52] Setting for the movement amount after near-point dog ON" is less than the distance of deceleration from "[Pr.48] Zero point return speed" to "[Pr.49] Creep speed", an error "count method movement amount fault" (error code: 206) occurs, disabling a start.  
The machine decelerates to a stop if an error occurs due to a speed change made midway during operation.
- (2) The operation performed when a machine zero point return is started while the near-point dog is ON is the same as in the "count method 1)".
- (3) Turn OFF the near-point dog sufficiently away from the zero point position.  
If the near-point dog is turned OFF during a machine zero point return, there is no harm in operation. For the following reason, however, it is recommended to turn OFF the near-point dog sufficiently away from the zero point position.

Reason: If a machine zero point return is made continuously after the near-point dog is turned OFF at completion of a machine zero point return, the machine operates at the zero point return speed until it reaches the hardware stroke limit (upper/lower limit).

- (4) When the zero point is not passed from a machine zero point return start until the machine moves the movement amount set to "[Pr.52] Setting for the movement amount after near-point dog ON", do not touch the servomotor and positioning system until the machine zero point return is completed.  
(When the servomotor rotates one turn in the opposite direction, the AD75 waits until the in-position signal and zero speed signal of the servo amplifier turn ON. If the servomotor or positioning system is touched in the status where the stop position has not yet been reached, the in-position signal and zero speed signal may turn ON due to the motor side load, rotating the servomotor suddenly in the opposite direction and positioning the machine to the zero point.)
- (5) If the restart command is turned ON after the machine zero point return is stopped by the stop signal, an error "zero point return restart not possible" (error code: 209) occurs.

**REMARK**

- In the "count method 3)" zero point return method, a machine zero point return can be made while the near-point dog is ON.
- In the "count method 3)" zero point return method, a continuous start can be made after completion of a machine zero point return.

## 8.2.8 Zero point return method (6): Data setting method

The data setting method machine zero point return is a method in which the position reached by manual operation (JOG operation/manual pulse generator operation) is defined as the zero point in an absolute position detection system. (The axis is not moved in the data setting method machine zero point return.) When the data setting method machine zero point return is executed, the current position (position reached by manual operation) in the absolute position detection system is registered as the zero point, and "Pr.47 Zero point address" is stored into "Md.29 Current feed value" and "Md.30 Machine feed value".

■ Operation chart

1)	In the absolute position detection system, move the machine to the position desired to be registered as the zero point by manual operation (JOG operation/manual pulse generator operation).
2)	Start the machine zero point return (turns ON the positioning start signal).
3)	The absolute position of the servomotor at execution of the machine zero point return is stored as the zero point.
4)	"Pr.47 Zero point address" is stored into "Md.29 Current feed value" and "Md.30 Machine feed value".

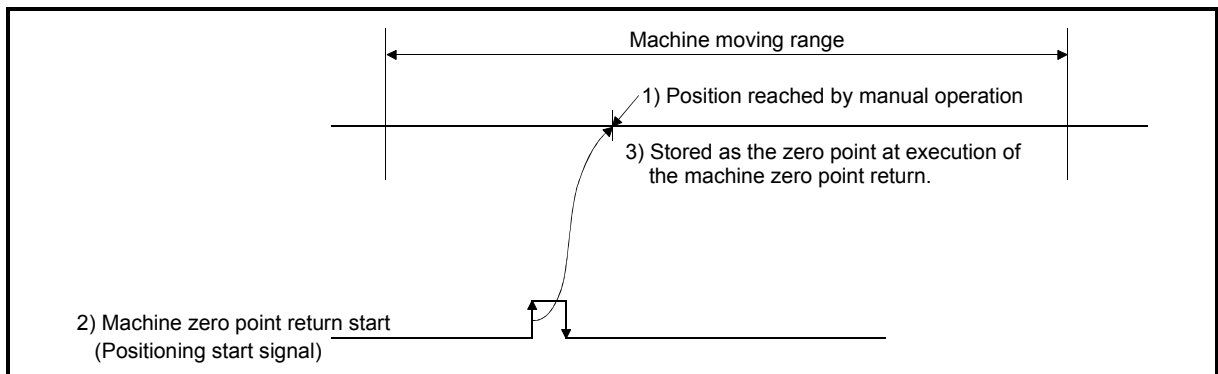


Fig. 8.11 Data setting method machine zero point return

■ Precautions

- (1) The data setting method machine zero point return performed in a system that is not an absolute position detection system has the same functions as a current value change.
- (2) Among the zero point return parameters, only the zero point address is used in the data setting method.  
Set any values within the setting ranges to the zero point return parameters other than the zero point address.
- (3) Prior to the data setting method machine zero point return after power-on, always rotate the servomotor one or more turns by JOG operation, etc.  
If the servomotor is not rotated one or more turns before the data setting method machine zero point return, an error "zero point not pass at zero point return" (error code: 210) occurs.  
If the error has occurred, make an error reset, rotate the servomotor one or more turns, and then perform the data setting method machine zero point return again.

## 8.3 High-speed zero point return

## 8.3.1 Outline of the high-speed zero point return operation

■ High-speed zero point return operation

In a high-speed zero point return, positioning is carried out by a machine zero point return to the "[Md.43] Zero point absolute position" stored in the AD75. The following shows the operation during a high-speed zero point return start.

- 1) The high-speed zero point return is started.
- 2) Positioning control begins to the "[Md.43] Zero point absolute position", following the speed set in the zero point return parameters ([Pr.45] to [Pr.59]).
- 3) The high-speed zero point return is completed.

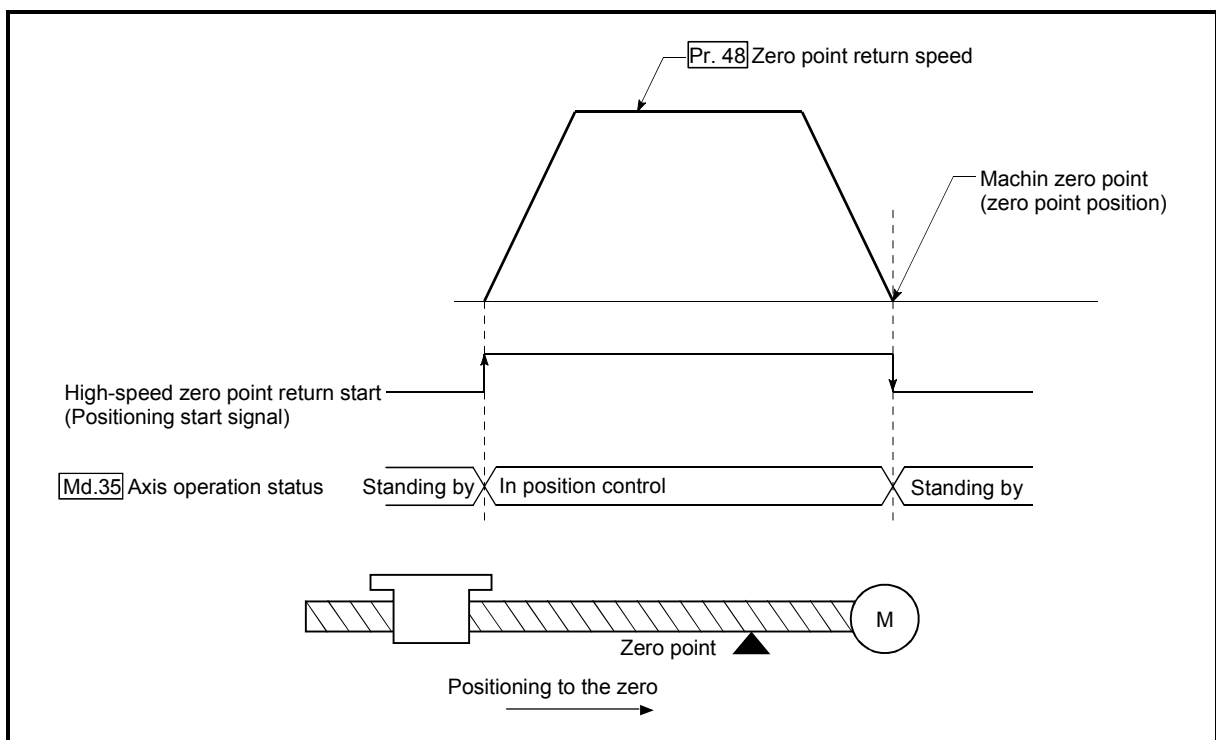


Fig. 8.12 High-speed zero point return

■ Operation timing and processing time of high-speed zero point returns

The following shows details about the operation timing and time during high-speed zero point returns

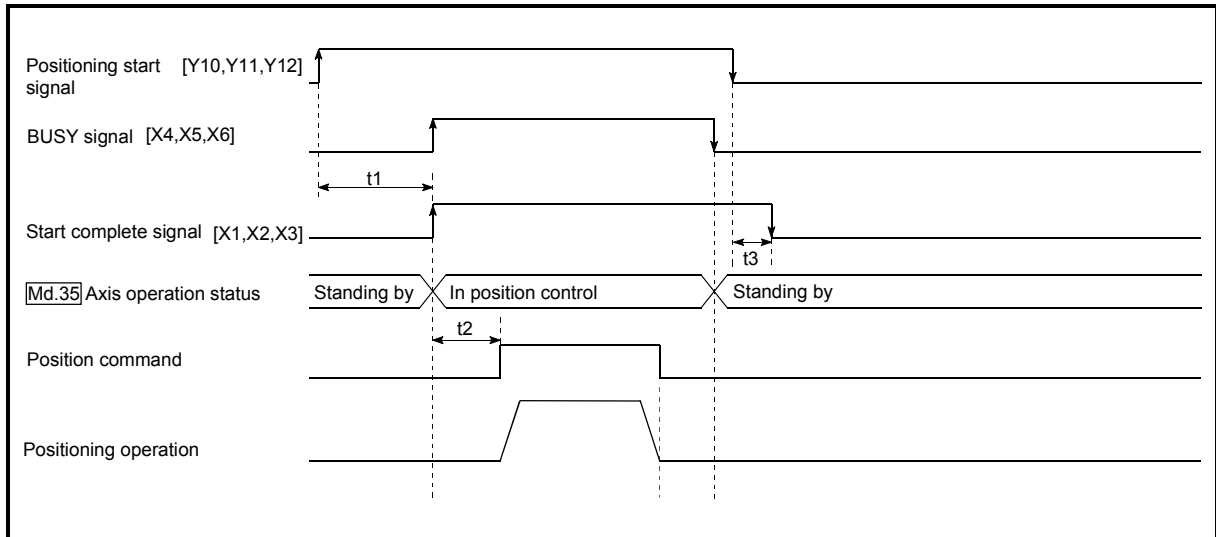


Fig. 8.13 Operation timing and processing time of high-speed zero point returns

Normal timing time Unit: ms

t1	t2	t3
5 to 15	0 to 3.5	

- The t1 timing time could be delayed by the following factors.
  - 1) Presence of FROM/TO command execution during start process
  - 2) Operation state of other axes
  - 3) Presence of intervention from peripheral device during start process
  - 4) Details of positioning data to be started

■ Operating restrictions

- (1) When the zero point return complete flag ([Md.40] Status: b3) is ON, executing a high-speed zero point return start will result in an error "zero point return request ON" (error code: 207)".
- (2) When the absolute position restoration mode is the "infinite length mode", an error "outside start number range" (error code: 543) occurs at a high-speed zero point return start.

## 8.4 Positioning to the zero point

Positioning to the zero point is explained in this section.

To carry out positioning to the zero point, "1-axis linear control (ABS) positioning data" is created in which the "[Md.43] Zero point absolute position" is set in the positioning address ([Da.5]). In this case, the other positioning data items are set beforehand in the flash ROM. (This control is called a "high-speed machine zero point return".)

The "[Pr.47] Zero point address" is a fixed value set by the user, but the "[Md.43] Zero point absolute position" is constantly changed by the AD75 to indicate the "zero point", even if there is a change in the address information.

#### ■ Restrictions

[Md.43] Zero point absolute position is not modified in following cases.

- Feeding actual value 0 clear when starting fixed dimensions feeding. (Refer to section 9.2.4 and 9.2.5)
- Feeding actual value 0 clear when controlling speed. (Refer to section 9.2.8)
- Updating feeding actual value when controlling speed. (Refer to section 9.2.8)

The "zero point absolute position overflow/underflow flags" ([Md.40] Status: b11/b12) must be turned OFF.

#### ■ Positioning data setting example

The following table shows setting examples in which "zero point positioning" is set in the positioning data No. 100 of axis 1.

Setting item		Setting example	Setting details
Axis 1 Positioning data No. 1	[Da.1] Operation pattern	Positioning complete	Set "Positioning complete" so the next positioning data is not executed.
	[Da.2] Control method	ABS linear 1	Set the absolute system 1-axis linear control.
	[Da.3] Acceleration time No.	0	Designate the value set in "[Pr.8] Acceleration time 0" as the acceleration time at start.
	[Da.4] Deceleration time No.	0	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	[Da.5] Positioning address/movement amount	→	Set "[Md.43] Zero point absolute position" in the positioning address. (Assuming that the "[Pr.1] Unit setting" is set to "mm".)
	[Da.6] Arc address	–	Setting not required. (Setting value will be ignored.)
	[Da.7] Command speed	20.00mm/min	Set the speed when moving to the positioning address.
	[Da.8] Dwell time	500ms	Set the time from the positioning stop (position command output stop) to the output of the positioning complete signal.
	[Da.9] M code	0	Set when carrying out other auxiliary operation commands in combination with the No. 1 positioning data

\* Refer to section "5.3 List of positioning data" for information on the setting details.

■ Start time chart



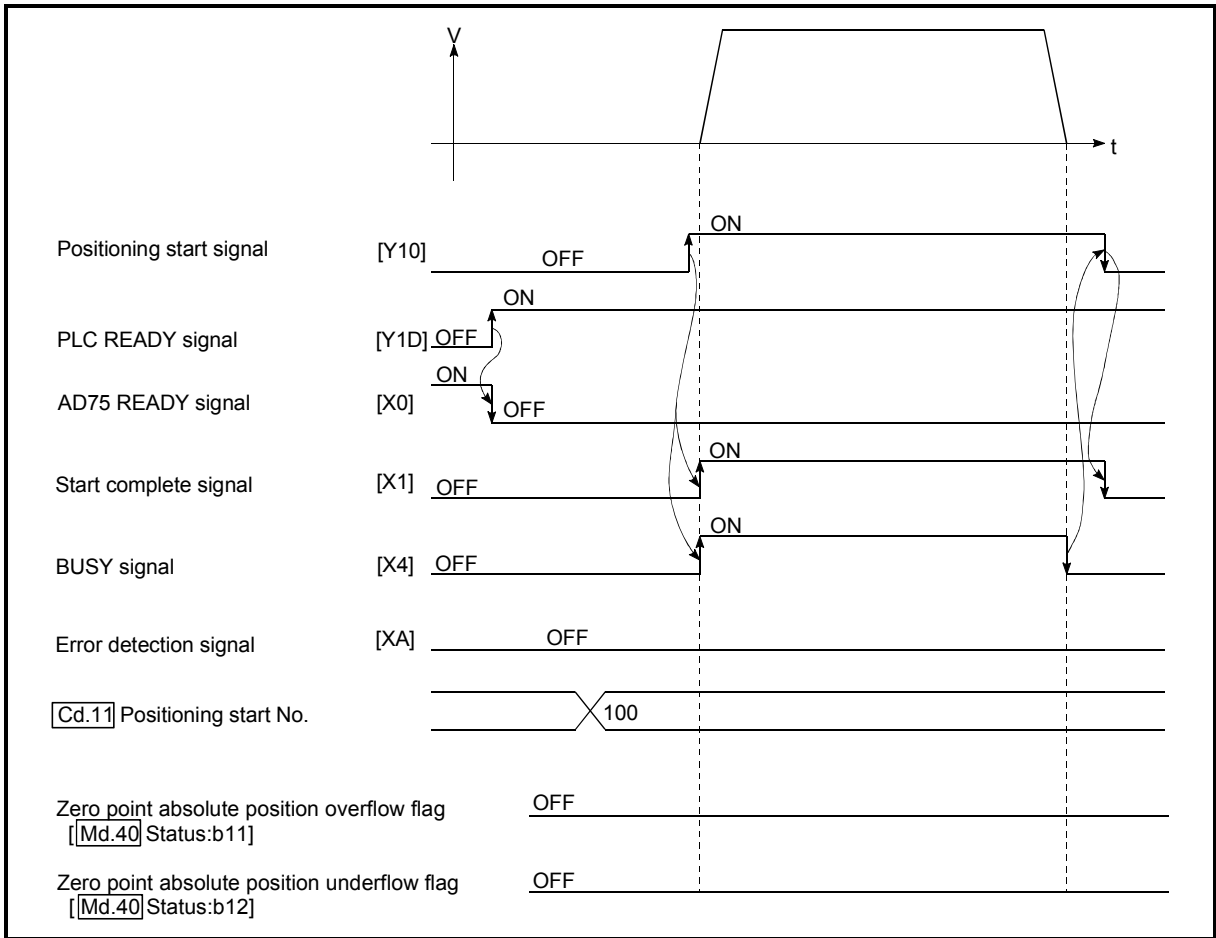


Fig. 8.14 Start time chart for positioning to the zero point



■ Creating the program

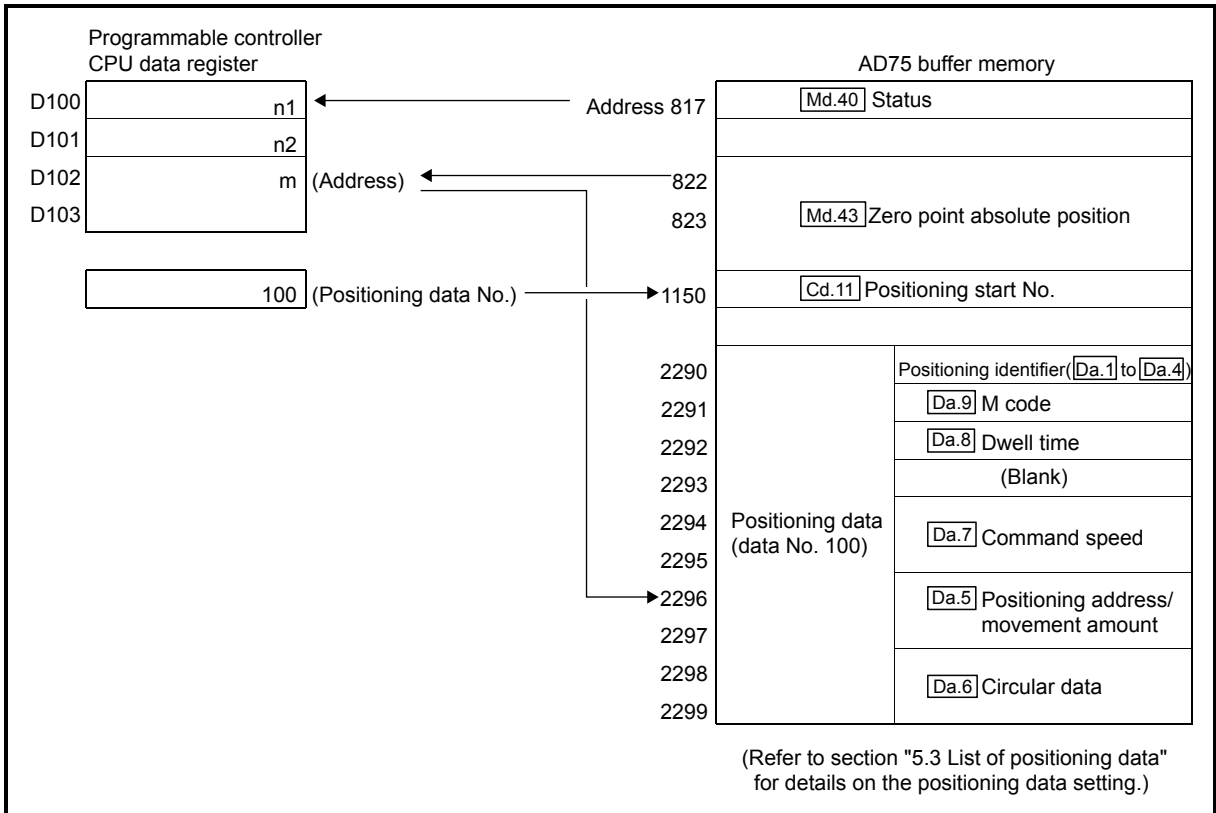

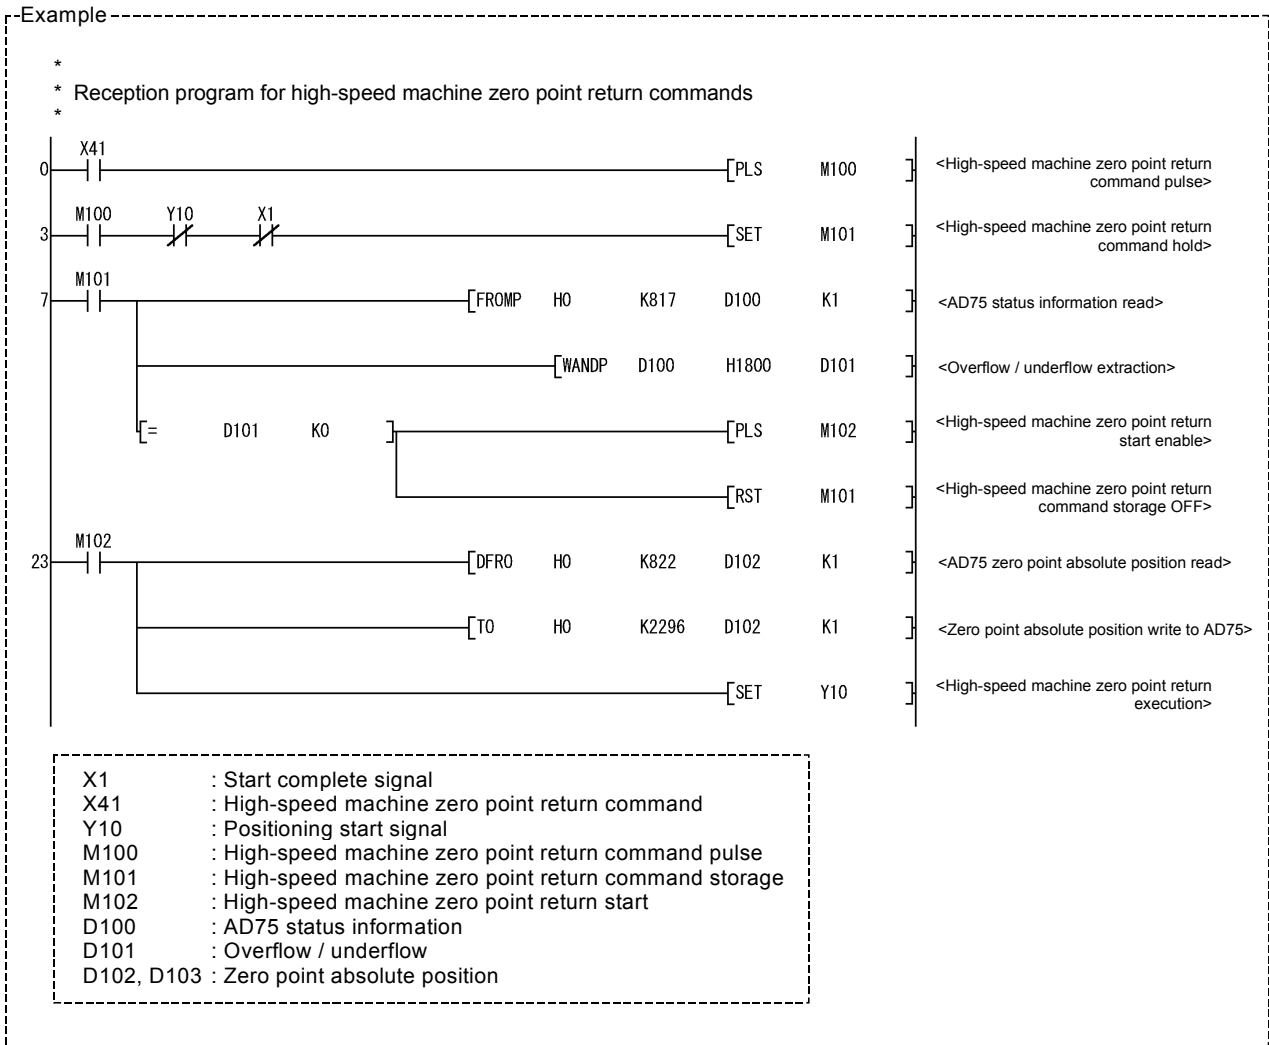

---

# CHAPTER 9

---

## MAIN POSITIONING CONTROL

The details and usage of the main positioning controls (control functions using the "positioning data") are explained in this chapter.

The main positioning controls include such controls as "positioning control" in which positioning is carried out to a designated position using the address information, "speed control" in which a rotating object is controlled at a constant speed, and "speed/position changeover control" in which the operation is shifted from "speed control" to "position control".

Carry out the required settings to match each control.

9.1	Outline of main positioning controls .....	9- 2
9.1.1	Data required for main positioning control .....	9- 3
9.1.2	Operation patterns of main positioning controls .....	9- 4
9.1.3	Designating the positioning address .....	9- 13
9.1.4	Confirming the current value .....	9- 14
9.1.5	Control unit "degree" handling .....	9- 16
9.1.6	Interpolation control .....	9- 19
9.2	Setting the positioning data .....	9- 22
9.2.1	Relation between each control and positioning data .....	9- 22
9.2.2	1-axis linear control .....	9- 23
9.2.3	2-axis linear interpolation control .....	9- 25
9.2.4	1-axis fixed-dimension feed control .....	9- 29
9.2.5	2-axis fixed-dimension feed control (interpolation) .....	9- 31
9.2.6	2-axis circular interpolation control with auxiliary point designation .....	9- 34
9.2.7	2-axis circular interpolation control with center point designation .....	9- 40
9.2.8	Speed control .....	9- 47
9.2.9	Speed/position changeover control .....	9- 50
9.2.10	Current value change .....	9- 57
9.2.11	JUMP command .....	9- 62

9.1 Outline of main positioning controls

"Main positioning controls" are carried out using the "positioning data" stored in the AD75.

The basic controls such as position control and speed control are executed by setting the required items in this "positioning data", and then starting that positioning data.

The control method for the "main positioning controls" is set in setting item "[Da.2] Control method" of the positioning data.

Control defined as a "main positioning control" carries out the following types of control according to the "[Da.2] Control method" setting.

Main positioning control		[Da.2] Control method	Details	
Position control *	Linear control	1-axis linear control	ABS Linear 1 INC Linear 1	Positioning is carried out in a linear path to a position designated by the address and movement amount set in the positioning data.
		2-axis linear interpolation control *	ABS Linear 2 INC Linear 2	The axis in which the interpolation control method is set is regarded as the reference axis. Positioning is carried out in a linear path to a designated position, while controlling the other axis (interpolation axis) to match the positioning data set in the reference axis.
	Fixed-dimension feed control	1-axis fixed-dimension feed control	Fixed-dimension feed 1	The workpiece is positioned the movement amount designated by the movement amount set in the positioning data. (The "[Md.29] Current feed value" is set to "0" at the start.)
		2-axis fixed-dimension feed control *	Fixed-dimension feed 2	The axis in which the interpolation control method is set is regarded as the reference axis. Positioning is carried out in a linear path for the designated movement amount, while controlling the other axis (interpolation axis) to match the positioning data set in the reference axis. (The "[Md.29] Current feed value" is set to "0" at the start.)
	2-axis circular interpolation control *	Auxiliary point designation	ABS Circular interpolation INC Circular interpolation	The axis in which the interpolation control method is set is regarded as the reference axis. Positioning is carried out in an arc path to a designated position, while controlling the other axis (interpolation axis) to match the positioning data set in the reference axis.
Center point designation		ABS Circular right ABS Circular left INC Circular right INC Circular left		
Speed control		Forward run Speed control Reverse run Speed control	Speed commands are continuously output corresponding to the command speed set in the positioning data.	
Speed/position changeover control		Forward run speed/position Reverse run speed/position	The control is continued as position control (positioning for the designated movement amount) by turning ON the "speed/position changeover signal" after first carrying out speed control.	
Other control	Current value change	Current value change	The "[Md.29] Current feed value" is changed to an address set in the positioning data. This can be carried out by either of the following 2 methods. (The machine feed value cannot be changed.) <ul style="list-style-type: none"> <li>• Current value change using the positioning data</li> <li>• Current value change using the current value change start No. (No. 9003).</li> </ul>	
	JUMP command	JUMP command	An unconditional or conditional JUMP is carried out to a designated positioning data No.	

\* In "2-axis linear interpolation control", "2-axis fixed-dimension feed control", and "2-axis circular interpolation control", control is carried out so that linear and arc paths are drawn using a motor set in two axis directions. This kind of control is called "interpolation control". (Refer to section "9.1.6 Interpolation control" for details.)

## 9.1.1 Data required for main positioning control

The following table shows an outline of the "positioning data" configuration and setting details required to carry out the "main positioning controls".

Setting item		Setting details	
Positioning data No. 1	Da.1	Operation pattern	Set the method by which the continuous positioning data (Ex: positioning data No. 1, No. 2, No. 3) will be controlled. (Refer to section 9.1.2.)
	Da.2	Control method	Set the control method defined as a "main positioning control". (Refer to section 9.1.)
	Da.3	Acceleration time No.	Select and set the acceleration time at control start. (Select one of the four values set in Pr.8, Pr.26, Pr.27, and Pr.28 for the acceleration time.)
	Da.4	Deceleration time No.	Select and set the deceleration time at control stop. (Select one of the four values set in Pr.9, Pr.29, Pr.30, and Pr.31 for the deceleration time.)
	Da.5	Positioning address/movement amount	Set the target value during position control. (Refer to section 9.1.3.)
	Da.6	Arc address	Set the auxiliary point or center point address during circular interpolation control.
	Da.7	Command speed	Set the speed during the control execution.
	Da.8	Dwell time	Set the time the machine waits from the completion of the executed positioning control and the stopping of the workpiece until the judgment of the AD75 positioning completion.
	Da.9	M code	Set this item when carrying out auxiliary work (clamp and drill stops, tool replacement, etc.) corresponding to the code No. related to the positioning data execution.

\* The settings and setting requirement for the setting details of Da.1 to Da.9 differ according to the Da.2 Control method". (Refer to section "9.2 Setting the positioning data".)

#### ■ Main positioning control auxiliary functions

Refer to section "3.3.4 Combination of AD75 main functions and auxiliary functions" for details on "auxiliary functions" that can be combined with the main positioning control.

Also refer to "CHAPTER 12 CONTROL AUXILIARY FUNCTIONS" for details on each auxiliary function.

#### ■ Main positioning control from peripheral devices

"Main positioning control" can be executed from the AD75 software package test mode.

Refer to the AD75 Software Package Operating Manual for details on carrying out main positioning control from the AD75 software package.

#### REMARK

- Up to 600 positioning data items (positioning data No.1 to 600) can be set per axis.

9.1.2 Operation patterns of main positioning controls

In "main positioning control" (advanced positioning control), "Da.1" Operation pattern" can be set to designate whether to continue executing positioning data after the started positioning data. The "operation pattern" includes the following 3 types.


- Positioning complete — (1) Independent positioning control (operation pattern: 00)
- Positioning continue — (2) Continuous positioning control (operation pattern: 01)
- (3) Continuous path control (operation pattern: 11)

The following shows examples of operation patterns when "1-axis linear control (ABS linear 1)" is set in positioning data No. 1 to No. 6 of axis 1. Details of each operation pattern are shown on the following pages.

< Operation example when "1-axis linear positioning" is set in the positioning data of axis 1 >

(Setting details)

Positioning data No.1	Positioning to address [A] at command speed [a]	Operation pattern = 11: Continuous path control	No.1 Start
No.2	Positioning to address [B] at command speed [b]	Operation pattern = 11: Continuous path control	↓
No.3	Positioning to address [C] at command speed [a]	Operation pattern = 01: Continuous positioning control	
No.4	Positioning to address [D] at command speed [b]	Operation pattern = 01: Continuous positioning control	Control stop
No.5	Positioning to address [E] at command speed [a]	Operation pattern = 00: Independent positioning control (Positioning complete)	
No.6	Positioning to address [F] at command speed [a]	Operation pattern = 11: Continuous path control	

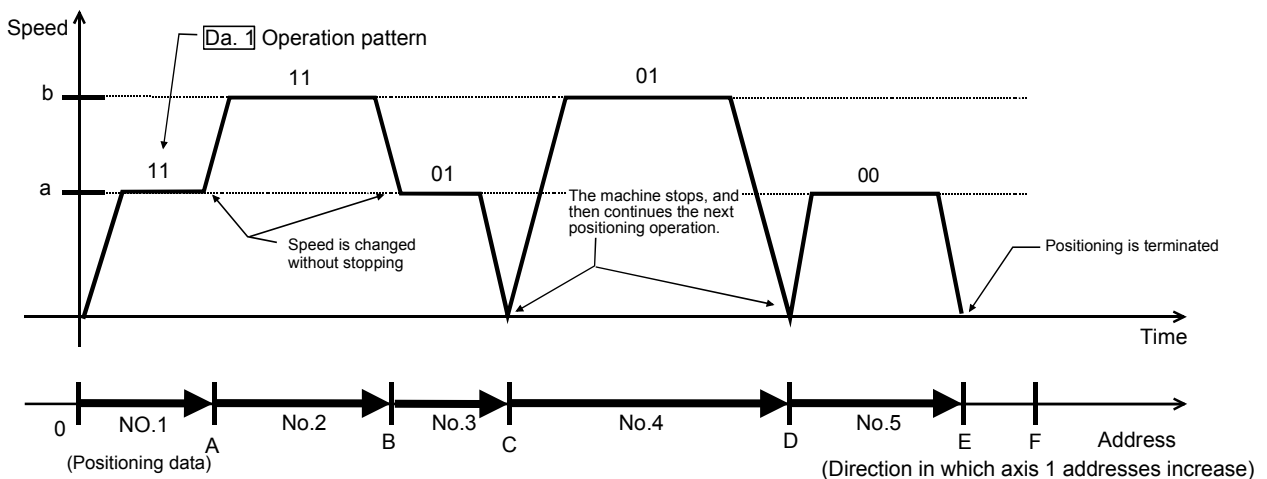

For 1-axis linear control

(One motor is driven, and positioning is carried out to an addresses designated in one direction.)

**POINT**  
 When position control of movement amount 0 is executed, the BUSY signal [X4, X5, X6] also turns ON. However, since the ON time is short, the ON status may not be detected in the sequence program.

(1) Independent positioning control (Positioning complete)

This control is set when executing only one designated data item of positioning. If a dwell time is designated, the positioning will complete after the designated time elapses.

This data (operation pattern [00] data) becomes the end of block data when carrying out block positioning. (The positioning stops after this data is executed.)

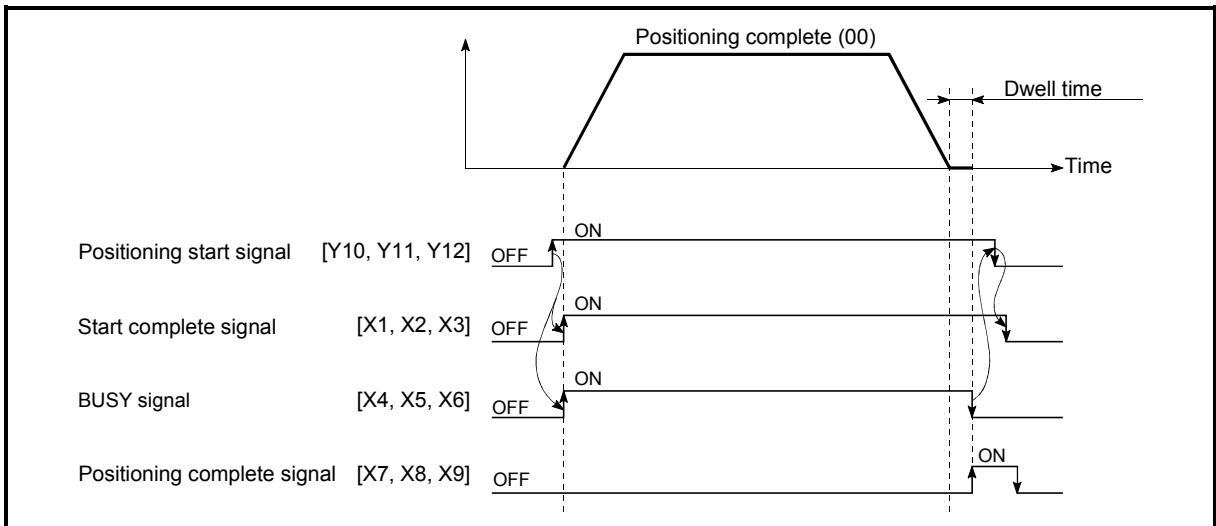


Fig. 9.1 Operation during independent positioning control

(2) Continuous positioning control

- (a) The machine always automatically decelerates each time the positioning is completed. Acceleration is then carried out after the AD75 command speed reaches 0 to carry out the next positioning data operation. If a dwell time is designated, the acceleration is carried out after the designated time elapses.
- (b) In operation by continuous positioning control (operation pattern "01"), the next positioning No. is automatically executed. Always set operation pattern "00" in the last positioning data to terminate the positioning. If the operation pattern is set to positioning continue ("01" or "11"), the operation will continue until operation pattern "00" is found. The operation may be carried out until the max. data item No. 600 if operation pattern "00" cannot be found because it was not set in the last positioning data.

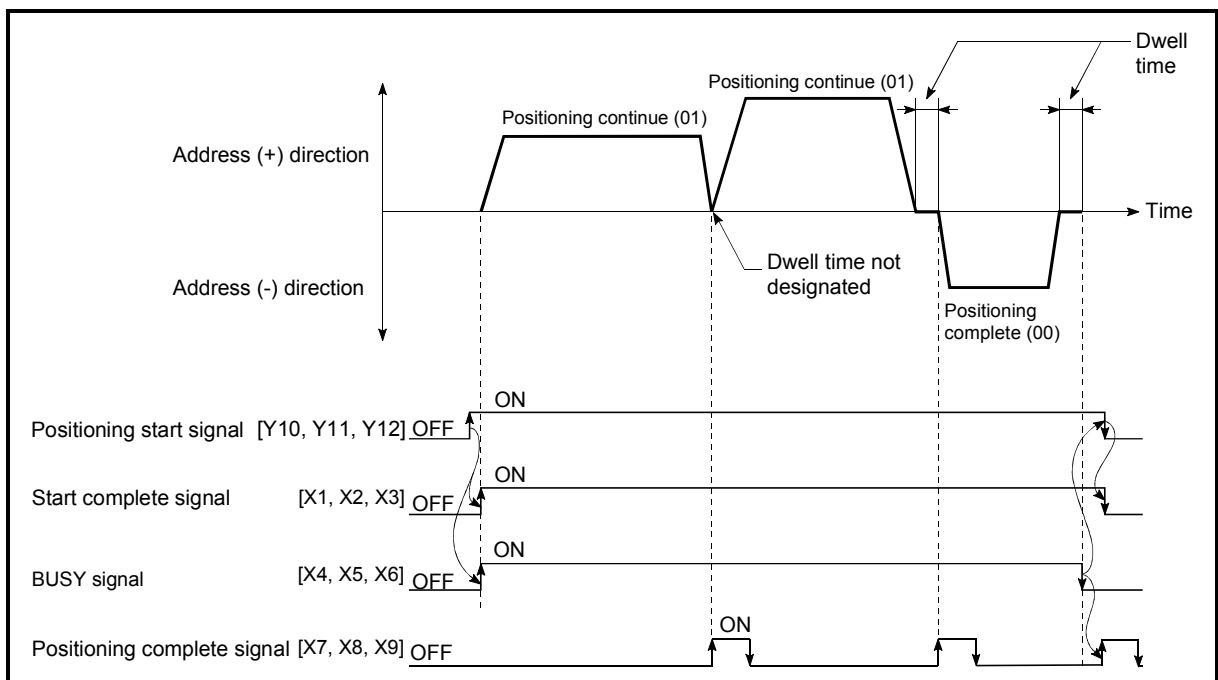


Fig. 9.2 Operation during continuous positioning control



(3) Continuous path control

(a) Continuous path control

- 1) The speed is changed between the speed of the positioning data currently being positioned and the speed of the positioning data that will be positioned next.  
The speed is not changed if the current speed and the next speed are equal.
- 2) The speed will become the speed used in the previous positioning operation if the command speed is set to "-1".
- 3) Dwell time will be ignored, even if set.
- 4) The next positioning No. is executed automatically in operations by continuous path control (operation pattern "11"). Always terminate the positioning by setting operation pattern "00" in the last positioning data. If the operation pattern is set to positioning continue ("01" or "11"), the operation will continue until operation pattern "00" is found. The operation may be carried out until the max. data item No. 600 if operation pattern "00" cannot be found because it was not set in the last positioning data.
- 5) The speed changeover patterns include the "front-loading speed changeover pattern" in which the speed is changed at the end of the current positioning side, and the "standard speed changeover pattern" in which the speed is at the start of the next positioning side. (Refer to "[Pr.20] Speed changeover mode".)

Continuous path control — Standard speed changeover mode  
 — Front-loading speed changeover mode


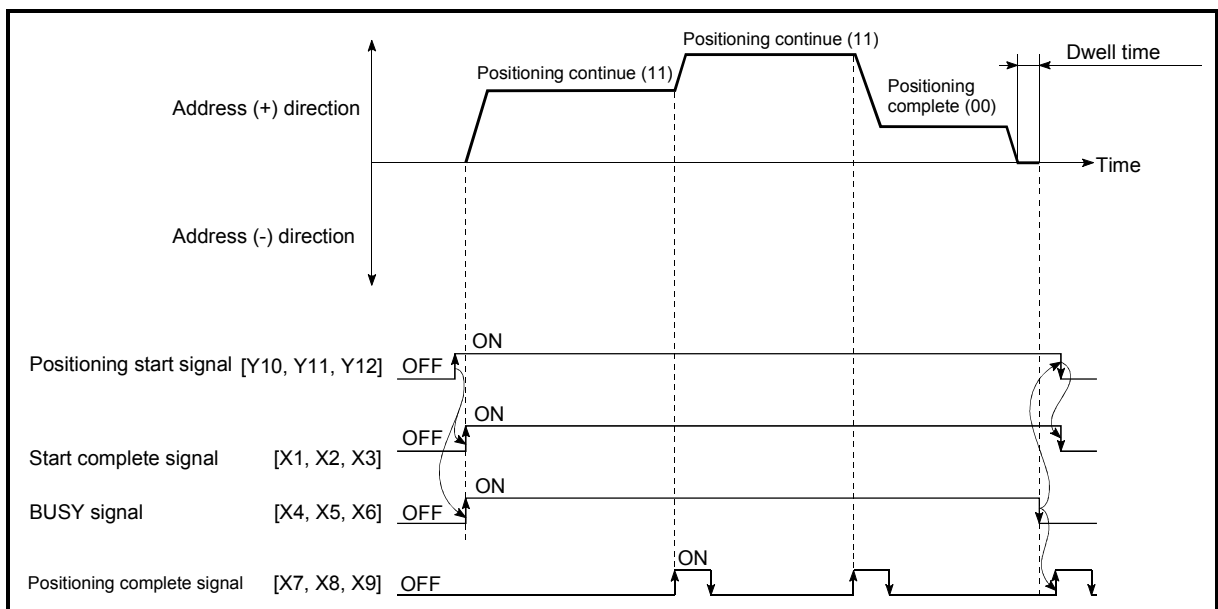


Fig. 9.3 Operation during continuous path control (Standard speed changeover mode)

**POINT**  
 Speed fluctuation can be eliminated by setting the mode to the near pass mode.  
 (Refer to section "12.3.3 Near pass mode function".)

(b) Deceleration stop conditions during continuous path control  
 Deceleration stops are not carried out in continuous path control, but the machine will carry out a deceleration stop to speed "0" in the following cases 1) to 4).

- 1) When the operation pattern of the positioning data currently being executed is "continuous path control: 11", and the movement direction of the positioning data currently being executed differs from that of the next positioning data. (Refer to the "Point" below.)

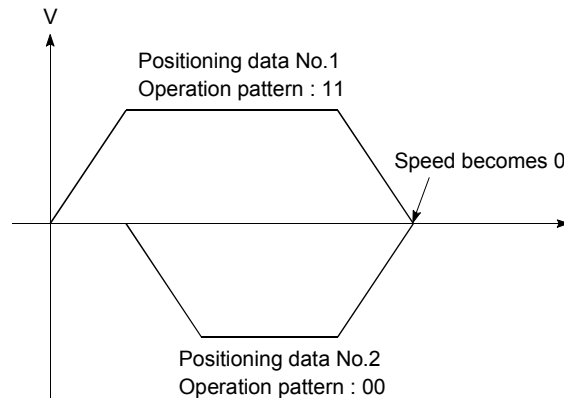

- 2) When the operation pattern of the positioning data currently being executed is "continuous path control: 11", and the movement amount of the next positioning data is "0".
- 3) During operation by step operation. (Refer to section "12.7.1 Step function".)
- 4) When there is an error in the positioning data to carry out the next operation.


POINT
<p>(1) Only the movement direction of the reference axis is checked during interpolation operations                      Thus, automatic deceleration is not carried out if the movement direction does not change in the reference axis.                      Because of this, the interpolation axis may suddenly reverse direction.                      To avoid this sudden direction reversal in the interpolation axis, set the pass point to continuous positioning control "01" instead of setting it to continuous positioning control "11".</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>[Positioning by interpolation]</p> </div> <div style="text-align: center;"> <p>[Reference axis operation]</p> </div> <div style="text-align: center;"> <p>[Interpolation axis operation]</p> </div> </div> <p>(2) Automatic deceleration will not be carried out either the positioning data No. currently being executed or the next positioning data No. uses circular interpolation control as a control method.</p> <p>(3) In the continuous path control positioning data, assure a movement distance so that the execution time with that data is 100 ms or longer, or lower the command speed.</p>

(c) Speed handling

- 1) Continuous path control command speeds are set with each positioning data.  
The AD75 then carries out the positioning at the speed designated with each positioning data.
- 2) The command speed can be set to "-1" in continuous path control. The control will be carried out at the speed used in the previous positioning data No. if the command speed is set to "-1". \*1 ("–1" will be displayed in the command speed when the positioning data is set with a peripheral device.)
  - (1) The speed does not need to be set in each positioning data when carrying out uniform speed control if "-1" is set beforehand in the command speed.
  - (2) If the speed is changed in the previous positioning data when "-1" is set in the command speed, the operation can be continued at the new speed.
  - (3) An error "no command speed" (error code: 503) occurs and positioning cannot be started if "-1" is set in the command speed of the first positioning data at start.


[Relation between the command speed and current speed]

\*1

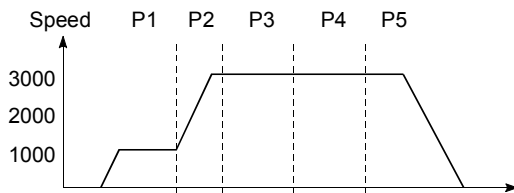

Da. 7	Command speed	1000	3000	-1	-1	-1
Md. 36	Current speed	1000	3000	3000	3000	3000

\*2

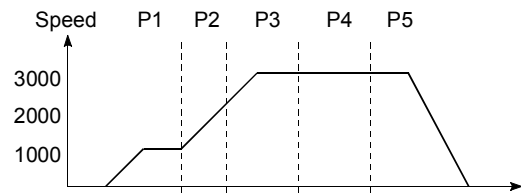

Da. 7	Command speed	1000	3000	-1	-1	-1
Md. 36	Current speed	1000	3000	3000	3000	3000

↑ The current speed is changed even if the command speed is not reached in P2.

**POINT**

- (1) Speed fluctuation can be eliminated by setting the mode to the near pass mode. (Refer to section "12.3.3 Near pass mode function".)
- (2) The AD75 holds the command speed set with the positioning data as the "Da.7 Command speed", and the latest value of the speed set with the speed change request as the "Md.36 Current speed". It controls the operation at the "Md.36 current speed" when "-1" is set in the command speed. (Depending on the relation between the movement amount and the speed, the feedrate may not reach the command speed value, but even then the current speed will be updated.\*2)
- (3) When the address for speed change is identified beforehand, generate and execute the positioning data for speed change by the continuous path control to carry out the speed change without requesting the speed change with a sequence program.

(d) Speed changeover  
(Refer to "[Pr.20] Speed changeover mode".)

1) Standard speed changeover mode

- (1) If the respective command speeds differ in the "positioning data currently being executed" and the "positioning data to carry out the next operation", the machine will accelerate or decelerate after reaching the positioning point set in the "positioning data currently being executed" and the speed will change over to the speed set in the "positioning data to carry out the next operation".
- (2) The parameters used in acceleration/deceleration to the command speed set in the "positioning data to carry out the next operation" are those of the positioning data to carry out acceleration/deceleration.  
Speed changeover will not be carried out if the command speeds are the same.


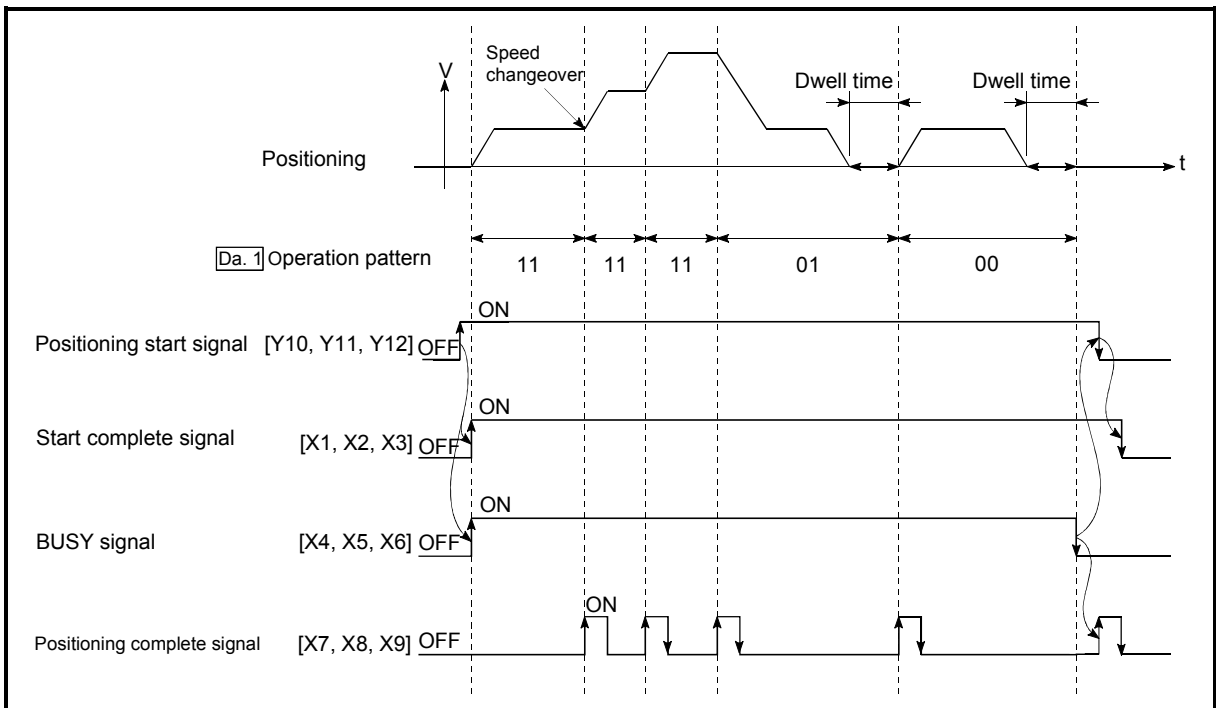


Fig. 9.4 Operation for the standard speed changeover mode

(3) Speed changeover condition


If the movement amount is small in regard to the target speed, the current speed may not reach the target speed even if acceleration/deceleration is carried out. In this case, the machine is accelerated/decelerated so that it nears the target speed. If the movement amount will be exceeded when automatic deceleration is required (Ex. Operation patterns "00", "01"), the machine will immediately stop at the positioning address, and a warning "insufficient movement amount" (warning code: 513) will occur.

[When the speed cannot change over in P2]  
 When the relation of the speeds is  $P1 = P4, P2 = P3, P1 < P2$ .

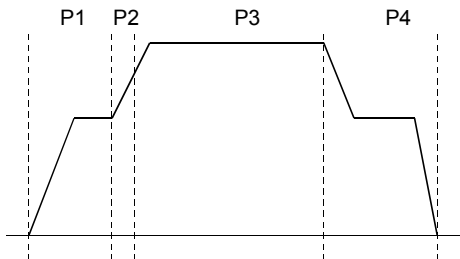

[When the movement amount is small during automatic deceleration]

The movement amount required to carry out the automatic deceleration cannot be secured, so the machine immediately stops in a speed  $\neq 0$  status.

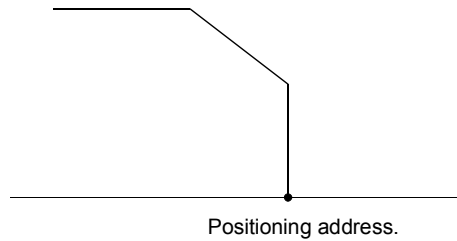

2) Front-loading speed changeover mode

- (1) If the respective command speeds differ in the "positioning data currently being executed" and the "positioning data to carry out the next operation", the speed will change over to the speed set in the "positioning data to carry out the next operation" at the end of the "positioning data currently being executed".
- (2) The parameters used in acceleration/deceleration to the command speed set in the "positioning data to carry out the next operation" are those of the positioning data to carry out acceleration/deceleration. Speed changeover will not be carried out if the command speeds are the same.

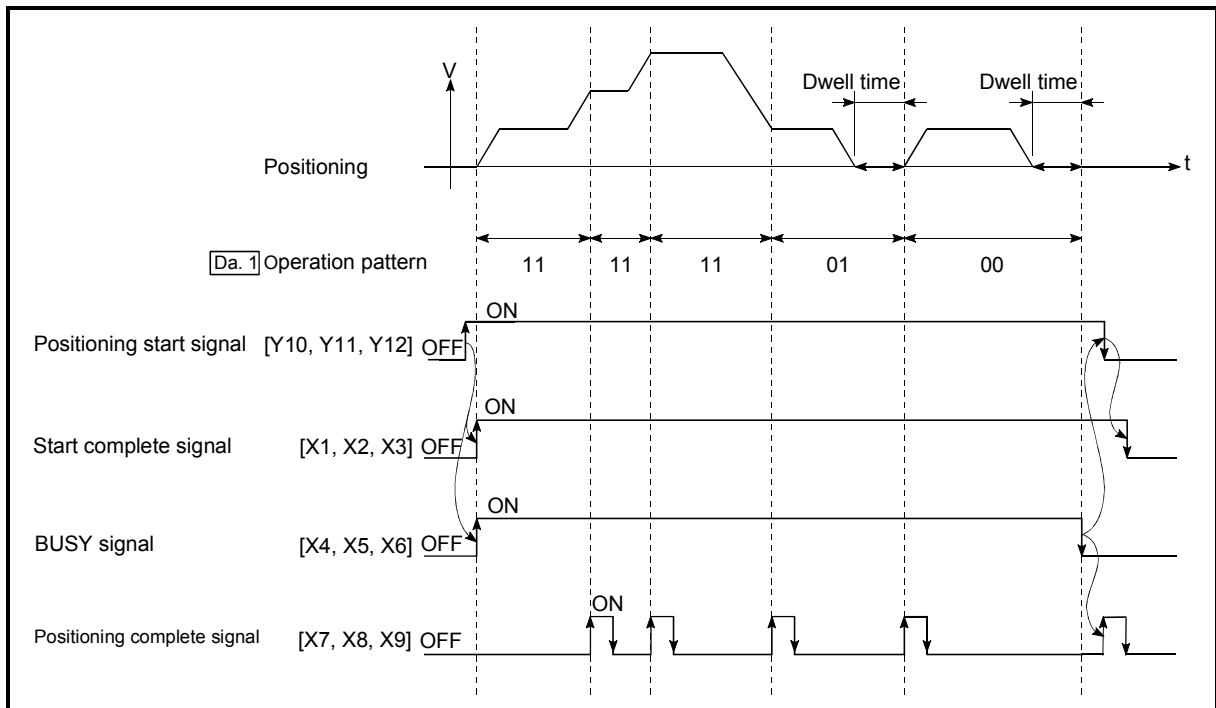



Fig. 9.5 Operation for the front-loading speed changeover mode

(3) Speed changeover condition

If the movement amount is small in regard to the target speed, the current speed may not reach the target speed even if acceleration/deceleration is carried out. In this case, the machine is accelerated/decelerated so that it nears the target speed. If the movement amount will be exceeded when automatic deceleration is required (Ex. Operation patterns "00", "01"), the machine will immediately stop at the positioning address, and a warning "insufficient movement amount" (warning code: 513) will occur.


[When the speed cannot change over to the P2 speed in P1]

When the relation of the speeds is  $P1 = P4$ ,  $P2 = P3$ ,  $P1 < P2$ .

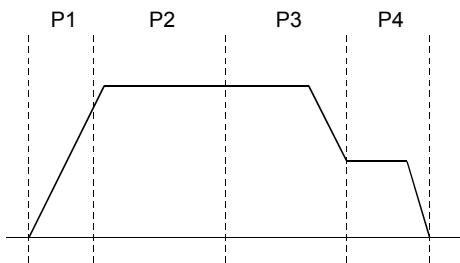

[When the movement amount is small during automatic deceleration]

The movement amount required to carry out the automatic deceleration cannot be secured, so the machine immediately stops in a speed  $\neq 0$  status.

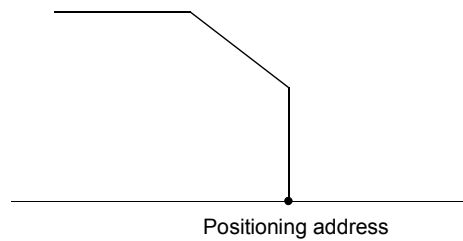

9.1.3 Designating the positioning address

The following shows the two methods for commanding the position in control using positioning data.

■ Absolute system

Positioning is carried out to a designated position (absolute address) having the zero point as a reference. This address is regarded as the positioning address. (The start point can be anywhere.)

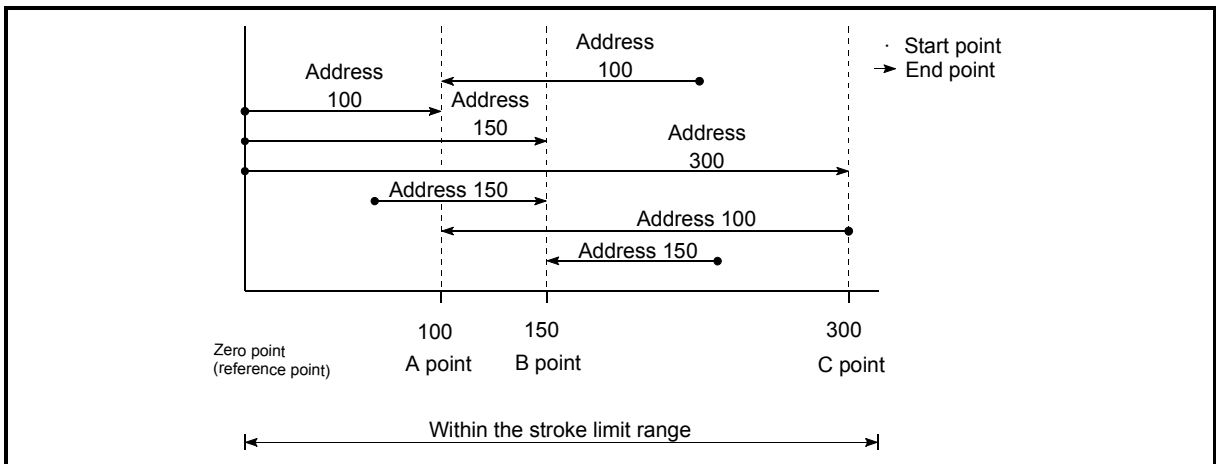


Fig. 9.6 Absolute system positioning

■ Increment system

The position where the machine is currently stopped is regarded as the start point, and positioning is carried out for a designated movement amount in a designated movement direction.

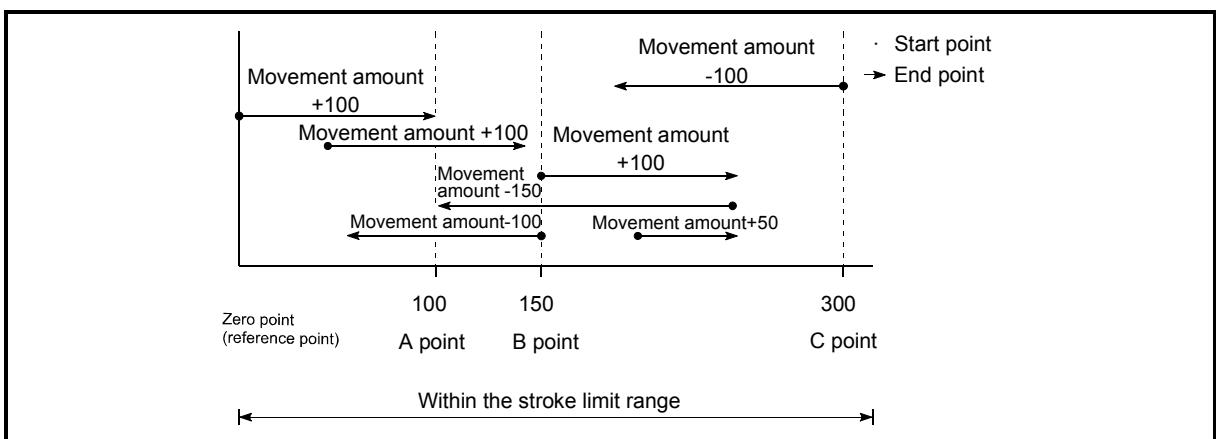


Fig. 9.7 Increment system positioning

9.1.4 Confirming the current value

■ Values showing the current value

The following two types of addresses are used as values to show the position in the AD75.

These addresses ("current feed value" and "machine feed value") are stored in the monitor data area, and used in monitoring the current value display, etc.

Current feed value	<ul style="list-style-type: none"> <li>• This is the value stored in "[Md.29] Current feed value".</li> <li>• This value has an address established with a "machine zero point return" as a reference, but the address can be changed by changing the current value to a new value.</li> <li>• This value is updated every 56.8ms.</li> </ul>
Machine feed value	<ul style="list-style-type: none"> <li>• This is the value stored in "[Md.30] Machine feed value".</li> <li>• This value always has an address established with a "machine zero point return" as a reference. The address cannot be changed, even if the current value is changed to a new value.</li> <li>• This value is updated every 56.8ms.</li> </ul>

The "current feed value" and "machine feed value" are used in monitoring the current value display, etc.

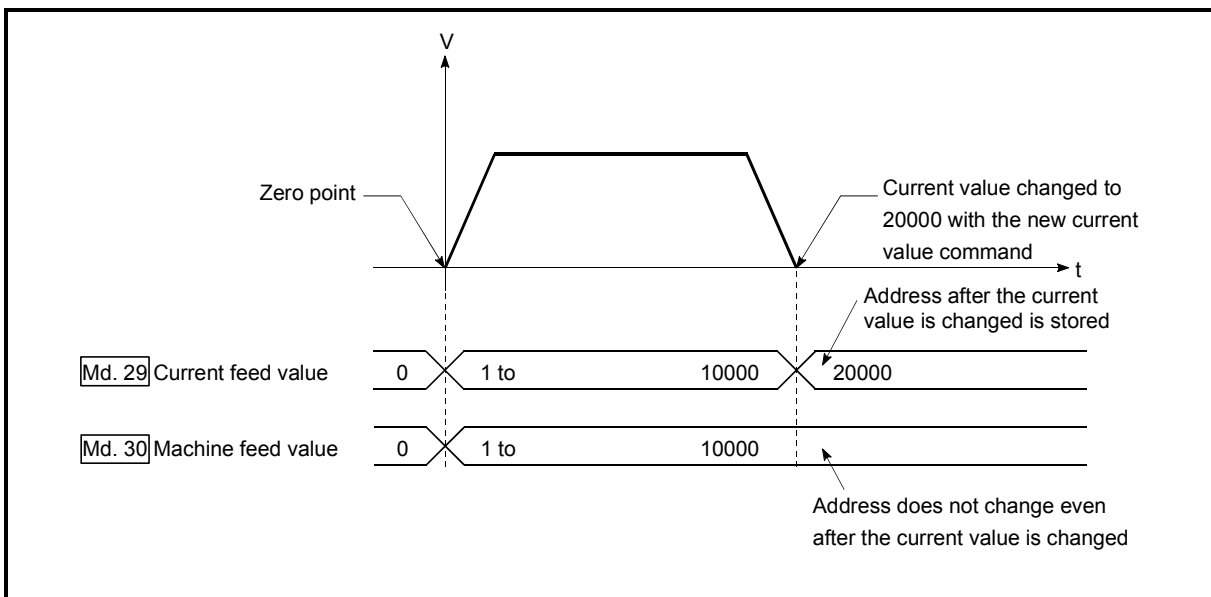


Fig. 9.8 Current feed value and machine feed value




■ Restrictions

- (1) A 56.8ms error will occur in the current value update timing when the stored "current feed value" and "machine feed value" are used in the control.
- (2) The "current feed value" and "machine feed value" may differ from the values set in "[Da.5] Positioning address/movement amount" of the positioning data if the movement amount per pulse is not set to "1".  
(A command pulse smaller than 1 pulse that is saved in the AD75 is neither output as a positioning command nor reflected on the monitor value.)
- (3) When the absolute position restoration mode is the "infinite length mode", the "machine feed value" cannot be used.

■ Monitoring the current value

The "current feed value" and "machine feed value" are stored in the following buffer memory addresses, and can be read using a "DFRO (P) command" from the programmable controller CPU.

	Buffer memory addresses		
	Axis 1	Axis 2	Axis 3
[Md.29] Current feed value	800, 801	900, 901	1000, 1001
[Md.30] Machine feed value	802, 803	902, 903	1002, 1003

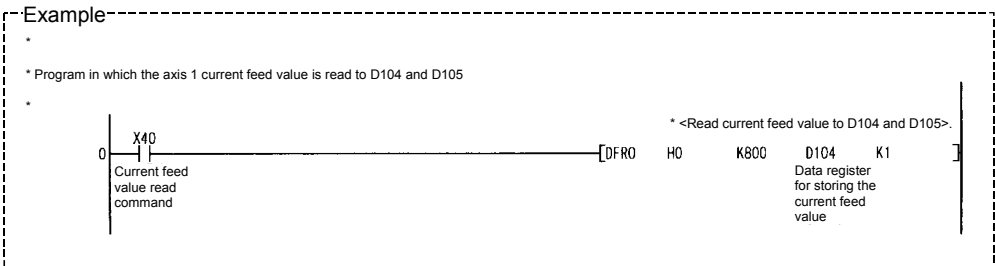


9.1.5 Control unit "degree" handling

When the control unit is set to "degree", the following items differ from when other control units are set.

(1) Current feed value and machine feed value addresses

When the control unit is set to "degree", "[Md.29] Current feed value" becomes the ring address of 0 to 359.99999° .

(If the control method is the absolute system, the address of "[Md.30] Machine feed value" does not become the ring address of 0 to 359.99999° .)

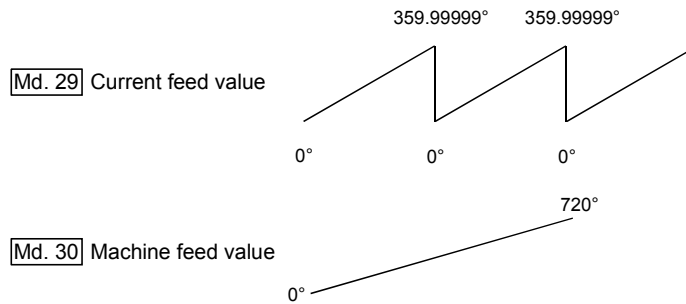

(2) Positioning control method when the control unit is set to "degree"

(a) Absolute system


1) When the software stroke limit is invalid

Positioning is carried out in the nearest direction to the designated address, using the current value as a reference.

(This is called "shortcut control".)

Example

- 1) Positioning is carried out in a clockwise direction when the current value is moved from 315° to 45°.
- 2) Positioning is carried out in a counterclockwise direction when the current value is moved from 45° to 315°.

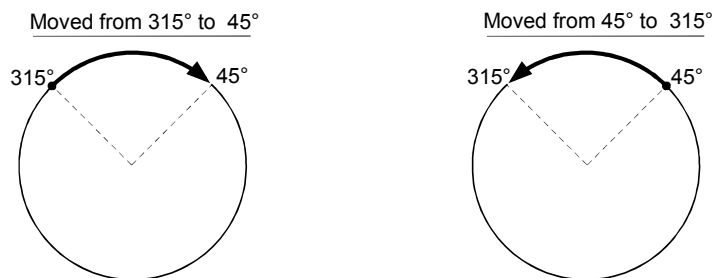

**POINT**

To make the software stroke limit invalid, set to  
 [Software stroke limit upper limit value = Software stroke limit lower limit value].  
 (Set a value within the setting range (0° to 359.99999°).)


2) When the software stroke limit is valid

The positioning is carried out in a clockwise/counterclockwise direction depending on the software stroke limit range setting method.

Because of this, positioning with "shortcut control" may not be possible.

Example

When the current value is moved from 0° to 315°, positioning is carried out in the clockwise direction if the software stroke limit lower limit value is 0° and the upper limit value is 345°.

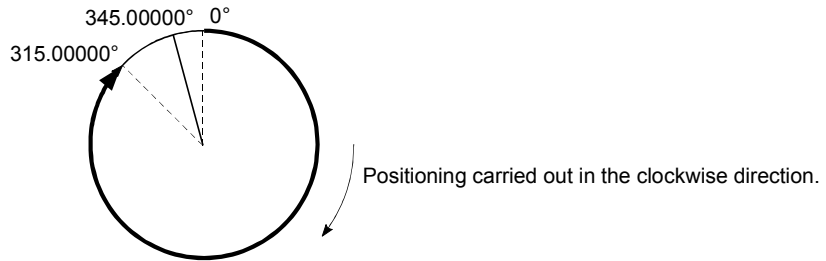

**POINT**

Positioning addresses are within a range of 0° to 359.99999°.

Use the increment system to carry out positioning of one rotation or more.

(b) Increment system

Positioning is carried out for a designated movement amount in a designated movement direction when in the increment system of positioning.

The movement direction is determined by the sign (+, -) of the movement amount.

- For a positive (+) movement direction .....Clockwise
- For a negative (-) movement direction .....Counterclockwise

**POINT**

Positioning of 360° or more can be carried out with the increment system.

At this time, set as shown below to invalidate the software stroke limit.

(Set a value within the setting range (0° to 359.99999°).)

[Software stroke limit upper limit value = Software stroke limit lower limit value]


(3) Absolute position detection system

The positioning address is the address of the position reached by the machine zero point return, and its range is 0° to 359.99999°.

The range 0° to 359.99999° also applies to the case where the zero point position is not 0°.

<When the mode for absolute position restoration is the "standard mode" ("Md.121 Absolute position restoration mode"=0)>


For positioning in the same direction, out of bound control (when the address increases: 359.99999° to 0° /when the address decreases: 0° to 359.99999°) cannot be performed.

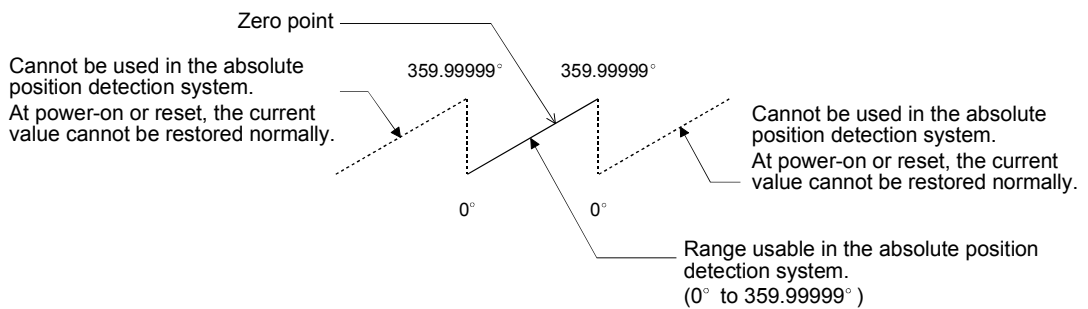

To make the software stroke limit valid, set the upper and lower limit values within the range 0° to 359.99999°.

<When the mode for absolute position restoration is the "infinite length mode" ("Md.121 Absolute position restoration mode"=1)>

For positioning in the same direction, out of bound control (when the address increases: 359.99999° to 0° /when the address decreases: 0° to 359.99999°) can be performed.

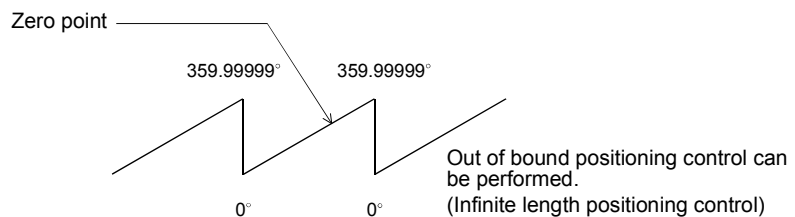

Make the software stroke limit invalid.

For details of the mode for absolute position restoration, refer to section "12.6.2 Absolute position restoration mode switching function".

9.1.6 Interpolation control

■ Meaning of interpolation control

In "2-axis linear interpolation control", "2-axis fixed-dimension feed control", and "2-axis circular interpolation control", control is carried out so that linear and arc paths are drawn using a motor set in two axis directions. This kind of control is called "interpolation control".

In interpolation control, the axis in which the control method is set is defined as the "reference axis", and the other axis is defined as the "interpolation axis".

The AD75 controls the "reference axis" following the positioning data set in the "reference axis", and controls the "interpolation axis" corresponding to the reference axis control so that a linear or arc path is drawn.

The following table shows the reference axis and interpolation axis combinations. (In case of a 3-axis module)

Axis definition Axis set to interpolation control in "[Da.2] Control method"	Reference axis	Interpolation axis
Axis 1	Axis 1	Axis 2
Axis 2	Axis 2	Axis 3
Axis 3	Axis 3	Axis 1

\*: In case of a 2-axis module, the reference axis is axis 1 and the interpolation axis is axis 2.

■ Setting the positioning data during interpolation control

When carrying out interpolation control, the same positioning data Nos. are set for the "reference axis" and the "interpolation axis".

The following table shows the "positioning data" setting items for the reference axis and interpolation axis.

Setting item	Axis	Reference axis setting item	Interpolation axis setting item	
Same positioning data Nos	Da.1	Operation pattern	◎	—
	Da.2	Control method	Linear 2, Fixed-dimension feed 2, Circular interpolation, Circular right, Circular left	—
	Da.3	Acceleration time No.	◎	—
	Da.4	Deceleration time No.	◎	—
	Da.5	Positioning address/movement amount	◎	○
	Da.6	Arc address	△ (Only during circular interpolation, right arc, and left arc)	△ (Only during circular interpolation, right arc, and left arc)
	Da.7	Command speed	◎	—
	Da.8	Dwell time	○	—
	Da.9	M code	○	—

◎ : Setting always required

○ : Set according to requirements (Set to "—" when not used.)

△ : Setting restrictions exist

— : Setting not required (Unrelated setting item, so any setting value will be ignored. Use the initial value or a value within the setting range.)

\* : Refer to section "5.3 List of positioning data" for information on the setting details.

### ■ Starting the interpolation control

The positioning data Nos. of the reference axis (axis in which interpolation control was set in "[Da.2] Control method") are started when starting the interpolation control. (Starting of the interpolation axis is not required.)

The following errors will occur and the positioning will not start if both reference axis and the interpolation axis are started.

- Reference axis : Interpolation while target axis BUSY (error code: 519)
- Interpolation axis : Control method setting error (error code: 524), start during operation (warning code: 100).

### ■ Interpolation control continuous positioning

When carrying out interpolation control in which "continuous positioning control" and "continuous path control" are designated in the operation pattern, the positioning method for all positioning data from the started positioning data to the positioning data in which "positioning complete" is set must be set to interpolation control.

The AD75 may malfunction if a control method other than interpolation control is set.

The path pattern can be selected when carrying out "continuous path control" using interpolation control. (Select either the "positioning address mode" or the "near pass mode" is selected. Refer to section "12.3.3 Near pass mode function" for details.)

### ■ Speed during interpolation control

Either the "composite speed" or "reference axis speed" can be designated as the speed during interpolation control.

(Set in "[Pr.21] Interpolation speed designation method".)

#### POINT

The speed limit does not function for the speed calculated by the AD75 during interpolation control. Because of this, observe the following precautions when setting the speed.

- When the "composite speed" is set, set a value so the speed for each axis does not exceed the "[Pr.7] Speed limit value".
- When the "reference axis speed" is set, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "[Pr.7] Speed limit value".

■ Limits to interpolation control

There are limits to the interpolation control that can be executed and speed (Pr.21 Interpolation speed designation method) that can be set, depending on the "Pr.1 Unit setting" of the reference axis and interpolation axis. (For example, circular interpolation control cannot be executed if the reference axis and interpolation axis units differ.)

The following table shows the interpolation control and speed designation limits.

" <u>Da.2</u> Control method" interpolation control	<u>Pr.21</u> Interpolation speed designation method	<u>Pr.1</u> Unit setting *1	
		Reference axis and interpolation axis units are the same, or a combination of "mm" and "inch".	Reference axis and interpolation axis units differ *3
Linear 2 (ABS, INC) Fixed-dimension feed 2	Composite speed	○	×
	Reference axis speed	○	○
Circular interpolation (ABS, INC) Right arc (ABS, INC) Left arc (ABS, INC)	Composite speed	○ *2	×
	Reference axis speed	×	×

○ : Setting possible, × : Setting not possible.

\*1 "mm" and "inch" unit mix possible.

\*2 "degree" setting not possible. An error "control method setting error" (error code: 524) will occur and the position cannot start if circular interpolation control is set when the unit is "degree". The machine will immediately stop if "degree" is set during positioning control.

\*3 The unit set in the reference axis will be used for the speed unit during control if the units differ or if "mm" and "inch" are combined.

■ Axis operation status during interpolation control

"In interpolation" will be stored in the "Md.35 Axis operation status" during interpolation control. "Standing by" will be stored when the interpolation operation is terminated. Both the reference axis and interpolation axis will carry out a deceleration stop if an error occurs during control, and "error occurring" will be stored in the operation status.

9.2 Setting the positioning data

9.2.1 Relation between each control and positioning data

The setting requirements and details for the setting items of the positioning data to be set differ according to the "Da.2 Control method".

The following table shows the positioning data setting items corresponding to the different types of control. Details and settings for the operation of each control are shown in section 9.2.2 and subsequent sections.

(In this section, it is assumed that the positioning data setting is carried out using the AD75 software package.)

Main positioning control		Position control				Speed control	Speed/position changeover control	Other control	
		1-axis linear control 2-axis linear interpolation control	1-axis fixed-dimension feed control 2-axis fixed-dimension feed control	2-axis circular interpolation control	Speed control			Speed/position changeover control	Current value change
Da.1	Operation pattern	Independent positioning control	⊙	⊙	⊙	⊙	⊙	⊙	×
		Continuous positioning control	⊙	⊙	⊙	×	⊙	⊙	⊙
		Continuous path control	⊙	×	⊙	×	⊙	×	⊙
Da.2	Control method	Linear 1 Linear 2 *	Fixed- dimension feed1 Fixed- dimension feed 2 *	Circular interpolation Circular right Circular left *	Forward run Speed limited Reverse run Speed limited	Forward run speed/posi- tion Reverse run speed/posi- tion	Current value change	JUMP command	
Da.3	Acceleration time No.	○	○	○	○	○	-	-	
Da.4	Deceleration time No.	○	○	○	○	○	-	-	
Da.5	Positioning address/movement amount	⊙	⊙	⊙	-	-	Change destination address	-	
Da.6	Arc address	-	-	⊙	-	-	-	-	
Da.7	Command speed	⊙	⊙	⊙	⊙	⊙	-	-	
Da.8	Dwell time	○	○	○	○	○	-	JUMP destination positioning data No.	
Da.9	M code	○	○	○	○	○	-		

⊙ : Always set    ○ : Set as required ("-" when not set)    × : Setting not possible    △ : Setting limited  
 - : Setting not required (Setting value is invalid. Use the initial values or setting values within a range where no error occurs.)  
 \* : The "ABS (absolute) method" or "INC (incremental) method" can be used for the control method.

**REMARK**

- It is recommended that the "positioning data" be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.
- A "Block transmission" is required when setting No. 101 and subsequent positioning data using a sequence program.




9.2.2 1-axis linear control

In "1-axis linear control" ("Da.2 Control method" = ABS linear 1, INC linear 1), one motor is used to carry out position control in a set axis direction.

(1) 1-axis linear control (ABS linear 1)

■ Operation chart

In absolute system 1-axis linear control, addresses established by a machine zero point return are used. Positioning is carried out from the current stop position (start point address) to the address (end point address) set in "Da.5 Positioning address/movement amount".

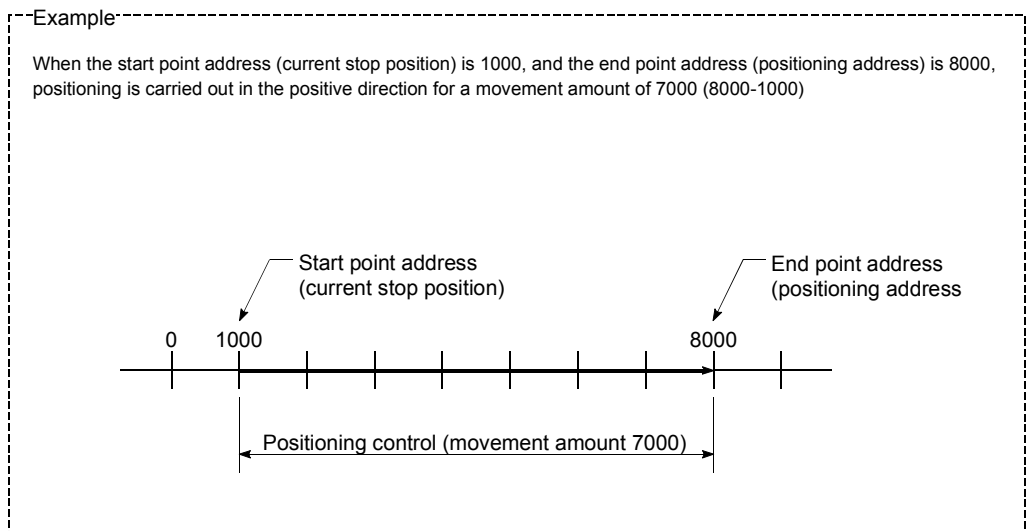

■ Positioning data setting example

The following table shows setting examples when "1-axis linear control (ABS linear 1)" is set in positioning data No. 1 of axis 1.


Setting item		Setting example	Setting details
Axis 1 Positioning data No. 1	Da.1	Operation pattern	Positioning complete Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control method	ABS linear 1 Set absolute system 1-axis linear control.
	Da.3	Acceleration time No.	1 Designate the value set in "Pr.26 Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0 Designate the value set in "Pr.9 Deceleration time 0" as the deceleration time at deceleration.
	Da.5	Positioning address/movement amount	8000.0μm Set the positioning address. (Assuming "mm" is set in "Pr.1 Unit setting".)
	Da.6	Arc address	- Setting not required (setting value will be ignored).
	Da.7	Command speed	6000.00mm/min Set the speed during movement to the positioning address.
	Da.8	Dwell time	500ms Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	Da.9	M code	10 Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.

(2) 1-axis linear control (INC linear 1)

■ Operation chart

In increment system 1-axis linear control, addresses established by a machine zero point return are used. Positioning is carried out from the current stop position (start point address) to a position at the end of the movement amount set in "Da.5 Positioning address/movement amount". The movement direction is determined by the sign of the movement amount.

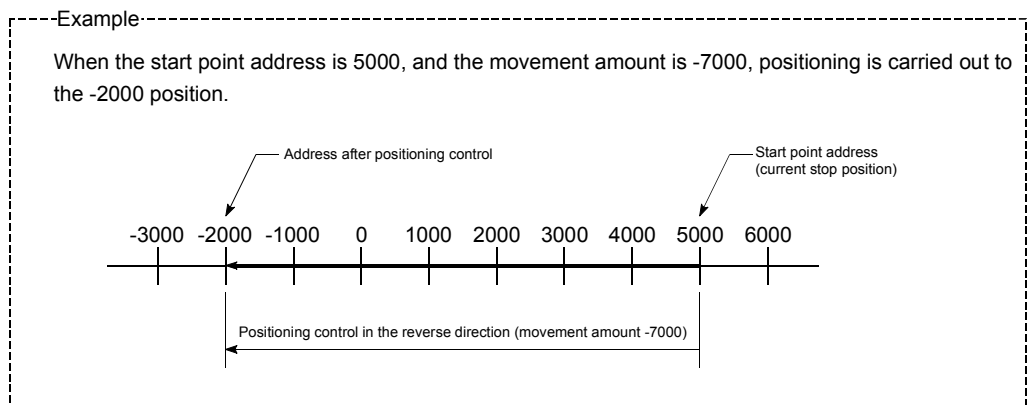

■ Positioning data setting example

The following table shows setting examples when "1-axis linear control (INC linear 1)" is set in positioning data No. 1 of axis 1.

Setting item		Setting example	Setting details
Axis 1 Positioning data No. 1	Da.1	Operation pattern	Positioning complete Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control method	INC linear 1 Set increment system 1-axis linear control.
	Da.3	Acceleration time No.	1 Designate the value set in "Pr.26 Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0 Designate the value set in "Pr.9 Deceleration time 0" as the deceleration time at deceleration.
	Da.5	Positioning address/movement amount	-7000.0μm Set the movement amount. (Assuming "mm" is set in "Pr.1 Unit setting".)
	Da.6	Arc address	- Setting not required (setting value will be ignored).
	Da.7	Command speed	6000.00mm/min Set the speed during movement.
	Da.8	Dwell time	500ms Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	Da.9	M code	10 Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.



9.2.3 2-axis linear interpolation control

In "2-axis linear interpolation control" ("Da.2 Control method" = ABS linear 2, INC linear 2), two motors are used to carry out position control in a linear path while carrying out interpolation for the axis directions set in each axis.  
 (Refer to section "9.1.6 Interpolation control" for details on interpolation control.)

(1) 2-axis linear interpolation control (ABS linear 2)

■ Operation chart

In absolute system 2-axis linear control, addresses established by a machine zero point return on a 2-axis coordinate plane are used. Linear interpolation positioning is carried out from the current stop position (start point address) to the address (end point address) set in "Da.5 Positioning address/movement amount".

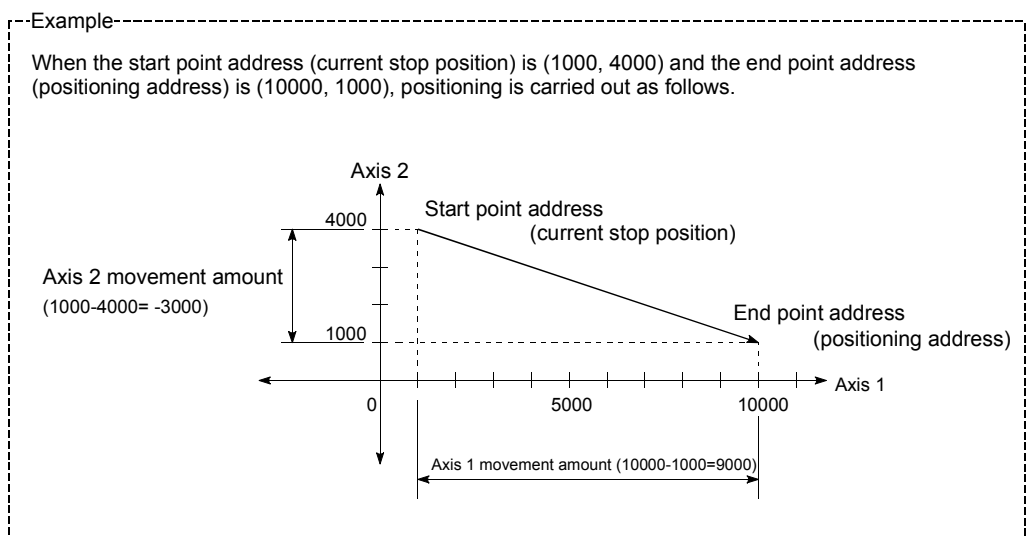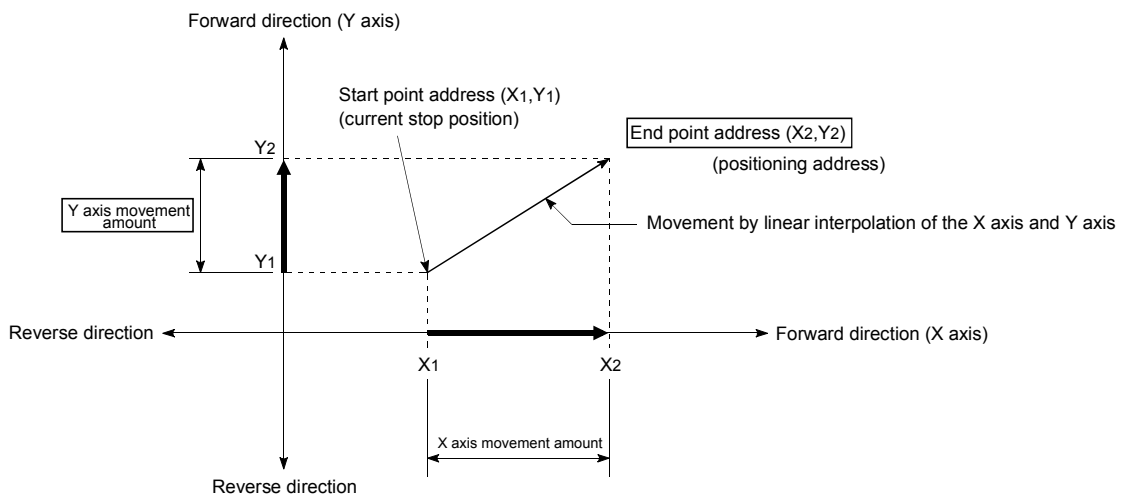

■ Restrictions

An error will occur and the positioning will not start in the following cases. The machine will immediately stop if the error is detected during a positioning control.

- If the movement amount of each axis exceeds "1073741824 (=2<sup>30</sup>)" at the setting of "0: Composite speed" in "[Pr.21] Interpolation speed designation method".

An error "outside linear movement amount range" (error code: 504) will occur at the positioning start.

(The maximum movement amount that can be set in "[Da.5] Positioning address/movement amount" is "1073741824 (=2<sup>30</sup>)")

■ Positioning data setting example

The following table shows setting examples when "2-axis linear interpolation control (ABS linear 2)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Setting item		Axis		Setting details
		Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	
Axis 1 Positioning data No. 1	[Da.1] Operation pattern	Positioning complete	–	Set "Positioning complete" assuming the next positioning data will not be executed.
	[Da.2] Control method	ABS linear 2	–	Set absolute system 2-axis linear interpolation control.
	[Da.3] Acceleration time No.	1	–	Designate the value set in "[Pr.26] Acceleration time 1" as the acceleration time at start.
	[Da.4] Deceleration time No.	0	–	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	[Da.5] Positioning address/movement amount	10000.0 μm	1000.0 μm	Set the end point address. (Assuming "mm" is set in "[Pr.1] Unit setting".)
	[Da.6] Arc address	–	–	Setting not required (setting value will be ignored).
	[Da.7] Command speed	6000.00 mm/min	–	Set the speed during movement to the end point address.
	[Da.8] Dwell time	500ms	–	Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	[Da.9] M code	10	–	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.


\* Refer to section "5.3 List of positioning data" for information on the setting details.

<b>POINT</b>
<p>The speed limit does not function for the speed calculated by the AD75 during interpolation control. Because of this, observe the following precautions when setting the speed.</p> <ul style="list-style-type: none"> <li>• When the "composite speed" is set, set a value so the speed for each axis does not exceed the "[Pr.7] Speed limit value".</li> <li>• When the "reference axis speed" is set, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "[Pr.7] Speed limit value".</li> </ul>

(2) 2-axis linear interpolation control (INC linear 2)


■ Operation chart

In increment system 2-axis linear interpolation control, addresses established by a machine zero point return on a 2-axis coordinate plane are used. Linear interpolation positioning is carried out from the current stop position (start point address) to a position at the end of the movement amount set in "Da.5 Positioning address/movement amount". The movement direction is determined by the sign of the movement amount.

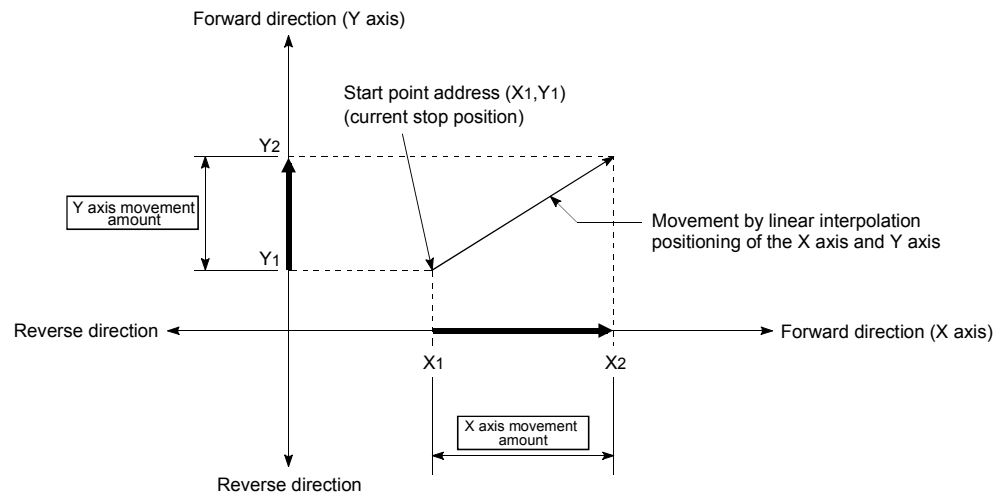

Example

When the axis 1 movement amount is 9000 and the axis 2 movement amount is -3000, positioning is carried out as follows.

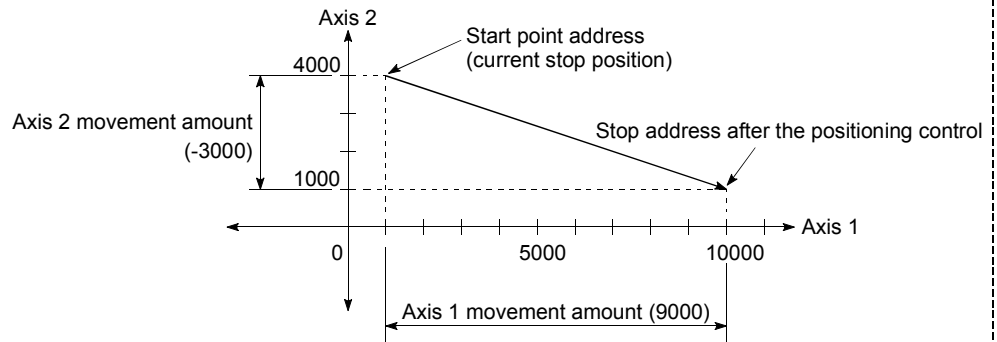

■ Restrictions

An error will occur and the positioning will not start in the following cases. The machine will immediately stop if the error is detected during a positioning operation.

- If the movement amount of each axis exceeds "1073741824 (=2<sup>30</sup>)" at the setting of "0: Composite speed" in "[Pr.21] Interpolation speed designation method".

An error "outside linear movement amount range" (error code: 504) will occur at the positioning start.

(The maximum movement amount that can be set in "[Da.5] Positioning address/movement amount" is "1073741824 (=2<sup>30</sup>)")

■ Positioning data setting example

The following table shows setting examples when "2-axis linear interpolation control (INC linear 2)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Setting item		Axis		Setting details
		Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	
Axis 1 Positioning data No. 1	[Da.1] Operation pattern	Positioning complete	–	Set "Positioning complete" assuming the next positioning data will not be executed.
	[Da.2] Control method	INC linear 2	–	Set increment system 2-axis linear interpolation control.
	[Da.3] Acceleration time No.	1	–	Designate the value set in "[Pr.26] Acceleration time 1" as the acceleration time at start.
	[Da.4] Deceleration time No.	0	–	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	[Da.5] Positioning address/movement amount	9000.0 μm	-3000.0 μm	Set the movement amount. (Assuming "mm" is set in "[Pr.1] Unit setting".)
	[Da.6] Arc address	–	–	Setting not required (setting value will be ignored).
	[Da.7] Command speed	6000.00 mm/min	–	Set the speed during movement.
	[Da.8] Dwell time	500ms	–	Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	[Da.9] M code	10	–	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.

<b>POINT</b>
<p>The speed limit does not function for the speed calculated by the AD75 during interpolation control. Because of this, observe the following precautions when setting the speed.</p> <ul style="list-style-type: none"> <li>• When the "composite speed" is set, set a value so the speed for each axis does not exceed the "[Pr.7] Speed limit value".</li> <li>• When the "reference axis speed" is set, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "[Pr.7] Speed limit value".</li> </ul>

9.2.4 1-axis fixed-dimension feed control


In "1-axis fixed-dimension feed control" ("Da.2 Control method" = fixed-dimension feed 1), one motor is used to carry out fixed-dimension feed control in a set axis direction.

In fixed-dimension feed control, any remainder of the movement amount designated in the positioning data is rounded down if less than that required for control accuracy to output the same amount of position commands.

■ Operation chart

In 1-axis fixed-dimension feed control, the address (Md.29 Current feed value) of the current stop position (start point address) is set to "0". Positioning is then carried out to a position at the end of the movement amount set in "Da.5 Positioning address/movement amount".

The movement direction is determined by the movement amount sign.

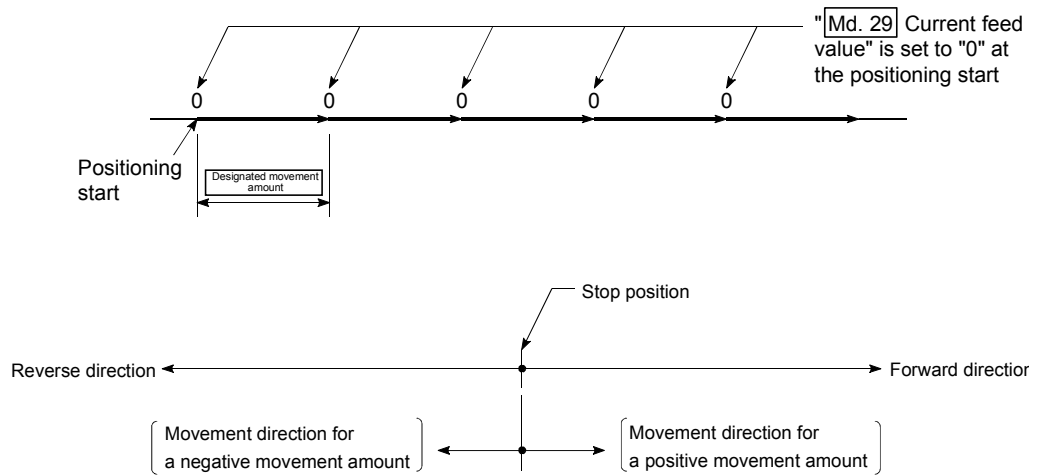

■ Restrictions

- (1) An error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous path control" is set in "[Da.1] Operation pattern". ("Continuous path control" cannot be set in fixed-dimension feed control.)
- (2) "Fixed-dimension feed" cannot be set in "[Da.2] Control method" in the positioning data when "continuous path control" has been set in "[Da.1] Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", fixed-dimension feed control cannot be set in positioning data No. 2.) An error "Continuous path control not possible" (error code: 516) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.
- (3) When the absolute position restoration mode is the "infinite length mode", an error "control method setting error" (error code: 524) occurs, disabling a start.

■ Positioning data setting example

The following table shows setting examples when "1-axis fixed-dimension feed control (fixed-dimension feed 1)" is set in positioning data No. 1 of axis 1.

Setting item		Setting example	Setting details
Axis 1 Positioning data No. 1	[Da.1] Operation pattern	Positioning complete	Set "Positioning complete" assuming the next positioning data will not be executed.
	[Da.2] Control method	Fixed-dimension feed 1	Set 1-axis fixed-dimension feed control.
	[Da.3] Acceleration time No.	1	Designate the value set in "[Pr.26] Acceleration time 1" as the acceleration time at start.
	[Da.4] Deceleration time No.	0	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	[Da.5] Positioning address/movement amount	80000.0μm	Set the positioning address. (Assuming "mm" is set in "[Pr.1] Unit setting".)
	[Da.6] Arc address	-	Setting not required (setting value will be ignored).
	[Da.7] Command speed	6000.00mm/min	Set the speed during movement to the positioning address.
	[Da.8] Dwell time	500ms	Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	[Da.9] M code	10	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.



9.2.5 2-axis fixed-dimension feed control (interpolation)


In "2-axis fixed-dimension feed control" ("Da.2 Control method" = fixed-dimension feed 2), two motors are used to carry out fixed-dimension feed control in a linear path while carrying out interpolation for the axis directions set in each axis.

In fixed-dimension feed control, any remainder of the movement amount designated in the positioning data is rounded down if less than that required for control accuracy to output the same amount of position commands. (The remainder of the movement amount with an accuracy below the control accuracy does not affect the regular controls.)

(Refer to section "9.1.6 Interpolation control" for details on interpolation control.)

■ Operation chart

In increment system 2-axis fixed-dimension feed control, the addresses (Md.29 Current feed value) of the current stop position (start addresses) of both axes are set to "0". Linear interpolation positioning is then carried out from that position to a position at the end of the movement amount set in "Da.5 Positioning address/movement amount". The movement direction is determined by the sign of the movement amount.

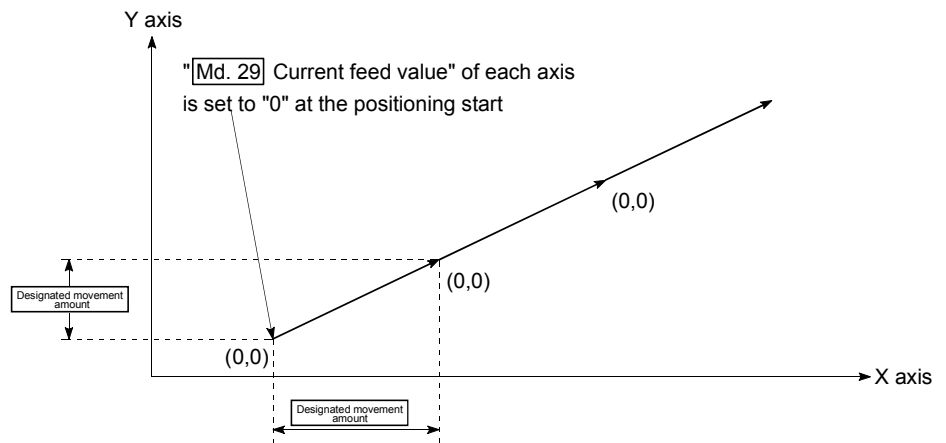

**■ Restrictions**

- (1) An error "Continuous path control not possible" (error code: 516) will occur and the operation cannot start if "continuous path control" is set in "[Da.1] Operation pattern". ("Continuous path control" cannot be set in fixed-dimension feed control.)
- (2) If the movement amount of each axis exceeds "1073741824 ( $=2^{30}$ )" at the setting of "0: Composite speed" in "[Pr.21] Interpolation speed designation method", an error "outside linear movement amount range" (error code: 504) will occur at a positioning start and positioning cannot be started. (The maximum movement amount that can be set in "[Da.5] Positioning address/movement amount" is "1073741824 ( $=2^{30}$ )".)
- (3) "Fixed-dimension feed" cannot be set in "[Da.2] Control method" in the positioning data when "continuous path control" has been set in "[Da.1] Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", fixed-dimension feed control cannot be set in positioning data No. 2.) An error "Continuous path control not possible" (error code: 516) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.
- (4) When the absolute position restoration mode is the "infinite length mode", an error "control method setting error" (error code: 524) occurs, disabling a start.

■ Positioning data setting example

The following table shows setting examples when "2-axis fixed-dimension feed control (fixed-dimension feed 2)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Setting item		Axis		Setting details	
		Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example		
Axis 1 Positioning data No. 1	Da.1	Operation pattern	Positioning complete	–	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control method	Fixed-dimension feed 2	–	Set 2-axis fixed-dimension feed control.
	Da.3	Acceleration time No.	1	–	Designate the value set in "[Pr.26] Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0	–	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	Da.5	Positioning address/movement amount	80000.0 μm	60000.0 μm	Set the positioning address. (Assuming "mm" is set in "[Pr.1] Unit setting".)
	Da.6	Arc address	–	–	Setting not required (setting value will be ignored).
	Da.7	Command speed	6000.00 mm/min	–	Set the speed during movement. (Designate the composite speed of reference axis speed in "[Pr.21] Interpolation speed designation method".)
	Da.8	Dwell time	500ms	–	Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	Da.9	M code	10	–	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.

<b>POINT</b>
<p>The speed limit does not function for the speed calculated by the AD75 during interpolation control. Because of this, observe the following precautions when setting the speed.</p> <ul style="list-style-type: none"> <li>• When the "composite speed" is set, set a value so the speed for each axis does not exceed the "[Pr.7] Speed limit value".</li> <li>• When the "reference axis speed" is set, set so the major axis side becomes the reference axis. If the minor axis side is set as the reference axis, the major axis side speed may exceed the "[Pr.7] Speed limit value".</li> </ul>

9.2.6 2-axis circular interpolation control with auxiliary point designation


In "2-axis circular interpolation control" ("Da.2 Control method" = ABS circular interpolation, INC circular interpolation), two motors are used to carry out position control in an arc path passing through designated auxiliary points, while carrying out interpolation for the axis directions set in each axis.  
 (Refer to section "9.1.6 Interpolation control" for details on interpolation control.)

(1) 2-axis circular interpolation control with auxiliary point designation (ABS circular interpolation)

■ Operation chart

In the absolute system, 2-axis circular interpolation control with auxiliary point designation, addresses established by a machine zero point return on a 2-axis coordinate plane are used. Positioning is carried out from the current stop position (start point address) to the address (end point address) set in "Da.5 Positioning address/movement amount", in an arc path that passes through the auxiliary point address set in "Da.6 Arc address".

The resulting control path is an arc having as its center the intersection point of perpendicular bisectors of a straight line between the start point address (current stop position) and auxiliary point address (arc address), and a straight line between the auxiliary point address (arc address) and end point address (positioning address).

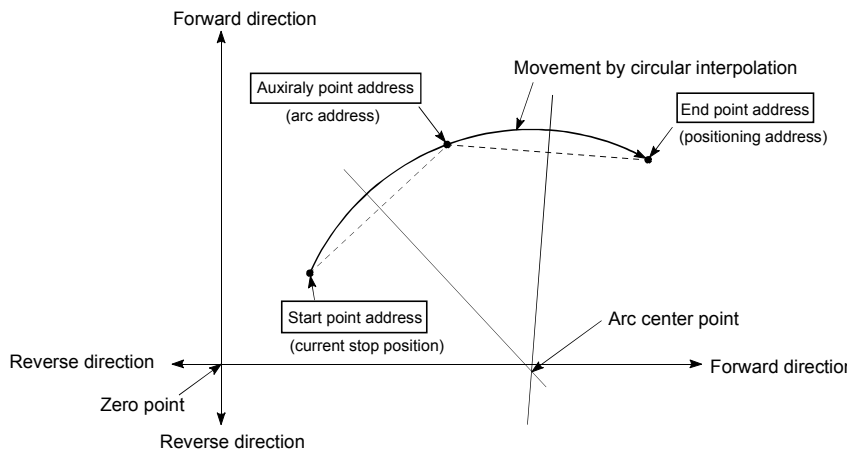

**■ Restrictions**

- (1) 2-axis circular interpolation control cannot be set in the following cases.
  - When "degree" is set in "[Pr.1] Unit setting"
  - When the units set in "[Pr.1] Unit setting" are different for the reference axis and interpolation axis. ("mm" and "inch" combinations are possible.)
  - When "reference axis speed" is set in "[Pr.21] Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
  - In case radius is over than " $536870912(=2^{29})$ " which is the maximum and acceptable radius for circular interpolation control, or in case the end address is outside the scope of " $-2147483648(-2^{31})$  to  $2147483647(2^{31}-1)$ ".
    - ... An error "end point setting error" (error code:526) or "outside radius range" (error code: 544) will occur at positioning start.
  - When the auxiliary point address, center point address is outside the range of " $-2147483648(-2^{31})$  to  $2147483647(2^{31}-1)$ ".
    - ... An error "auxiliary point setting error" (error code: 525) will occur at positioning start.
  - When the start point address is the same as the end point address
    - ... An error "end point setting error" (error code: 526) will occur.
  - When the start point address is the same as the auxiliary point address
    - ... An error "auxiliary point setting error" (error code: 525) will occur.
  - When the end point address is the same as the auxiliary point address
    - ... An error "auxiliary point setting error" (error code: 525) will occur.
  - When the start point address, auxiliary point address, and end point address are in a straight line
    - ... An error "auxiliary point setting error" (error code: 525) will occur.

■ Positioning data setting example

The following table shows setting examples when "2-axis circular interpolation control with auxiliary point designation (ABS circular interpolation)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Setting item		Axis		Setting details	
		Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example		
Axis 1 Positioning data No. 1	Da.1	Operation pattern	Positioning complete	–	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control method	ABS circular interpolation	–	Set absolute system, 2-axis circular interpolation control with auxiliary point designation.
	Da.3	Acceleration time No.	1	–	Designate the value set in "[Pr.26] Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0	–	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	Da.5	Positioning address/movement amount	80000.0 μm	60000.0 μm	Set the positioning address. (Assuming "mm" is set in "[Pr.1] Unit setting".)
	Da.6	Arc address	40000.0 μm	30000.0 μm	Set the auxiliary point address. (Assuming that the "[Pr.1] Unit setting" is set to "mm".)
	Da.7	Command speed	6000.00 mm/min	–	Set the speed when moving to the end point address. (Designate the composite speed in "[Pr.21] Interpolation speed designation method".)
	Da.8	Dwell time	500ms	–	Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	Da.9	M code	10	–	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.


<b>POINT</b>
Set a value in "[Da.7] Command speed" so that the speed of each axis does not exceed the "[Pr.7] Speed limit value". (The speed limit does not function for the speed calculated by the AD75 during interpolation control.)

(2) 2-axis circular interpolation control with auxiliary point designation (INC circular interpolation)

In the increment system, 2-axis circular interpolation control with auxiliary point designation, addresses established by a machine zero point return on a 2-axis coordinate plane are used. Positioning is carried out from the current stop position (start point address) to a position at the end of the movement amount set in "Da.5 Positioning address/movement amount", in an arc path that passes through the auxiliary point address set in "Da.6 Arc address".

The resulting control path is an arc having as its center the intersection point of perpendicular bisectors of the following:

- (1) A straight line between the start point address (current stop position) and auxiliary point address (arc address) calculated from the movement amount to the auxiliary point.
- (2) A straight line between the start auxiliary point address (arc address) and end point address (positioning address) calculated from the movement amount to the end point.

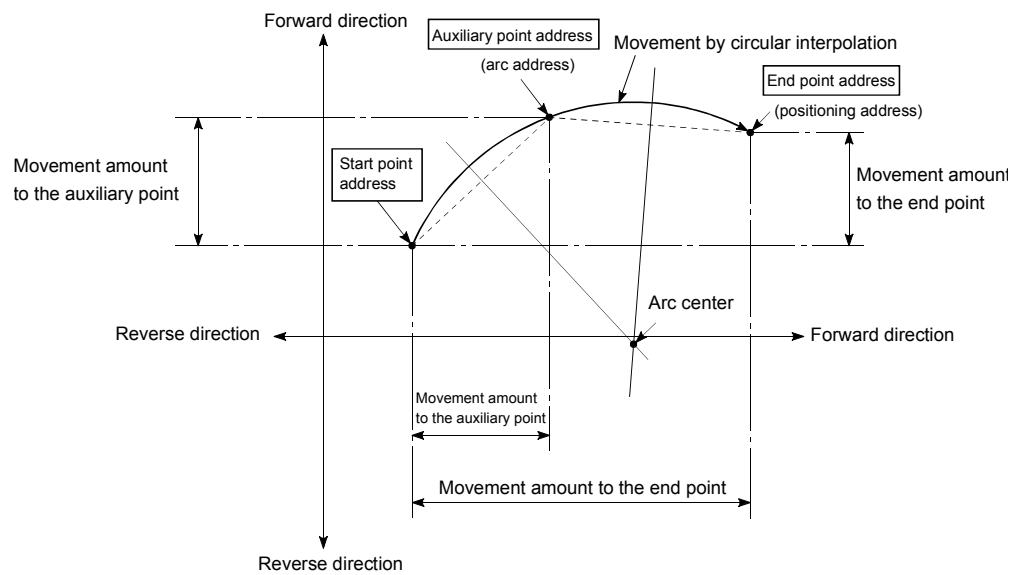

**■ Restrictions**

- (1) 2-axis circular interpolation control cannot be set in the following cases.
  - When "degree" is set in "[Pr.1] Unit setting"
  - When the units set in "[Pr.1] Unit setting" are different for the reference axis and interpolation axis. ("mm" and "inch" combinations are possible.)
  - When "reference axis speed" is set in "[Pr.21] Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
  - When the radius exceeds "536870912 ( $2^{29}$ )". (The maximum radius for which circular interpolation control is possible is "536870912 ( $2^{29}$ )"
    - ... An error "outside radius range" (error code: 544) will occur at positioning start.
  - When the center point address is outside the range of " $-2147483648 (-2^{31})$  to  $2147483647 (2^{31}-1)$ "
    - ... An error "auxiliary point setting error" (error code: 525) will occur at positioning start.
  - When the start point address is the same as the end point address
    - ... An error "end point setting error" (error code: 526) will occur.
  - When the start point address is the same as the auxiliary point address
    - ... An error "auxiliary point setting error" (error code: 525) will occur.
  - When the end point address is the same as the auxiliary point address
    - ... An error "auxiliary point setting error" (error code: 525) will occur.
  - When the start point address, auxiliary point address, and end point address are in a straight line
    - ... An error "auxiliary point setting error" (error code: 525) will occur.



■ Positioning data setting example

The following table shows setting examples when "2-axis circular interpolation control with auxiliary point designation (INC circular interpolation)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Setting item		Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details
Axis 1 Positioning data No. 1	Da.1	Operation pattern	Positioning complete	–	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control method	INC circular interpolation	–	Set increment system, 2-axis circular interpolation control with auxiliary point designation.
	Da.3	Acceleration time No.	1	–	Designate the value set in "[Pr.26] Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0	–	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	Da.5	Positioning address/movement amount	80000.0 μm	60000.0 μm	Set the movement amount. (Assuming that the "[Pr.1] Unit setting" is set to "mm".)
	Da.6	Arc address	40000.0 μm	30000.0 μm	Set the auxiliary point address. (Assuming that the "[Pr.1] Unit setting" is set to "mm".)
	Da.7	Command speed	6000.00 mm/min	–	Set the speed during movement. (Designate the composite speed in "[Pr.21] Interpolation speed designation method".)
	Da.8	Dwell time	500ms	–	Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	Da.9	M code	10	–	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.

<b>POINT</b>
Set a value in "[Da.7] Command speed" so that the speed of each axis does not exceed the "[Pr.7] Speed limit value". (The speed limit does not function for the speed calculated by the AD75 during interpolation control.)

9.2.7 2-axis circular interpolation control with center point designation

In "2-axis circular interpolation control" ("Da.2 Control method" = ABS right arc, INC right arc, ABS left arc, INC left arc), two motors are used to carry out position control along the arc path whose center point is the arc address, while carrying out interpolation along the reference axis set for each motor.  
 (Refer to section "9.1.6 Interpolation control" for details on interpolation control.)

The following table shows the rotation directions, arc center angles that can be controlled, and positioning paths for the different control methods.

Control method	Rotation direction	Arc center angle that can be controlled	Positioning path
ABS right arc	Clockwise	$0^\circ < \theta \leq 360^\circ$	
INC right arc			
ABS left arc	Counterclockwise		
INC left arc			

### ■ Circular interpolation error compensation

In circular interpolation control with center point designation, the arc path calculated from the start point address and center point address may deviate from the position of the end point address set in "[Da.5] Positioning address/movement amount".


(Refer to "[Pr.42] Allowable circular interpolation error width".)

- (1) Calculated error  $\leq$  "[Pr.42] Allowable circular interpolation error width"

Circular interpolation control to the set end point address is carried out while the error compensation is carried out. (This is called "spiral interpolation".)

- (2) Calculated error  $>$  "[Pr.42] Allowable circular interpolation error width"

At the positioning start, an error "large arc error deviation" (error code: 506) will occur and the control will not start. The machine will immediately stop if the error is detected during positioning control.

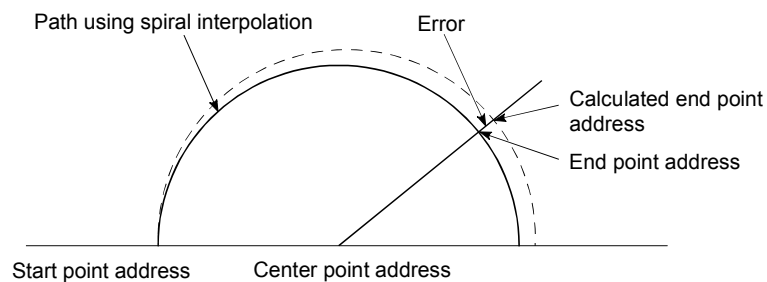

During arc interpolation control with center point designation, the angle is calculated on the assumption that movement at the command speed occurs on an arc drawn in the radius calculated from the start point and center point addresses, and the radius is corrected in proportion to the angular velocity from the start point.


Therefore, if there is difference between the radius (radius at start point) calculated from the start point and center point addresses and the radius (radius at end point) calculated from the end point and center point addresses, the resultant velocity has the following tendency, different from the command speed.

- If the radius at the start point is larger than that at the end point:  
The velocity becomes slower as the end point address draws nearer when compared with the case including no error.
- If the radius at the start point is smaller than that at the end point:  
The velocity becomes faster as the end point address draws nearer when compared with the case including no error.


(1) 2-axis circular interpolation control with center point designation  
(ABS right arc, ABS left arc)

■ Operation chart

In the absolute system, 2-axis circular interpolation control with center point designation, addresses established by a machine zero point return on a 2-axis coordinate plane are used. Positioning is carried out from the current stop position (start point address) to the address (end point address) set in "Da.5 Positioning address/movement amount", in an arc path having as its center the address (arc address) of the center point set in "Da.6 Arc address".

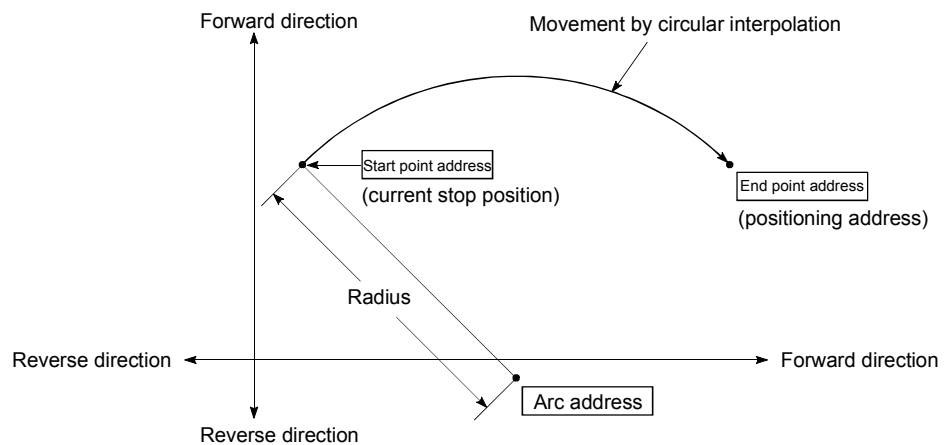

Positioning of a complete round with a radius from the start point address to the arc center point can be carried out by setting the end point address (positioning address) to the same address as the start point address.

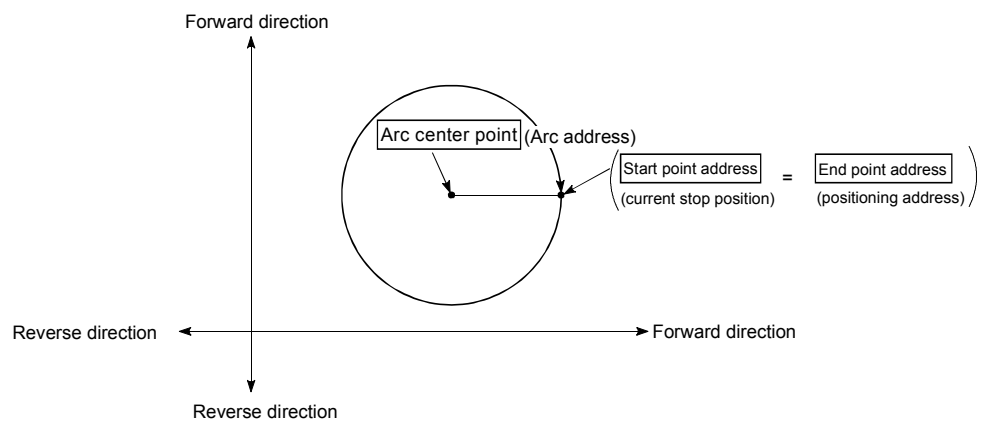

■ Restrictions

- (1) 2-axis circular interpolation control cannot be set in the following cases.
  - When "degree" is set in "[Pr.1] Unit setting"
  - When the units set in "[Pr.1] Unit setting" are different for the reference axis and interpolation axis. ("mm" and "inch" combinations are possible.)
  - When "reference axis speed" is set in "[Pr.21] Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
  - In case radius is over than "536870912(=2<sup>29</sup>)" which is the maximum and acceptable radius for circular interpolation control, or in case the end address is outside the scope of "-2147483648(-2<sup>31</sup>) to 2147483647(2<sup>31</sup>-1)".
    - ... An error "end point setting error" (error code:526) or "outside radius range" (error code: 544) will occur at positioning start.
  - When the start point address is the same as the center point address
    - ... An error "center point setting error" (error code: 527) will occur.
  - When the end point address is the same as the center point address
    - ... An error "center point setting error" (error code: 527) will occur.

■ Positioning data setting examples

The following table shows setting examples when "2-axis circular interpolation control with center point designation (ABS right arc, ABS left arc)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Setting item		Axis	Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example	Setting details
Axis 1 Positioning data No. 1	[Da.1] Operation pattern		Positioning complete	–	Set "Positioning complete" assuming the next positioning data will not be executed.
	[Da.2] Control method		ABS right arc ABS left arc	–	Set absolute system, 2-axis circular interpolation control with center point designation. (Select clockwise or counterclockwise according to the control.)
	[Da.3] Acceleration time No.		1	–	Designate the value set in "[Pr.26] Acceleration time 1" as the acceleration time at start.
	[Da.4] Deceleration time No.		0	–	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	[Da.5] Positioning address/movement amount		80000.0 μm	60000.0 μm	Set the positioning address. (Assuming "mm" is set in "[Pr.1] Unit setting".)
	[Da.6] Arc address		40000.0 μm	30000.0 μm	Set the arc address. (Assuming that the "[Pr.1] Unit setting" is set to "mm".)
	[Da.7] Command speed		6000.00 mm/min	–	Set the speed when moving to the end point address. (Designate the composite speed in "[Pr.21] Interpolation speed designation method".)
	[Da.8] Dwell time		500ms	–	Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	[Da.9] M code		10	–	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.


\* Refer to section "5.3 List of positioning data" for information on the setting details.

<b>POINT</b>
Set a value in "Da.7 Command speed" so that the speed of each axis does not exceed the "Pr.7 Speed limit value". (The speed limit does not function for the speed calculated by the AD75 during interpolation control.)


(2) 2-axis circular interpolation control with center point designation (INC right arc, INC left arc)

■ Operation chart

In the increment system, 2-axis circular interpolation control with center point designation, addresses established by a machine zero point return on a 2-axis coordinate plane are used. Positioning is carried out from the current stop position (start point address) to a position at the end of the movement amount set in "Da.5 Positioning address/movement amount", in an arc path having as its center the address (arc address) of the center point set in "Da.6 Arc address".

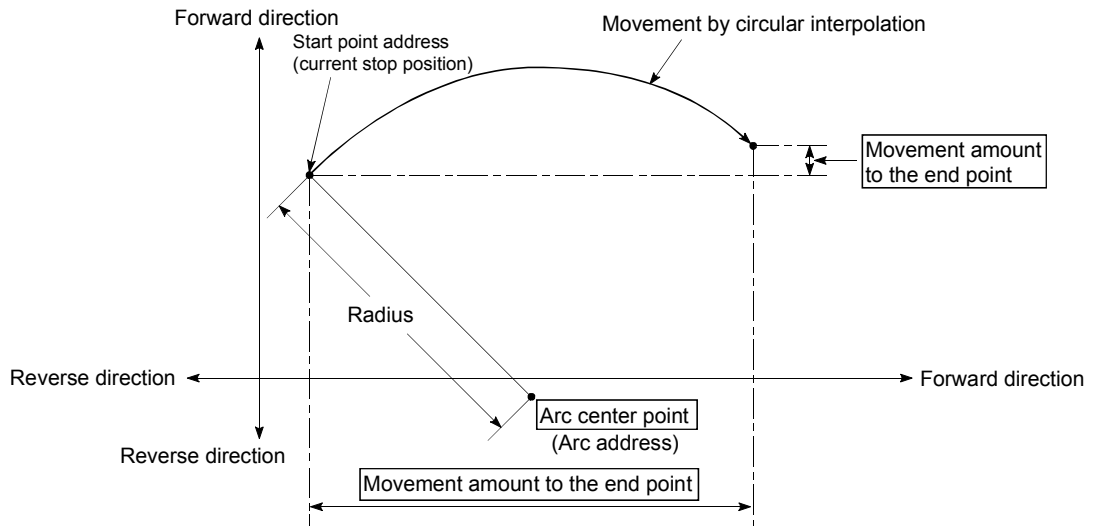

Positioning of a complete round with a radius of the distance from the start point address to the arc center point can be carried out by setting the movement amount to "0".

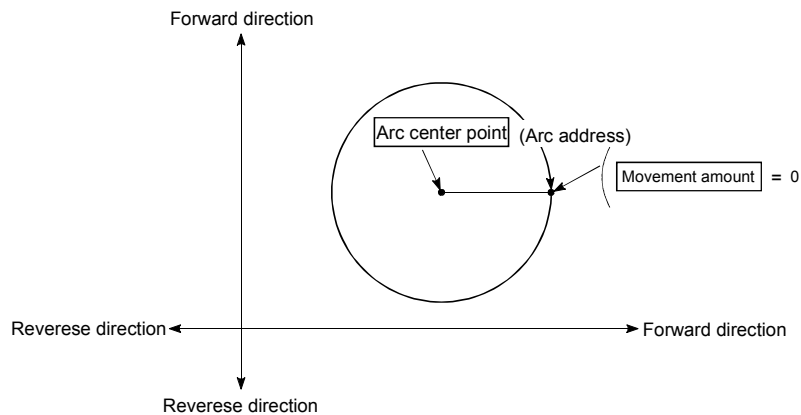

In circular interpolation control with center point designation, an angular velocity is calculated on the assumption that operation is carried out at a command speed on the arc using the radius calculated from the start point address and center point address, and the radius is compensated in proportion to the angular velocity deviated from that at the start point.

Thus, when there is a difference (error) between a radius calculated from the start point address and center point address (start point radius) and a radius calculated from the end point address and center point address (end point radius), the composite speed differs from the command speed as follows.

- \* Start point radius > End point radius: As compared with the speed without error, the speed becomes slower as end point address is reached.
- \* Start point radius < End point radius: As compared with the speed without error, the speed becomes faster as end point address is reached.

#### ■ Restrictions

- (1) 2-axis circular interpolation control cannot be set in the following cases.
  - When "degree" is set in "[Pr.1] Unit setting"
  - When the units set in "[Pr.1] Unit setting" are different for the reference axis and interpolation axis. ("mm" and "inch" combinations are possible.)
  - When "reference axis speed" is set in "[Pr.21] Interpolation speed designation method"
- (2) An error will occur and the positioning start will not be possible in the following cases. The machine will immediately stop if the error is detected during positioning control.
  - When the radius exceeds "536870912 ( $2^{29}$ )". (The maximum radius for which circular interpolation control is possible is "536870912 ( $2^{29}$ )"  
... An error "outside radius range" (error code: 544) will occur at positioning start.
  - When the start point address is the same as the center point address  
... An error "center point setting error" (error code: 527) will occur.
  - When the end point address is the same as the center point address  
... An error "center point setting error" (error code: 527) will occur.

■ Positioning data setting examples

The following table shows setting examples when "2-axis circular interpolation control with center point designation (INC right arc, INC left arc)" is set in positioning data No. 1 of axis 1. (The required values are also set in positioning data No. 1 of axis 2.)

Setting item		Axis		Setting details	
		Axis 1 (reference axis) setting example	Axis 2 (interpolation axis) setting example		
Axis 1 Positioning data No. 1	Da.1	Operation pattern	Positioning complete	–	Set "Positioning complete" assuming the next positioning data will not be executed.
	Da.2	Control method	INC right arc INC left arc	–	Set increment system, 2-axis circular interpolation control with center point designation. (Select clockwise or counterclockwise according to the control.)
	Da.3	Acceleration time No.	1	–	Designate the value set in "Pr.26 Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0	–	Designate the value set in "Pr.9 Deceleration time 0" as the deceleration time at deceleration.
	Da.5	Positioning address/movement amount	80000.0 μm	60000.0 μm	Set the movement amount. (Assuming that the "Pr.1 Unit setting" is set to "mm".)
	Da.6	Arc address	40000.0 μm	30000.0 μm	Set the center point address. (Assuming that the "Pr.1 Unit setting" is set to "mm".)
	Da.7	Command speed	6000.00 mm/min	–	Set the speed when moving to the end point address. (Designate the composite speed in "Pr.21 Interpolation speed designation method".)
	Da.8	Dwell time	500ms	–	Set the time the machine dwells after the positioning stop (position command output stop) to the output of the positioning complete signal.
	Da.9	M code	10	–	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.

<b>POINT</b>
Set a value in "Da.7 Command speed" so that the speed of each axis does not exceed the "Pr.7 Speed limit value". (The speed limit does not function for the speed calculated by the AD75 during interpolation control.)



9.2.8 Speed control

In "speed control" ("Da.2 Control method" = Forward run: speed control, Reverse run: speed control), control is carried out in the axis direction in which the positioning data has been set by continuously outputting the speed set in "Da.7 Command speed" until the input of a stop command.

The two types of speed control are "Forward run: speed control" in which the control starts in the forward run direction, and "Reverse run: speed control" in which control starts in the reverse run direction.

■ Operation chart

The following chart shows the operation timing for speed control. The "in speed control flag" (Md.40 Status: b0) is turned ON during speed control.


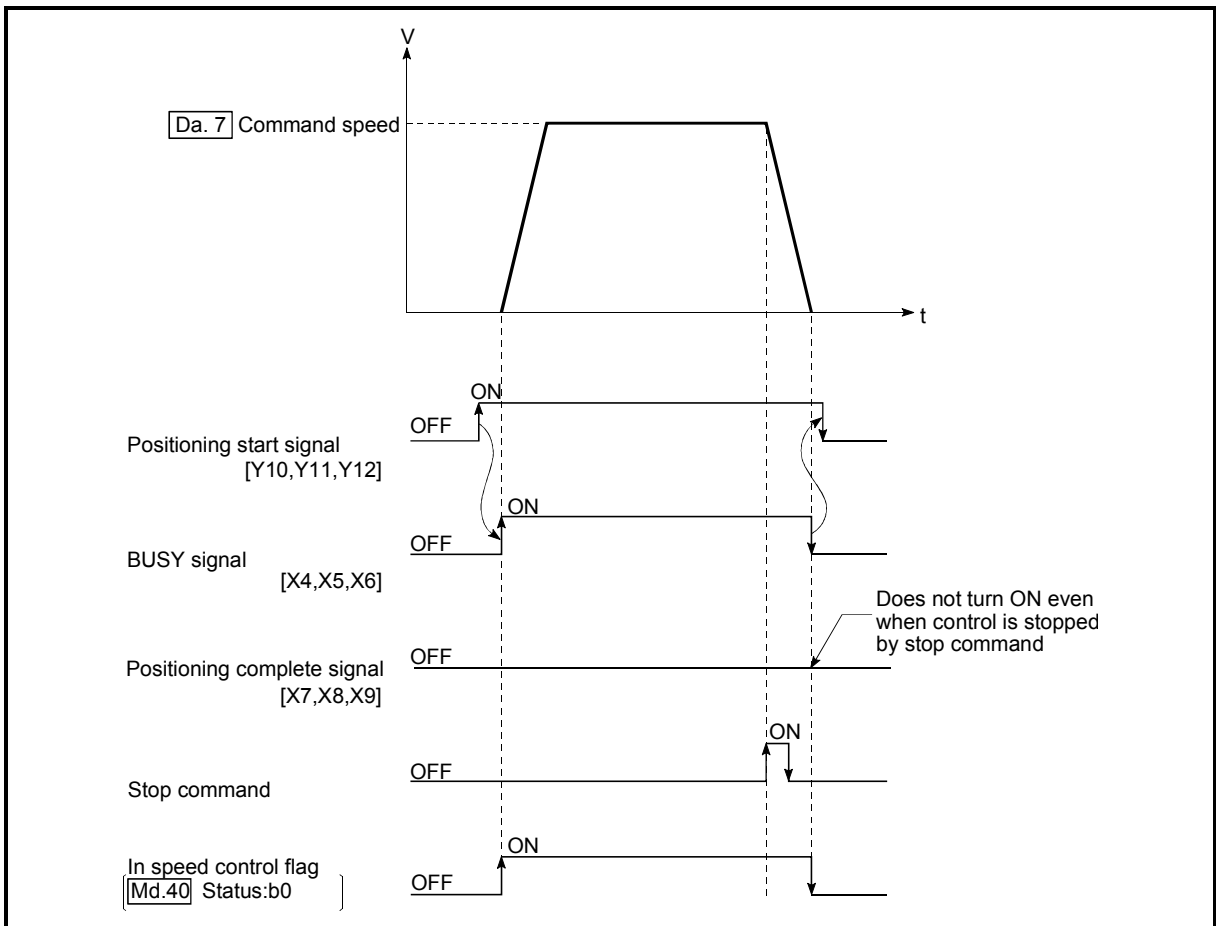


Fig. 9.9 Speed control operation timing

■ Current feed value during speed control

The following table shows the "Md.29 Current feed value" during speed control corresponding to the "Pr.22 Current feed value during speed control" settings.

"Pr.22 Current feed value during speed control" setting	Md.29 Current feed value
0: Do not update current feed value	The current feed value during speed control start is maintained.
1: Update current feed value	The current feed value is updated.
2: Zero clear current feed value	The current feed value is fixed at 0.

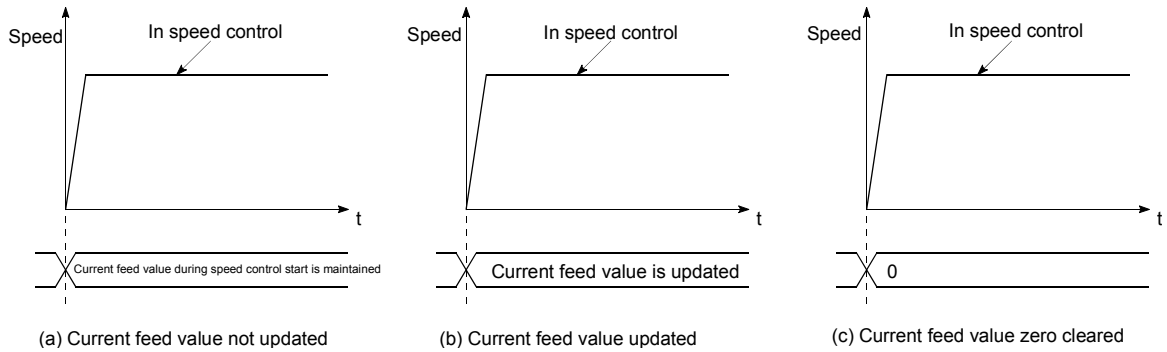

■ Restrictions

- (1) Set "Positioning complete" for "Da.1 Operation pattern." If "continuous positioning control" or "continuous path control" is selected, an error "continuous path control not possible" (error code: 516) occurs, resulting in a failure to start. (In the speed control mode, "continuous positioning control" or "continuous path control" cannot be selected.)
- (2) To use M codes, set the "WITH" mode for "Pr.19 M code ON signal output timing." If the "AFTER" mode is selected, the M codes are not output and the "M code ON" signal does not turn ON.
- (3) The software stroke limit check is not made with the "degree" unit.
- (4) When the absolute position restoration mode is the "infinite length mode", executing speed control with other than "1" set to "Pr.22 Current feed value during speed control" results in an error "control method setting error" (error code: 524).

### ■ Positioning data setting examples

The following table shows setting examples when "speed control (forward run: speed control)" is set in positioning data No. 1 of axis 1.

Setting item		Setting example	Setting details	
Positioning data No. 1	Da.1	Operation pattern	Positioning complete	Setting other than "Positioning complete" is not possible in speed control.
	Da.2	Control method	Forward run: speed control	Set speed control.
	Da.3	Acceleration time No.	1	Designate the value set in "[Pr.26] Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	Da.5	Positioning address/movement amount	–	Setting not required. (Setting value is ignored.)
	Da.6	Arc address	–	Setting not required. (Setting value is ignored.)
	Da.7	Command speed	6000.00mm/min	Set the speed to be commanded.
	Da.8	Dwell time	–	Setting not required. (Setting value is ignored.)
	Da.9	M code	10	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data. ("[Pr.19] M code ON signal output timing" setting only possible in the WITH mode.)

\* Refer to section "5.3 List of positioning data" for information on the setting details.

### 9.2.9 Speed/position changeover control

In "speed/position changeover control" ("Da.2 Control method" = Forward run: speed/position, Reverse run: speed/position), position control is carried out for the movement amount set in "Da.5 Positioning address/movement amount", in the axis direction in which the positioning data has been set. The position control is carried out by continuously outputting the speed set in "Da.7 Command speed" until the input of a stop command, and inputting a "speed/position changeover signal".

The two types of speed/position changeover control are "Forward run: speed/position" in which the control starts in the forward run direction, and "Reverse run: speed/position" in which control starts in the reverse run direction.

#### ■ Changing over from speed control to position control

- (1) The control is changed over from speed control to position control by the external signal "speed/position changeover signal".
- (2) Besides setting the positioning data, the "Cd.20 Speed/position changeover enable flag" must also be turned ON to change over from speed control to position control. (If the "Cd.20 Speed/position changeover enable flag" turns ON after the speed/position changeover signal turns ON, the control will continue as speed control without changing over to position control. Only position control will be carried out when the "Cd.20 Speed/position changeover enable flag" and speed/position changeover signal are ON at the operation start.)

#### ■ Operation chart

The following chart (Fig.9.10) shows the operation timing for speed/position changeover control. The "in speed control flag" (Md.40 Status: b0) is turned ON during speed control of speed/position changeover control.

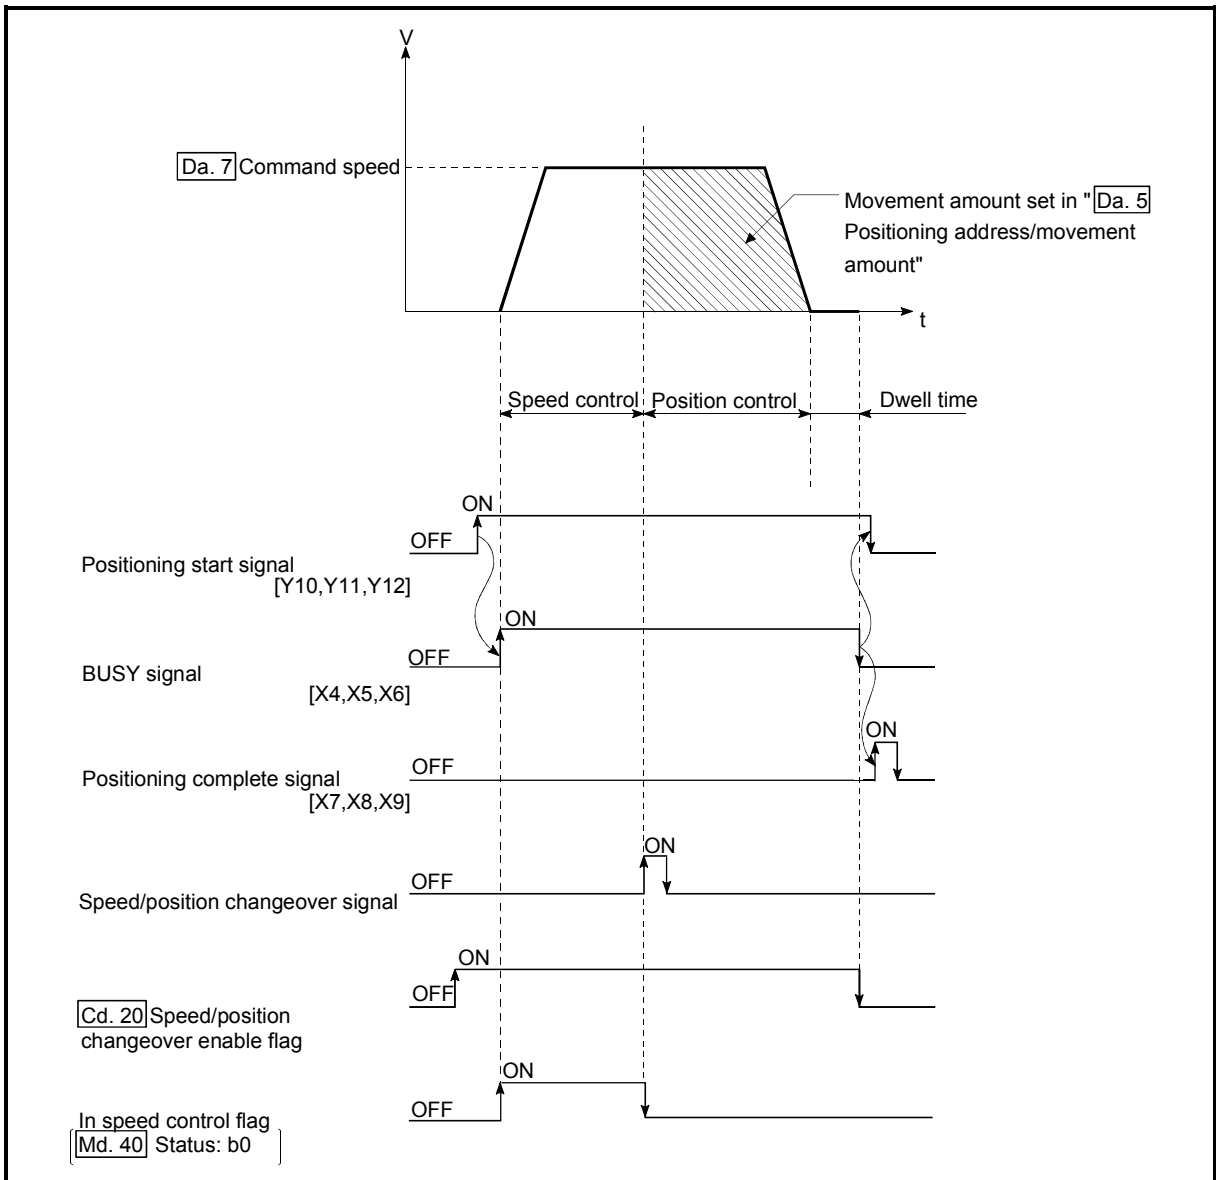


Fig. 9.10 Speed/position changeover control operation timing

■ Operation timing and processing time during speed/position changeover control

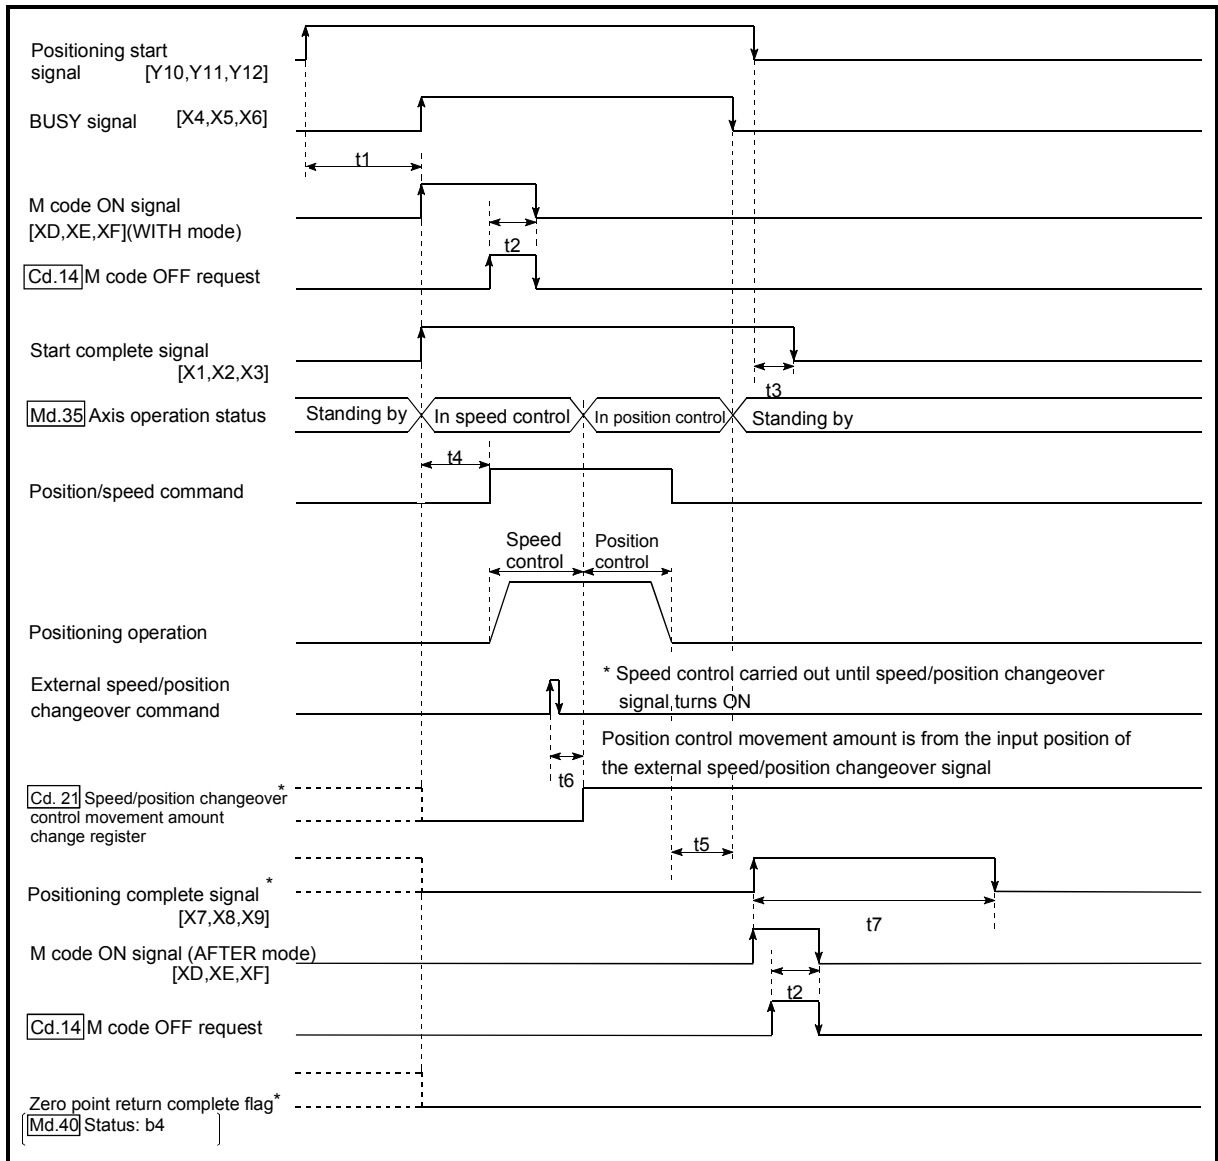


Fig. 9.11 Operation timing and processing time during speed/position changeover control

Normal timing time

Unit: ms


t1	t2	t3	t4	t5	t6	t7
5 to 15	0 to 60	0 to 3.5			1	Follows parameters

- The t1 timing time could be delayed by the following factors.
  - 1) Presence of FROM/TO command execution during start process
  - 2) Operation state of other axes
  - 3) Presence of intervention from peripheral device during start process
  - 4) Details of positioning data to be started

■ Current feed value during speed/position changeover control

The following table shows the "[Md.29] Current feed value" during speed/position changeover control corresponding to the "[Pr.22] Current feed value during speed control" settings.

"[Pr.22] Current feed value during speed control" setting	[Md.29] Current feed value
0: Do not update current feed value	The current feed value at control start is maintained during speed control, and updated from the changeover to position control.
1: Update current feed value	The current feed value is updated during speed control and position control.
2: Zero clear current feed value	The current feed value is cleared (set to "0") at control start, and updated from the changeover to position control.

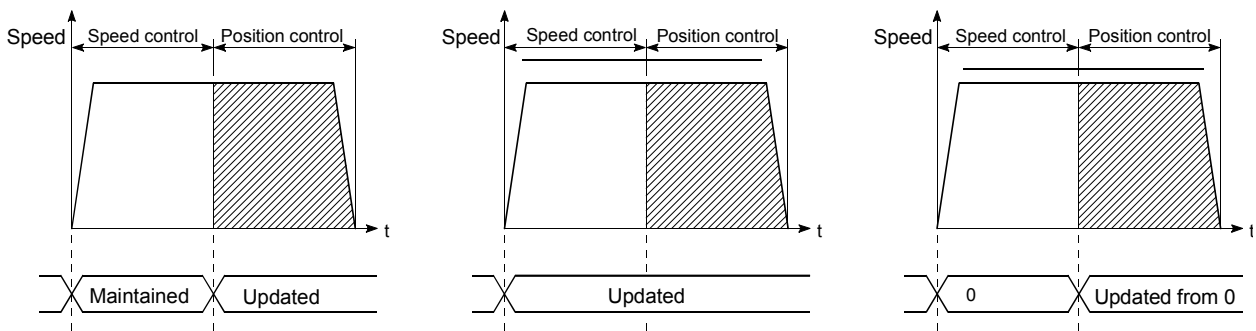


(a) Current feed value not updated

(b) Current feed value updated

(c) Current feed value zero cleared

■ Changeover time from speed control to position control

There is 1ms from the time the speed/position changeover signal is turned ON to the time the speed/position changeover latch flag ([Md.40] Status: b1) turns ON.

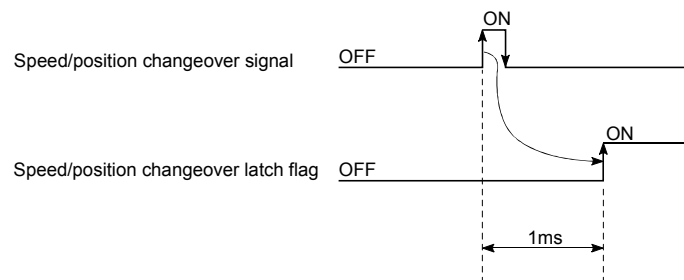

■ Changing the position control movement amount

In "speed/position changeover control", the position control movement amount can be changed during the speed control section.

- (1) The position control movement amount can be changed during the speed control section of speed/position changeover control.  
A movement amount change request will be ignored unless issued during the speed control section of the speed/position changeover control.
- (2) The "new movement amount" is stored in "[Cd.21] Speed/position changeover control movement amount change register" by the sequence program during speed control.  
This value then becomes the position control movement amount when the speed/position changeover signal turns ON.
- (3) The movement amount is stored in the "[Md.38] Speed/position changeover control positioning amount" of the axis monitor area from the point where the control changes to position control by the input of a speed/position changeover signal from an external source.

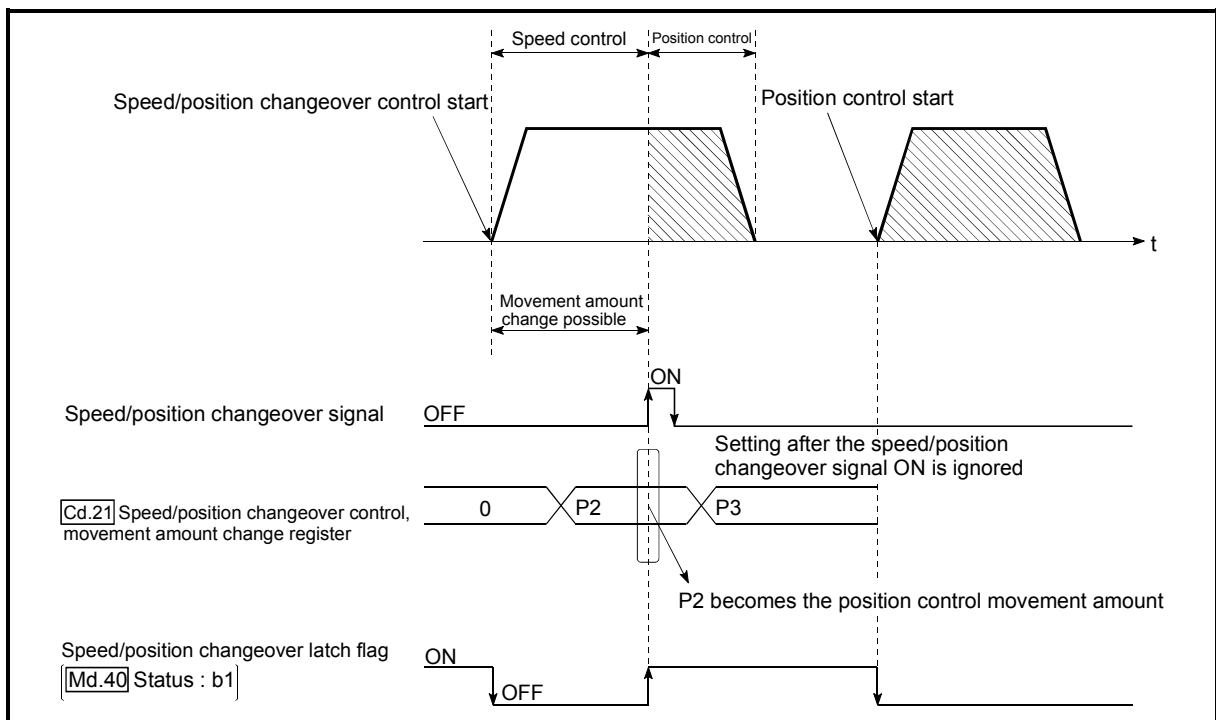


Fig. 9.12 Position control movement amount change timing

POINT
<ul style="list-style-type: none"> <li>• The machine recognizes the presence of a movement amount change request when the data is written to "[Cd.21] Speed/position changeover control movement amount change register" with the sequence program.</li> <li>• The new movement amount is validated after execution of the speed/position changeover control, before the input of the speed/position changeover signal.</li> <li>• The movement amount change can be enabled/disabled with the interlock function in position control using the "speed/position changeover latch flag" of the axis monitor area.</li> </ul>



**■ Restrictions**

- (1) If "continuous path control" is specified for "[Da.1] Operation pattern," an error "continuous path control not possible" (error code: 516) occurs, resulting in a failure to start. (In the speed or position changeover control mode, "continuous path control" cannot be set.)
- (2) If "continuous path control" is specified for "[Da.1] Operation pattern" of the positioning data immediately before, "speed/position changeover control" cannot be specified for "[Da.2] Control method" in the positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control," "speed/position changeover control" cannot be specified for positioning data No. 2.) If this setting is given, an error "continuous path control not possible" (error code: 516) occurs, resulting in deceleration and stop.
- (3) If the position control movement amount specified for "[Da.5] Positioning address/movement amount" is smaller than the deceleration distance from "[Da.7] Command speed," deceleration occurs when the speed/position changeover signal is supplied.
- (4) Turn on the speed/position changeover signal in a stable-speed area (constant-speed state). If it is turned on during acceleration, a warning "speed/position changeover signal ON during acceleration" (warning code: 508) occurs due to large variation in the accumulating pulses.
- (5) The software stroke limit range check under speed control is performed only if "1: update current feed value" is specified for "[Pr.22] Current feed value during speed control." At this time, if the movement amount exceeds the software stroke limit range during speed control, an error "start outside stroke limit +/-" (error code: 507/508) occurs at the timing of the change to position control, resulting in deceleration and stop.  
If the "degree" unit is selected, the software stroke limit range check is not performed.
- (6) Do not turn ON the speed/position changeover signal during speed change if the servomotor is used. (Turn the speed/position changeover signal ON in the stable-speed area (constant-speed state).) The actual movement amount after switching is the "set movement amount + amount of accumulated pulses." If the signal is turned on during acceleration or deceleration, there is variation in the stopping position due to a large variation in the amount of accumulated pulses. If "[Da.7] Command speed" varies even if "[Md.38] Speed/position changeover control positioning amount" is the same, the amount of accumulated pulses varies and therefore the stopping position varies.
- (7) When the absolute position restoration mode is the "infinite length mode", an error "control method setting error" (error code: 524) occurs, disabling a start.

■ Positioning data setting examples

The following table shows setting examples when "speed/position changeover control (forward run: speed/position)" is set in positioning data No. 1 of axis 1.

Setting item		Setting example	Setting details	
Positioning data No. 1	Da.1	Operation pattern	Positioning complete	Set "Positioning complete" assuming the next positioning data will not be executed. ("Continuous path control" cannot be set in "speed/position changeover control".)
	Da.2	Control method	Forward run: speed/position	Set speed/position changeover control.
	Da.3	Acceleration time No.	1	Designate the value set in "Pr.26 Acceleration time 1" as the acceleration time at start.
	Da.4	Deceleration time No.	0	Designate the value set in "Pr.9 Deceleration time 0" as the deceleration time at deceleration.
	Da.5	Positioning address/movement amount	10000.0μm	Set the movement amount after the changeover to position control. (Assuming that the "Pr.1 Unit setting" is set to "mm".)
	Da.6	Arc address	–	Setting not required. (Setting value is ignored.)
	Da.7	Command speed	6000.00mm/min	Set the speed to be controlled.
	Da.8	Dwell time	500ms	Set a time from the positioning stop (position/speed command stop) by position control until the positioning complete signal is output. (When the system is stopped by speed control, ignore the setting value.)
	Da.9	M code	10	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.

9.2.10 Current value change

When the current value is changed to a new value, control is carried out in which the "[Md.29] Current feed value" of the stopped axis is changed to a random address set by the user. (The "[Md.30] Machine feed value" is not changed when the current value is changed.)

The two methods for changing the current value are shown below.


- (1) Current value change using the positioning data
- (2) Current value change using the start No. (No. 9003) for a current value change

The current value change using method [1] is used during continuous positioning of multiple blocks, etc.

(1) Current value change using the positioning data

■ Operation chart

The following chart shows the operation timing for a current value change. The "[Md.29] Current feed value" is changed to the value set in "[Da.5] Positioning address/movement amount" when the positioning start signal turns ON.

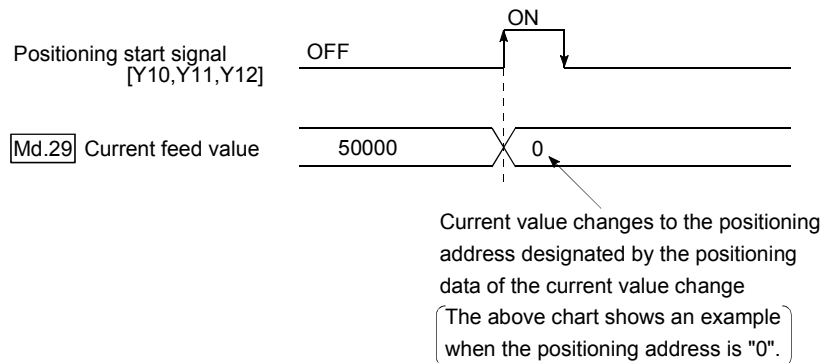

■ Restrictions

- (1) An error "Current value change not possible" (error code: 515) will occur and the operation cannot start if "continuous path control" is set in "[Da.1] Operation pattern". ("Continuous path control" cannot be set in current value change.)
- (2) "Current value change" cannot be set in "[Da.2] Control method" of the positioning data when "continuous path control" has been set in "[Da.1] Operation pattern" of the immediately prior positioning data. (For example, if the operation pattern of positioning data No. 1 is "continuous path control", "Current value change" cannot be set in positioning data No. 2.) An error "Current value change not possible" (error code: 515) will occur and the machine will carry out a deceleration stop if this type of setting is carried out.
- (3) An error "Outside current value change range" (error code: 514) will occur and the operation cannot start if "degree" is set in "[Pr.1] Unit setting" and the value set in "[Da.5] Positioning address/movement amount" is outside the setting range (0 to 359.99999 [degree]).
- (4) If the value set in "[Da.5] Positioning address/movement amount" is outside the scope of software stroke limit ([Pr.13], [Pr.14]), the actual value will be modified. However, the error "Starting outside of stroke limit +/-" (error code:507/508) and it will not start up.
- (5) When the absolute position restoration mode is the "infinite length mode", an error "control method setting error" (error code: 524) occurs, disabling a start.

■ Positioning data setting examples

The following table shows setting examples when "Current value change" is set in positioning data No. 1 of axis 1.


Setting item		Setting example	Setting details
Positioning data No. 1	[Da.1] Operation pattern	Positioning complete	Set "Positioning complete" assuming the next positioning data will not be executed. ("Continuous path control" cannot be set in current value change.)
	[Da.2] Control method	Current value change	Set the current value change.
	[Da.3] Acceleration time No.	1	Designate the value set in "[Pr.26] Acceleration time 1" as the acceleration time at start.
	[Da.4] Deceleration time No.	0	Designate the value set in "[Pr.9] Deceleration time 0" as the deceleration time at deceleration.
	[Da.5] Positioning address/movement amount	10000.0μm	Set the movement amount after the changeover to position control. (Assuming that the "[Pr.1] Unit setting" is set to "mm".)
	[Da.6] Arc address	-	Setting not required. (Setting value is ignored.)
	[Da.7] Command speed	6000.00mm/min	Set the speed to be controlled.
	[Da.8] Dwell time	-	Setting not required. (Setting value is ignored.)
	[Da.9] M code	10	Set this when other auxiliary operation commands are issued in combination with the No. 1 positioning data.

\* Refer to section "5.3 List of positioning data" for information on the setting details.

## (2) Current value change using the start No. (No. 9003) for a current value change

### ■ Operation chart

The current value is changed by setting the new current value in the new current value buffer memory "Cd.15 New current value", setting "9003" in the "Cd.11 Positioning start No.", and turning ON the positioning start signal.

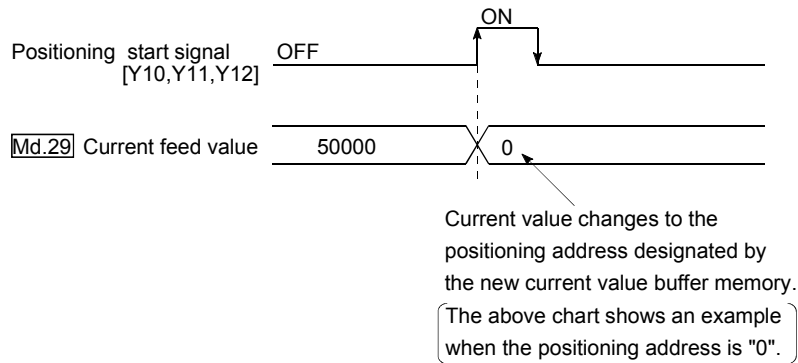


### ■ Restrictions

- (1) An error "Outside current value change range" (error code: 514) will occur if the designated value is outside the setting range when "degree" is set in "Pr.1 Unit setting".
- (2) An error will not occur even if the designated value is outside the software stroke limit range.  
 However, an error "Start outside stroke limit +/-" (error code: 507/508) will occur at the positioning start.
- (3) The current value cannot be changed during stop commands and while the M code ON signal is ON.
- (4) When the absolute position restoration mode is the "infinite length mode", an error "outside start number range" (error code: 543) occurs at a positioning start.

### ■ Current value change procedure

The following shows the procedure for changing the current value to a new value.

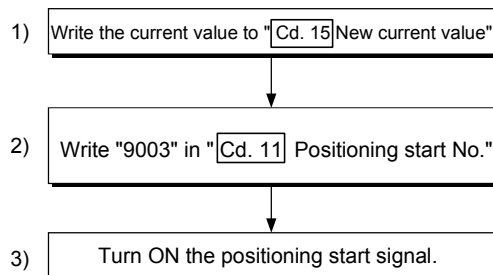

■ Setting method for the current value change function

The following shows an example of a sequence program and data setting to change the current value to a new value with the positioning start signal. (The "Md.29" Current feed value is changed to "5000.0μm" in the example shown.)

- (1) Set the following data.  
(Set with the sequence program shown in (3), while referring to the start time chart shown in (2).)

Setting item	Setting value	Setting details	Buffer memory address			
			Axis 1	Axis 2	Axis 3	
Cd.15	New current value	50000	Set the new "Md.29" Current feed value".	1154 1155	1204 1205	1254 1255
Cd.11	Positioning start No.	9003	Set the start No. "9003" for the current value change.	1150	1200	1250

\* Refer to section "5.7 List of control data" for details on the setting details.

- (2) The following shows a start time chart.


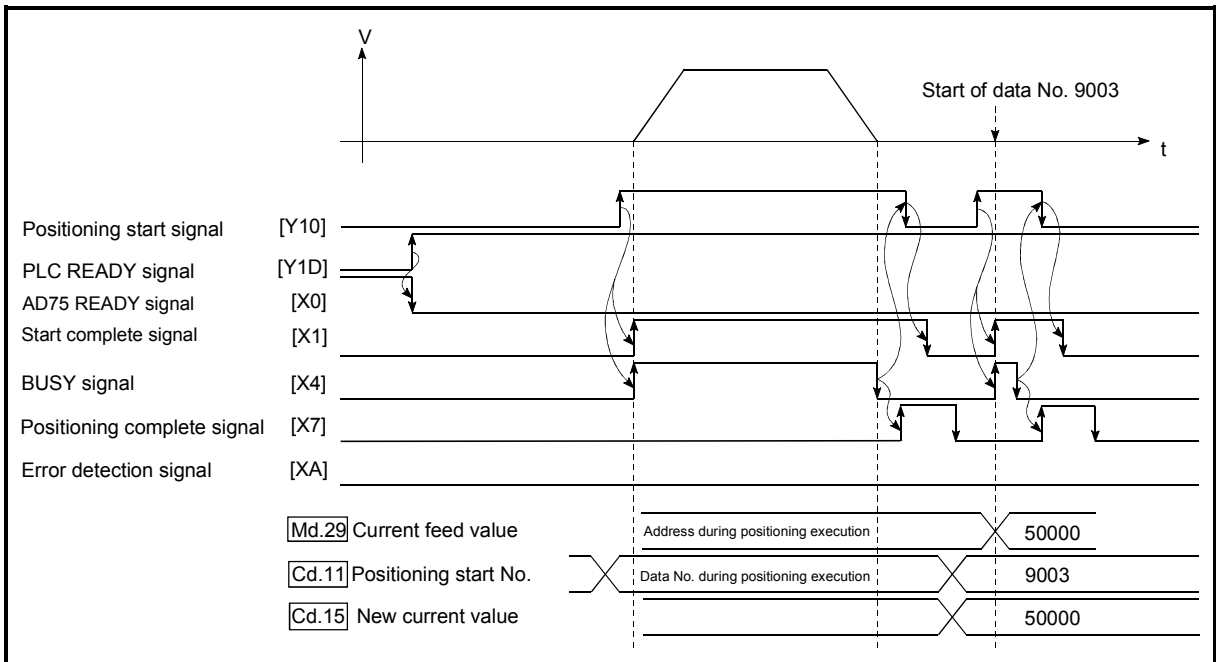


Fig. 9.13 Current value change using the start No. (No. 9003) for a current value change

(3) Add the following sequence program to the control program, and write it to the programmable controller CPU.

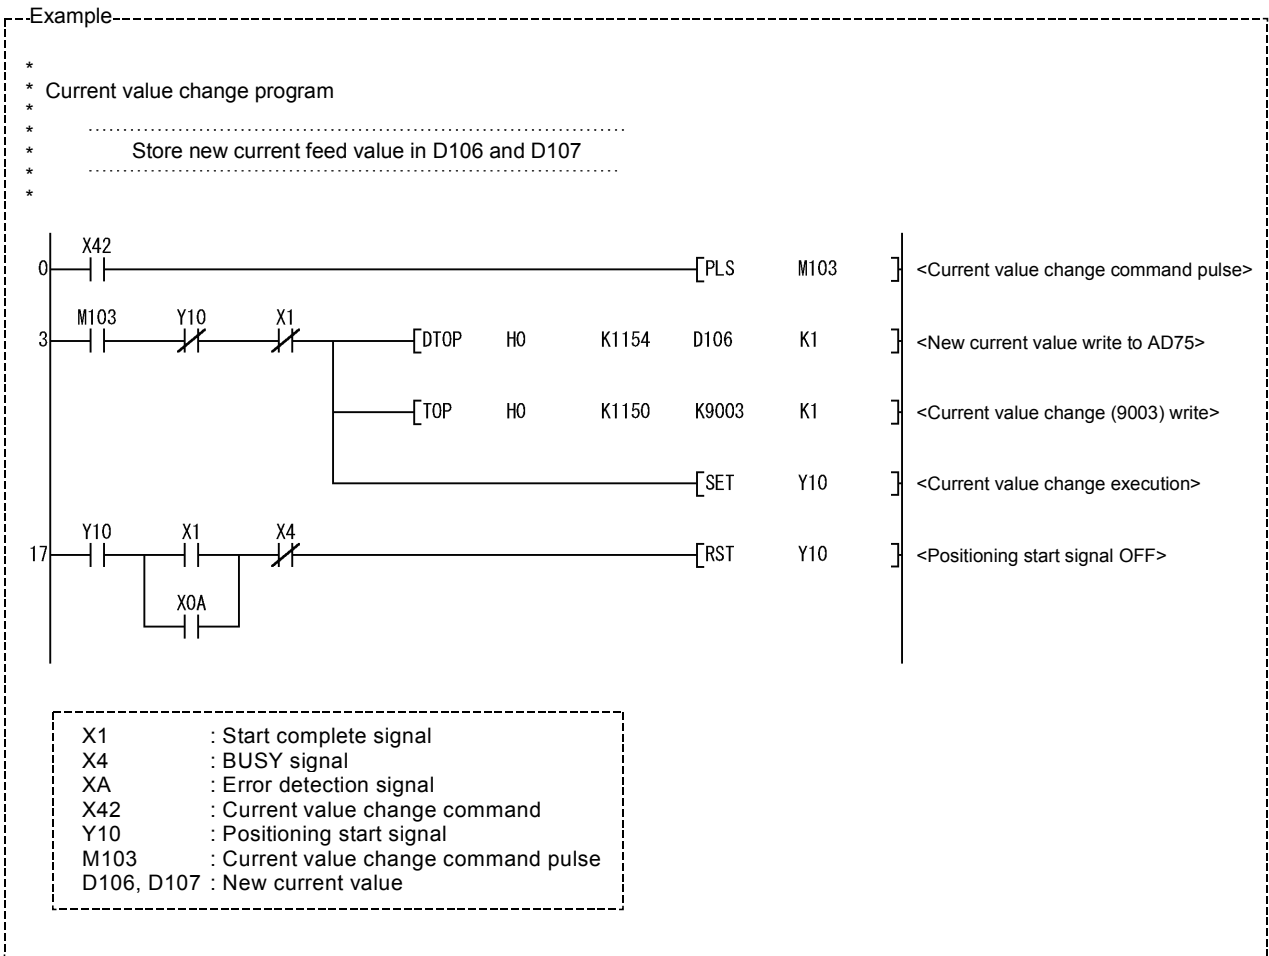

### 9.2.11 JUMP command

The JUMP command is used to control the operation so it jumps to a positioning data No. set in the positioning data during "continuous positioning control" or "continuous path control".

JUMP commands include the following two types of JUMP.

- (1) Unconditional JUMP  
When no execution conditions are set for the JUMP command
- (2) Conditional JUMP  
When execution conditions are set for the JUMP command  
(The conditions are set in the "condition data" used with "advanced positioning control".)

Using the JUMP command enables repeating of the same positioning control, or selection of positioning data by the execution conditions during "continuous positioning control" or "continuous path control".

#### ■ Operation

- (1) Unconditional JUMP  
The JUMP command is unconditionally executed. The operation jumps to the positioning data No. set in "[Da.8] Dwell time".
- (2) Conditional JUMP
  - If the JUMP command execution conditions set in "[Da.9] M code" have been established, the JUMP command is executed and the operation jumps to the positioning data No. set in "[Da.8] Dwell time".
  - If the JUMP command execution conditions set in "[Da.9] M code" have not been established, the JUMP command is ignored and the next positioning data No. is executed.

#### ■ Restrictions

- (1) When using a conditional JUMP command, establish the JUMP command execution conditions by the 4th positioning data No. before the JUMP command positioning data No.  
If the JUMP command execution conditions are not established by the time the 4th positioning control is carried out before the JUMP command positioning data No., the operation will be processed as an operation without established JUMP command execution conditions.  
(During execution of continuous path control/continuous positioning control, the AD75 calculates the positioning data of the positioning data No. four items ahead of the current positioning data.)
- (2) Set JUMP commands in positioning data No. of "continuous positioning control" or "continuous path" operation patterns.  
JUMP commands cannot be set in the positioning data No. of a "Positioning complete" operation pattern.
- (3) Positioning control such as loops cannot be executed by conditional JUMP commands alone until the conditions have been established.  
To the JUMP instruction destination, specify the positioning data whose control method is other than the JUMP instruction."



■ Positioning data setting example

The following table shows setting examples when "JUMP command" is set in positioning data No. 1 of axis 1.

Setting item		Setting example	Setting details
Positioning data No. 1	Da.1	Operation pattern	Continuous path control Set "continuous positioning control" or "continuous path control". ("Positioning complete" cannot be set with JUMP commands.)
	Da.2	Control method	JUMP command Set the JUMP command.
	Da.3	Acceleration time No.	– Setting not required. (Setting value is ignored.)
	Da.4	Deceleration time No.	– Setting not required. (Setting value is ignored.)
	Da.5	Positioning address/movement amount	– Setting not required. (Setting value is ignored.)
	Da.6	Arc address	– Setting not required. (Setting value is ignored.)
	Da.7	Command speed	– Setting not required. (Setting value is ignored.)
	Da.8	Dwell time	500 Set the positioning data No. 1 to 600 for the JUMP destination. (The positioning data No. of the JUMP command cannot be set.)
	Da.9	M code	10 Set the JUMP command execution conditions with the condition data No. 0 : Unconditional JUMP 1 to 10 : Condition data No. ("Simultaneous start" condition data cannot be set.)

\* Refer to section "5.3 List of positioning data" for information on the setting details.



---

# CHAPTER 10

---

## ADVANCED POSITIONING CONTROL

The details and usage of advanced positioning control (control functions using the "start block data") are explained in this chapter.

Advanced positioning control is used to carry out applied control using the "positioning data". Examples of advanced control are using conditional judgment to control "positioning data" set with the main positioning control, or simultaneously starting "positioning data" for several different axes.

Read the execution procedures and settings for each control, and set as required.

10.1	Outline of advanced positioning control .....	10- 2
10.1.1	Data required for advanced positioning control .....	10- 3
10.1.2	"Start block data" and "condition data" configuration.....	10- 4
10.2	Advanced positioning control execution procedure .....	10- 6
10.3	Setting the start block data .....	10- 7
10.3.1	Relation between various controls and start block data .....	10- 7
10.3.2	Block start (normal start) .....	10- 8
10.3.3	Condition start .....	10- 10
10.3.4	Wait start .....	10- 11
10.3.5	Simultaneous start .....	10- 12
10.3.6	Stop .....	10- 13
10.3.7	Repeated start (FOR loop) .....	10- 14
10.3.8	Repeated start (FOR condition) .....	10- 15
10.3.9	Restrictions when using the NEXT start.....	10- 16
10.4	Setting the condition data .....	10- 17
10.4.1	Relation between various controls and the condition data .....	10- 17
10.4.2	Condition data setting examples .....	10- 19
10.5	Start program for advanced positioning control.....	10- 20
10.5.1	Starting advanced positioning control .....	10- 20
10.5.2	Example of a start program for advanced positioning control .....	10- 21

10.1 Outline of advanced positioning control

In "advanced positioning control" the execution order and execution conditions of the "positioning data" are set to carry out more applied positioning. (The execution order and execution conditions are set in the "start block data" and "condition data".)  
 The following applied positioning controls can be carried out with "advanced positioning control".

Advanced positioning control	Details
Block* start (Normal start)	With one start, executes the positioning data in a random block with the set order.
Condition start	Carries out condition judgment set in the "condition data" for the designated positioning data, and then executes the "start block data". When the condition is established, the "start block data" is executed. When not established, that "start block data" is ignored, and the next point's "start block data" is executed.
Wait start	Carries out condition judgment set in the "condition data" for the designated positioning data, and then executes the "start block data". When the condition is established, the "start block data" is executed. When not established, stops the control until the condition is established. (Waits.)
Simultaneous start	Simultaneously executes the positioning data having the No. for the axis designated with the "condition data". (Outputs position/speed commands at the same timing.)
Stop	Stops the positioning operation.
Repeated start (FOR loop)	Repeats the program from the "start block data" set with the "FOR loop" to the "start block data" set in "NEXT" for the designated No. of times.
Repeated start (FOR condition)	Repeats the program from the "start block data" set with the "FOR condition" to the "start block data" set in "NEXT" until the conditions set in the "condition data" are established.

■ Advanced positioning control auxiliary functions

"Advanced positioning control" uses the "positioning data" set with the "main positioning control". Refer to "3.3.4 Combination of AD75 main functions and auxiliary functions" for details on auxiliary functions that can be combined with the main positioning control.

■ Advanced positioning control from peripheral devices

"Advanced positioning control" (start of the "start block data") can be executed from the AD75 software package test mode.  
 Refer to the AD75 Software Package Operating Manual for details on starting of the "start block data" from the AD75 software package.

**REMARK**

Block \*:

"1 block" is defined as all the data continuing from the positioning data in which "continuous positioning control" or "continuous path control" is set in the operation pattern (Da.1) to the positioning data in which "independent positioning control (Positioning complete)" is set.

10.1.1 Data required for advanced positioning control

"Advanced positioning control" is executed by setting the required items in the "start block data" and "condition data", then starting that "start block data". Judgment about whether execution is possible, etc., is carried out at execution using the "condition data" designated in the "start block data".

"Start block data" can be set for each No. from 7000 to 7010 (called "block Nos."), and up to 50 points can be set for each axis. (This data is controlled with Nos. called "points" to distinguish it from the positioning data. For example, the 1st start block data item is called the "1st point start block data" or "point No. 1 start block data".)

"Condition data" can be set for each No. from 7000 to 7010 (called "block No."), and up to 10 data items can be set for each block No.

The "start block data" and "condition data" are set as 1 set for each block No.


The following table shows an outline of the "start block data" and "condition data" stored in the AD75.

Setting item		Setting details
Start block data	Da.10	Shape
	Da.11	Start data No.
	Da.12	Special start command
	Da.13	Parameter


Setting item		Setting details
Condition data	Da.14	Condition target
	Da.15	Condition operator
	Da.16	Address
	Da.17	Parameter 1
	Da.18	Parameter 2

10.1.2 "Start block data" and "condition data" configuration

The "start block data" and "condition data" corresponding to "block No. 7000" can be stored in the buffer memory. (The following drawing shows an example for axis 1.)

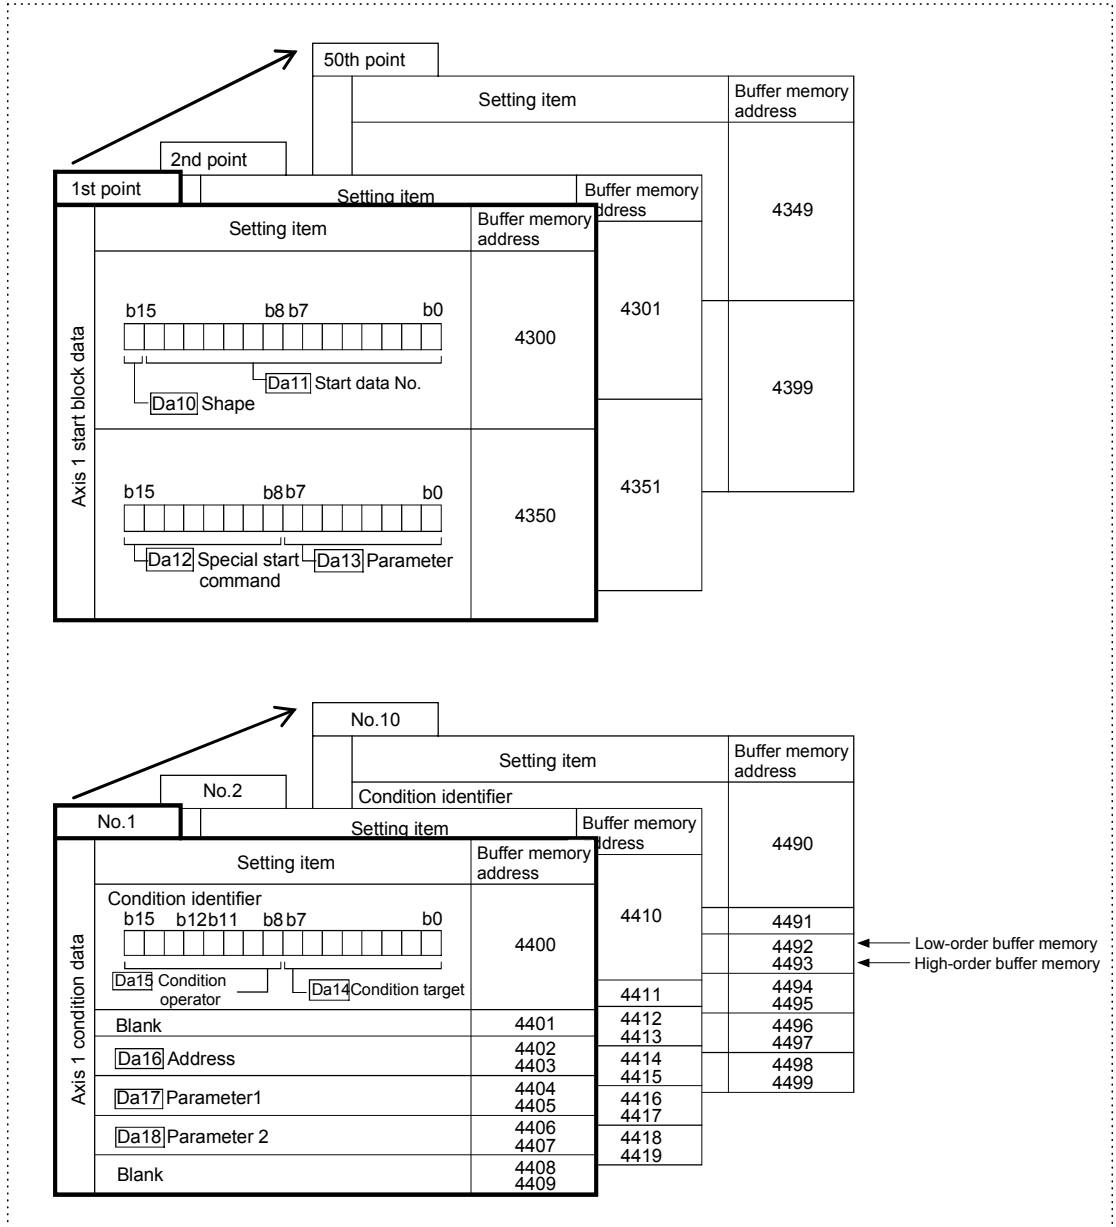


(Same for axis 2 and axis 3.)



\* Set in the AD75 with a sequence program or the AD75 software package.


Set in AD75 the "start block data" and "condition data" corresponding to the following "block Nos. 7001 to 7010" using the AD75 software package. (The following drawing shows an example for axis 1.)

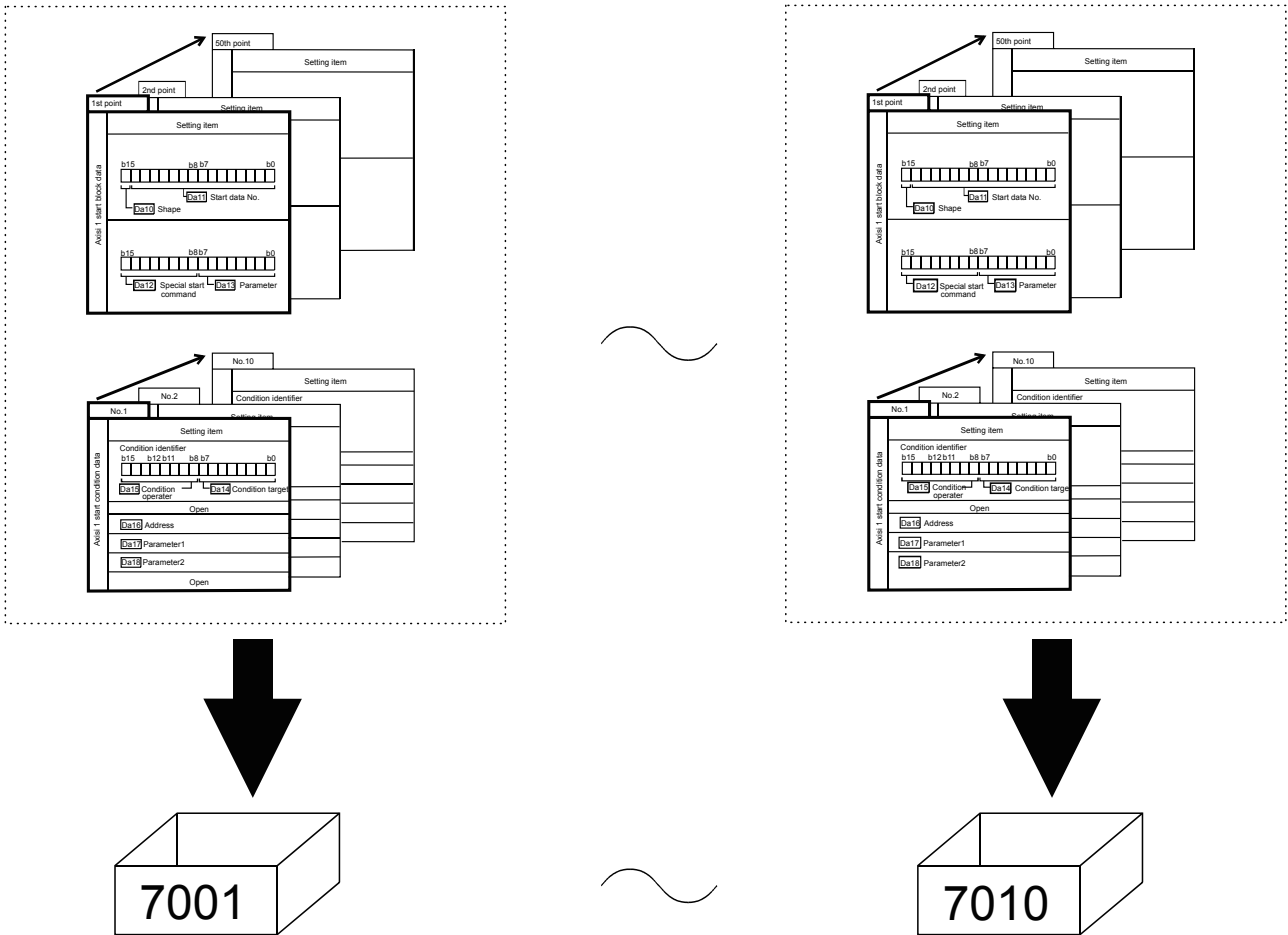

\* Setting is only possible when the AD75 software package is used.  
(Same for axis 2 and axis 3.)

10.2 Advanced positioning control execution procedure

Advanced positioning control is carried out using the following procedure.

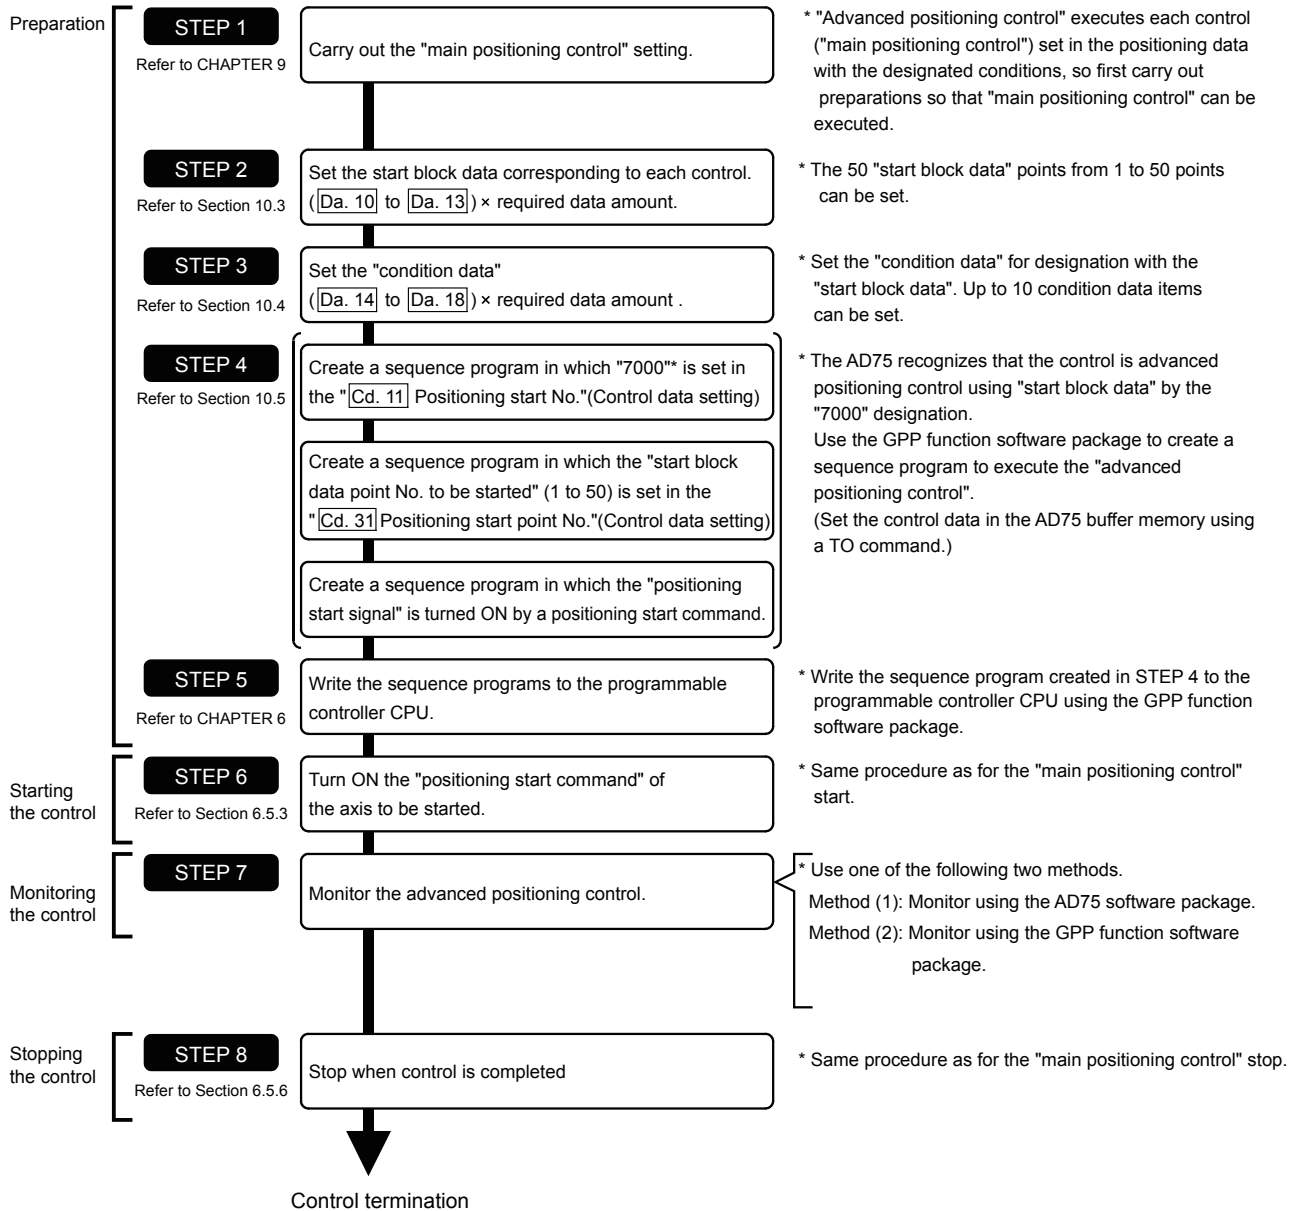

**REMARK**

- \* (1) One set of "start block data (50 points)" and "condition data (10 items) corresponding to "7000" is set with a sequence program.
- (2) Eleven sets of data from "7000" to "7010" can be set when the AD75 software package is used. If the AD75 software package is used to set the "start block data" and "condition data" corresponding to "7001" to "7010" and write the data to the AD75, "7001" to "7010" can be set in "Cd.11 Positioning start No." in STEP 4.



10.3 Setting the start block data

10.3.1 Relation between various controls and start block data

The "start block data" must be set to carry out "advanced positioning control". The setting requirements and details of each "start block data" item to be set differ according to the "[Da.12] Special start command" setting.

The following shows the "start block data" setting items corresponding to various control methods. The operation details of each control type are explained starting in section 10.3.2. Also refer to section "10.4 Setting the condition data" for details on "condition data" with which control execution is judged.

(The "start block data" settings in this chapter are assumed to be carried out using the AD75 software package.)

Start block data setting items		Advanced positioning control	Block start (Normal start)	Condition start	Wait start	Simultaneous start	Stop	Repeated start (FOR loop)	Repeated start (FOR condition)	NEXT start *
[Da.10]	Shape	0 : End	◎	◎	◎	◎	◎	×	×	◎
		1 : Continue	◎	◎	◎	◎	◎	◎	◎	◎
[Da.11]	Start data No.	1 to 600								
[Da.12]	Special start command	0	1	2	3	4	5	6	7	
[Da.13]	Parameter	–	Condition data No.			–	No. of repetitions	Condition data No.	–	

- ◎ : One of the two setting items must be set.
- : Set when required (Set to " – " when not used.)
- × : Setting not possible
- : Setting not required (Setting value will be ignored. Use the initial value or a value within the setting range.)

\* The "NEXT start" command is used in combination with "repeated start (FOR loop)" and "repeated start (FOR condition)". Control using only the "NEXT start" will not be carried out.

**REMARK**

It is recommended that the "start block data" be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

10.3.2 Block start (normal start)

In a "block start (normal start)", the positioning data groups of a block are continuously executed in a set sequence starting from the positioning data set in "[Da.11] Start data No." by one start.

Section [2] shows a control example where the "start block data" and "positioning data" are set as shown in section [1].

(1) Setting examples

(a) Start block data setting example

Axis 1 start block data	[Da.10] Shape	[Da.11] Start data No.	[Da.12] Special start command	[Da.13] Parameter
1st point	1: Continue	1	0: Normal start	—
2nd point	1: Continue	2	0: Normal start	—
3rd point	1: Continue	5	0: Normal start	—
4th point	1: Continue	10	0: Normal start	—
5th point	0: End	15	0: Normal start	—
•				
•				

(b) Positioning data setting example

Axis 1 positioning data No.	[Da.1] Operation pattern	
1	00: Positioning complete	} 1 block *
2	11: Continuous path control	
3	01: Continuous positioning control	
4	00: Positioning complete	
5	11: Continuous path control	} 1 block
6	00: Positioning complete	
•		
10	00: Positioning complete	
•		
15	00: Positioning complete	
•		

**REMARK**

Block \* :

"1 block" is defined as all the data continuing from the positioning data in which "continuous positioning control" or "continuous path control" is set in the operation pattern ([Da.1]) to the positioning data in which "independent positioning control (Positioning complete)" is set.

(2) Control examples

The following shows the control executed when the "start block data" of the 1st point of axis 1 is set as shown in section (1) and started.

<1> The positioning data is executed in the following order before stopping.  
 Axis 1 positioning data No. 1 → 2 → 3 → 4 → 5 → 6 → 10 → 15.

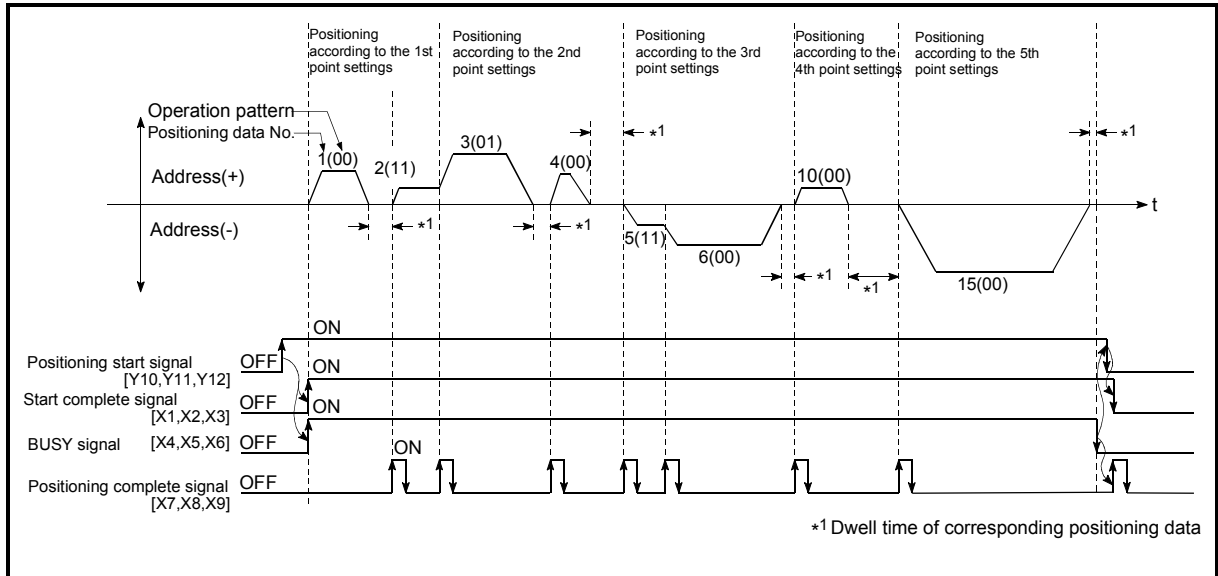


Fig. 10.1 Block start control example

10.3.3 Condition start

In a "condition start", the "condition data" conditional judgment designated in "[Da.13] Parameter" is carried out for the positioning data set in "[Da.11] Start data No.". If the conditions have been established, the "start block data" set in "1: condition start" is executed. If the conditions have not been established, that "start block data" will be ignored, and the "start block data" of the next point will be executed.

Section (2) shows a control example where the "start block data" and "positioning data" are set as shown in section (1).

(1) Setting examples

(a) Start block data setting example

Axis 1 start block data	[Da.10] Shape	[Da.11] Start data No.	[Da.12] Special start command	[Da.13] Parameter
1st point	1: Continue	1	1: Condition start	1
2nd point	1: Continue	10	1: Condition start	2
3rd point	0: End	50	0: Normal start	-
•				
•				

\* The "condition data Nos." have been set in "[Da.13] Parameter".

(b) Positioning data setting example

Axis 1 positioning data No.	[Da.1] Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	11: Continuous path control
12	00: Positioning complete
•	
50	00: Positioning complete
•	

(2) Control examples

The following shows the control executed when the "start block data" of the 1st point of axis 1 is set as shown in section (1) and started.

- <1> The conditional judgment set in "condition data No. 1" is carried out before execution of the axis 1 "positioning data No. 1".
  - Conditions established → Execute positioning data No. 1, 2, and 3 → Go to <2>.
  - Conditions not established → Go to <2>.
- <2> The conditional judgment set in "condition data No. 2" is carried out before execution of the axis 1 "positioning data No. 10".
  - Conditions established → Execute positioning data No. 10, 11, and 12 → Go to <3>.
  - Conditions not established → Go to <3>.
- <3> Execute axis 1 "positioning data No. 50" and stop the control.

10.3.4 Wait start

In a "wait start", the "condition data" conditional judgment designated in "[Da.13] Parameter" is carried out for the positioning data set in "[Da.11] Start data No.". If the conditions have been established, the "start block data" is executed. If the conditions have not been established, the control stops (waits) until the conditions are established.

Section (2) shows a control example where the "start block data" and "positioning data" are set as shown in section (1).

(1) Setting examples

(a) Start block data setting example

Axis 1 start block data	[Da.10] Shape	[Da.11] Start data No.	[Da.12] Special start command	[Da.13] Parameter
1st point	1: Continue	1	2: Wait start	3
2nd point	1: Continue	10	0: Normal start	–
3rd point	0: End	50	0: Normal start	–
•				
•				

\* The "condition data Nos." have been set in "[Da.13] Parameter".

(b) Positioning data setting example

Axis 1 positioning data No.	[Da.1] Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	11: Continuous path control
12	00: Positioning complete
•	
50	00: Positioning complete
•	

(2) Control examples

The following shows the control executed when the "start block data" of the 1st point of axis 1 is set as shown in section (1) and started.

- <1> The conditional judgment set in "condition data No. 3" is carried out before execution of the axis 1 "positioning data No. 1".
  - Conditions established → Execute positioning data No. 1, 2, and 3 → Go to <2>.
  - Conditions not established → Control stops (waits) until conditions are established → Go to <1>.
- <2> Execute the axis 1 "positioning data No. 10, 11, 12, and 50" and stop the control.

10.3.5 Simultaneous start

In a "simultaneous start", the positioning data\*1 set in the "[Da.11] Start data No." and positioning data of other axes set in the "condition data" are simultaneously executed (Outputs position/speed commands at the same timing).

(The "condition data" is designated with "[Da.13] Parameter".)

Section (2) shows a control example where the "start block data" and "positioning data" are set as shown in section (1).

\*1: The setting value for the start axis (where positioning started) must be "0". If a value other than "0" is set, the positioning data set in "[Da.17] Parameter 1" and "[Da.18] Parameter 2" are executed; the data set in "[Da.11] Start data No." is not executed.

(1) Setting examples

(a) Start block data setting example

Axis 1 start block data	[Da.10] Shape	[Da.11] Start data No.	[Da.12] Special start command	[Da.13] Parameter
1st point	1: Continue	1	3: Simultaneous start	4
2nd point	1: Continue	10	3: Simultaneous start	5
3rd point	0: End	50	3: Simultaneous start	6
•				
•				

\* It is assumed that the "axis 2 positioning data" for simultaneous starting is set in the "condition data" designated with "[Da.13] Parameter".

(b) Positioning data setting example

Axis 1 position-ing data No.	[Da.1] Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	11: Continuous path control
12	00: Positioning complete
•	
50	00: Positioning complete
•	

(2) Control examples

The following shows the control executed when the "start block data" of the 1st point of axis 1 is set as shown in section (1) and started.

- <1> Simultaneously start the axis 1 "positioning data No. 1" and axis 2 positioning data set in "condition data No. 4". After the execution of axis 1 "positioning data No. 1, 2, and 3" is completed, go to <2>.
- <2> Simultaneously start the axis 1 "positioning data No. 10" and axis 2 positioning data set in "condition data No. 5".
  - Standing by after completion of axis 2 positioning data simultaneously started in <1>. → Go to <3>.
  - Executing other axis positioning data simultaneously started in <1>. → "Error".
- <3> Simultaneously start the axis 1 "positioning data No. 50" and the axis 2 positioning data set in "condition data No. 6" after the completion of the execution of axis 1 "positioning data No. 10, 11, and 12".
  - Standing by after completion of axis 2 positioning data simultaneously started in <2>. → Go to <4>.
  - Executing axis 2 positioning data simultaneously started in <2>. → "Error".
- <4> After the execution of the axis 1 "positioning data No. 50" is completed, stop the control.

10.3.6 Stop

In a "stop", the control is stopped with the "start block data" set in "4: stop". The control after the point in which the "stop" is set can be restarted by issuing a "[Cd.13] Restart command".

Section (2) shows a control example where the "start block data" and "positioning data" are set as shown in section (1).

(1) Setting examples

(a) Start block data setting example

Axis 1 start block data	[Da.10] Shape	[Da.11] Start data No.	[Da.12] Special start command	[Da.13] Parameter
1st point	1: Continue	1	0: Normal start	–
2nd point	1: Continue	10	4: Stop	–
3rd point	0: End	50	0: Normal start	–
•				
•				

(b) Positioning data setting example

Axis 1 position- ing data No.	[Da.1] Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	11: Continuous path control
12	00: Positioning complete
•	
50	00: Positioning complete
•	

(2) Control examples

The following shows the control executed when the "start block data" of the 1st point of axis 1 is set as shown in section (1) and started.

- <1> Execute the axis 1 "positioning data No. 1, 2, and 3" and stop the control.
- <2> After executing a "restart", execute the axis 1 "positioning data No. 10, 11, 12, and 50", and stop the control.

10.3.7 Repeated start (FOR loop)

In a "repeated start (FOR loop)", the data between the "start block data" in which "5: FOR loop" is set in "[Da.12] Special start command" and the "start block data" in which "7: NEXT start" is set in "[Da.12] Special start command" is repeatedly executed for the No. of times set in "[Da.13] Parameter". An endless loop will result if the No. of repetitions is set to "0", and the data between "5: FOR loop" and "7: NEXT start" will be repeated until the control is stopped by a "stop command".  
 (The No. of repetitions is set in "[Da.13] Parameter" of the "start block data" in which "5: FOR loop" is set in "[Da.12] Special start command".)

Section (2) shows a control example where the "start block data" and "positioning data" are set as shown in section (1).

(1) Setting examples

(a) Start block data setting example

Axis 1 start block data	[Da.10] Shape	[Da.11] Start data No.	[Da.12] Special start command	[Da.13] Parameter
1st point	1: Continue	1	5: FOR loop	2
2nd point	1: Continue	10	0: Normal start	-
3rd point	0: End	50	7: NEXT start	-
•				
•				

\* The "condition data Nos." have been set in "[Da.13] Parameter".

(b) Positioning data setting example

Axis 1 positioning data No.	[Da.1] Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	00: Positioning complete
•	
50	01: Continuous positioning control
51	00: Positioning complete
•	

(2) Control examples

The following shows the control executed when the "start block data" of the 1st point of axis 1 is set as shown in section (1) and started.

- <1> Execute the axis 1 "positioning data No. 1, 2, 3, 10, 11, 50, and 51".
- <2> Return to the axis 1 "1st point start block data". Again execute the axis 1 "positioning data No. 1, 2, 3, 10, 12, and 50", and then stop the control. (Repeat for the No. of times set in "[Da.13].")



10.3.8 Repeated start (FOR condition)

In a "repeated start (FOR condition)", the data between the "start block data" in which "6: FOR condition" is set in "[Da.12] Special start command" and the "start block data" in which "7: NEXT start" is set in "[Da.12] Special start command" is repeatedly executed until the establishment of the conditions set in the "condition data". The condition is evaluated when "start block data" was switched to the "7: NEXT start" point (before executing positioning of the NEXT start point). (The "condition data" designation is set in "[Da.13] Parameter" of the "start block data" in which "6: FOR condition" is set in "[Da.12] Special start command".)

Section (2) shows a control example where the "start block data" and "positioning data" are set as shown in section (1).

(1) Setting examples

(a) Start block data setting example

Axis 1 start block data	[Da.10] Shape	[Da.11] Start data No.	[Da.12] Special start command	[Da.13] Parameter
1st point	1: Continue	1	6: FOR condition	5
2nd point	1: Continue	10	0: Normal start	—
3rd point	0: End	50	7: NEXT start	—
•				
•				

\* The "condition data Nos." have been set in "[Da.13] Parameter".

(b) Positioning data setting example

Axis 1 position- ing data No.	[Da.1] Operation pattern
1	01: Continuous positioning control
2	01: Continuous positioning control
3	00: Positioning complete
•	
10	11: Continuous path control
11	00: Positioning complete
•	
50	01: Continuous positioning control
51	00: Positioning complete
•	

(2) Control examples

The following shows the control executed when the "start block data" of the 1st point of axis 1 is set as shown in section (1) and started.

<1> Execute axis 1 "positioning data No. 1, 2, 3, 10, 11".

<2> Evaluate the condition set in "condition data No. 5" for the axis 1.\*1

→ Condition is not met → Execute "positioning data No. 50, 51", and go to <1>.

→ Condition is met → Execute "positioning data No. 50, 51", and finish positioning.

\*1: Conditional judgment is carried out as soon as switching to NEXT start point (before positioning of NEXT start point).

10.3.9 Restrictions when using the NEXT start

The "NEXT start" is a command indicating the end of the repetitions when executing section "10.3.7 Repeated start (FOR loop)" and section "10.3.8 Repeated start (FOR condition)".

The following shows the restrictions when setting "7: NEXT start" in the "start block data".

- (1) The processing when "7: NEXT start" is set before execution of "5: FOR loop" or "6: FOR condition" is the same as that for a "0: normal start".
- (2) Repeated processing will not be carried out if there is no "7: NEXT start" command after the "5: FOR loop" or "6: FOR condition" command. (Note that an "error" will not occur.)
- (3) Nesting is not possible between "5: FOR loop" and "7: NEXT start", or between "6: FOR condition" and "7: NEXT start". A warning "FOR to NEXT nesting structure" (warning code: 506) will occur if nesting is attempted.

[Operating examples without nesting structure]

Start block data	Da.12 Special start command
1st point	Normal start
2nd point	FOR
3rd point	Normal start
4th point	NEXT
5th point	Normal start
6th point	Normal start
7th point	FOR
8th point	Normal start
9th point	NEXT
•	
•	

[Operating examples with nesting structure]

Start block data	Da.12 Special start command
1st point	Normal start
2nd point	FOR
3rd point	Normal start
4th point	FOR
5th point	Normal start
6th point	Normal start
7th point	NEXT
8th point	Normal start
9th point	NEXT
•	
•	

A warning will occur when starting the 4th point "FOR".  
 The JUMP destination of the 7th point "NEXT" is the 4th point. The 9th point "NEXT" is processed as normal start.

10.4 Setting the condition data

10.4.1 Relation between various controls and the condition data

"Condition data" is set in the following cases.

- (1) When setting conditions during execution of section "9.2.11 JUMP command" (main positioning control)
- (2) When setting conditions during execution of "advanced positioning control"

The "condition data" to be set includes the 5 setting items from [Da.14] to [Da.18], but the setting requirements and details differ according to the control methods and setting conditions.

The following shows the "condition data" "[Da.14] Condition target" corresponding to the different types of control.

(The "condition data" settings in this chapter are assumed to be carried out using the AD75 software package.)

Control type [Da.14] setting item	Advanced positioning control				Main positioning control
	Block start	Wait start	Simultaneous start	Repeated start (For condition)	JUMP command
01H: Device X	◎	◎	×	◎	◎
02H: Device Y	◎	◎	×	◎	◎
03H: Buffer memory (1 word)	◎	◎	×	◎	◎
04H: Buffer memory (2 words)	◎	◎	×	◎	◎
05H: Positioning data No.	×	×	◎	×	×

◎ : One of the setting items must be set.  
 × : Setting not possible

**REMARK**

It is recommended that the "condition data" be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

The setting requirements and details of the following "condition data" [Da.15] to [Da.18] setting items differ according to the "[Da.14] Condition target" setting. The following shows the [Da.15] to [Da.18] setting items corresponding to the "[Da.14] Condition target".

Other setting item [Da.14] setting item	[Da.15] Condition operator	[Da.16] Address	[Da.17] Parameter 1		[Da.18] Parameter 2	
01H: Device X	07H : DEV=ON	-	0H to FH (bit No.)		-	
02H: Device Y	08H : DEV=OFF		10H to 1FH (bit No.)			
03H: Buffer memory (1 word) <sup>*1</sup>	01H : **=P1 02H : **≠P1	Buffer memory address	P1 (numeric value)		P2 (numeric value) (Set only when [Da.15] is [05H] or [06H].)	
04H: Buffer memory (2 words) <sup>*1</sup>	03H : **≤P1 04H : **≥P1 05H : P1≤**≤P2 06H : **≤P1, P2≤**					
05H: Positioning data No. <sup>*2</sup>	09H : Axis 1 designation 0AH : Axis 2 designation 0BH : Axis 1 and axis 2 designation 0CH : Axis 3 designation	-	Low-order 16 bits	Axis 1 positioning data No.	Low-order 16 bits	Axis 3 positioning data No.
	0DH : Axis 1 and axis 3 designation 0EH : Axis 2 and axis 3 designation		High-order 16 bits	Axis 2 positioning data No.	High-order 16 bits	-

- : Setting not required (Setting value will be ignored. Use the initial value or a value within the setting range.)


\*\* : Value stored in buffer memory designated in [Da.16].

\*1: Signed values are used for the condition evaluation (≤ or ≥).

\*2: The setting value for the start axis (where positioning started) must be "0". If a value other than "0" is set, the positioning data set in "[Da.17] Parameter 1" and "[Da.18] Parameter 2" are executed; the data set in "[Da.11] Start data No." is not executed.

**REMARK**

The "PLC CPU memo area" can be designated as the buffer memory address to be designated in "[Da.16]". (Refer to section "7.1.1 Configuration and roles of AD75 memory".)

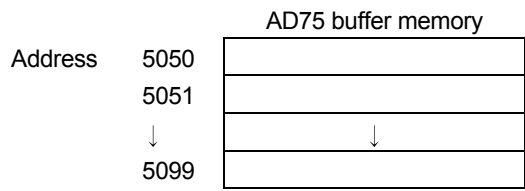

## 10.4.2 Condition data setting examples

The following shows setting examples for "condition data".

## (1) Setting the device ON/OFF as a condition

[Condition] Device "X0" (=AD75 READY) is ON

Da.14 Condition target	Da.15 Condition operator	Da.16 Address	Da.17 Parameter 1	Da.18 Parameter 2
01H: Device X	07H: DEV=ON	—	0	—

## (2) Setting the numeric value stored in the "buffer memory" as a condition

[Condition]

The value stored in buffer memory addresses "800, 801" (= "Md.29" Current feed value") is "1000" or larger.

Da.14 Condition target	Da.15 Condition operator	Da.16 Address	Da.17 Parameter 1	Da.18 Parameter 2
04H: Buffer memory (2 words)	03H: * * ≤ P1	800	1000	—

## (3) Designating the axis and positioning data No. to be simultaneously started in "simultaneous start"

[Condition]

Simultaneously starting "axis 2 positioning data No.3".

Da.14 Condition target	Da.15 Condition operator	Da.16 Address	Da.17 Parameter 1	Da.18 Parameter 2
05H: Positioning data No.	0AH: Axis 2 designation	—	High-order 16 bits "0003H" *1	—

\*1: The setting value for the start axis (where positioning started) must be "0000H".

10.5 Start program for advanced positioning control

10.5.1 Starting advanced positioning control

To execute advanced positioning control, a sequence program must be created to start the control in the same manner as for main positioning control.

The following shows the procedure for starting the "1st point start block data" (regarded as block No. 7000) set in axis 1.

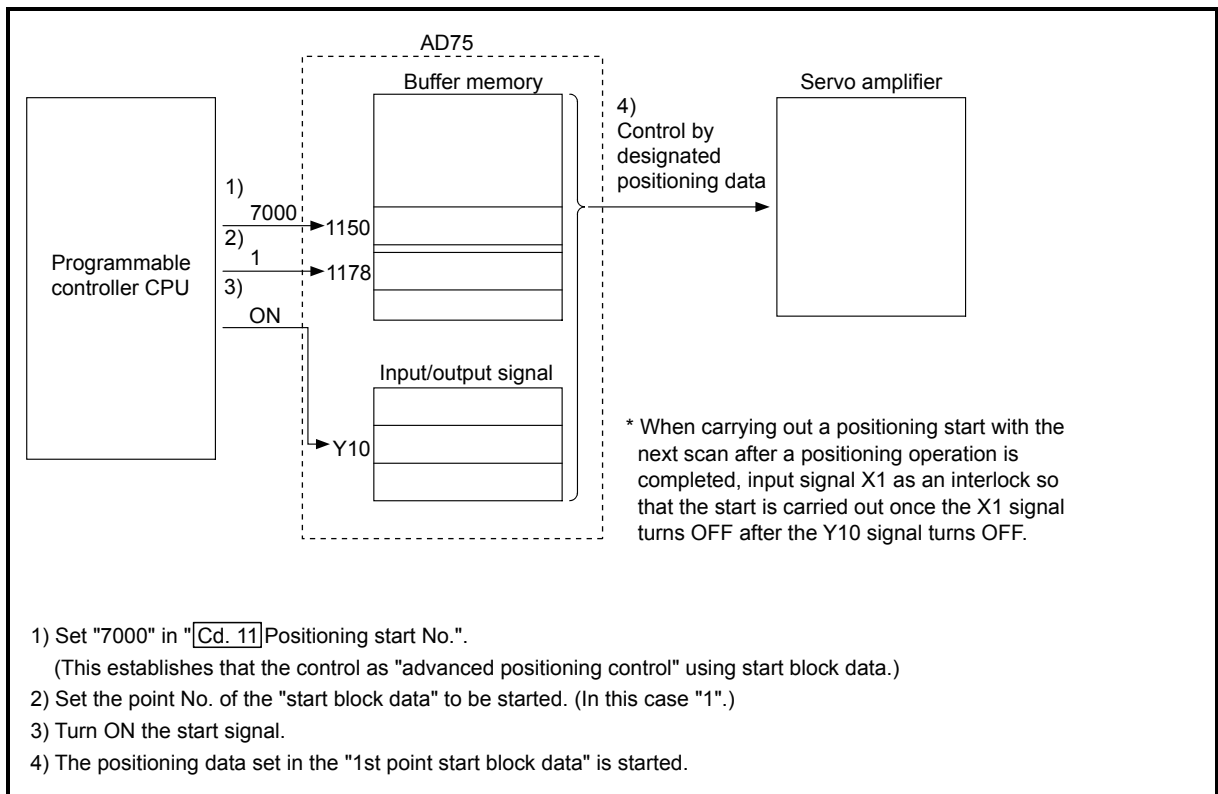


Fig. 10.2 Advanced positioning control start procedure

10.5.2 Example of a start program for advanced positioning control

The following shows an example of a start program for advanced positioning control in which the 1st point "start block data" of axis 1 is started. (The block No. is regarded as "7000".)

■ Control data that require setting

The following control data must be set to execute advanced positioning control. The setting is carried out using a sequence program.

Setting item	Setting value	Setting details	Buffer memory address			
			Axis 1	Axis 2	Axis 3	
Cd.11	Positioning start No.	7000	Set "7000" to indicate control using "start block data". Note that "7000" to "7010" can be set when setting the "7001" to "7010" data using the AD75 software package.	1150	1200	1250
Cd.31	Positioning starting point No.	1	Set the point No. of the "start block data" to be started.	1178	1228	1278

\* Refer to section "5.7 List of control data" for details on the setting details.

■ Start conditions

The following conditions must be fulfilled when starting the control. The required conditions must also be integrated into the sequence program, and configured so the control does not start unless the conditions are fulfilled.

Signal name	Signal state	Device				
		Axis 1	Axis 2	Axis 3		
Interface signal	All axes servo ON signal	ON	Servo operation possible			Y15
	PLC READY signal	ON	Programmable controller CPU preparation completed			Y1D
	AD75 READY signal	OFF	AD75 preparation completed			X0
	Axis stop signal	OFF	Axis stop signal is OFF			Y13 Y14 Y1C
	Start complete signal	OFF	Start complete signal is OFF			X1 X2 X3
	BUSY signal	OFF	BUSY signal is OFF			X4 X5 X6
	Error detection signal	OFF	There is no error			XA XB XC
External signal	M code ON signal	OFF	M code ON signal is OFF			XD XE XF
	Stop signal	OFF	Stop signal is OFF			–
	Upper limit (FLS)	ON	Within limit range			–
	Lower limit (RLS)	ON	Within limit range			–
Monitor data	Servo ON	ON	Servo ON is ON			Md.116 Servo status:b1

■ Start time chart

The following chart shows a time chart in which the positioning data 1, 2, 10, 11, and 12 of axis 1 are continuously executed as an example.

(a) Start block data setting example

Axis 1 start block data	Da.10 Shape	Da.11 Start data No.	Da.12 Special start command	Da.13 Parameter
1st point	1: Continue	1	0: Normal start	—
2nd point	0: End	10	0: Normal start	—
•				
•				

(b) Positioning data setting example

Axis 1 positioning data No.	Da.1 Operation pattern
1	01: Continuous positioning control
2	00: Positioning complete
•	
10	11: Continuous path control
11	11: Continuous path control
12	00: Positioning complete
•	

(c) Start time chart

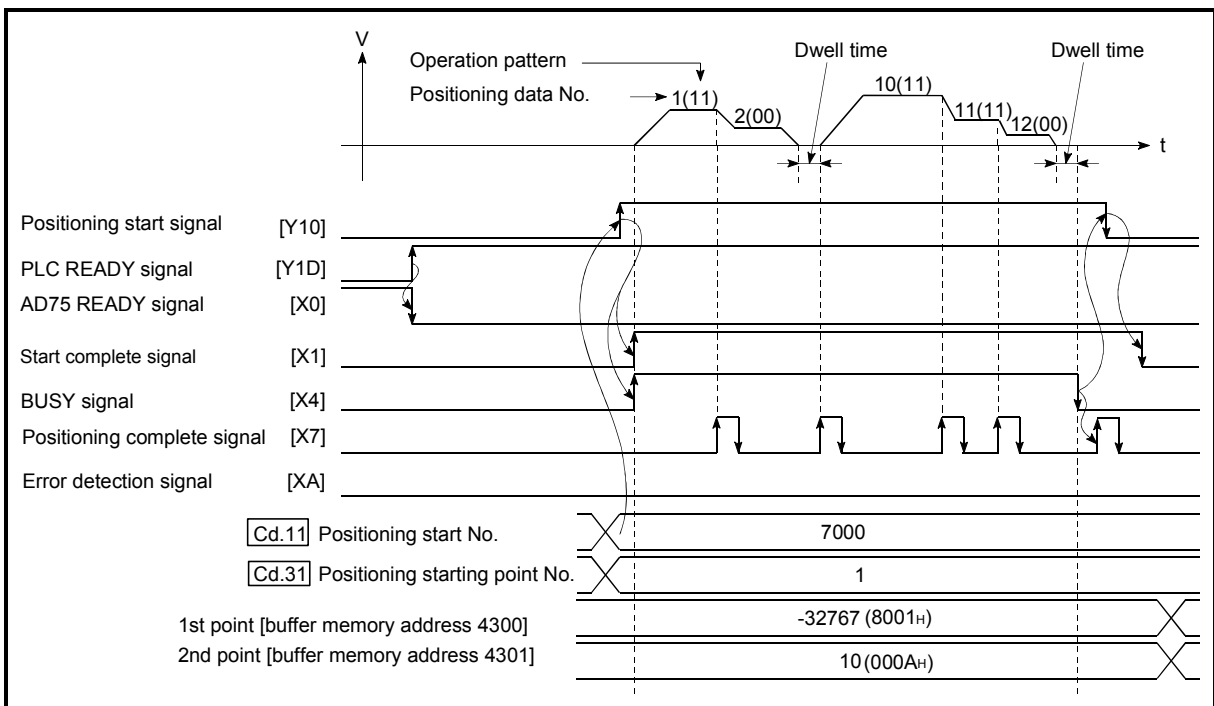



Fig. 10.3 Start time chart for advanced positioning control (block start)



■ Creating the program

Example

Set the start block data beforehand.

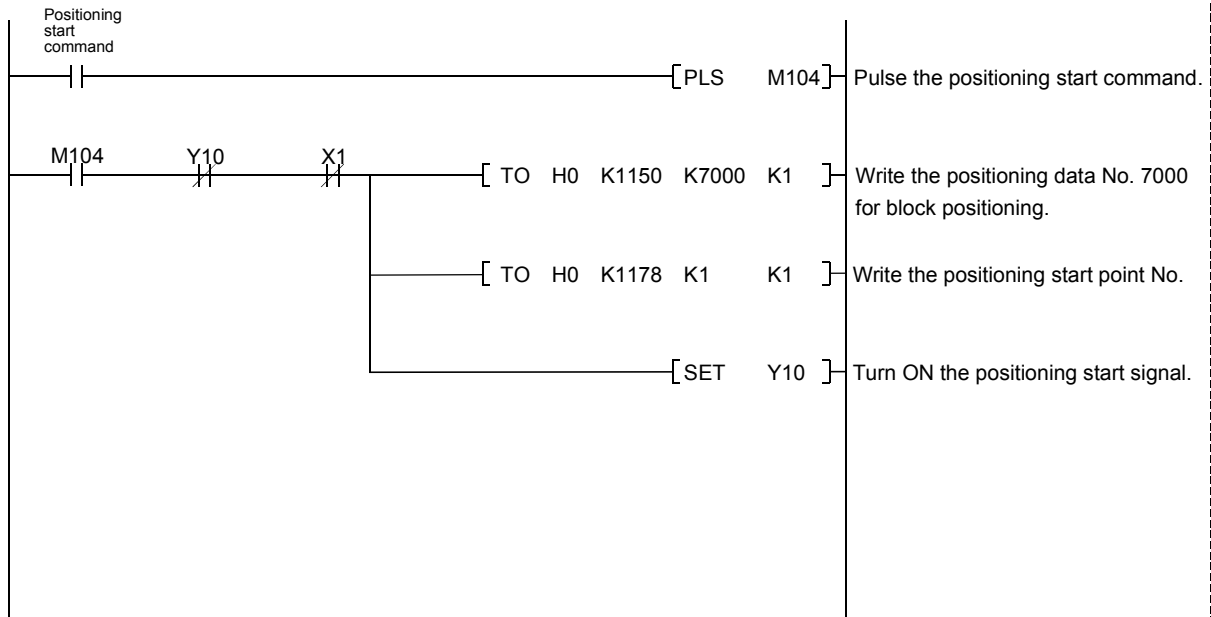

Y10 : Positioning start signal  
 X1 : Start complete signal  
 M104 : Positioning start command pulse



---

# CHAPTER 11

---

## MANUAL CONTROL

The details and usage of manual control are explained in this chapter.

In manual control, pulse output commands are issued during a JOG operation executed by the turning ON of the JOG START signal, or from a manual pulse generator connected to the AD75.

Manual control using a sequence program from the programmable controller CPU is explained in this chapter.

Refer to the AD75 Software Package Operating Manual for an explanation of manual control (JOG operation, manual pulse generator operation) using the AD75 software package.

11.1	Outline of manual control .....	11- 2
11.1.1	Two manual control methods .....	11- 2
11.2	JOG operation.....	11- 4
11.2.1	Outline of JOG operation .....	11- 4
11.2.2	JOG operation execution procedure .....	11- 7
11.2.3	Setting the required parameters for JOG operation .....	11- 8
11.2.4	Creating start programs for JOG operation.....	11- 10
11.2.5	JOG operation example.....	11- 13
11.3	Manual pulse generator operation .....	11- 17
11.3.1	Outline of manual pulse generator operation.....	11- 17
11.3.2	Manual pulse generator operation execution procedure .....	11- 21
11.3.3	Setting the required parameters for manual pulse generator operation .....	11- 22
11.3.4	Creating a program to enable/disable the manual pulse generator operation .....	11- 23

11.1 Outline of manual control

11.1.1 Two manual control methods

"Manual control" refers to control in which positioning data is not used, and a positioning operation is carried out in response to signal input from an external source. The two types of this "manual control" are explained below.

(1) JOG operation

"JOG operation" is a control method in which the machine is moved by only a movement amount (movement continues while the JOG START signal is ON). This operation is used to move the workpiece in the direction in which the limit signal is ON, when the operation is stopped by turning the limit signal OFF to confirm the positioning system connection and obtain the positioning data address (refer to section "12.7.4 Teaching function").

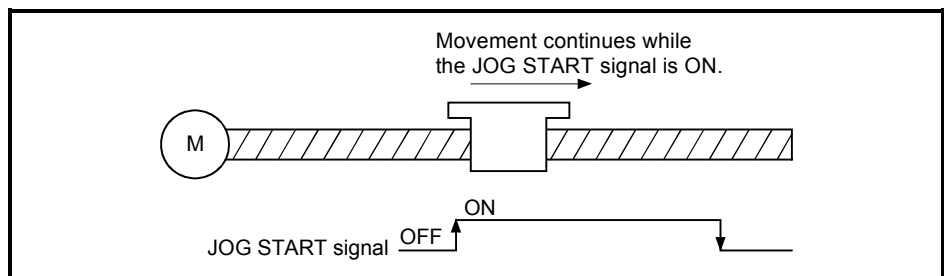


Fig. 11.1 JOG operation

(2) Manual pulse generator operation

"Manual pulse generator operation" is a control method in which positioning is carried out in response to the No. of pulses input from a manual pulse generator. This operation is used for manual fine adjustment, etc., when carrying out accurate positioning to obtain the positioning address.

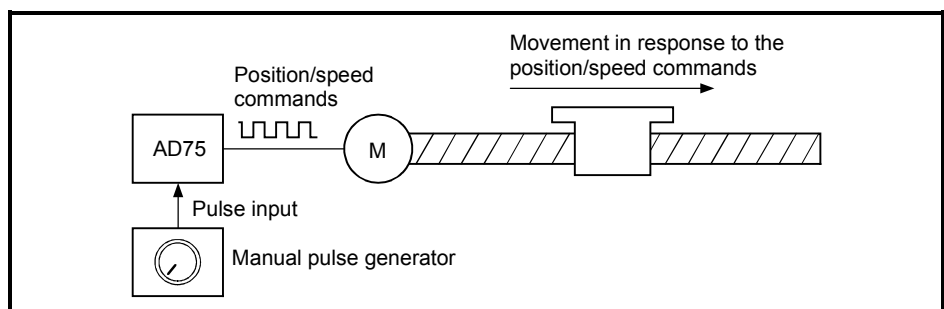


Fig. 11.2 Manual pulse generator control

**■ Manual control auxiliary functions**

Refer to section "3.3.4 Combination of AD75 main functions and auxiliary functions" for details on "auxiliary functions" that can be combined with manual control. Also refer to "CHAPTER 12 CONTROL AUXILIARY FUNCTIONS" for details on each auxiliary function.

**■ Carrying out manual control from peripheral devices**

"JOG operation" and enabling/disabling of the "manual pulse generator operation" can be executed from the AD75 software package test mode. Refer to the AD75 Software Package Operating Manual for details on manual control from the AD75 software package.

**■ Monitoring manual control**

Refer to section "5.6 List of monitor data" when directly monitoring the buffer memory using the GPP function software package. Also refer to the AD75 Software Package Operating Manual when monitoring with the monitor functions of the AD75 software package.

11.2 JOG operation

11.2.1 Outline of JOG operation

**Important**

Use the hardware stroke limit function when carrying out JOG operation near the upper or lower limits. (Refer to section 12.4.4).

\* If the hardware stroke limit function is not used, the workpiece may exceed the operating range, causing an accident.

■ JOG operation

In JOG operation, the Forward run JOG start signal (Y16, Y18, Y1A) or Reverse run JOG start signal (Y17, Y19, Y1B) turns ON, causing position/speed commands to be output to the servo amplifier from the AD75 while the signal is ON. The workpiece is then moved in the designated direction.

The following shows examples of JOG operation.

1)	When the START signal turns ON, acceleration begins in the direction designated by the START signal, and continues for the acceleration time designated in "[Pr.33] JOG operation acceleration time selection". At this time, the BUSY signal changes from OFF to ON.
2)	When the workpiece being accelerated reaches the speed set in "[Cd.19] JOG speed", the movement continues at this speed. Constant speed operation takes place at 2) and 3).
3)	When the START signal is turned OFF, deceleration begins from the speed set in "[Cd.19] JOG speed", and continues for the deceleration time designated in "[Pr.34] JOG operation deceleration time selection".
4)	The operation stops when the speed becomes 0. At this time, the BUSY signal changes from ON to OFF.

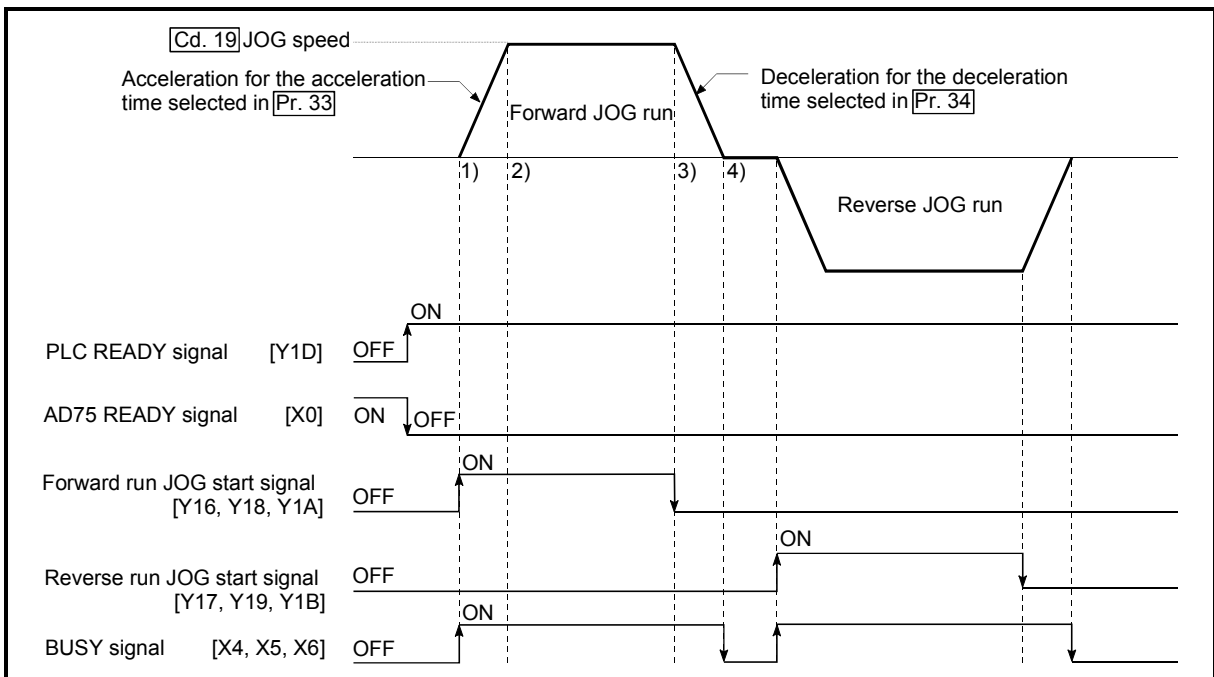


Fig. 11.3 JOG operation


### ■ Precautions during operation

The following details must be understood before carrying out JOG operation.

- (1) For safety, first set "[Cd.19] JOG speed" to a smaller value and check the movement. Then gradually increase the value.
- (2) If "[Cd.19] JOG speed" exceeds the speed set in "[Pr.32] JOG speed limit value", the workpiece will move at the "[Pr.32] JOG speed limit value" and a warning "JOG speed limit value" (warning code: 301) will occur in the AD75.
- (3) The JOG operation can be continued even if a warning "JOG speed limit value" (warning code: 301) has occurred.
- (4) A JOG start signal OFF → ON immediately after the stop signal ON → OFF (within 56.8ms) will be ignored. (The operation will not start.)

### ■ Errors during operation

When the operation is stopped by the stroke limit (limit signal OFF), JOG operation can be performed in the direction in which the limit signal turns ON after an error reset. (An error will occur again if the JOG start signal in the direction in which the limit signal turns OFF is turned ON.)

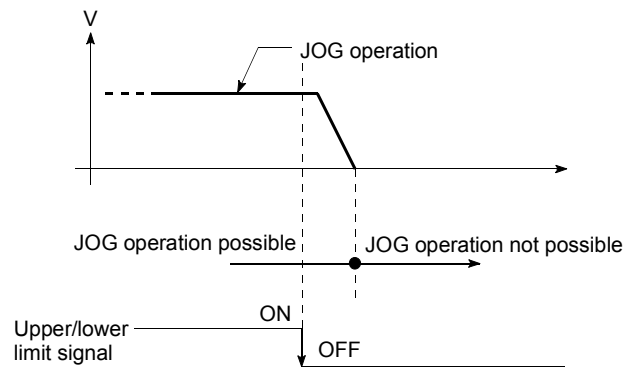

■ JOG operation timing and processing time

The following drawing shows details of the JOG operation timing and processing time.

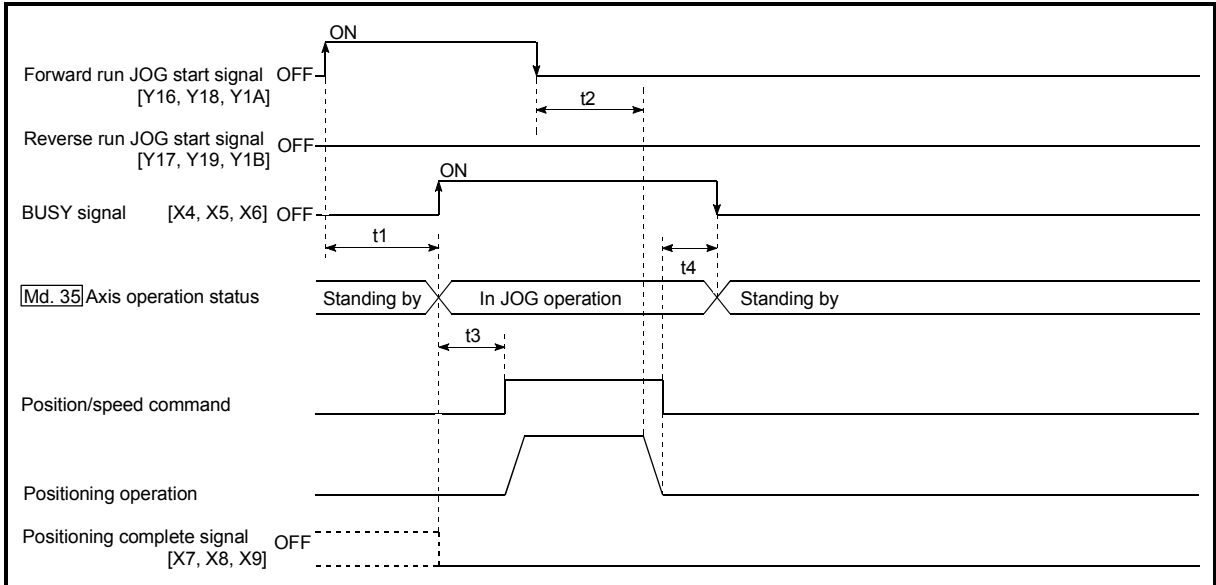


Fig. 11.4 JOG operation timing and processing times

Normal timing times

Unit: ms


t1	t2	t3	t4
1 to 60	0 to 3.5	6.5 to 10	0 to 3.5

- Delays may occur in the t1 timing time due to the following factors.
  - 1) Whether a FROM/TO command is issued during start processing.
  - 2) The operation status of other axes.
  - 3) Whether there is intervention from a peripheral device during start processing.
  - 4) Details of the positioning data to be started.



11.2.2 JOG operation execution procedure

The JOG operation is carried out by the following procedure.

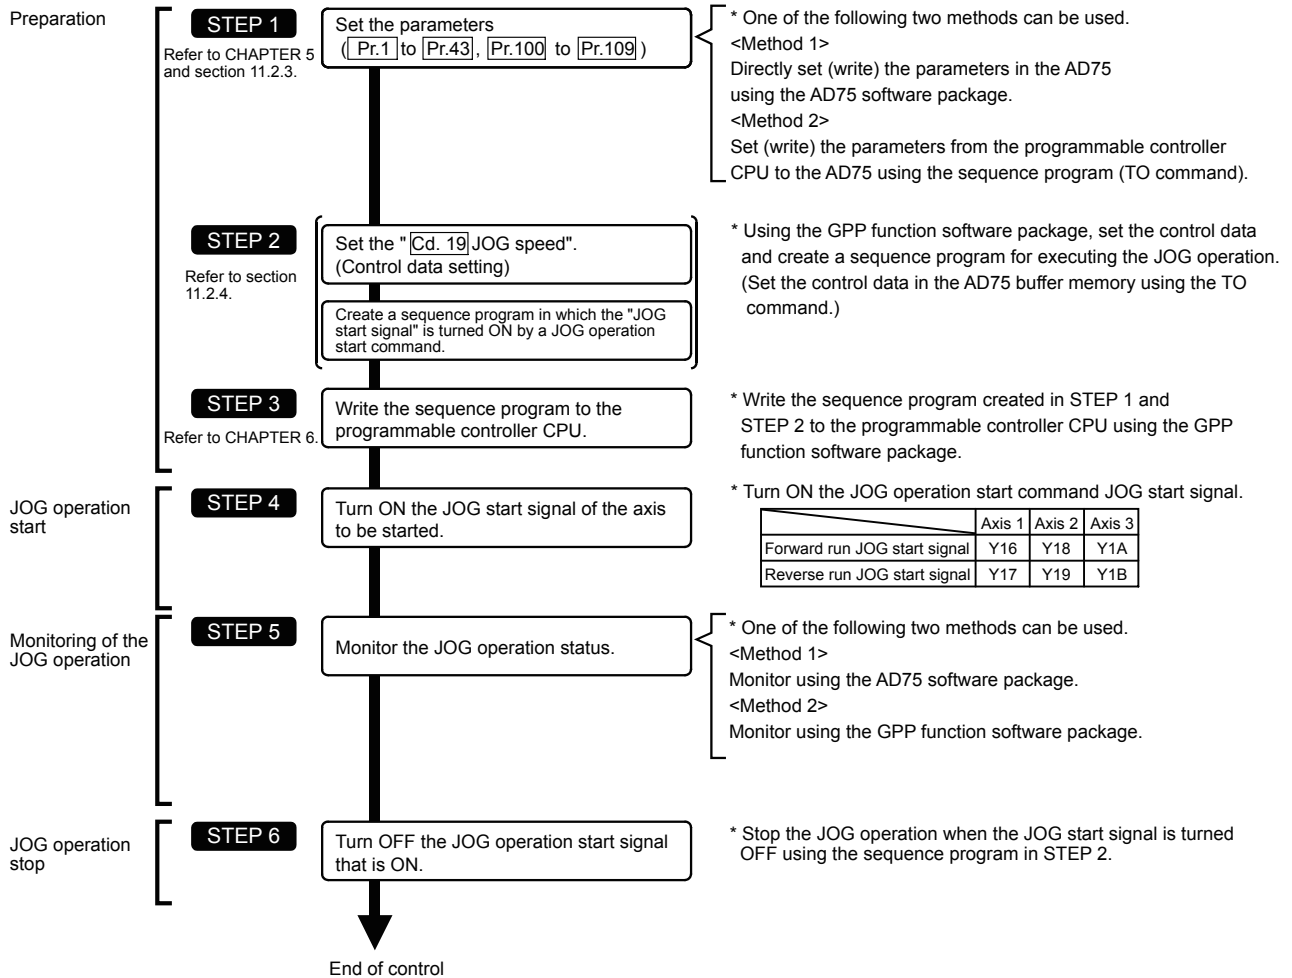

**REMARK**

- Mechanical elements such as limit switches are considered as already installed.
- Parameter settings work in common for all control using the AD75.

## 11.2.3 Setting the required parameters for JOG operation

The "Parameters" must be set to carry out JOG operation.

The following table shows the setting items of the required parameters for carrying out JOG operation. When only JOG operation will be carried out, no parameters other than those shown below need to be set. (Use the initial values or setting values within a range where no error occurs for trouble-free operation.)

Setting item		Setting requirement	Factory-set initial value (setting details)	
Parameters	Pr.1	Unit setting	◎	3 (pulse)
	Pr.2	No. of pulses per rotation (Ap) (Unit: pulse)	◎	20000
	Pr.3	Movement amount per rotation (Al) (Unit: pulse)	◎	20000
	Pr.4	Unit magnification (Am)	◎	1 (1-fold)
	Pr.7	Speed limit value (Unit: pulse/s)	◎	200000
	Pr.8	Acceleration time 0 (Unit: ms)	◎	1000
	Pr.9	Deceleration time 0 (Unit: ms)	◎	1000
	Pr.10	Bias speed at start (Unit: pulse/s)	○	0
	Pr.12	Backlash compensation amount (Unit: pulse)	○	0
	Pr.13	Software stroke limit upper limit value (Unit: pulse)	○	2147483647
	Pr.14	Software stroke limit lower limit value (Unit: pulse)	○	-2147483648
	Pr.15	Software stroke limit selection	○	0 (current feed value)
	Pr.16	Software stroke limit valid/invalid setting	○	0 (invalid)
	Pr.18	Torque limit setting value (Unit: %)	○	300
	Pr.25	Size selection for acceleration/deceleration time	○	0 (1 word type)

◎ : Setting always required.

○ : Set according to requirements (Leave set to the initial value when not used.)

<b>REMARK</b>
---------------

- Parameter settings work in common for all control using the AD75. When carrying out other control ("main positioning control", "advanced positioning control", "zero point return positioning control"), the respective setting items must also be matched and set.
- Parameters are set for each axis.
- Refer to "CHAPTER 5 DATA USED FOR POSITIONING CONTROL" for setting details.

	Setting item	Setting requirement	Factory-set initial value (setting details)	
Parameters	Pr.26	Acceleration time 1 (Unit: ms)	○	1000
	Pr.27	Acceleration time 2 (Unit: ms)	○	1000
	Pr.28	Acceleration time 3 (Unit: ms)	○	1000
	Pr.29	Deceleration time 1 (Unit: ms)	○	1000
	Pr.30	Deceleration time 2 (Unit: ms)	○	1000
	Pr.31	Deceleration time 3 (Unit: ms)	○	1000
	Pr.32	JOG speed limit value	◎	2000
	Pr.33	JOG operation acceleration time selection	◎	0 (acceleration time 0)
	Pr.34	JOG operation deceleration time selection	◎	0 (deceleration time 0)
	Pr.35	Acceleration/deceleration process selection	○	0 (automatic trapezoidal acceleration/deceleration processing)
	Pr.36	S-curve ratio	○	100
	Pr.37	Sudden stop deceleration time	○	1000
	Pr.38	Stop group 1 sudden stop selection	○	0 (deceleration stop)
	Pr.39	Stop group 2 sudden stop selection	○	0 (deceleration stop)
	Pr.40	Stop group 3 sudden stop selection	○	0 (deceleration stop)
	Pr.43	External start function selection	○	0 (positioning start)
	Pr.100	Servo series	◎	0 (MR-H-B (MR-H-BN))
	Pr.101	Amplifier setting	◎	0 (Absolute position detection invalid)
	Pr.102	Regenerative brake resistor	◎	0000H (External regenerative brake option not used, external dynamic brake invalid)
	Pr.103	Motor type	◎	0 (HA-SH Standard)
Pr.104	Motor capacity (unit: kW×100)	◎	0	
Pr.105	Motor speed (unit: r/min×10 <sup>-3</sup> )	◎	1	
Pr.106	Feedback pulse	◎	0 (16384pulse)	
Pr.107	Rotation direction	◎	0 (Forward run with positioning address increment)	
Pr.108	Auto tuning	○	1 (Auto tuning for ordinary operation)	
Pr.109	Servo response setting	○	1 (Normal (low response))	

◎ : Setting always required.

○ : Set according to requirements (Leave set to the initial value when not used.)

11.2.4 Creating start programs for JOG operation

A sequence program must be created to execute a JOG operation. Consider the "required control data setting", "start conditions", "start time chart", and "device settings" when creating the program.

The following shows an example when a JOG operation is started for axis 1. ("Cd.19 JOG speed" is set to "200.00mm/min" in the example shown.)

■ Required control data setting

The control data shown below must be set to execute a JOG operation. The setting is carried out with the sequence program.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.19 JOG speed	20000	Set a value equal to or above the "Pr.10 Bias speed at start" and equal to or below the "Pr.32 JOG speed limit value".	1160 1161	1210 1211	1260 1261

\* Refer to section "5.7 List of control data" for details on the setting details.

■ Start conditions

The following conditions must be fulfilled when starting. The required conditions must also be assembled in the sequence program, and the sequence program must be configured so the operation will not start if the conditions are not fulfilled.

Signal name	Signal state	Device				
		Axis 1	Axis 2	Axis 3		
Interface signal	All axes servo ON signal	ON	Servo operation possible			Y15
	PLC READY signal	ON	Programmable controller CPU preparation completed			Y1D
	AD75 READY signal	OFF	AD75 preparation completed			X0
	Axis stop signal	OFF	Axis stop signal is OFF			Y13 Y14 Y1C
	Start complete signal	OFF	Start complete signal is OFF			X1 X2 X3
	BUSY signal	OFF	BUSY signal is OFF			X4 X5 X6
	Error detection signal	OFF	There is no error			XA XB XC
External signal	M code ON signal	OFF	M code ON signal is OFF			XD XE XF
	Stop signal	OFF	Stop signal is OFF			–
	Upper limit (FLS)	ON	Within limit range			–
Monitor data	Lower limit (RLS)	ON	Within limit range			–
	Servo ON	ON	Servo ON is ON			Md.116 Servo status:b1

■ Start time chart


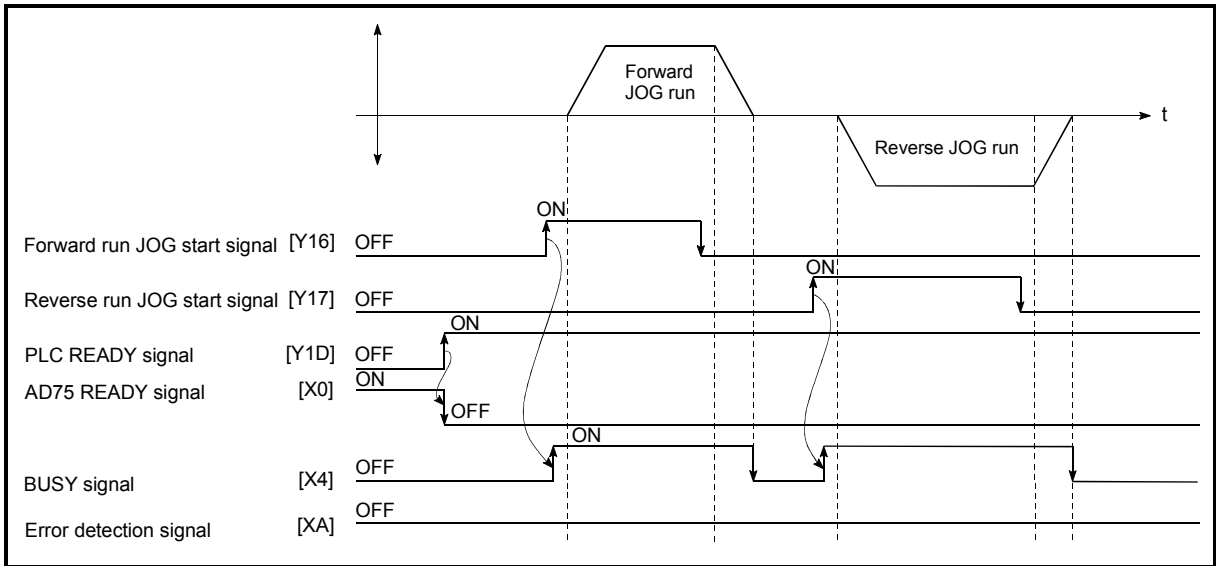


Fig. 11.5 JOG operation start time chart

■ Creating the program

Example

\*  
\* No. 12 JOG operation program  
\*

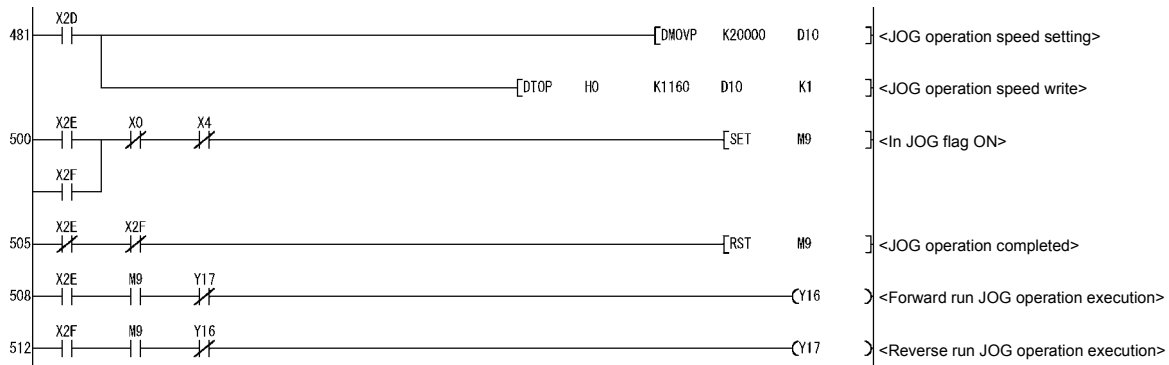

11.2.5 JOG operation example

■ When the "stop signal" is turned ON during JOG operation

When the "stop signal" is turned ON during JOG operation, the JOG operation will stop by the "deceleration stop" method.  
 JOG start signals will be ignored while the stop signal is ON.  
 The operation can be started by turning the stop signal OFF, and turning the JOG start signal from OFF to ON again.

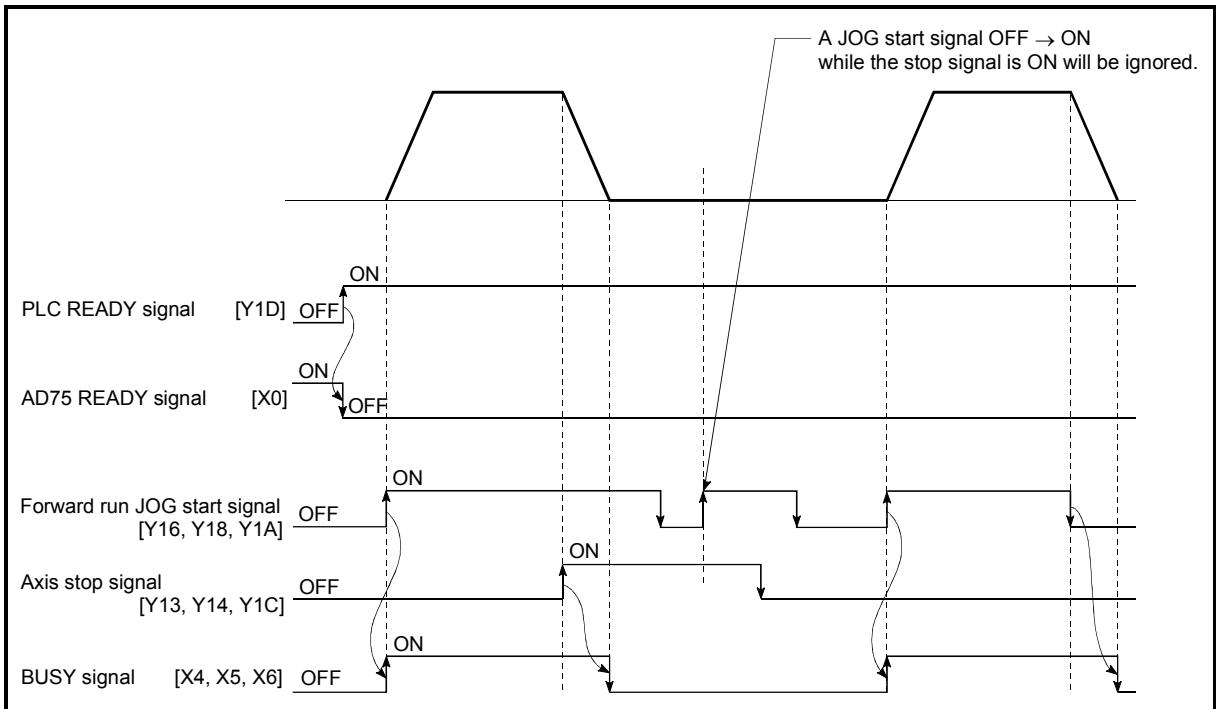


Fig. 11.6 Operation when the stop signal is turned ON during JOG operation

**POINT**  
 The AD75 will not receive a "JOG start signal" while the "stop signal" is ON.

- When both the "forward run JOG start signal" and "reverse run JOG start signal" are turned ON simultaneously for one axis

When both the "forward run JOG start signal" and "reverse run JOG start signal" are turned ON simultaneously for one axis, the "forward run JOG start signal" is given priority. In this case, the "reverse run JOG start signal" is validated when the AD75 BUSY signal is turned OFF.

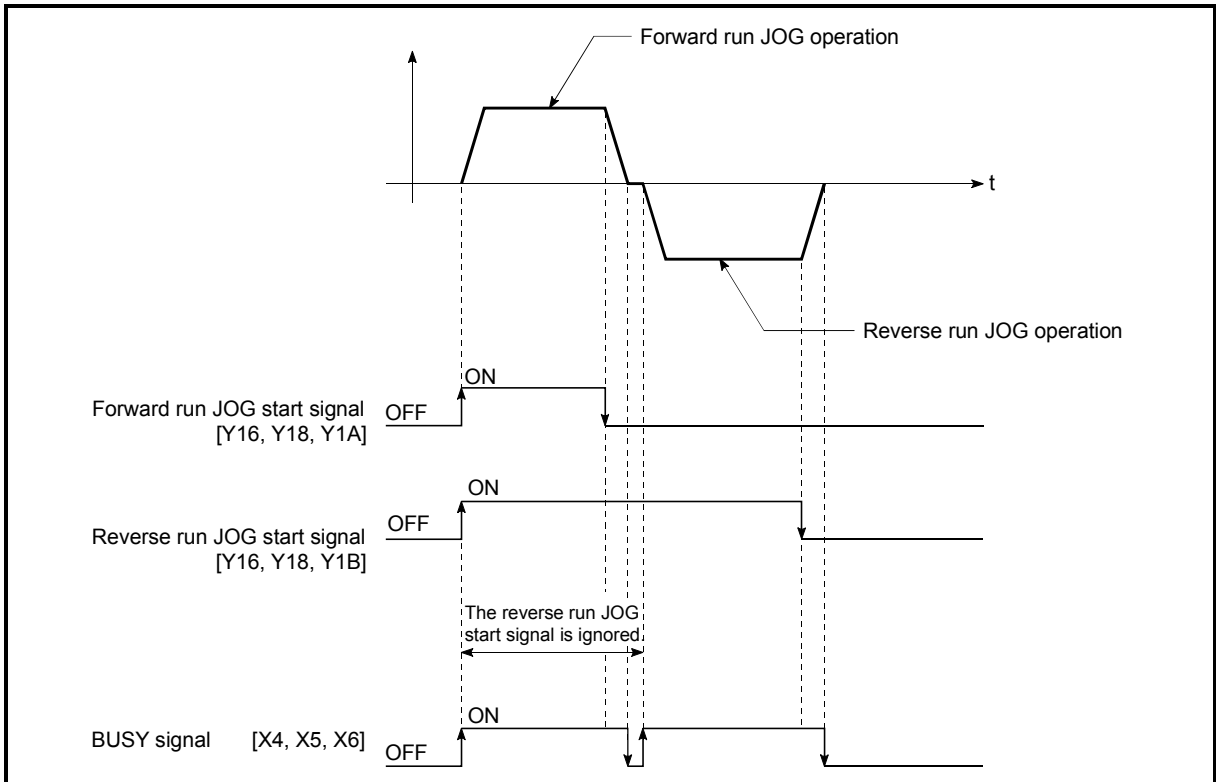


Fig. 11.7 Operation when both the forward run JOG start signal and reverse run JOG start signal are turned ON simultaneously



- When the "JOG start signal" is turned ON again during deceleration caused by the ON → OFF of the "JOG start signal"

When the "JOG start signal" is turned ON again during deceleration caused by the ON → OFF of the "JOG start signal", the JOG operation will be carried out from the time the "JOG start signal" is turned ON.

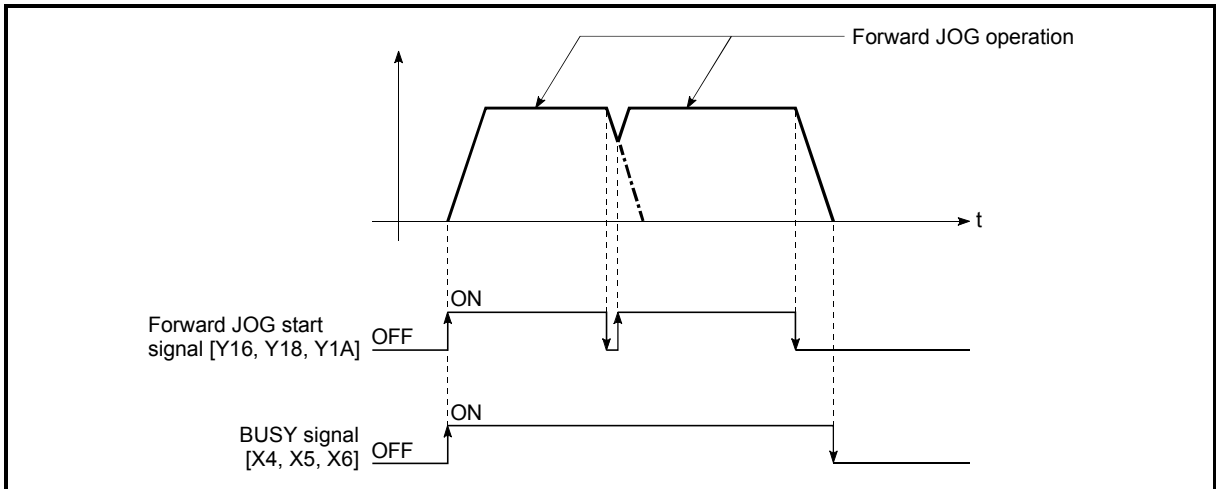


Fig. 11.8 Operation when the JOG start signal is turned ON during deceleration

- When the "JOG start signal" is turned ON during a peripheral device test mode

When the "JOG start signal" is turned ON during a peripheral device test mode, it will be ignored and the JOG operation will not be carried out.

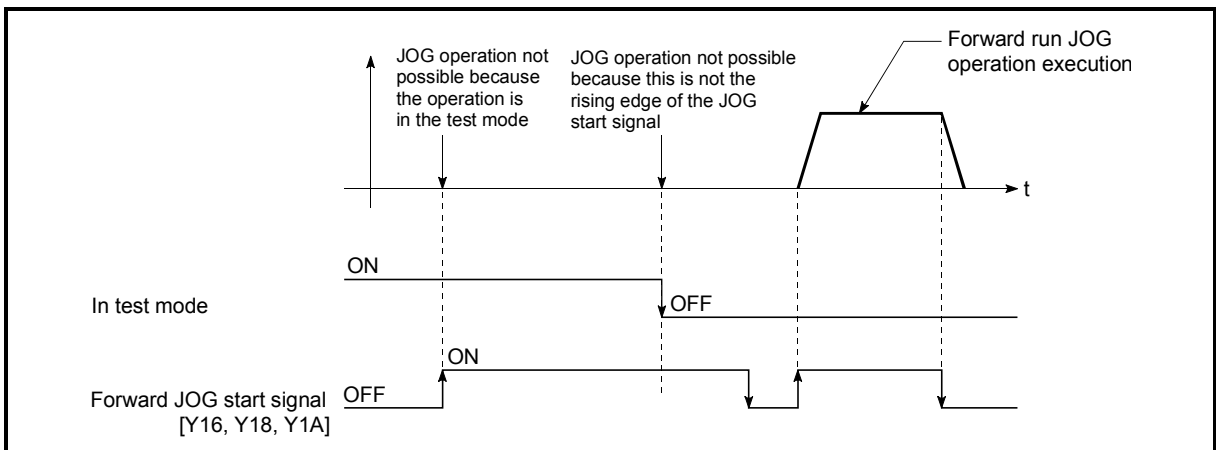


Fig. 11.9 Operation when the JOG start signal is turned ON during a test mode

- When the "JOG start signal" is turned ON immediately after the stop signal OFF (within 56.8ms)

When the "JOG start signal" is turned ON immediately after the stop signal OFF (within 56.8ms), it will be ignored and the JOG operation will not be carried out.

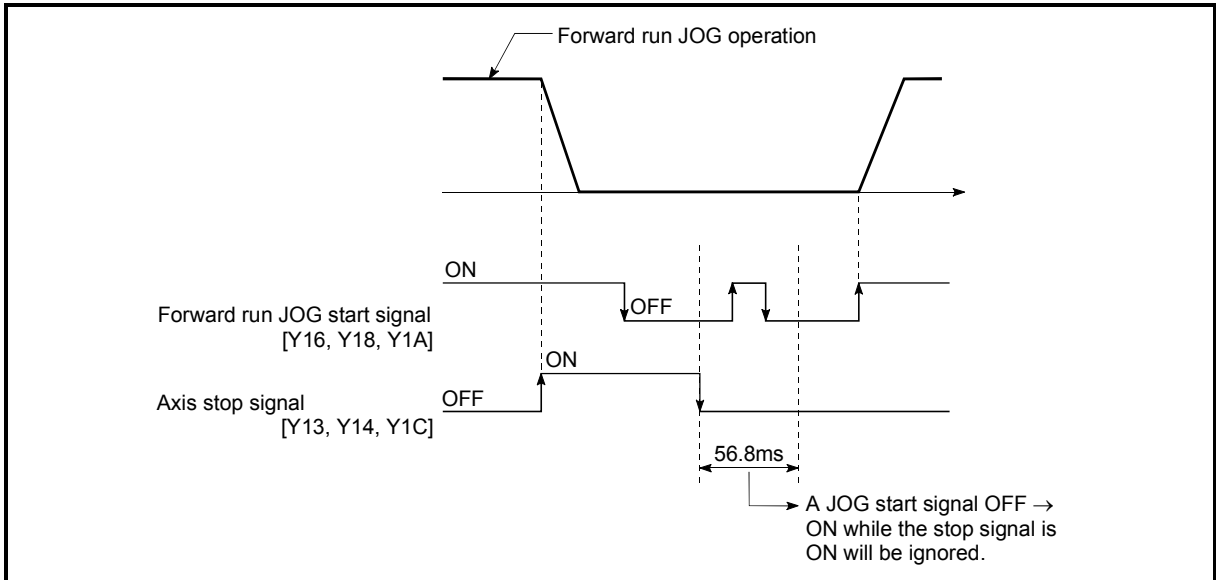


Fig. 11.10 Operation when the JOG start signal is turned ON immediately after the stop signal OFF

11.3 Manual pulse generator operation

11.3.1 Outline of manual pulse generator operation

**Important**

Create the sequence program so that "[Cd.22] Manual pulse generator enable flag" is always set to "0" (disabled) when a manual pulse generator operation is not carried out.


\* Mistakenly touching the manual pulse generator when the manual pulse generator enable flag is set to "1" (enable) can cause accidents or incorrect positioning.

■ Manual pulse generator operation

In manual pulse generator operation, pulses are input to the AD75 from the manual pulse generator to output the position/speed command from the AD75 to the servo amplifier by the number of input pulses, moving the work piece in the designated direction.

The following shows an example of manual pulse generator operation.

- |    |  |
|----|--|
| 1) | When the "[Cd.22] Manual pulse generator enable flag" is set to "1", the BUSY signal turns ON and the manual pulse generator operation is enabled.   |
| 2) | The workpiece is moved corresponding to the No. of pulses input from the manual pulse generator.   |
| 3) | The workpiece movement stops when no more pulses are input from the manual pulse generator.  |
| 4) | When the "[Cd.22] Manual pulse generator enable flag" is set to "0", the BUSY signal turns OFF and the manual pulse generator operation is disabled. |

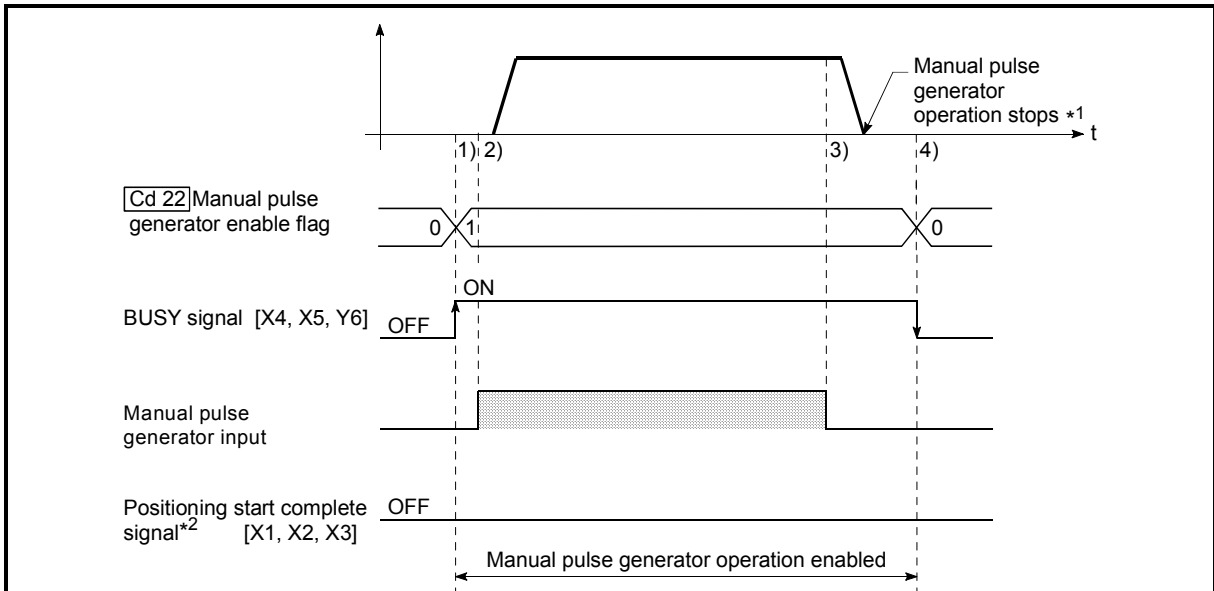

[Precautions]

- \*1 When the input from the manual pulse generator stops, the output of the position/speed command to the servo amplifier is completed with a delay of one control cycle time (120 to 180ms).
- \*2 The start complete signal does not turn ON in manual pulse generator operation.

Fig. 11.11 Manual pulse generator operation

### ■ Restricted items

A manual pulse generator is required to carry out manual pulse generator operation.

### ■ Precautions during operation

The following details must be understood before carrying out manual pulse generator operation.


- (1) The speed during manual pulse generation operation is not limited by the "[Pr.7] Speed limit value".
- (2) If the "[Cd.22] Manual pulse generator enable flag" is turned ON while the AD75 is BUSY (BUSY signal ON), a warning "Start during operation" (warning code: 100) will occur.
- (3) If a stop factor occurs during manual pulse generator operation, the operation will stop, and the BUSY signal will turn OFF. At this time, the "[Cd.22] Manual pulse generator enable flag" will be left ON, but manual pulse generator operation will not be possible. To carry out manual pulse generator operation again, measures must be carried out to eliminate the stop factor. Once eliminated, the operation can be carried out again by turning the "[Cd.22] Manual pulse generator enable flag" ON → OFF → ON.
- (4) Position/speed commands will not be output if an error occurs when the manual pulse generator operation starts.
- (5) The pulses input from the manual pulse generator are multiplied by 4.

### REMARK

- One AD75 module can be connected to each manual pulse generator axis.
- The AD75 module can simultaneously output position/speed commands to the axis 1 to axis 3 servo amplifiers units by one manual pulse generator. (1-axis to 3-axis simultaneous operation is possible.)

### ■ Errors during operation

When the operation is stopped by the stroke limit (limit signal OFF), manual pulse generator operation can be performed in the direction in which the limit signal turns ON after an error reset. (An error will occur again if pulse input is provided in the direction in which the limit signal turns OFF is turned ON.)

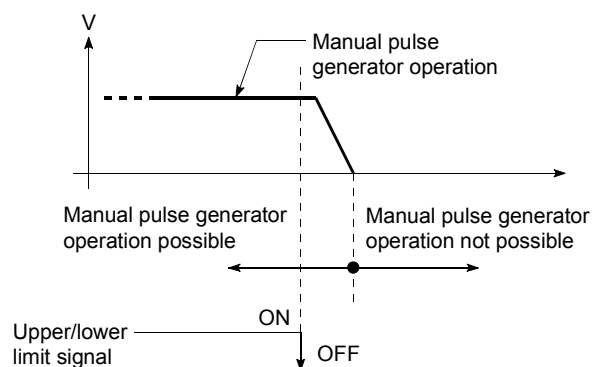

Manual pulse generator operation timing and processing time

The following drawing shows details of the manual pulse generator operation timing and processing time.

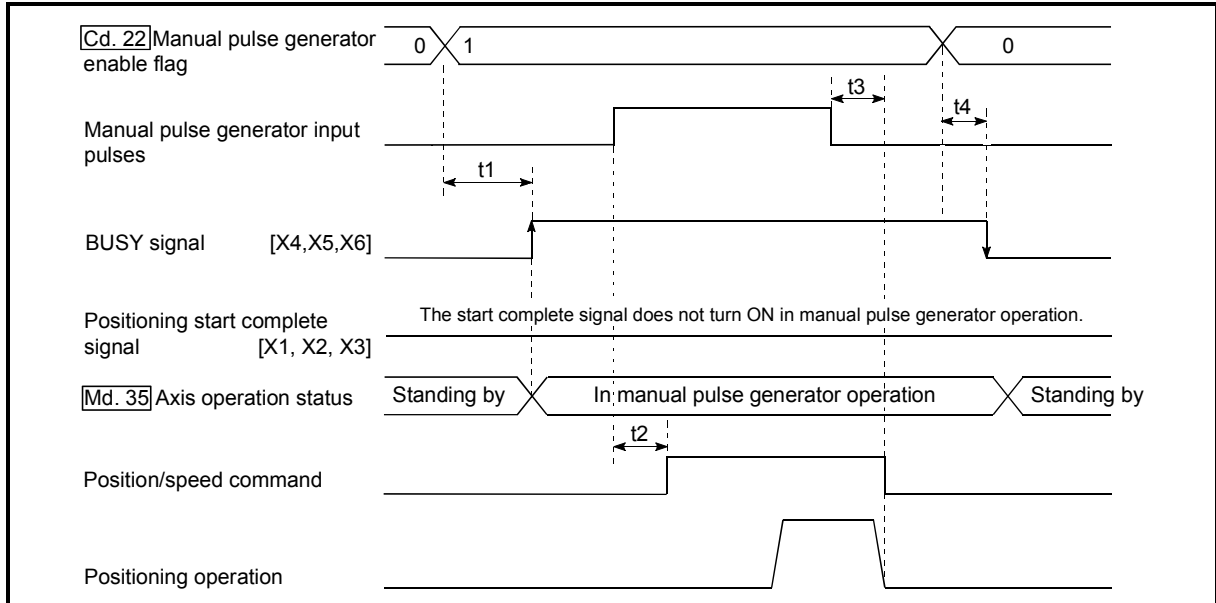


Fig. 11.12 Manual pulse generator operation timing and processing times

Normal timing times

Unit : ms

t1	t2	t3	t4
1 to 60	0 to 60	120 to 180	1 to 60

• Delays may occur in the t1 timing time due to the following factors.

- 1) Whether a FROM/TO command is issued during start processing.
- 2) The operation status of other axes.
- 3) Whether there is intervention from a peripheral device during processing the start process.
- 4) Details of the positioning data to be started.

**■ Position control by manual pulse generator operation**

The command output during manual pulse generator operation is as follows.


$$[\text{No. of command pulses}] = [\text{No. of manual pulse generator input pulse}] \times [\text{Cd.23 Manual pulse generator 1 pulse input magnification}]$$

$$[\text{Command speed}^*] = [\text{Manual pulse generator input frequency}] \times [\text{Cd.23 Manual pulse generator 1 pulse input magnification}]$$

\*: When the manual pulse generator input frequency changes, the new frequency will apply after a maximum of 180ms delay.

11.3.2 Manual pulse generator operation execution procedure

The manual pulse generator operation is carried out by the following procedure.

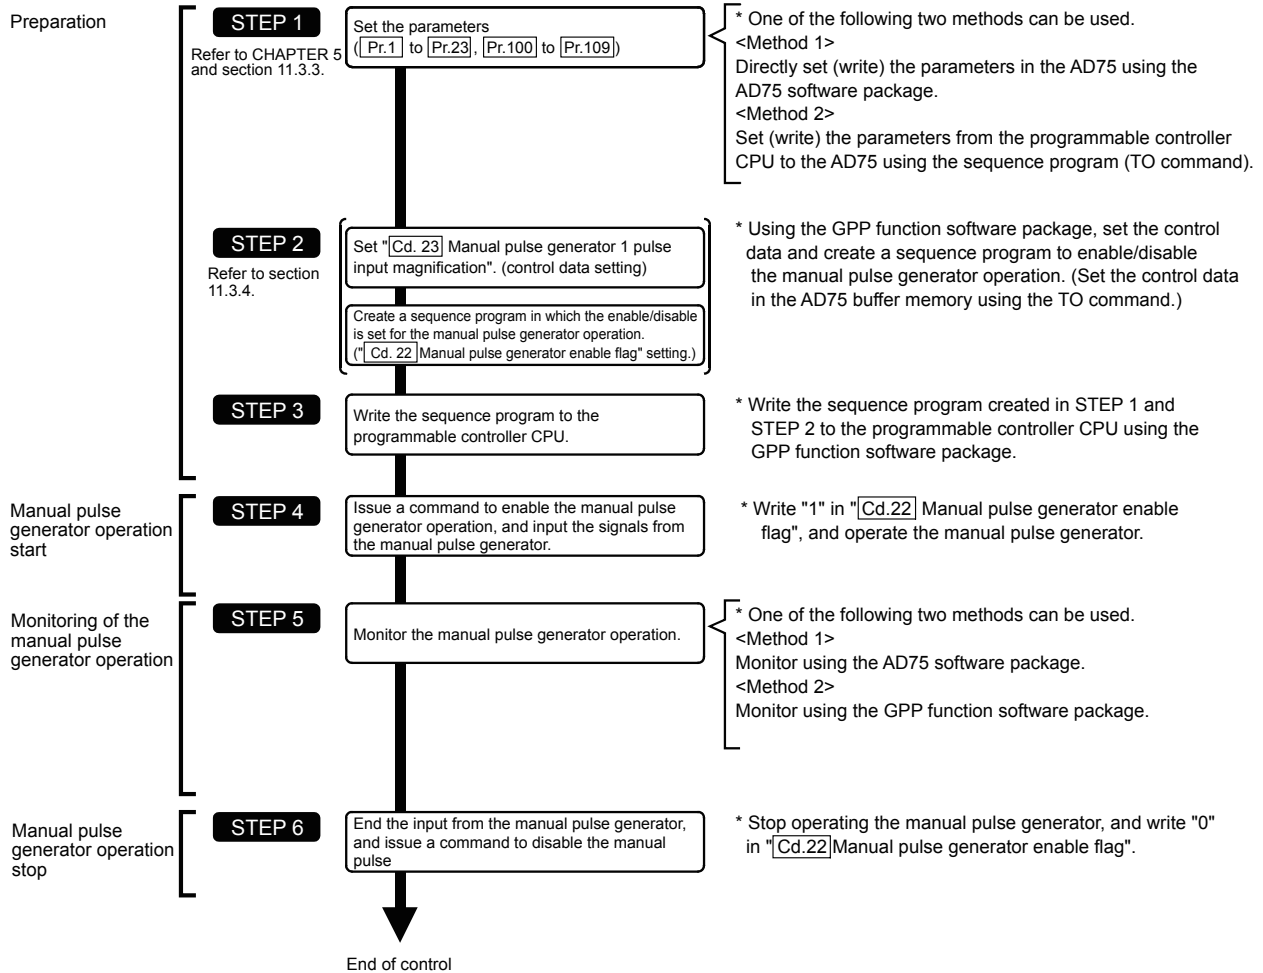

**REMARK**

- Mechanical elements such as limit switches are considered as already installed.
- Parameter settings work in common for all control using the AD75.

## 11.3.3 Setting the required parameters for manual pulse generator operation

The "Parameters" must be set to carry out manual pulse generator operation. The following table shows the setting items of the required parameters for carrying out manual pulse generator operation. When only manual pulse generator operation will be carried out, no parameters other than those shown below need to be set. (Use the initial values or setting values within a range where no error occurs for trouble-free operation.)

Setting item		Setting requirement	Factory-set initial value (setting details)	
Parameters	Pr.1	Unit setting	◎	3 (pulse)
	Pr.2	No. of pulses per rotation (Ap) (Unit: pulse)	◎	20000
	Pr.3	Movement amount per rotation (Al) (Unit: pulse)	◎	20000
	Pr.4	Unit magnification (Am)	◎	1 (1-fold)
	Pr.12	Backlash compensation amount (Unit: pulse)	○	0
	Pr.13	Software stroke limit upper limit value (Unit: pulse)	○	2147483647
	Pr.14	Software stroke limit lower limit value (Unit: pulse)	○	-2147483648
	Pr.15	Software stroke limit selection	○	0 (current feed value)
	Pr.16	Software stroke limit valid/invalid setting	○	0 (invalid)
	Pr.18	Torque limit setting value (Unit: pulse)	○	300
	Pr.23	Manual pulse generator selection	◎	Axis 1 = 1, axis 2 = 2, axis 3 = 3
	Pr.100	Servo series	◎	0 (MR-H-B (MR-H-BN))
	Pr.101	Amplifier setting	◎	0 (Absolute position detection invalid)
	Pr.102	Regenerative brake resistor	◎	0000H (External regenerative brake option not used, external dynamic brake invalid)
	Pr.103	Motor type	◎	0 (HA-SH Standard)
	Pr.104	Motor capacity (unit: kW × 100)	◎	0
	Pr.105	Motor speed (unit: r/min × 10 <sup>-3</sup> )	◎	1
	Pr.106	Feedback pulse	◎	0 (16384pulse)
	Pr.107	Rotation direction	◎	0 (Forward run with positioning address increment)
Pr.108	Auto tuning	○	1 (Auto tuning for ordinary operation)	
Pr.109	Servo response setting	○	1 (Normal (low response))	

◎ : Setting always required.

○ : Set according to requirements (Leave set to the initial value when not used.)

**REMARK**

- Parameter settings work in common for all control using the AD75. When carrying out other control ("main positioning control", "advanced positioning control", "zero point return positioning control"), the respective setting items must also be matched and set.
- Parameters are set for each axis.
- Refer to "CHAPTER 5 DATA USED FOR POSITIONING CONTROL" for setting details.



11.3.4 Creating a program to enable/disable the manual pulse generator operation

A sequence program must be created to execute a manual pulse generator operation. Consider the "required control data setting", "start conditions", "start time chart", and "device settings" when creating the program. The following shows an example when a manual pulse generator operation is started for axis 1.

■ Required control data setting

The control data shown below must be set to execute a manual pulse generator operation. The setting is carried out with the sequence program.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.22 Manual pulse generator enable flag	1 (0)	Set "1: Enable manual pulse generator operation". (Set "0: Disable manual pulse generator operation" when finished with the manual pulse generator operation.)	1167	1217	1267
Cd.23 Manual pulse generator 1 pulse input magnification	1	Set the manual pulse generator 1 pulse input magnification.	1168 1169	1218 1219	1268 1269

\* Refer to section "5.7 List of control data" for details on the setting details.

■ Conditions for enabling manual pulse generator operation

The following conditions must be satisfied to enable manual pulse generator operation. The required conditions must also be assembled in the sequence program, and the sequence program must be configured so the operation will not start if the conditions are not fulfilled.

Signal name	Signal state	Device				
		Axis 1	Axis 2	Axis 3		
Interface signal	All axes servo ON signal	ON	Servo operation possible			Y15
	PLC READY signal	ON	Programmable controller CPU preparation completed			Y1D
	AD75 READY signal	OFF	AD75 preparation completed			X0
	Axis stop signal	OFF	Axis stop signal is OFF			Y13 Y14 Y1C
	Start complete signal	OFF	Start complete signal is OFF			X1 X2 X3
	BUSY signal	OFF	BUSY signal is OFF			X4 X5 X6
	Error detection signal	OFF	There is no error			XA XB XC
External signal	M code ON signal	OFF	M code ON signal is OFF			XD XE XF
	Stop signal	OFF	Stop signal is OFF			—
	Upper limit (FLS)	ON	Within limit range			—
	Lower limit (RLS)	ON	Within limit range			—
Monitor data	Servo ON	ON	Servo ON is ON			Md.116 Servo status:b1

■ Start time chart


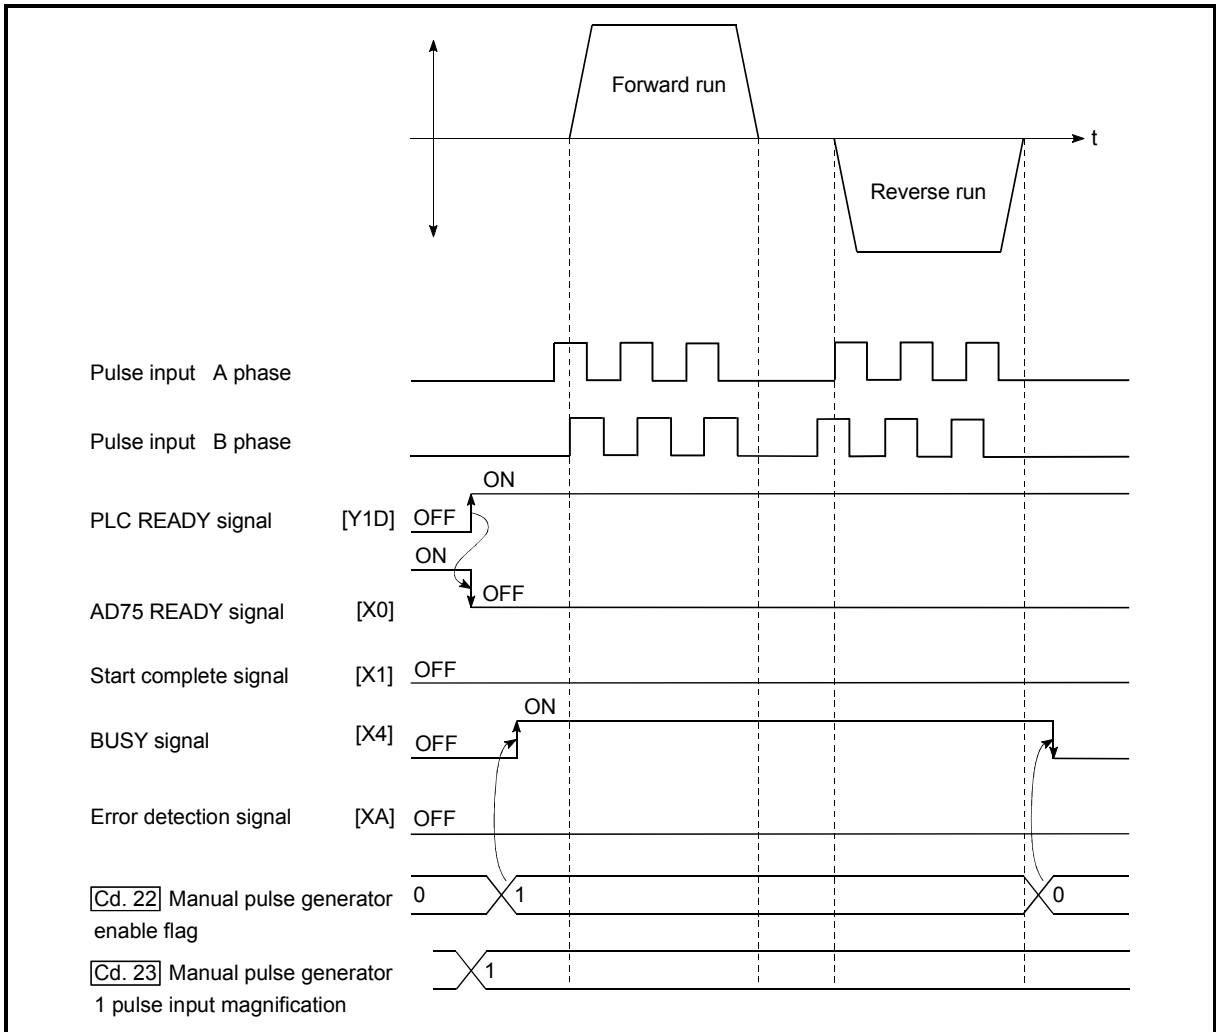


Fig. 11.13 Manual pulse generator operation start time chart

■ Creating the program



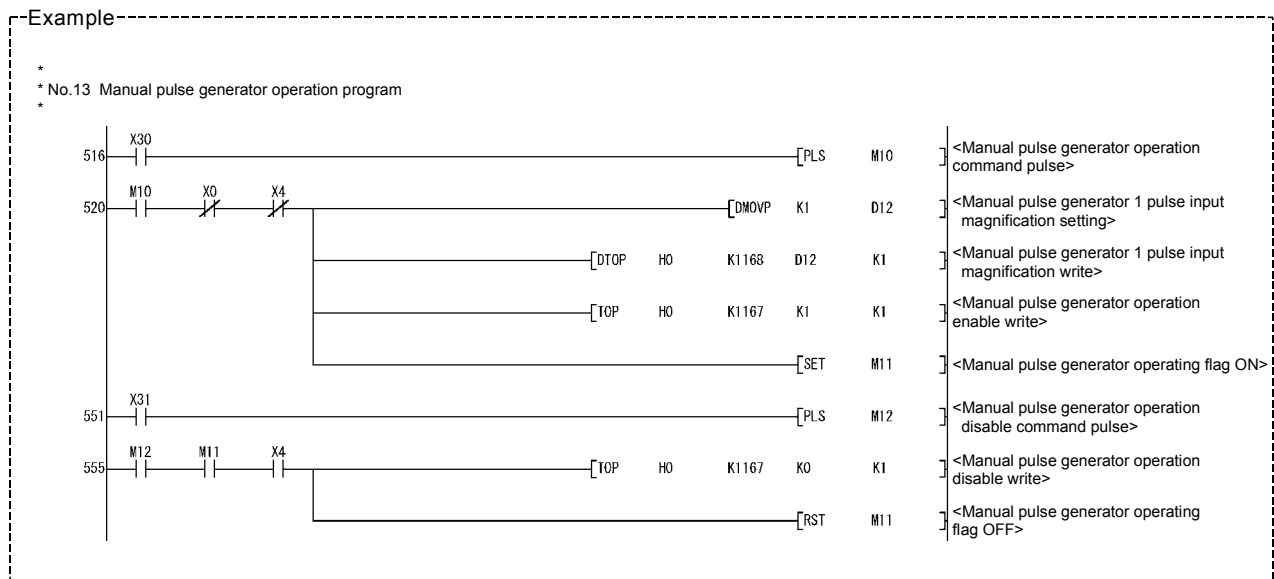

---

# CHAPTER 12

---

## CONTROL AUXILIARY FUNCTIONS

The details and usage of the "auxiliary functions" added and used in combination with the main functions are explained in this chapter.

A variety of auxiliary functions are available, including functions specifically for machine zero point returns and generally related functions such as control compensation, etc. More appropriate, finer control can be carried out by using these auxiliary functions. Each auxiliary function is used together with a main function by creating matching parameter settings and sequence programs. Read the execution procedures and settings for each auxiliary function, and set as required.

12.1	Outline of auxiliary functions .....	12- 2
12.1.1	Outline of auxiliary functions .....	12- 2
12.2	Auxiliary functions specifically for machine zero point returns .....	12- 4
12.2.1	Zero point return retry function .....	12- 4
12.2.2	Zero point shift function .....	12- 10
12.3	Functions for compensating the control .....	12- 13
12.3.1	Backlash compensation function .....	12- 13
12.3.2	Electronic gear function .....	12- 15
12.3.3	Near pass mode function .....	12- 20
12.3.4	Follow up processing function .....	12- 24
12.4	Functions to limit the control .....	12- 25
12.4.1	Speed limit function .....	12- 25
12.4.2	Torque limit function .....	12- 27
12.4.3	Software stroke limit function .....	12- 30
12.4.4	Hardware stroke limit function .....	12- 36
12.4.5	Servo ON/OFF function .....	12- 38
12.5	Functions to change the control details .....	12- 43
12.5.1	Speed change function .....	12- 43
12.5.2	Override function .....	12- 50
12.5.3	Acceleration/deceleration time change function .....	12- 53
12.5.4	Torque change function .....	12- 56
12.6	Absolute position restoration function .....	12- 58
12.6.1	Outline of absolute position restoration function .....	12- 58
12.6.2	Absolute position restoration mode switching function .....	12- 65
12.7	Other functions .....	12- 70
12.7.1	Step function .....	12- 70
12.7.2	Skip function .....	12- 75
12.7.3	M code output function .....	12- 78
12.7.4	Teaching function .....	12- 82
12.7.5	Command in-position function .....	12- 92
12.7.6	Acceleration/deceleration processing function .....	12- 95
12.7.7	Indirectly specification function .....	12- 99

## 12.1 Outline of auxiliary functions

"Auxiliary functions" are functions that compensate, limit, add functions, etc., to the control when the main functions are executed. These auxiliary functions are executed by parameter settings, commands from the AD75 software package, auxiliary function sequence programs, etc.

### 12.1.1 Outline of auxiliary functions

The following table shows the types of auxiliary functions available.

Auxiliary function		Details
Functions characteristic to machine zero point return	Zero point return retry function	This function retries the machine zero point return with the upper/lower limit switches during machine zero point return. This allows machine zero point return to be carried out even if the axis is not returned to before the near-point dog with JOG operation, etc.
	Zero point shift function	After returning to the machine zero point, this function offsets the position by the designated distance from the machine zero point position and sets that position as the zero point address.
Functions that compensate control	Backlash compensation function	This function compensates the mechanical backlash. Position/speed commands equivalent to the set backlash amount are output each time the movement direction changes.
	Electronic gear function	By setting the movement amount per pulse, this function can freely change the machine movement amount per commanded pulse. When the movement amount per pulse is set, a flexible positioning system that matches the machine system can be structured.
	Near pass mode function	This function suppresses the machine vibration when the speed changes during continuous path control in the interpolation control.
	Follow up processing function	This function monitors the rotation amount (real current value) of the motor in a servo OFF status and reflects it on the current feed value.
Functions that limit control	Speed limit function	If the command speed exceeds "[Pr.7] Speed limit value" during control, this function limits the commanded speed to within the "[Pr.7] Speed limit value" setting range.
	Torque limit function	If the torque generated by the servomotor exceeds "[Pr.18] Torque limit setting value" during control, this function limits the generated torque to within the "[Pr.18] Torque limit setting value" setting range.
	Software stroke limit function	If a command outside of the upper/lower limit stroke limit setting range, set in the parameters, is issued, this function will not execute positioning for that command.
	Hardware stroke limit function	This function carries out deceleration stop with the limit switch connected to the AD75 external device connection connector.
	Servo ON/OFF function	This function makes the servo operable (servo ON) or inoperable (servo OFF). (Free run status at servo OFF.)
Functions that change control details	Speed change function	This function changes the speed during positioning. Set the changed speed in the speed change buffer memory ([Cd.16] New speed value), and change the speed with the speed change request ([Cd.17] Speed change request).
	Override function	This function changes the speed within a percentage of 1 to 300% during positioning. This is executed using "[Cd.18] Positioning operation speed override".
	Acceleration/deceleration time change function	This function changes the acceleration/deceleration time during speed change.
	Torque change function	This function changes the "torque limit value" during control.

Auxiliary function		Details
Absolute position restoration function* <sup>1</sup>		This function restores the absolute position of the specified axis.
Other functions	Step function	This function temporarily stops the operation to confirm the positioning operation during debugging, etc. The operation can be stopped at each "automatic deceleration" or "positioning data".
	Skip function	This function stops the positioning being executed (decelerates to a stop) when the skip signal is input, and carries out the next positioning.
	M code output function	This function issues an auxiliary work (clamp or drill stop, tool change, etc.) according to the code No. (0 to 32767) set for each positioning data.
	Teaching function	This function stores the address positioned with manual control into the positioning address ( [ Da.5 ] Positioning address/movement amount) having the designated positioning data No.
	Command in-position function	At each automatic deceleration, this function calculates the remaining distance for the AD75 to reach the positioning stop position, and when the value is less than the set value, sets the "command in-position flag". When using another auxiliary work before ending the control, use this function as a trigger for the auxiliary work.
	Acceleration/deceleration process function	This function adjusts the control acceleration/deceleration.
	Indirectly specification function	This function specifies indirectly and starts the positioning data No.

\*<sup>1</sup> The "servomotor with absolute position detector that can configure an absolute position detection system" is required.

## 12.2 Auxiliary functions specifically for machine zero point returns

The auxiliary functions specifically for machine zero point returns include the "zero point retry function" and "zero point shift function". Each function is executed by parameter setting.

### 12.2.1 Zero point return retry function

When the workpiece goes past the zero point without stopping during positioning control, it may not move back in the direction of the zero point although a machine zero point return is commanded, depending on the workpiece position. This normally means the workpiece has to be moved to a position before the near-point dog by a JOG operation, etc., to start the machine zero point return again. However, by using the zero point return retry function, a machine zero point return can be carried out regardless of the workpiece position.

The details shown below explain about the "zero point return retry function".

- (1) Control details
- (2) Precautions during control
- (3) Setting the zero point return retry function

#### (1) Control details

The following drawing shows the operation of the zero point return retry function.

- (a) Zero point return retry operation when the workpiece is within the range between the upper and lower limits.


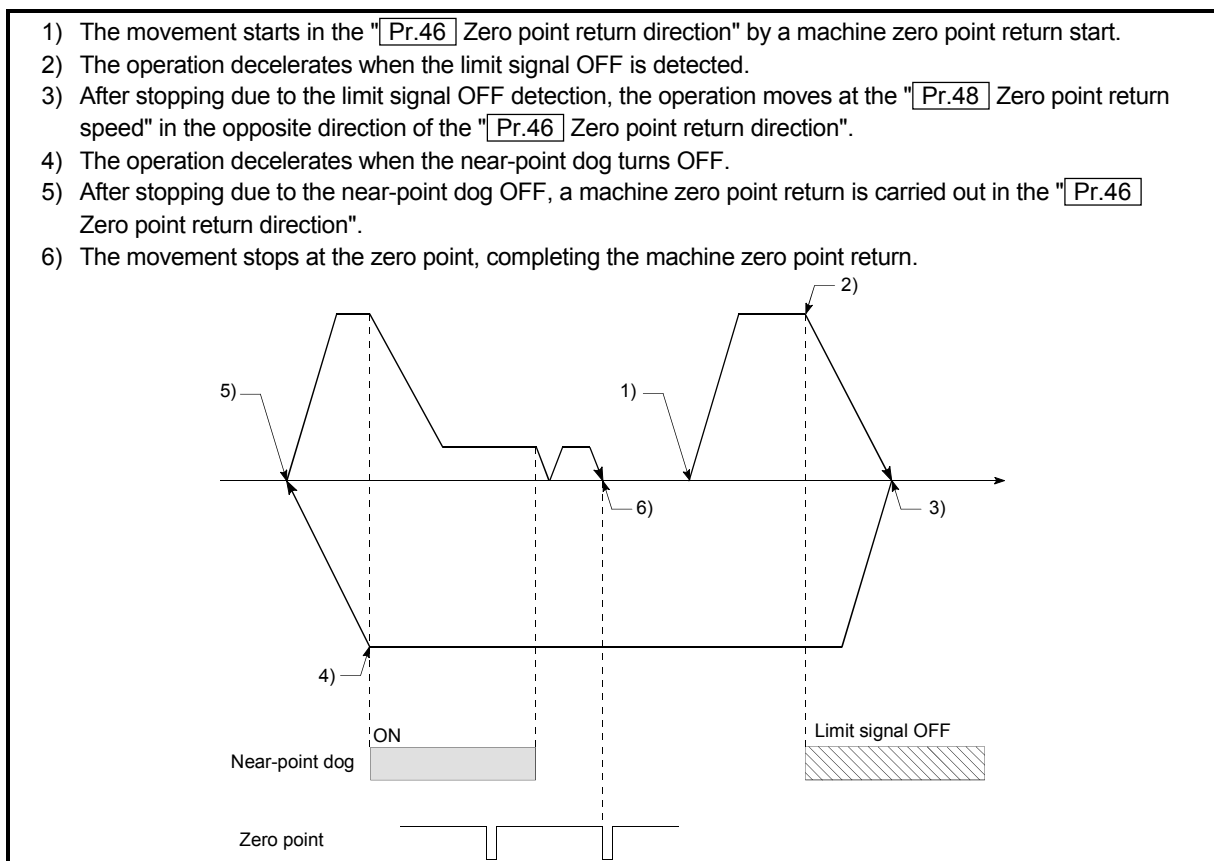


Fig. 12.1 Zero point return retry operation by limit signal detection




(b) Zero point return retry operation when the workpiece is outside the range between the upper and lower limits.

1) When the direction from the workpiece to the zero point is the same as the "Pr.46 Zero point return direction", a normal machine zero point return is carried out.

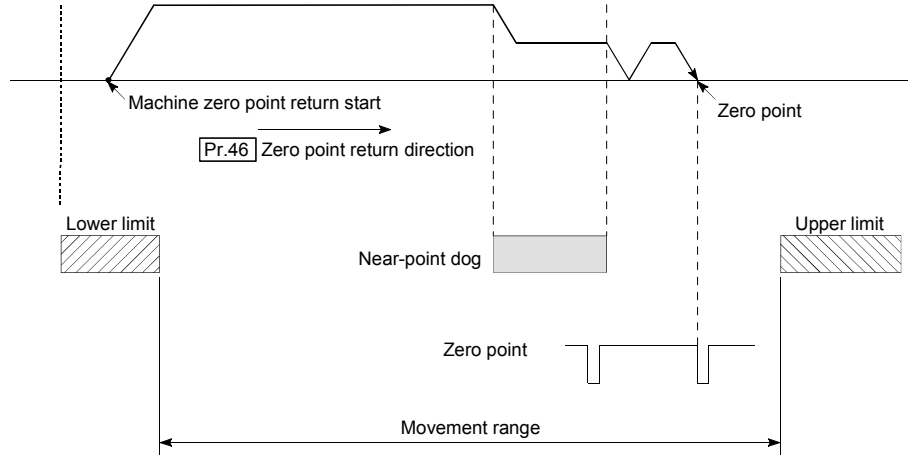

2) When the direction from the workpiece to the zero point is the opposite direction from the "Pr.46 Zero point return direction", the operation carries out a deceleration stop when the near-point dog turns OFF, and then carries out a machine zero point return in the direction set in "Pr.46 Zero point return direction".

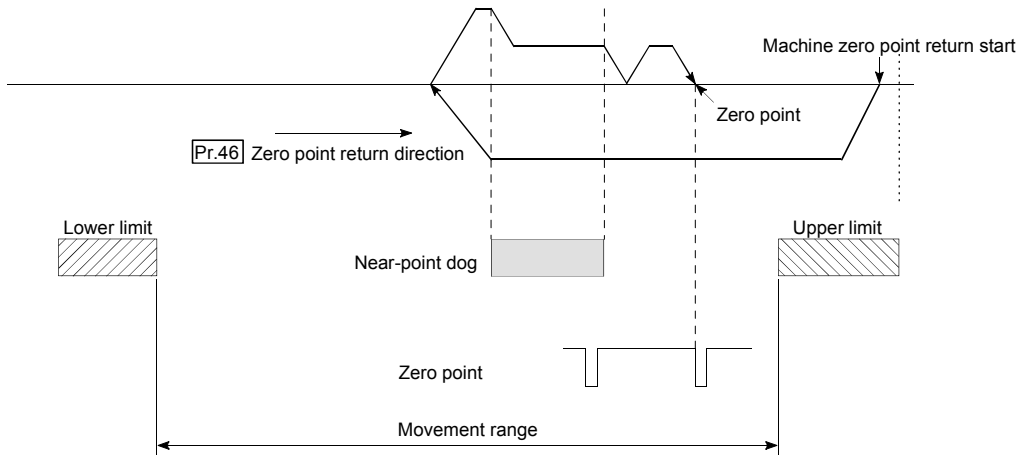

Note) The above figures 1) and 2) are examples where "Pr.46 Zero point return direction" is set to "0: Positive direction".


When "0: Positive direction" is set in Pr.46, check that the limit switch placed in the OPR direction acts as the upper limit.

When "1: Negative direction" is set in Pr.46, check that the limit switch placed in the OPR direction acts as the lower limit. Incorrect wiring of these limit switches may cause improper OPR retry operation. If any malfunction is identified, check and correct "Pr.107 Rotation direction" and the wiring."

Fig. 12.2 Zero point return retry operation from on limit (limit signal OFF)

(c) Zero point return retry operation performed when the zero point is not passed in the near-point dog method

- 1) The machine starts moving in the "Pr.46 Zero point return direction" by a machine zero point returns start.
- 2) The machine decelerates to the "Pr.49 Creep speed" when the near-point dog turns ON.
- 3) The machine decelerates to a stop when the near-point dog turns OFF.
- 4) The machine further moves in the "Pr.46 Zero point return direction" at the "Pr.48 Zero point return speed".
- 5) The machine stops when the upper/lower limit signal turns OFF.

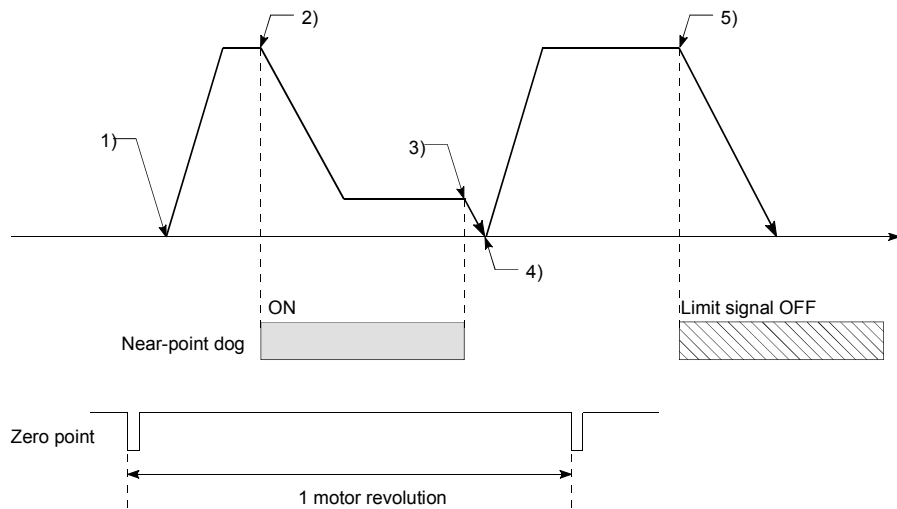

- 6) The machine moves at the "Pr.48 Zero point return speed" in the direction opposite to the "Pr.46 Zero point return direction".
- 7) The machine stops when the near-point dog turns OFF.
- 8) A machine zero point return is carried out again. (Zero point return retry operation)

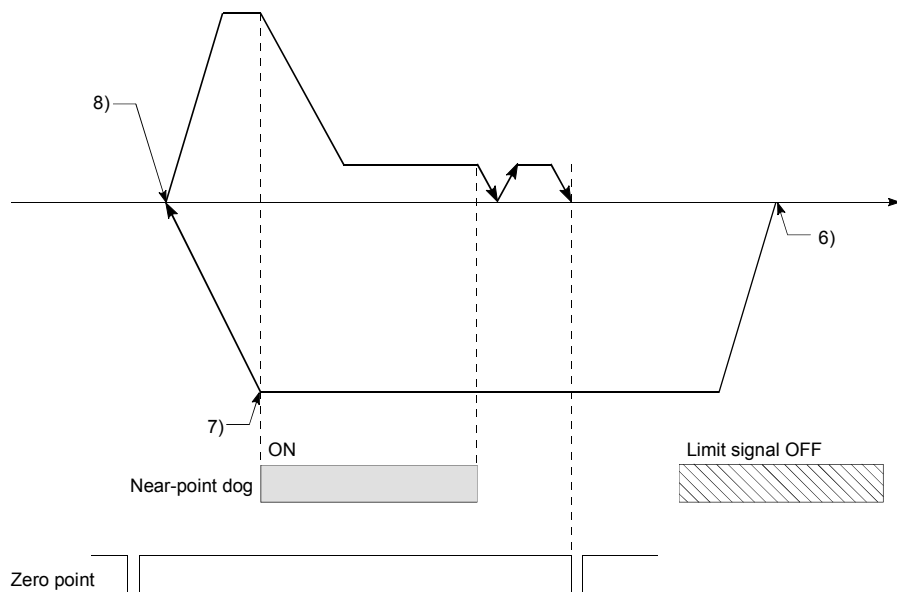


Fig. 12. 3 Zero point return retry operation performed when the zero point is not passed in the near-point dog method

- (d) Setting the dwell time for a zero point return retry  
 With the zero point return retry function, the dwell time can be set for reverse run operation started at detection of the upper/lower limit signal and for a machine zero point return executed after a stop by near-point dog OFF when a zero point return retry is made.

"Pr.58 Dwell time during zero point return retry" is made valid when the operation stops in position "A" of the following figure. (The dwell times in positions A and B are the same values.)

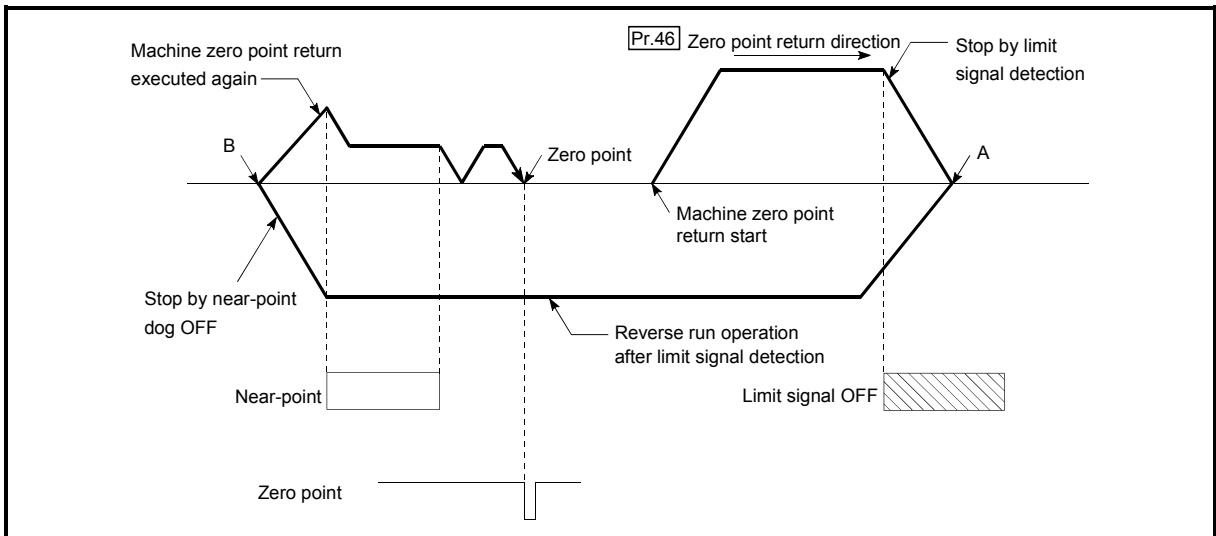


Fig. 12.4 Setting the dwell time during a zero point return retry

## (2) Precaution during control

- (a) The following table shows whether the zero point return retry function may be executed by the "Pr.45 Zero point return method".

Pr.45 Zero point return method	Execution status of zero point return retry function
Near-point dog method	○ : Execution possible* <sup>1</sup>
Near-point dog method 2)	○ : Execution possible* <sup>2</sup>
Count method 1)	○ : Execution possible* <sup>3</sup>
Count method 2)	○ : Execution possible
Count method 3)	○ : Execution possible
Data setting method	× : Execution not possible

- \*1: In the case of the AD75 whose software version is "P" or earlier, if the zero point is not passed between a machine zero point return start and the near-point dog OFF, the machine decelerates to a stop due to an error "zero point not pass at zero point return" (error code: 210), and the zero point return retry function is not executed.
- \*2: When the zero point is not passed between a machine zero point return start and the near-point dog OFF, the operation performed when the zero point is not passed is performed if the zero point return retry function is made valid.  
Refer to section 8.2.4 for the operation of the near-point dog method 2).
- \*3: If the zero point is not passed between a machine zero point return start and the near-point dog OFF, the machine decelerates to a stop due to an error "zero point not pass at zero point return" (error code: 210), and the zero point return retry function is not executed.

- (b) Always establish upper/lower limit switches at the upper/lower limit positions of the machine, and connect an AD75 module. If the zero point return retry function is used without hardware stroke limit switches, the motor will continue rotation until a hardware stroke limit signal is detected.
- (c) Always wire AD75 upper/lower limit switches even when the zero point return function is invalidated. Control cannot be carried out with the AD75 unless the wiring is carried out.
- (d) Do not carry out settings so that the servo amplifier power turns OFF by the upper/lower limit switches connected to the AD75. If the servo amplifier power is turned OFF, the zero point return retry cannot be carried out.

## (3) Setting the zero point return retry function

To use the "zero point return retry function", set the required details in the parameters shown in the following table, and write them to the AD75.

When the parameters are set, the zero point return retry function will be added to the machine zero point return control. The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D). Set "[Pr.58] Dwell time during zero point return retry" according to the user's requirements.

Setting item	Setting value	Setting details	Factory-set initial value
[Pr.50] Zero point return retry	1	Set "1: Carry out zero point return retry by limit switch".	0
[Pr.58] Dwell time during zero point return retry	→	Set the deceleration stop time during zero point return retry. (Random value between 0 and 65535 (ms))	0

\* Refer to section "5.2 List of parameters" for setting details.

**REMARK**

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

### 12.2.2 Zero point shift function

When a machine zero point return is carried out, the zero point is normally established using the near-point dog and zero point. However, by using the zero point shift function, the machine can be moved a designated movement amount from the position where the zero point was detected. A mechanically established zero point can then be interpreted at that point.

The zero point shift function can be used without relation to "Pr.45 Zero point return method".

The details shown below explain about the "zero point shift function".

- (1) Control details
- (2) Setting range for the zero point shift amount
- (3) Movement speed during zero point shift
- (4) Precautions during control
- (5) Setting the zero point shift function

#### (1) Control details

The following drawing shows the operation of the zero point shift function.

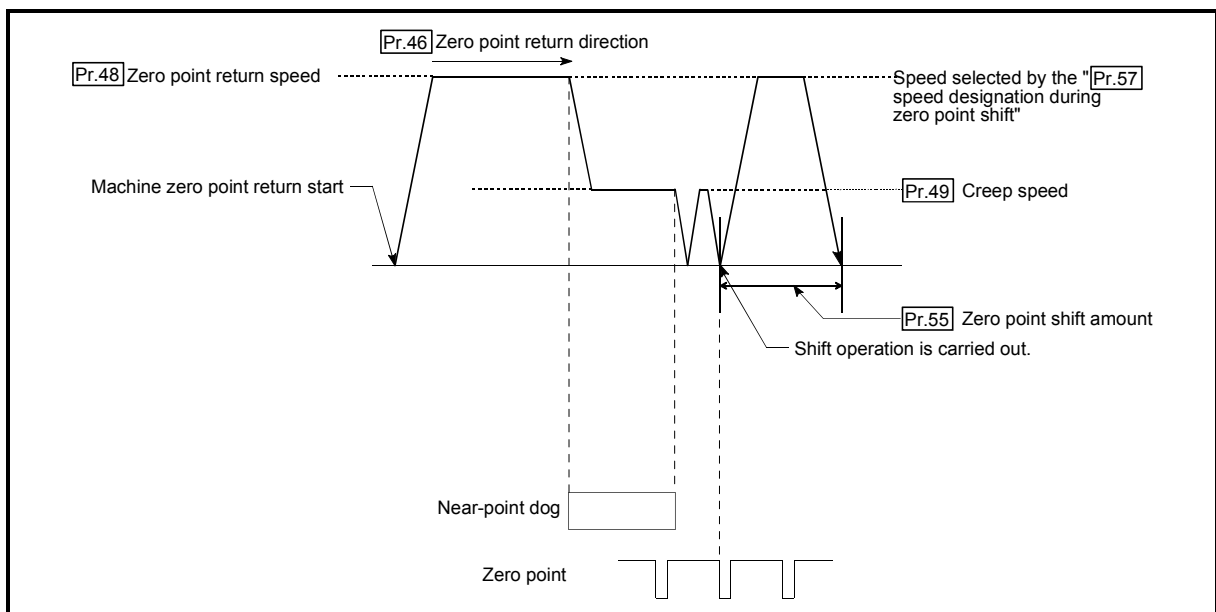


Fig. 12.5 Zero point shift operation

(2) Setting range for the zero point shift amount

Set the zero point shift amount within the range from the detected zero point to the upper/lower limit switches.

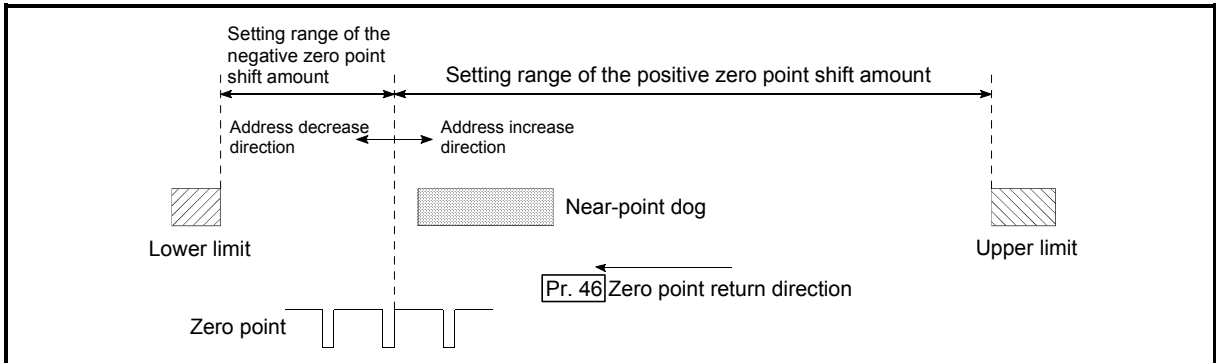


Fig. 12.6 Setting range for the zero point shift amount

(3) Movement speed during zero point shift

When using the zero point shift function, the movement speed during the zero point shift is set in "Pr.57 Speed designation during zero point shift". The movement speed during the zero point shift is selected from either the "Pr.48 Zero point return speed" or the "Pr.49 Creep speed". The following drawings show the movement speed during the zero point shift when a machine zero point return is carried out by the near-point dog method.

(a) Zero point shift operation at the "Pr.48 Zero point return speed"

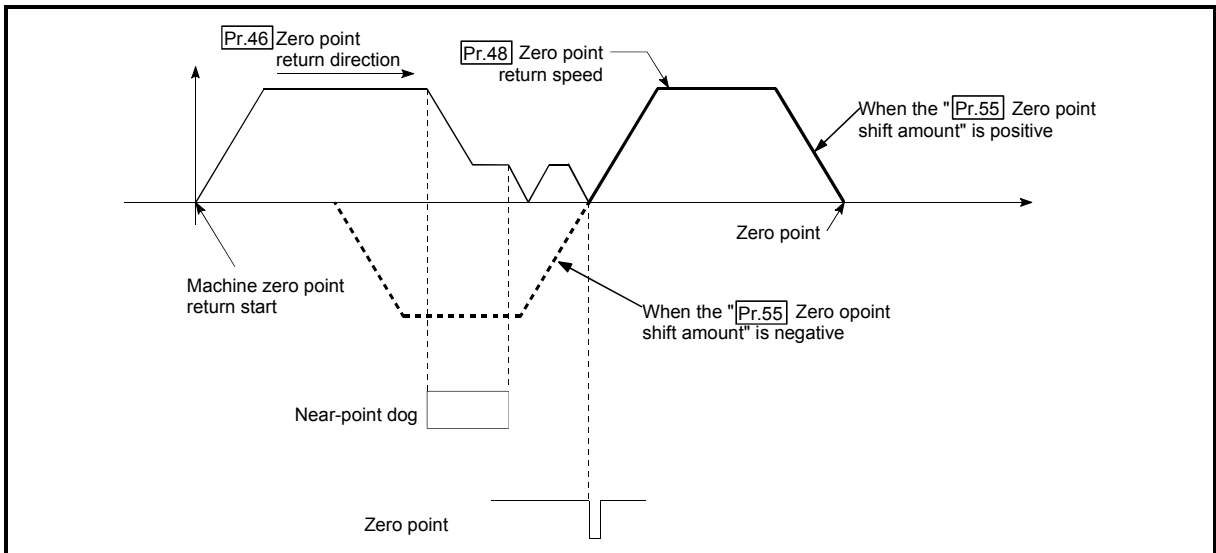


Fig. 12.7 Zero point shift operation at the zero point return speed

(b) Zero point shift operation at the "Pr.49 Creep speed"

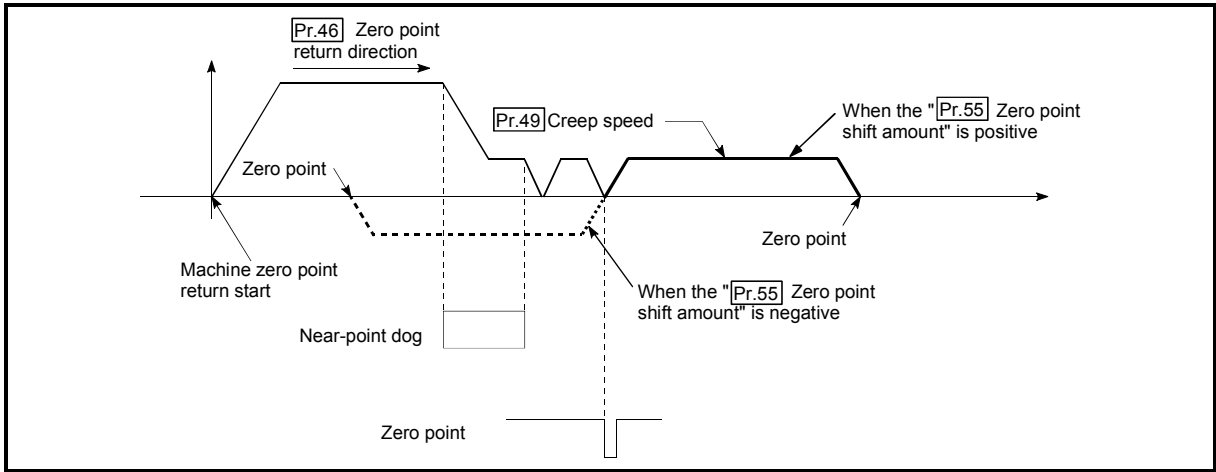


Fig. 12.8 Zero point shift operation at the creep speed

(4) Precautions during control

The following data are set after the zero point shift amount is complete.

- Zero point return request flag (Md.40 Status: b3)
- Zero point return complete flag (Md.40 Status: b4)
- Md.29 Current feed value
- Md.30 Machine feed value
- Md.35 Axis operation status
- Md.44 Movement amount after near-point dog ON ("Pr.55 Zero point shift amount" is not added.)

(5) Setting the zero point shift function

To use the "zero point shift function", set the required details in the parameters shown in the following table, and write them to the AD75.

When the parameters are set, the zero point shift function will be added to the machine zero point return control. The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D).

Setting item	Setting value	Setting details	Factory-set initial value
Pr.55 Zero point shift amount	→	Set the shift amount during the zero point shift.	0
Pr.57 Speed designation during zero point shift	→	Select the speed during the zero point shift 0: Pr.48 Zero point return speed 1: Pr.49 Creep speed	0

\* Refer to "5.2 List of parameters" for setting details.

**REMARK**

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.



### 12.3 Functions for compensating the control

The auxiliary functions for compensating the control include the "backlash compensation function", "electronic gear function", and "near pass mode function". Each function is executed by parameter setting or sequence program creation and writing.

#### 12.3.1 Backlash compensation function

The "backlash compensation function" compensates the backlash amount in the mechanical system. When the backlash compensation amount is set, an extra amount of position/speed commands equivalent to the set backlash amount is output every time the movement direction changes.

The details shown below explain about the "backlash compensation function".

- (1) Control details
- (2) Precautions during control
- (3) Setting the backlash compensation function

##### (1) Control details

The following drawing shows the operation of the backlash compensation function.

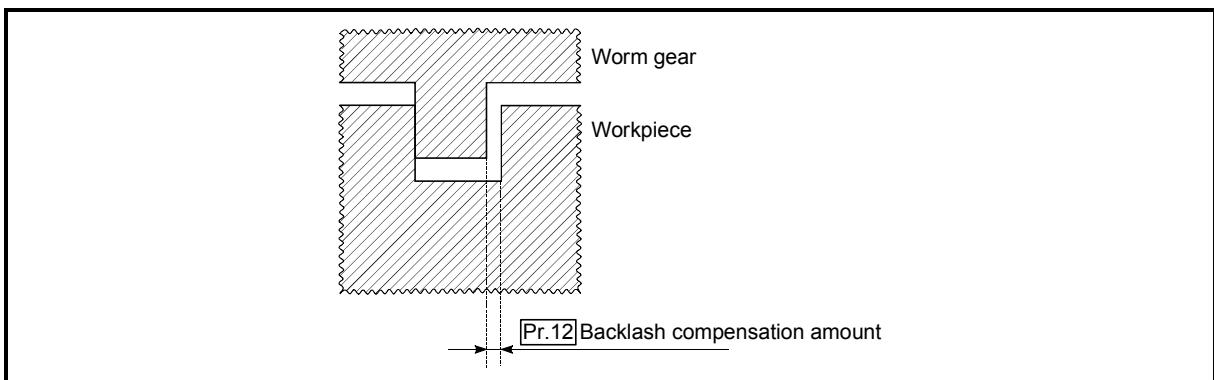


Fig. 12.9 Backlash compensation amount

(2) Precautions during control

- (a) The position/speed commands of the backlash compensation amount are not added to the "[Md.29] Current feed value" or "[Md.30] Machine feed value".
- (b) Always carry out a machine zero point return before starting the control when using the backlash compensation function (when "[Pr.12] Backlash compensation amount" is set). The backlash in the mechanical system cannot be correctly compensated if a machine zero point return is not carried out.
- (c) Set one backlash compensation (value in which the "[Pr.12] Backlash compensation amount" is divided by the "movement amount per pulse") to a value of 255 or less. A "setting error" will occur if 255 is exceeded. (Depending on the connected servo, tracking may not be possible if the backlash compensation is large.)

$$0 \leq \frac{\text{Backlash compensation amount}}{\text{Movement amount per pulse}} \leq 255$$

(Omit values after the decimal point.)

(3) Setting the backlash compensation function

To use the "backlash compensation function", set the "backlash compensation amount" in the parameter shown in the following table, and write it to the AD75. The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D).

Setting item	Setting value	Setting details	Factory-set initial value
[Pr.12] Backlash compensation amount	→	Set the backlash compensation amount.	0

\* Refer to section "5.2 List of parameters" for setting details.

**REMARK**

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

### 12.3.2 Electronic gear function

The "electronic gear function" adjusts the position and speed commands calculated and output according to the parameters set in the AD75 with the actual machine movement amount.

The "electronic gear function" has the following four functions.

- (A) During machine movement, the function increments in the AD75 values less than one pulse that could not be position command output, and outputs the incremented amount of position commands when the total incremented value reached one pulse or more.
- (B) The accumulated value not reaching one pulse is reset to zero when sizing feed control is started. (Even if sizing feed control continues, the same machine movement amount is always used for the control.)
- (C) When the current value is changed, the accumulated value not reaching one pulse is reset to zero.
- (D) The function compensates the mechanical system error of the command movement amount and actual movement amount by adjusting the "movement amount per pulse".  
(The "movement amount per pulse" value is defined by "Pr.2 No. of pulses per rotation (Ap)", "Pr.3 Movement amount per rotation (Al)", and "Pr.4 Unit magnification (Am)".)

The AD75 automatically carries out the processing for (A), (B) and (C).

The details shown below explain about the "electronic gear function", including the method for compensating the error in (D) above, etc.

- (1) Error compensation method
- (2) Relation between the movement amount per pulse and speed
- (3) Precautions during control

## (1) Error compensation method

When position control is carried out by the "movement amount per pulse" set in the AD75 parameters, an error sometimes occurs between the command movement amount (L) and the actual movement amount (L').

That error is compensated in the AD75 by adjusting the values in "[Pr.2] No. of pulses per rotation (Ap)", "[Pr.3] Movement amount per rotation (Al)", and "[Pr.4] Unit magnification (Am)".

## (a) Definition

The "error compensation amount" used to carry out the error compensation is defined as follows.

$$\text{Error compensation amount} = \frac{\text{Actual movement amount (L')}}{\text{Designated movement amount (L)}}$$

The AD75 "movement amount per pulse" is calculated with the following equation.

Movement amount per pulse is "A", "[Pr.2] No. of pulses per rotation is (Ap)", "[Pr.3] Movement amount per rotation is (Al)", and "[Pr.4] Unit magnification is (Am)".

$$A = \frac{Al}{Ap} \times Am$$

## (b) Procedure

- 1) Set the "command movement amount (L)", and carry out positioning. (Set the "movement amount per pulse (A)" according to section "5.2 List of parameters".)
- 2) After positioning, measure the "actual movement amount (L)".
- 3) Calculate the "error compensation amount".

$$\text{Error compensation amount} = \frac{L'}{L}$$

- 4) Calculate the post-compensation "[Pr.2] No. of pulses per rotation (Ap')", "[Pr.3] Movement amount per rotation (Al')", and "[Pr.4] Unit magnification (Am')" from the "post-compensation movement amount per pulse (A')".

$$\begin{aligned} A &= A \times \text{Error compensation amount} \\ &= \frac{Al}{Ap} \times Am \times \frac{L'}{L} \\ &= \frac{Al'}{Ap'} \times Am' \end{aligned}$$

(Adjust with Am' so that Al' and Ap' do not exceed the setting range.)

Calculation example	
(Conditions)	
Movement amount per pulse	: 500 (μm/rev)
No. of pulses per rotation	: 12000 (pulse/rev)
Unit magnification	: 1
(Positioning results)	
Command movement amount	: 100mm
Actual movement amount	: 101mm
(Compensation amount)	
$\frac{AL'}{AP'} = \frac{5 \times 10^3}{12000} \times \frac{101 \times 10^3}{101 \times 10^3} = \frac{5050}{12000} = \frac{101}{240}$	
Movement amount per pulse	: 101 (μm/rev)
No. of pulses per rotation	: 240 (pulse/rev)
Unit magnification	: 1

- 5) Set the post-compensation " No. of pulses per rotation (Ap')", " Movement amount per rotation (Al')", and " Unit magnification (Am')" in the parameters, and write them to the AD75. The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D).

Setting item		Setting value	Setting details	Pre-compensation value
<input type="text" value="Pr.2"/>	No. of pulses per rotation	Ap'	Set the post-compensation value.	Ap
<input type="text" value="Pr.3"/>	Movement amount per rotation	Al'	Set the post-compensation value.	Al
<input type="text" value="Pr.4"/>	Unit magnification	Am'	Set the post-compensation value.	Am

\* Refer to section "5.2 List of parameters" for setting details.

(2) Relation between the movement amount per pulse and speed

The following shows the relation of the "movement amount per pulse (A)" to the command speed and actual speed. The command speed is the speed commanded by each control, and the actual speed is the actual feedrate.

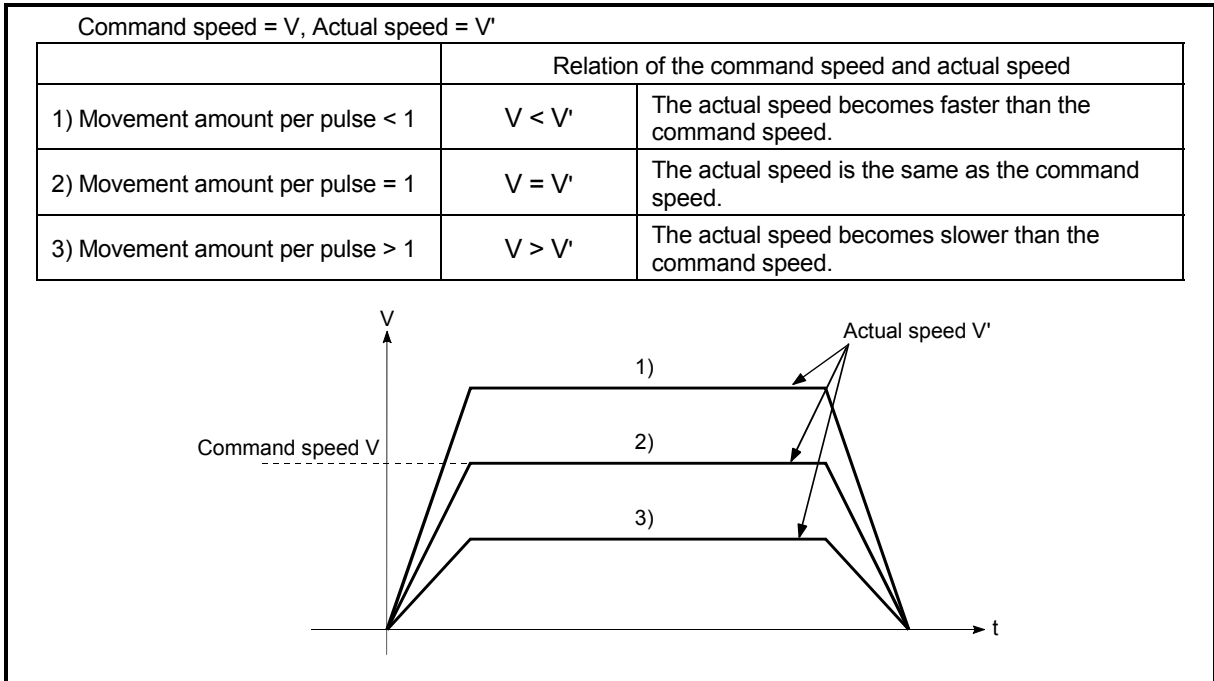


Fig. 12.10 Relation of the movement amount per pulse to the command speed and actual speed

### (3) Precautions during control

It is recommended that the "movement amount per pulse (A)" be set to a value close to "1" for the following reasons.

"1" set in the "movement amount per pulse" indicates the minimum value of

"**Pr.1** Unit setting." (In case of [mm] unit: 0.1 [ $\mu$ m])

"Movement amount per pulse" = "1" means the minimum value of "**Pr.1** Unit setting". (0.1 [m] when the unit setting is [mm])

- (a) If the setting of the movement amount per pulse is less than 1, the command speed increases, and the actual speed may exceed the speed limit value (**Pr.7** Speed limit value, **Pr.32** JOG speed limit value), causing the servomotor speed to be overspeed.
- (b) If the setting of the movement amount per pulse is less than 1, the mechanical system may vibrate.
- (c) Set the movement amount per pulse that will make the command speed to the servo amplifier not more than 1Mpps.  
If the setting of the command speed to the servo amplifier is more than 1Mpps, the AD75 may operate improperly.
- (d) The number of pulses (integer) actually output is reflected to "**Md.29** Current feed value" and "**Md.30** Machine feed value".  
Therefore, if the movement amount per pulse is not set to "1", the actual address may be away from the target address by the amount of a fraction which is less than 1 pulse.

#### REMARK

In the AD75, the general term for the functions in items (a) to (c) above is defined as the "electronic gear function". Refer to the User's Manual for the servomotor for the definition of the "electronic gear" on the servomotor side.

### 12.3.3 Near pass mode function

When carrying out continuous path control using interpolation control, either the "positioning address pass mode" or the "near pass mode" can be selected by setting the "Pr.44 Near pass mode selection for path control".

The "near pass mode" can be selected as the "near pass mode function" to suppress the mechanical vibration occurring during speed changes when carrying out continuous path control using interpolation control. (Mechanical vibration may occur in continuous path control due to the dropping of the output speed during speed changes.)

(A) Positioning address pass mode (factory-set initial value)

The control is carried out so the machine passes the position set in "Da.5 Positioning address/movement amount" of each positioning data unit being continuously executed.

(B) Near pass mode

The extra movement amount occurring at the end of each positioning data unit being continuously executed is carried over to the next positioning data unit. By not carrying out alignment, the output speed drops are eliminated, and the mechanical vibration occurring during speed changes can be suppressed. Because alignment is not carried out, the operation is controlled on a path that passes near the position set in "Da.5 Positioning address/movement amount".

The details shown below explain about the "near pass mode function".

- (1) Control details
- (2) Precautions during control
- (3) Setting the near pass mode function

#### REMARK

The "near pass mode function" is added to AD75 software version "G" and subsequent versions.



(1) Control details

The following drawing shows the paths of the "positioning address pass mode" and "near pass mode".

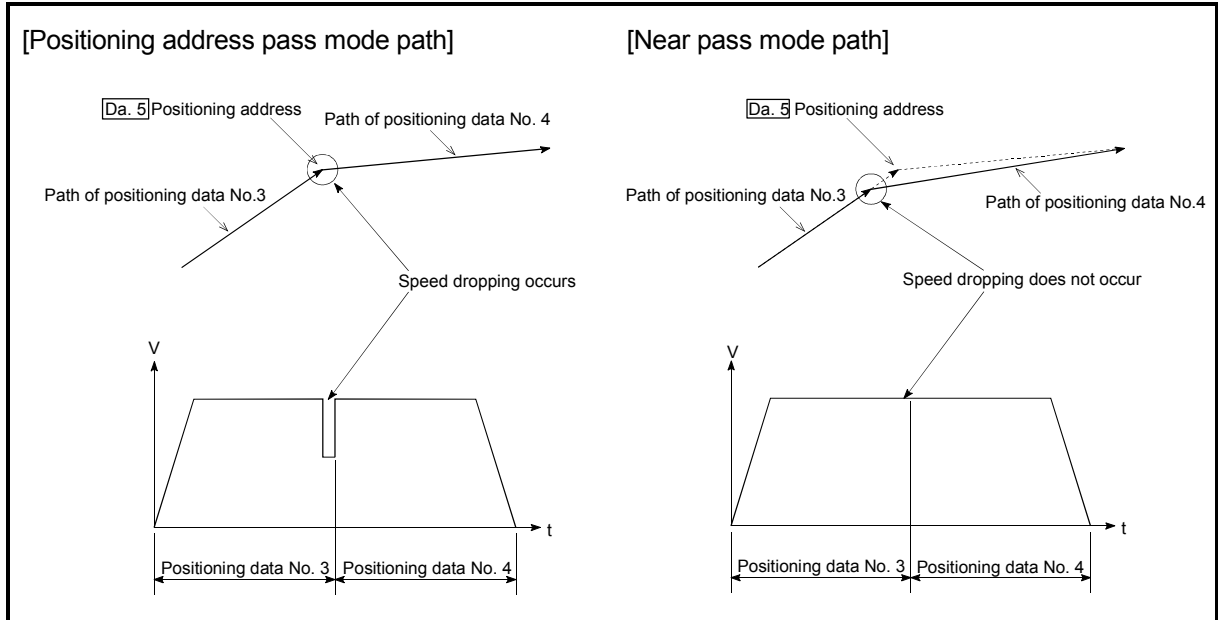


Fig. 12.11 Paths of the positioning address pass mode and near pass mode

(2) Precautions during control

- (a) If the movement amount designated by the positioning data is small when the continuous path control is executed in the near pass mode, the output speed may not reach the designated speed.
- (b) If continuous path control is carried out in the near pass mode, the output will suddenly reverse when the reference axis movement direction changes from the positioning data No. currently being executed to the next positioning data No.  
 If the sudden output reversal affects the mechanical system, carry out control with continuous positioning control.  
 (When the reference axis movement direction changes in the positioning address pass mode, the operation automatically decelerates.)

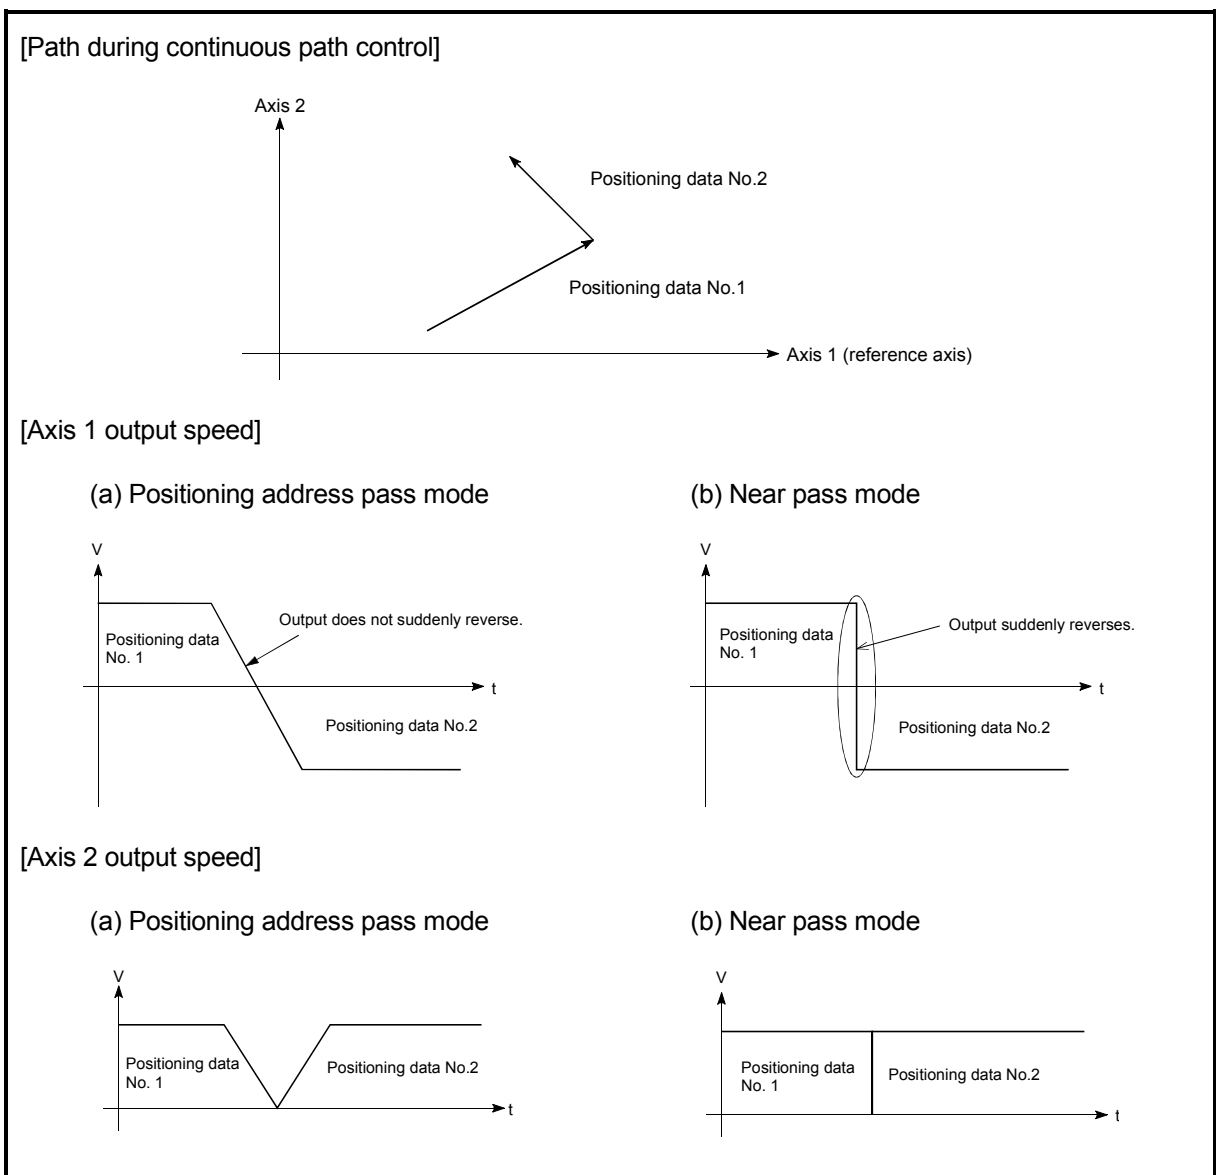


Fig. 12.12 Path and output speed of various axes during continuous path control

- (c) When continuous path control of a circular interpolation is being carried out in the near pass mode, an address in which the extra movement amount is subtracted from the positioning address of the positioning data currently being executed is replaced by the starting point address of the next positioning data No.

Because of this, circular interpolation control cannot be carried out using the increment system.

Because the starting point address will be replaced, an error "large arc error deviation" (error code: 506) may occur.

In this case, adjust the "Pr.42 Allowable circular interpolation error width".


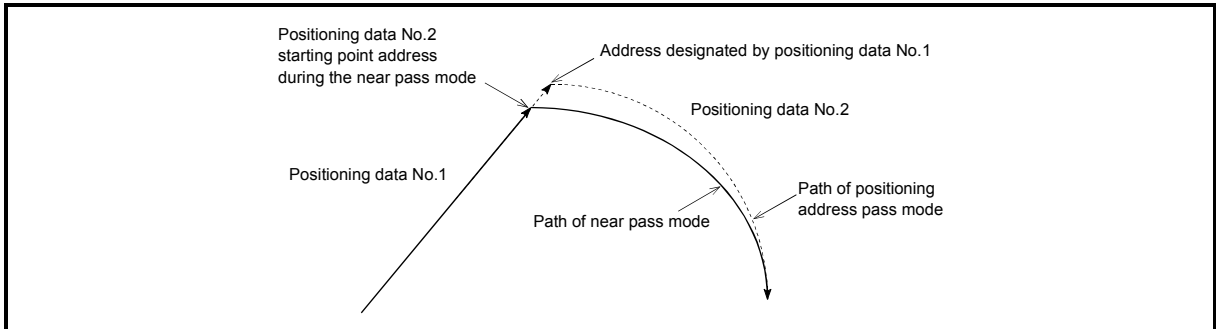


Fig. 12.13 Arc error during the near pass mode

- (d) When a circle center is designated to continuously designate the circular interpolation control by a continuous path designation in the near pass mode, and the positioning address and starting point address of that arc are the same address, the path will make one circle using the two data items. This is because the 2nd data starting point address is shifted by the extra amount of the movement amount occurring from the 1st data.

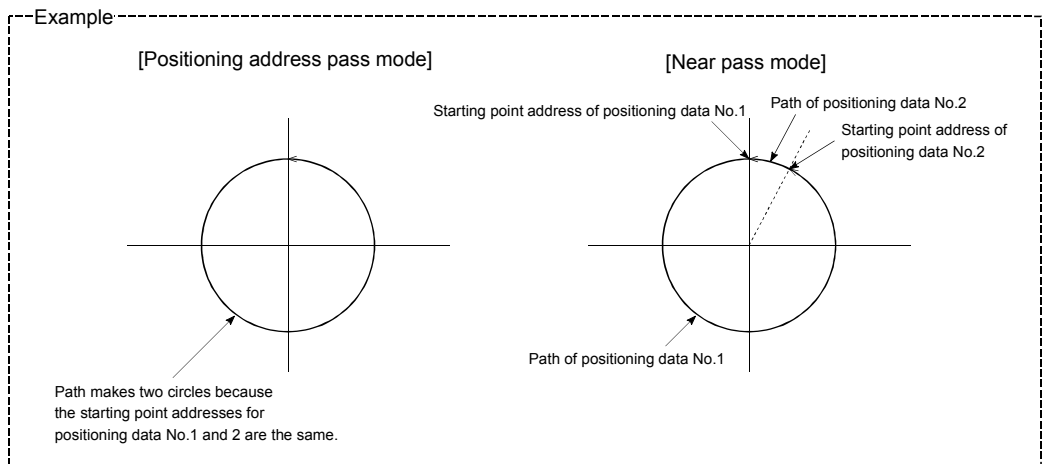

### (3) Setting the near pass mode function

To use the "near path pass mode function", set the "near pass mode" in the parameter shown in the following table, and write it to the AD75.

The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D).

Setting item	Setting value	Setting details	Factory-set initial value
Pr.44 Near pass mode selection for path control	1	Set "1: Near pass mode".	0: Positioning address pass mode

\* Refer to section "5.2 List of parameters" for setting details.

12.3.4 Follow up processing function


Follow up processing monitors the rotation amount (real current value) of the motor in a servo OFF status and reflects it on the current feed value. Hence, if the servomotor rotates during servo OFF, the servomotor will not rotate by the droop pulse value at next servo ON, starting positioning at the stopping position.

The following details will be explained for the "follow up processing function".

- (1) Processing execution timing
- (2) Setting method

(1) Processing execution timing

The timing of follow up processing execution is shown below.

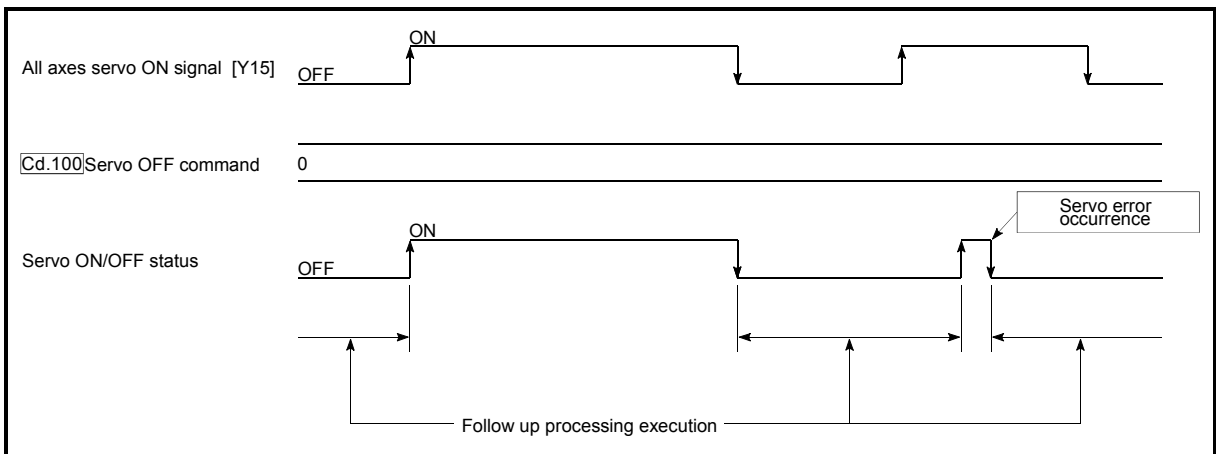

(2) Setting method

Setting is not necessary for execution of the follow up processing function. It is executed during servo OFF all the time.

12.4 Functions to limit the control

Functions to limit the control include the "speed limit function", "torque limit function", "software stroke limit", and "hardware stroke limit". Each function is executed by parameter setting or sequence program creation and writing.

12.4.1 Speed limit function

The speed limit function limits the command speed to a value within the "speed limit value" setting range when the command speed during control exceeds the "speed limit value".

The details shown below explain about the "speed limit function".

- (1) Relation between the speed limit function and various controls
- (2) Precautions during control
- (3) Setting the speed limit function

(1) Relation between the speed limit function and various controls

The following table shows the relation of the "speed limit function" and various controls.

Control type		Speed limit function	Speed limit value	
Zero point return control	Machine zero point return control	◎	Pr.7 Speed limit value	
	High-speed zero pint return control	◎		
Main positioning control	Position control	1-axis linear control		◎
		2-axis linear interpolation control		◎
		1-axis fixed-dimension feed control		◎
		2-axis fixed-dimension feed control (interpolation)		◎
		2-axis circular interpolation control		◎
	Speed control	◎		
	Speed/position changeover control	◎		
	Other control	Current value change		—
JUMP command		—		
Manual control	JOG operation	◎	Pr.32 JOG speed limit value	
	Manual pulse generator operation	×	Setting not possible.	

- ◎ : Always set
- × : Setting not possible
- : Setting not required (Setting value is invalid. Use the initial values or setting values within a range where no error occurs.)

(2) Precautions during control

During interpolation control, speed limiting is carried out at the reference axis side setting value.

(The speed limit will not function on the interpolation side.)

(3) Setting the speed limit function

To use the "speed limit function", set the "speed limit value" in the parameters shown in the following table, and write them to the AD75.

The set details are validated after they are written to the AD75.

Setting item	Setting value	Setting details	Factory-set initial value
Pr.7 Speed limit value	→	Set the speed limit value (max. speed during control).	0
Pr.32 JOG speed limit value	→	Set the speed limit value during JOG operation (max. speed during control). (Note that "Pr.32 JOG speed limit value" shall be less than or equal to "Pr.7 Speed limit value".)	0

\* Refer to section "5.2 List of parameters" for setting details.

**REMARK**

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

12.4.2 Torque limit function

The "torque limit function" limits the generated torque to a value within the "torque limit value" setting range when the torque generated in the servomotor exceeds the "torque limit value".

The "torque limit function" protects the deceleration function, limits the power of the operation pressing against the stopper, etc. It controls the operation so that unnecessary force is not applied to the load and machine.

The details shown below explain about the "torque limit function".

- (1) Relation between the torque limit function and various controls
- (2) Control details
- (3) Precautions during control
- (4) Setting the torque limit function

(1) Relation between the torque limit function and various controls

The following table shows the relation of the "torque limit function" and various controls.

Control type		Torque limit function	Torque limit value *1	
Zero point return control	Machine zero point return control	○	[Cd.101] Torque output setting value*2,*3	
	High-speed zero pint return control	○	[Cd.101] Torque output setting value*2	
Main positioning control	Position control	1-axis linear control		○
		2-axis linear interpolation control		○
		1-axis fixed-dimension feed control		○
		2-axis fixed-dimension feed control (interpolation)		○
		2-axis circular interpolation control		○
	Speed control			○
	Speed/position changeover control			○
	Other control	Current value change	-	-
JUMP command		-	-	
Manual control	JOG operation	○	[Cd.101] Torque output setting value*2	
	Manual pulse generator operation	○	[Cd.101] Torque output setting value*2	

- : Set when required (Set to " - " when not used.)
- : Setting not required (Setting value is invalid. Use the initial values or setting values within a range where no error occurs.)
- \*1: Indicates the torque limit value to be transferred to the servo amplifier at a start of the corresponding control when the "[Cd.30] New torque value" is "0".
- \*2: When the "[Cd.101] Torque output setting value" is "0" or greater than the "[Pr.18] Torque limit setting value", the torque is limited at the "[Pr.18] Torque limit setting value".
- \*3: After deceleration to the "[Pr.49] Creep speed", the torque is limited with the "[Pr.56] Zero point return torque limit value".

At a start of the corresponding control, the "[Cd.101] Torque output setting value" is referred to, and its value is transferred to the servo amplifier. However, if the "[Cd.101] Torque output setting value" is "0" or greater than the "[Pr.18] Torque limit setting value", the "[Pr.18] Torque limit setting value" is transferred to the servo amplifier.

## (2) Control details

The following drawing shows the operation of the torque limit function.

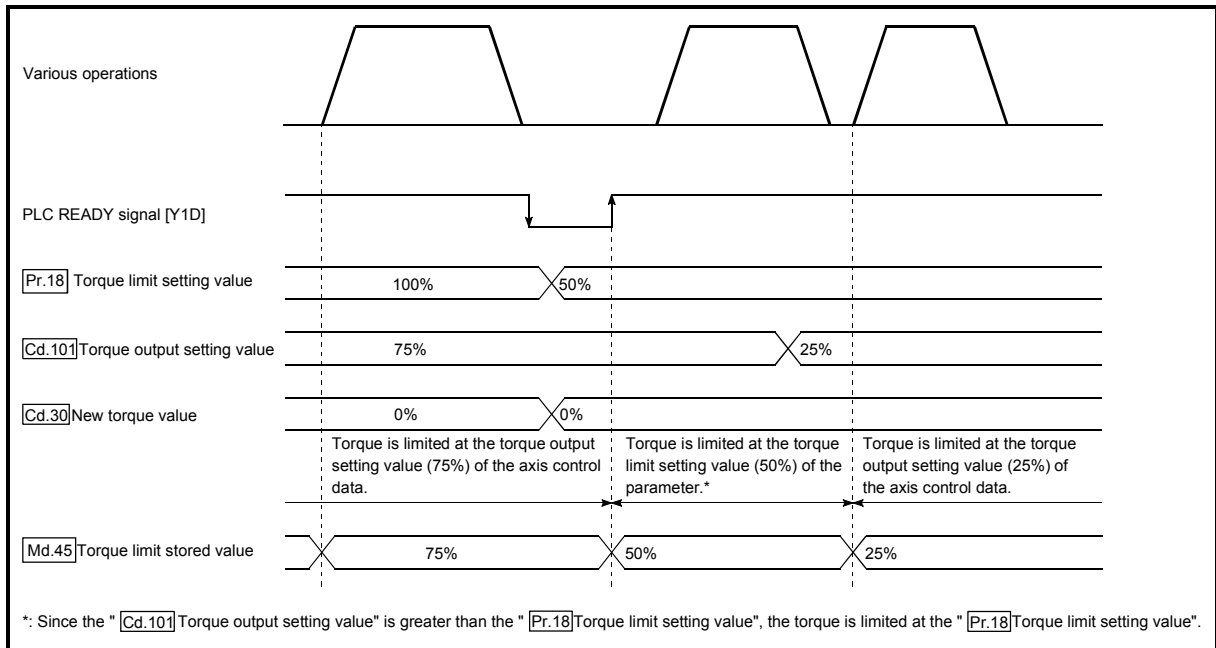


Fig. 12.14 Torque limit function operation

## (3) Precautions during control

- (a) When limiting the torque at the "[Cd.101] Torque output setting value", confirm that the "[Cd.30] New torque value" is set to "0". If this axis control data is set to a value other than "0", the "[Cd.30] New torque value" will be validated, and the torque will be limited at that value. (Refer to section "12.5.4 Torque change function" for details of the "new torque value".)
- (b) When the operation is stopped by torque limiting, the droop pulses will remain in the deviation counter. When the load torque is eliminated, operation for the amount of droop pulses will be carried out.



## (4) Setting the torque limit function

- (a) To use the "torque limit function", set the "torque limit value" in the axis control data or parameters indicated in the following table, and write them to the AD75.

The data set to the axis control data is validated at the rising edge (OFF to ON) of the PLC READY signal (Y1D) and at a start of the corresponding control.

The data set to the parameters are validated at the rising edge (OFF to ON) of the PLC READY signal (Y1D).

Setting item	Setting value	Setting details	Factory-set initial value
<b>Cd.101</b>	Torque output setting value	→ Set the torque limit value to be output by the servomotor in %.	0
<b>Pr.18</b>	Torque limit setting value	→ Set the torque limit value as a percentage.	300
<b>Pr.56</b>	Zero point return torque limit value	→ Set the torque limit value to be used after starting the deceleration to the " <b>Pr.49</b> Creep speed" with %.	300

\* Refer to section "5.2 List of parameters" and "5.7 List of control data" for setting details.

- (b) The "torque limit value" set in the AD75 is transferred to the servo amplifier at a start of the corresponding control to limit the torque.

**REMARK**

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

### 12.4.3 Software stroke limit function

In the "software stroke limit function" the address established by a machine zero point return is used to set the upper and lower limits of the moveable range of the workpiece. Movement commands issued to addresses outside that setting range will not be executed.

In the AD75, the "current feed value" and "machine feed value" are used as the addresses indicating the current position. However, in the "software stroke limit function", the address used to carry out the limit check is designated in the "Pr.15 Software stroke limit selection". (Refer to section "9.1.4 Confirming the current value" or details on the "current feed value" and "machine feed value".)

The upper and lower limits of the moveable range of the workpiece are set in "Pr.13 Software stroke limit upper limit value"/ "Pr.14 Software stroke limit lower limit value".

The details shown below explain about the "software stroke limit function".

- (1) Differences in the moveable range when "current feed value" and "machine feed value" are selected.
- (2) Software stroke limit check details
- (3) Relation between the software stroke limit function and various controls
- (4) Precautions during software stroke limit check
- (5) Setting the software stroke limit function
- (6) Invalidating the software stroke limit
- (7) Setting when the control unit is "degree"

- (1) Differences in the moveable range when "current feed value" and "machine feed value" are selected.

The following drawing shows the moveable range of the workpiece when the software stroke limit function is used.

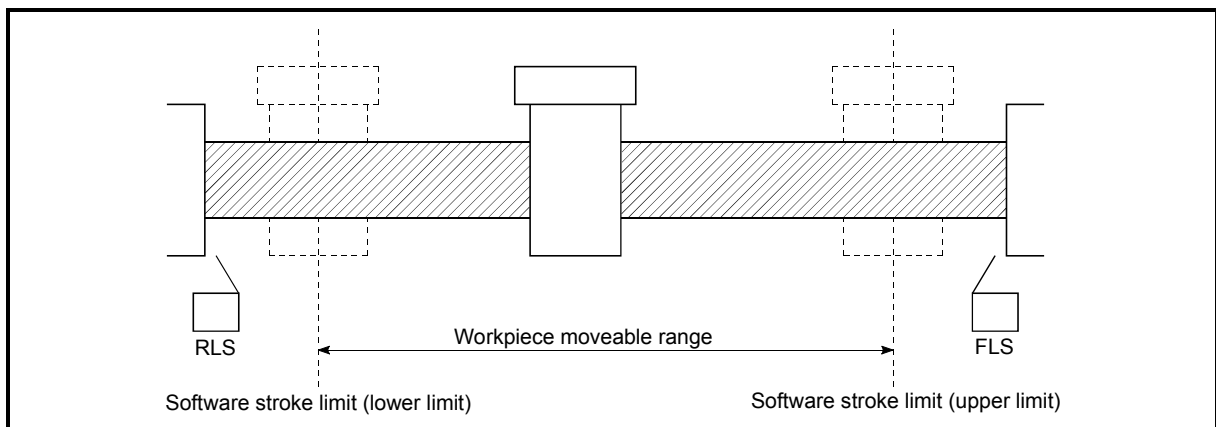


Fig. 12.15 Workpiece moveable range

The following drawing shows the differences in the operation when "[Md.29] Current feed value" and "[Md.30] Machine feed value" are used in the moveable range limit check.

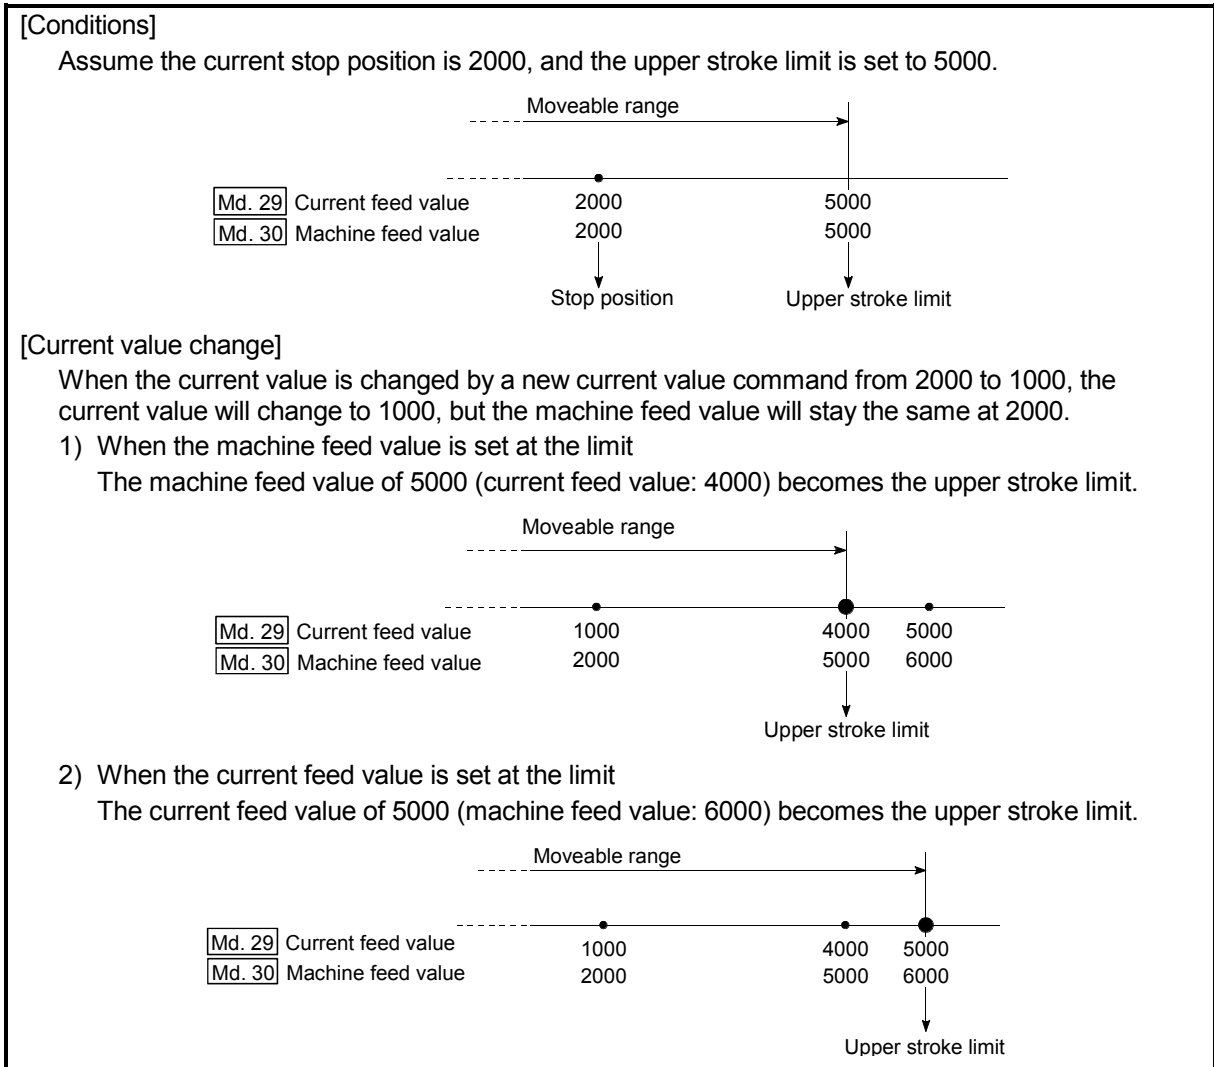


Fig. 12.16 Software stroke limits of the current feed value and machine feed value

**POINT**  
When "machine feed value" is set in "[Pr.15] Software stroke limit selection", the moveable range becomes an absolute range referenced on the zero point. When "current feed value" is set, the moveable range is the relative range from the "current feed value".

(2) Software stroke limit check details

Check details		Processing when an error occurs
1)	An error shall occur if the current value*1 is outside the software stroke limit range*2. (Check "[Md.29] Current feed value" or "[Md.30] Machine feed value".)	An "axis error" will occur, and the operation will not start.
2)	An error shall occur if the command address is outside the software stroke limit range. (Check "[Da.5] Positioning address/movement amount".)	

\*1 Check whether the "[Md.29] Current feed value" or "[Md.30] Machine feed value" is set in "[Pr.15] Software stroke limit selection".

\*2 Moveable range from the "[Pr.13] Software stroke limit upper limit value" to the "[Pr.14] Software stroke limit lower limit value".

(3) Relation between the software stroke limit function and various controls

Control type		Limit check	Processing at check
Zero point return control	Machine zero point return control	—	Check not carried out.
	High-speed zero pint return control	—	
Main positioning control	Position control	1-axis linear control	Checks 1) and 2) in the previous section (2) are carried out.  For position control: The axis comes to an immediate stop when it exceeds the software stroke limit range.
		2-axis linear interpolation control	
		1-axis fixed-dimension feed control	
		2-axis fixed-dimension feed control (interpolation)	
		2-axis circular interpolation control	
	Speed control	○*3, 4	
	Speed/position changeover control	○*3, 4	
Other control	Current value change	—	When the current value is changed, an error will not occur even if the new address is outside the software stroke limit range. However, an error "start outside stroke limit +/-" (error code: 507/508) will occur at the next operation start.
	JUMP command	—	Check not carried out.
Manual control	JOG operation	△*5	Check 1) in the previous section (2) is carried out. The machine will carry out a deceleration stop when the software stroke limit range is exceeded. If the address is outside the software stroke limit range, the operation can only be started toward the moveable range after the error is reset.
	Manual pulse generator operation	△*5	

◎ : Check valid

○ : Check only carried out at start. (If "current feed value" is set in the "[Pr.15] Software stroke limit selection", the check will not be carried out when the "[Pr.22] Current feed value" is updated.)

— : Check not carried out (check invalid).

△ : Valid only when "valid" is set in the "[Pr.16] Software stroke limit valid/invalid setting".

\*3 : The value in "[Md.29] Current feed value" will differ according to the "[Pr.22] Current feed value during speed control" setting.


\*4 : When the unit is "degree", check is not carried out during speed control.

\*5 : When the unit is "degree", check is not carried out.


(4) Precautions during software stroke limit check

- (a) A machine zero point return must be executed beforehand for the "software stroke limit function" to function properly.
- (b) During interpolation control, a stroke limit check is carried out for the current values of both the reference axis and the interpolation axis. Neither axis will start if an error occurs, even if it only occurs in one axis.
- (c) During circular interpolation control, the "Pr.13 Software stroke limit upper limit value" / "Pr.14 Software stroke limit lower limit value" may be exceeded.

In this case, a deceleration stop will not be carried out even if the stroke limit is exceeded. Always install an external limit switch if there is a possibility the stroke limit will be exceeded.

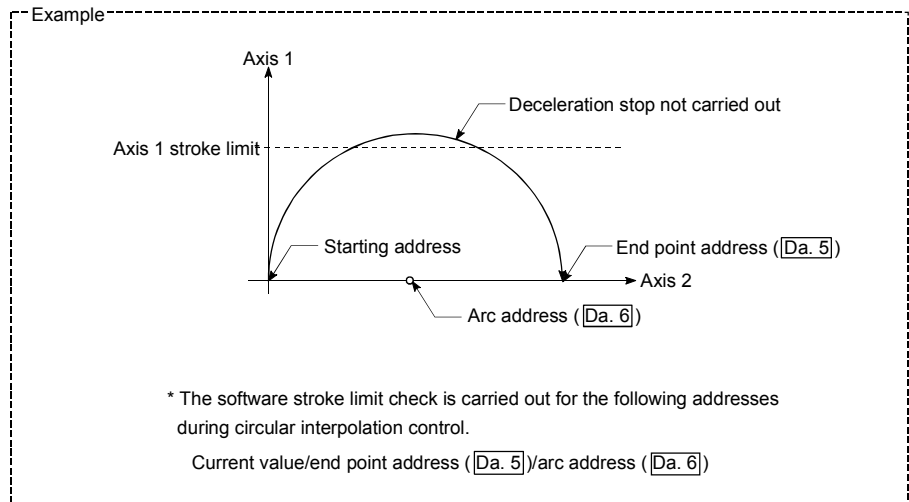

- (d) If an error is detected during continuous path control, the operation will immediately stop after the positioning data just before the positioning data where the error occurred has been executed.

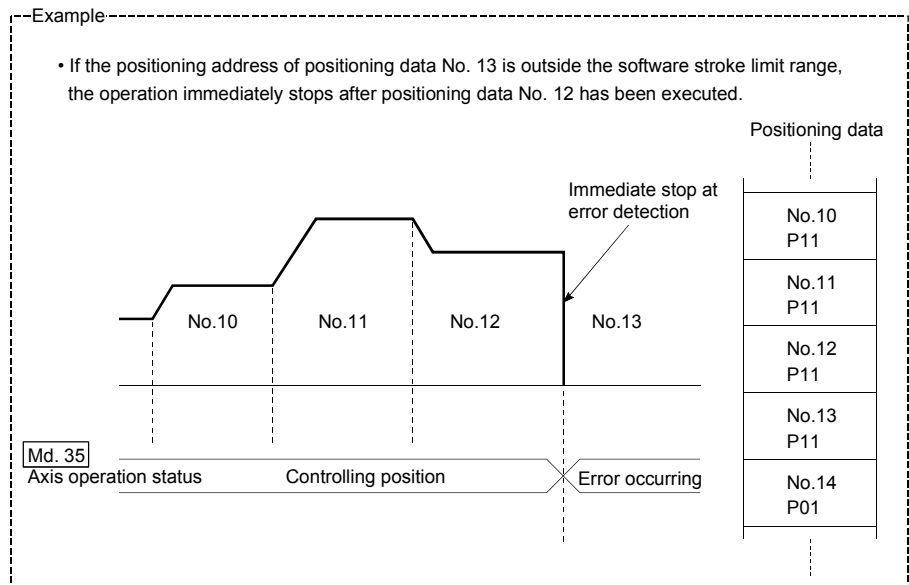

- (e) During simultaneous start, a stroke limit check is carried out for the current values of both axes to be started. Neither axis will start if an error occurs, even if it only occurs in one axis.

(5) Setting the software stroke limit function

To use the "software stroke limit function", set the required values in the parameters shown in the following table, and write them to the AD75.

The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D).

Setting item	Setting value	Setting details	Factory-set initial value
Pr.13 Software stroke limit upper limit value	→	Set the upper limit value of the moveable range.	2147483647
Pr.14 Software stroke limit lower limit value	→	Set the lower limit value of the moveable range.	-2147483648
Pr.15 Software stroke limit selection	→	Set whether to use the "Md.29 Current feed value" or "Md.30 Machine feed value" as the "current value".	0: Current feed value
Pr.16 Software stroke limit valid/invalid setting	1: Valid	Set whether the software stroke limit is validated or invalidated during manual control (JOG operation, manual pulse generator operation).	0: Invalid

\* Refer to section "5.2 List of parameters" for setting details.

(6) Invalidating the software stroke limit

To invalidate the software stroke limit, set the following parameters as shown, and write them to the AD75. (Set a value within the setting range.)

$$\boxed{\text{Pr.13}} \text{ Software stroke limit upper limit value} = \boxed{\text{Pr.14}} \text{ Software stroke limit lower limit value}$$

(For manual operation, set "0: software stroke limit invalid" in the "Pr.16 Software stroke limit valid/invalid setting".)

The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D).

When the unit is "degree", the software stroke limit check is not performed during speed control (including speed control in speed/position changeover control) or during manual control, independently of the values set in Pr.13, Pr.14 and Pr.16.

**REMARK**

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

(7) Setting when the control unit is "degree"

■ Current value address

The "[Md.29] Current feed value" address is ring addresses between 0 and 359.99999° .

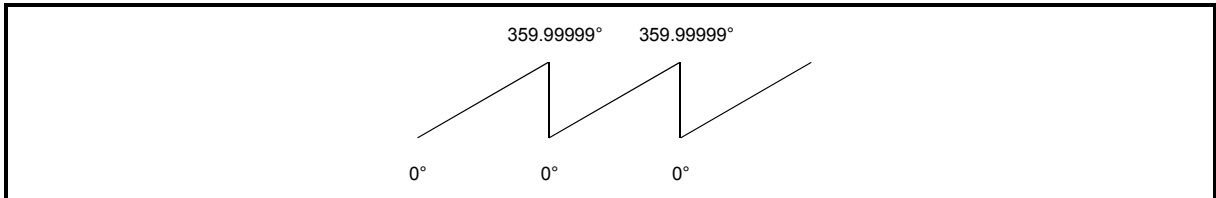


Fig. 12.17 Current value address when the control unit is "degree".

■ Setting the software stroke limit

The upper limit value/lower limit value of the software stroke limit is a value between 0 and 359.99999° .

(1) Setting when the software stroke limit is to be validated.

When the software stroke limit is to be validated, set the upper limit value in a clockwise direction from the lower limit value.

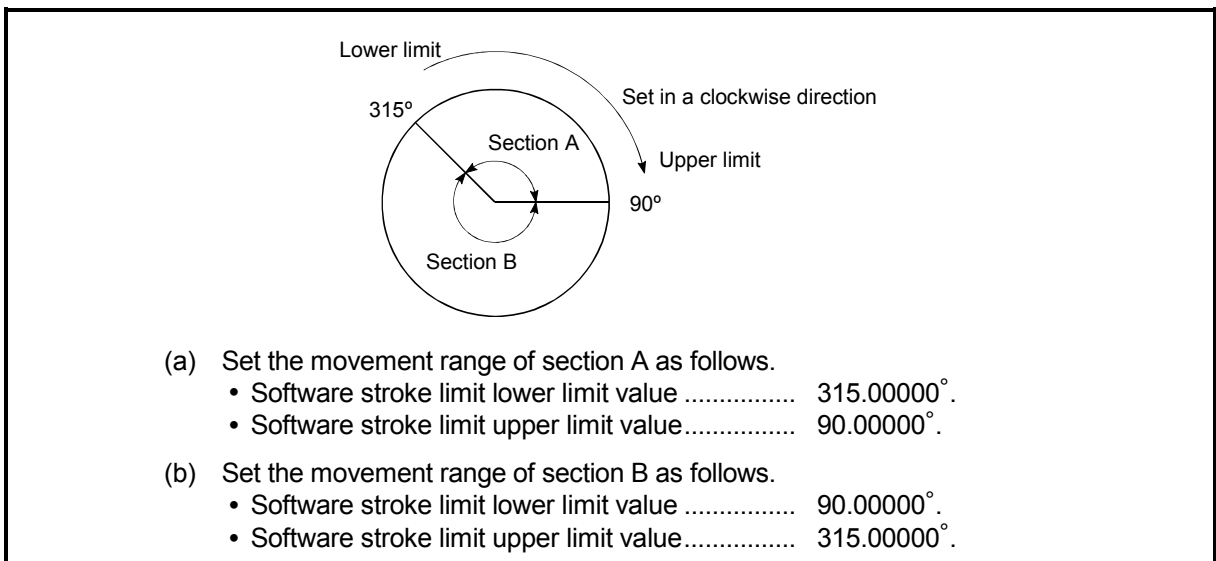


Fig. 12.18 Software stroke limit when the control unit is "degree"

12.4.4 Hardware stroke limit function

In the "hardware stroke limit function", limit switches are set at the upper/lower limit of the physical moveable range, and the control is stopped (by deceleration stop) by the input of a signal from the limit switch. Damage to the machine can be prevented by stopping the control before the upper/lower limit of the physical moveable range is reached.

The details shown below explain about the "hardware stroke limit function".

- (1) Control details
- (2) Wiring the hardware stroke limit
- (3) Precautions during control
- (4) When the hardware stroke limit is not used

(1) Control details

The following drawing shows the operation of the hardware stroke limit function.

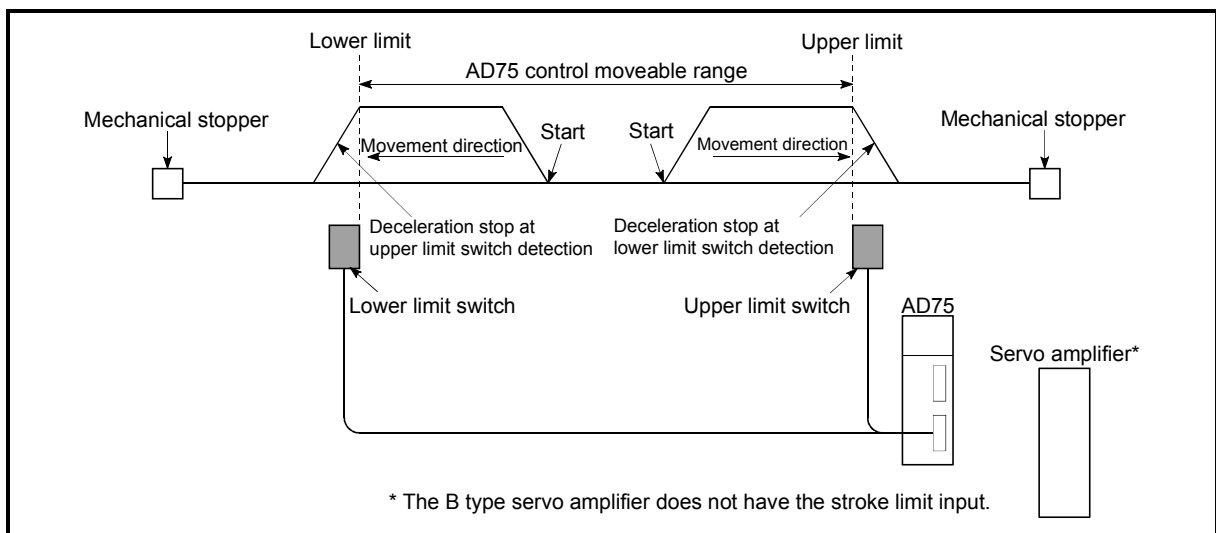


Fig. 12.19 Hardware stroke limit function operation



(2) Wiring the hardware stroke limit

When using the hardware stroke limit function, wire the terminals of the AD75 upper/lower limit stroke limit as shown in the following drawing.

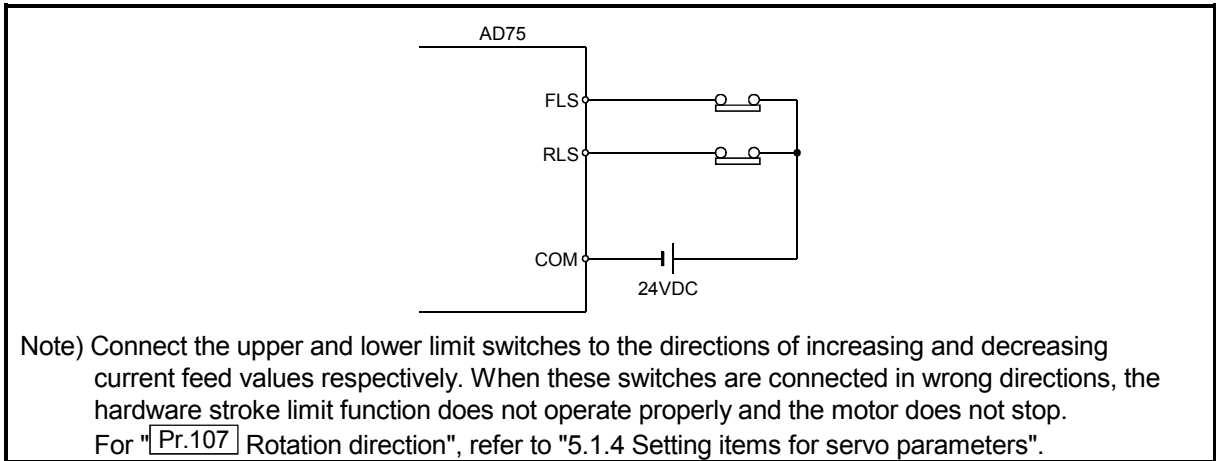


Fig. 12.20 Wiring when using the hardware stroke limit

(3) Precautions during control

- (a) If the machine is stopped outside the AD75 control range (outside the upper/lower limit switches), or if stopped by hardware stroke limit detection, the "zero point return control", "main positioning control", and "advanced positioning control" cannot start. To carry out these types of control again, return the workpiece to the AD75 control range by a "JOG operation" or "manual pulse generator operation".
- (b) If the circuit between the RLS (lower limit signal) and COM, or between the FLS (upper limit signal) and COM is open (including when not wired), the upper/lower limit signal will turn OFF, and control with the AD75 will not be possible.

(4) When the hardware stroke limit is not used

When not using the hardware stroke limit function, wire the terminals of the AD75 upper/lower limit stroke limit as shown in the following drawing.

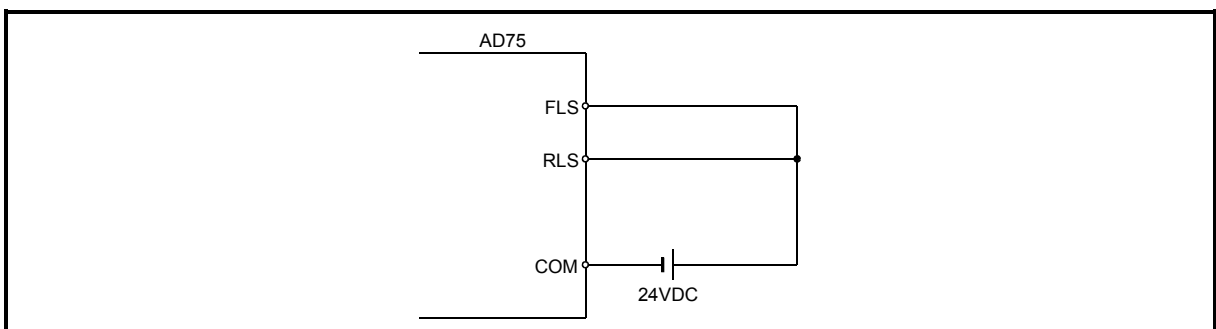


Fig. 12.21 Wiring when not using the hardware stroke limit

12.4.5 Servo ON/OFF function

The "servo ON/OFF function" performs the servo ON/OFF of the servo amplifier, which is connected to the AD75, from the AD75.

Performing servo ON makes the servo operable.

Performing servo OFF puts the servomotor in a free run status, so that the axis can be moved by external force when a machine system fault occurs, for example.

The servo ON/OFF status of the servo amplifier can be confirmed using "Md.116 Servo status (b1: Servo ON)".

<b>Important</b>
Always switch the servo ON when performing positioning control. Control cannot be performed in a servo OFF status.

The following details will be explained for the "servo ON/OFF function".

- (1) Servo ON method
- (2) Servo OFF method
- (3) Restart at servo OFF to ON

(1) Servo ON method

Servo ON includes all axes servo ON and axis-by-axis servo ON.

- (a) All axes servo ON commands the servo amplifiers of all axes to perform servo ON.

Turn ON the all axes servo ON signal (Y15) when the following conditions are satisfied.

- No errors are detected in the servo amplifiers.
- The "Cd.100 Servo OFF command" (buffer memory address: 1179 (Axis 1), 1229 (Axis 2), 1279 (Axis 3)) is "0".

If an error is detected in any of the servo amplifiers during all axes servo ON, servo OFF is carried out on only the axis where the error has occurred.

- (b) Axis-by-axis servo ON returns the axes, where servo OFF was performed, to the servo ON status on an axis basis when the all axes servo ON signal (Y15) is ON (during all axes servo ON).

When the following conditions are satisfied, set the data indicated in the following table.

- No errors are detected in the servo amplifiers.
- The all axes servo ON signal (Y15) is ON.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.100 Servo OFF command	0	Set "0: Servo ON".	1179	1229	1279

\* Refer to section "5.7 List of control data" for the setting details.

(2) Servo OFF method

Servo OFF includes all axis servo OFF and axis-by-axis servo OFF.

- (a) All axes servo OFF commands the servo amplifiers of all axes to perform servo OFF.  
Turn OFF the all axes servo ON signal (Y15) when the "[Md.35] Axis operation status" of all axes are in any of the following statuses. (The servo ON signal is ignored if it is turned OFF while any other axis is operating.)

- Standby
- Stop
- Step standby
- Step stop
- Error occurrence
- Step error occurrence

- (b) Axis-by-axis servo OFF performs the servo OFF of only any of the axes when the all axes servo ON signal (Y15) is ON (during all axes servo ON). When the "[Md.35] Axis operation status" of the axis whose servo will be switched OFF is in any of the following statuses, set the data indicated in the following table.

- Standby
- Stop
- Step standby
- Step stop
- Error occurrence
- Step error occurrence

Setting item		Setting value	Setting details	Buffer memory address		
				Axis 1	Axis 2	Axis 3
[Cd.100]	Servo OFF command	1	Set "1: Servo OFF".	1179	1229	1279

\* Refer to section "5.7 List of control data" for the setting details.

(3) Restart at servo OFF to ON

This section explains whether a restart is allowed or not, the setting method and precautions in the case where servo OFF is performed once by a servo emergency stop command during operation or by a servo OFF command during a stop and servo ON is then performed again. (For the restarting method, refer to section "6.5.5 Restart program".)

(a) Restart operation at servo OFF to ON


- 1) Restart at servo ON after servo OFF by servo emergency stop
 

When operation is stopped by the servo emergency stop signal sent to the servo amplifier, "[Md.35] Axis operation status" turns to "Error occurrence" once, and then turns to "Servo OFF" since servo OFF is performed automatically.

When the servo emergency stop signal to the servo amplifier turns OFF, servo ON is performed automatically, and "[Md.35] Axis operation status" turns to "Stop" or "Standby".

When "[Md.35] Axis operation status" is "Stop", operation can be restarted by "[Cd.13] Restart command".

When "[Md.35] Axis operation status" is other than "Stop", a warning "Restart not possible" (warning code: 104) occurs and the restart command is ignored.

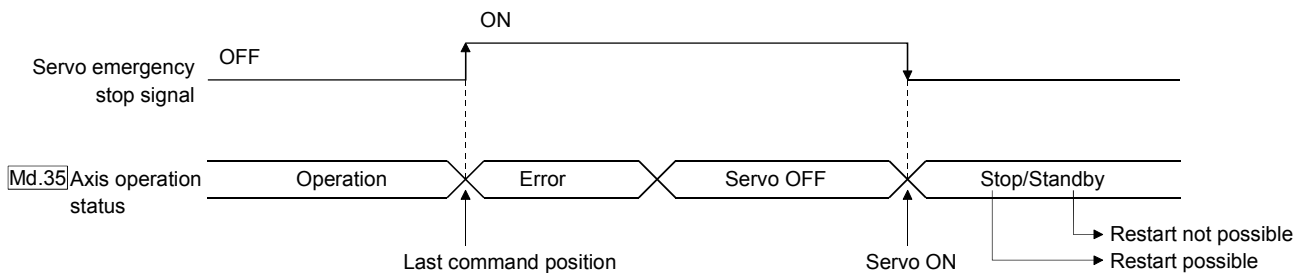


- 2) Restart at servo ON after servo OFF by all axes servo ON signal (Y15) or "Cd.100 Servo OFF command"

When operation is stopped by an external "stop signal" or the axis stop signal (Y13 (Axis 1), Y14 (Axis 2), Y1C (Axis 3)), "Md.35 Axis operation status" turns to "Stop". (Refer to section "6.5.6 Stop program".)

At this time, servo OFF is performed by the OFF of the servo ON signal or by the "Cd.100 Servo OFF command", and when servo ON is performed again, "Md.35 Axis operation status" turns to "Stop" or "Standby".

When "Md.35 Axis operation status" is "Stop", operation can be restarted by "Cd.13 Restart command".

When "Md.35 Axis operation status" is other than "Stop", a warning "Restart not possible" (warning code: 104) occurs and the restart command is ignored.

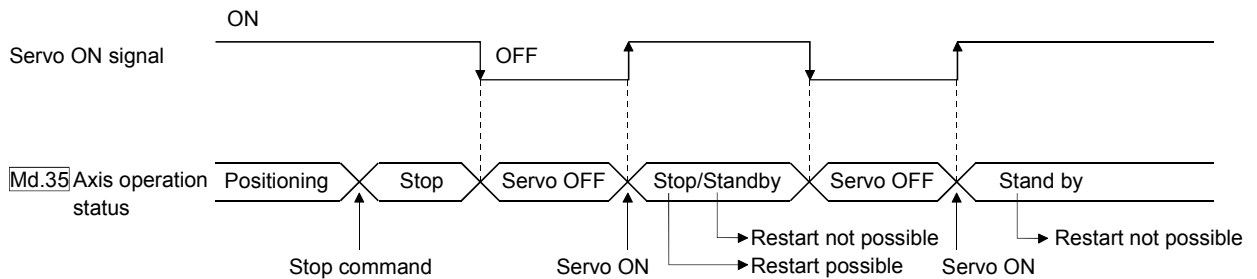

(b) Conditions for restart at servo OFF to ON

- 1) The "Md.35 Axis operation status" at servo OFF to ON is "Stop" or "Standby" depending on the difference between the last command position of the AD75 at servo ON to OFF and the current feed value at servo OFF to ON (range of movement during servo OFF).

Range of movement during servo OFF	Md.35 Axis operation status	Restart possible or not
Inside the range of "Pr.150 Setting for the restart allowable range when servo OFF to ON"	Stop	Restart possible
Outside the range of "Pr.150 Setting for the restart allowable range when servo OFF to ON"	Standby	Restart not possible

- 2) Setting of "[Pr.150] Setting for the restart allowable range when servo OFF to ON"

To enable or disable a restart at servo OFF to ON, set the "movement range during servo OFF" in the following parameter.

The set data is validated at the rising edge (OFF to ON) of the PLC READY signal (Y1D).

Setting item		Setting value	Setting details		Buffer memory address		
					Axis 1	Axis 2	Axis 3
[Pr.150]	Setting for the restart allowable range when servo OFF to ON	→	Restart not allowed	Set "0: Restart not allowed".	64	214	364
			Restart allowed	Set the restart allowable movement range during servo OFF, 1 to 163840 (pulses).	65	215	365

\* \*Refer to section "5.2 List of parameters" for the setting details.


"[Pr.150] Setting for the restart allowable range when servo OFF to ON" cannot be set with the AD75TU whose software version is "C" or earlier.

(c) Precautions for restart at servo OFF to ON


- 1) To restart operation by servo OFF to ON, the difference between the last command position and current value is output once at servo ON. If the setting for the restart allowable range when servo OFF to ON is large at this time, overload occurs in the machine system such as the servo side.

Make the setting for the restart allowable range when servo OFF to ON within the range where the machine system is not affected by the output provided once.

[Operation at emergency stop input]

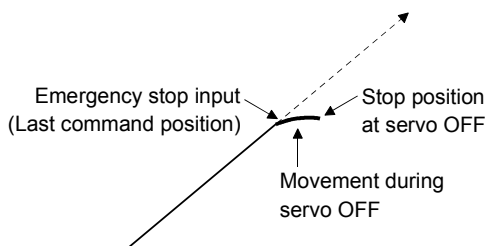

[Operation at restart]

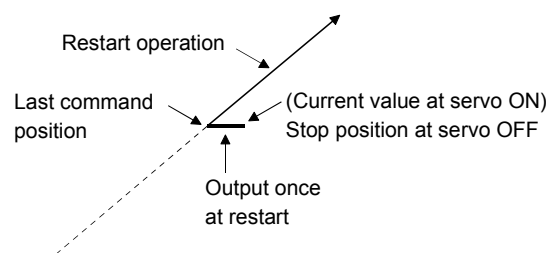

- 2) A restart at servo OFF to ON is valid at the servo OFF to ON performed at the first time.

At the servo OFF to ON performed at the second time or later, "[Pr.150] Setting for the restart allowable range when servo OFF to ON" is ignored.

- 3) Perform servo OFF in the status where the machine system has stopped completely.

A restart at servo OFF to ON is not applicable to the system where the machine system is operated by external pressure, etc. during servo OFF.

## 12.5 Functions to change the control details

Functions to change the control details include the "speed change function", "override function", "acceleration/deceleration time change function" and "torque change function". Each function is executed by parameter setting or sequence program creation and writing.

Both the "speed change function" or "override function" change the speed, but the differences between the functions are shown below. Use the function that corresponds to the application.

"Speed change function"

- The speed is changed at any time, only in the control being executed.
- The new speed is directly set.

"Override function"

- The speed is changed for all control to be executed. (Note that this excludes manual pulse generator operation.)
- The new speed is set as a percent (%) of the command speed.

### 12.5.1 Speed change function

The speed control function is used to change the speed during control to a newly designated speed at any time.

The new speed is directly set in the buffer memory, and the speed is changed by a speed change command ( $\overline{\text{Cd.17}}$  Speed change request) or external start signal.

The details shown below explain about the "speed change function".

- (1) Control details
- (2) Precautions during control
- (3) Setting the speed change function from the programmable controller CPU
- (4) Setting the speed change function using an external start signal

(1) Control details

The following drawing shows the operation during a speed change.

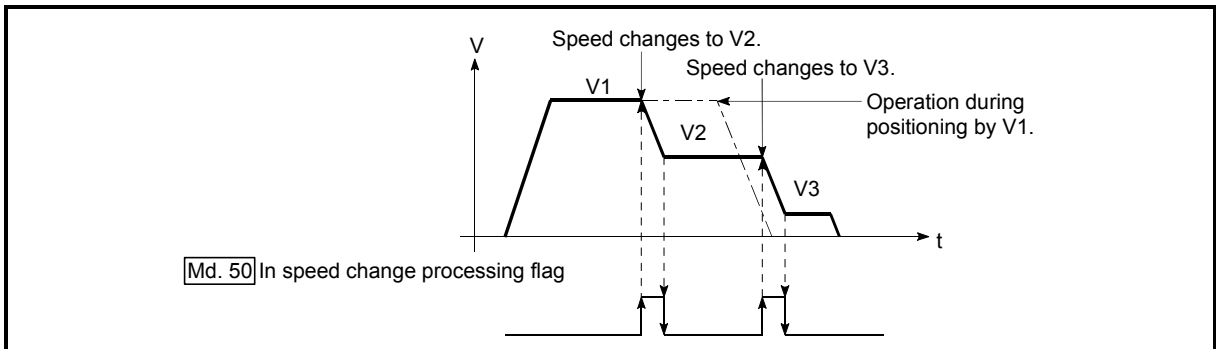


Fig. 12.22 Speed change operation

(2) Precautions during control

(a) Control is carried out as follows at the speed change during continuous path control.

- 1) When no speed designation (current speed) is provided in the next positioning data:
  - The next positioning data is controlled at the "[Cd.16] New speed value".
- 2) When a speed designation (current speed) is provided in the next positioning data:
  - The next positioning data is controlled at its command speed ([Da.7]).

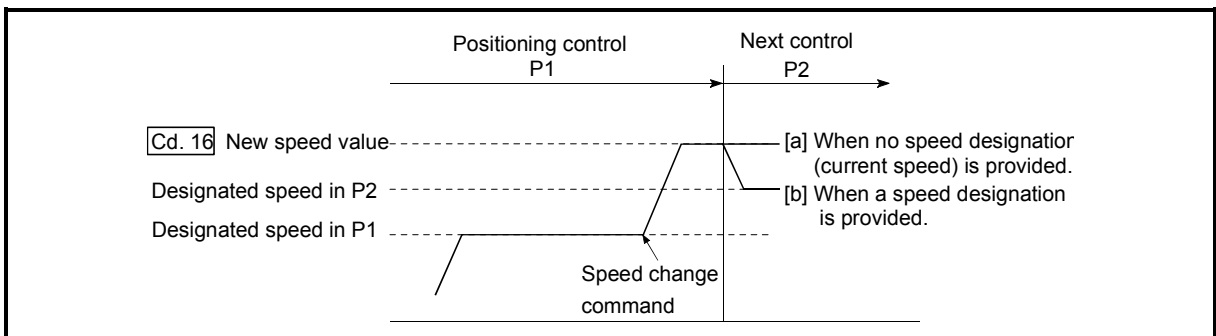


Fig. 12.23 Speed change during continuous path control

(b) When changing the speed during continuous path control, the speed change will be ignored if there is not enough distance remaining to carry out the change.



- (c) When the speed is changed by setting "[Cd.16] New speed value" to "0", the operation is carried out as follows.
- A deceleration stop is carried out, and the speed change 0 flag ([Md.40] Status: b10) turns ON.  
(During interpolation control, the speed change 0 flag on the reference axis side turns ON.)
  - The axis stops, but "[Md.35] Axis operation status" does not change, and the BUSY signal remains ON. (If a stop signal is input, the BUSY signal will turn OFF, and "[Md.35] Axis operation status" will change to "stopped".)
- \* In this case, setting the "[Cd.16] New speed value" to a value besides "0" will turn OFF the speed change 0 flag ([Md.40] Status: b10), and enable continued operation.

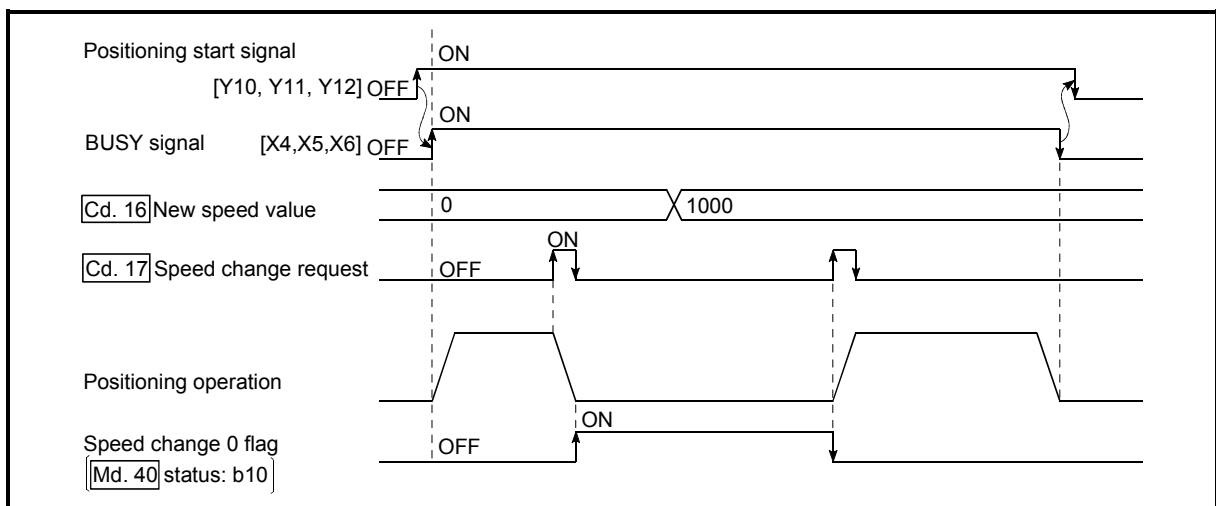


Fig. 12.24 Speed change at new speed value "0"

- (d) A warning "deceleration and stop speed change" (warning code: 500) occurs and the speed cannot be changed in the following cases.
- During deceleration by a stop command
  - During automatic deceleration during positioning control
- (e) A warning "speed limit value over" (warning code: 501) occurs and the speed is controlled at the "[Pr.7] Speed limit value" when the value set in "[Cd.16] New speed value" is equal to or larger than the "[Pr.7] Speed limit value".
- (f) When the speed is changed during interpolation control, the required speed is set in the reference axis.
- (g) When carrying out consecutive speed changes, be sure there is an interval between the speed changes of 100ms or more.  
(If the interval between speed changes is short, the AD75 will not be able to track, and it may become impossible to carry out commands correctly.)

(3) Setting the speed change function from the programmable controller CPU

The following shows the data settings and sequence program example for changing the control speed of axis 1 from the programmable controller CPU. (In this example, the control speed is changed to "20.00mm/min".)

(a) Set the following data.

(Use the start time chart shown in section (2) below as a reference, and set using the sequence program shown in section (3).)

Setting item	Setting value	Setting details	Buffer memory address			
			Axis 1	Axis 2	Axis 3	
Cd.16	New speed value	2000	Set the new speed.	1156 1157	1206 1207	1256 1257
Cd.17	Speed change request	1	Set "1: Change the speed".	1158	1208	1258

\* Refer to section "5.7 List of control data" for details on the setting details.

(b) The following shows the speed change time chart.


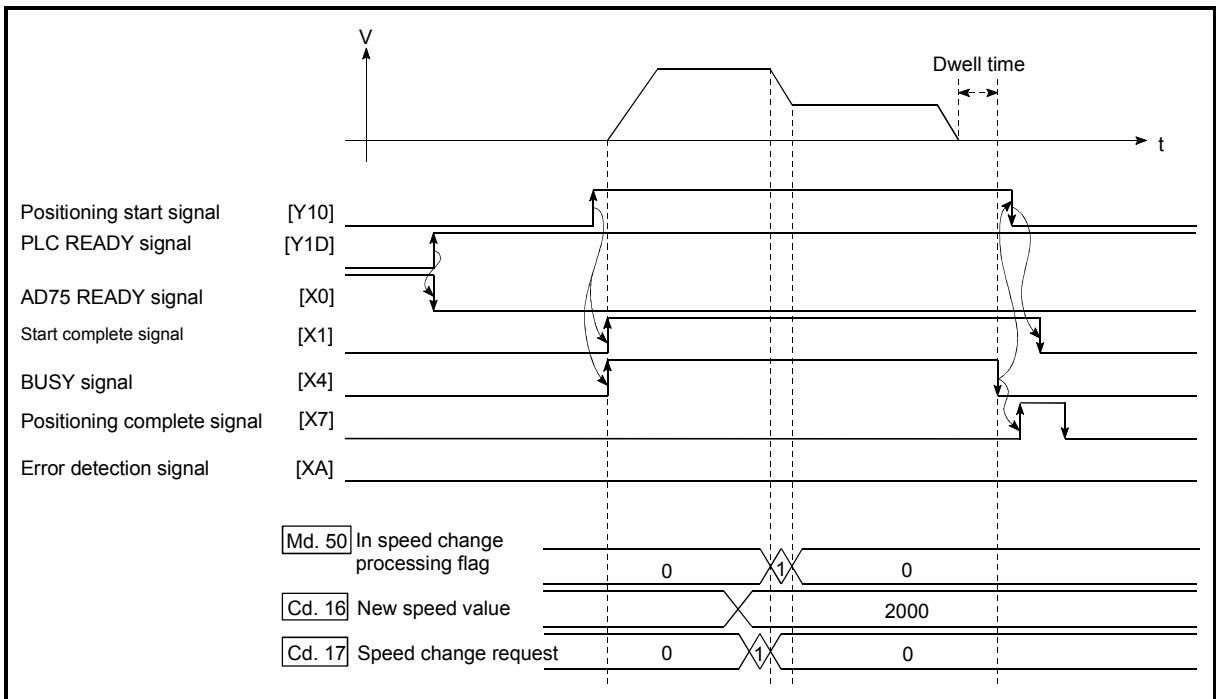


Fig. 12.25 Time chart for changing the speed from the programmable controller CPU

(c) Add the following sequence program to the control program, and write it to the programmable controller CPU.

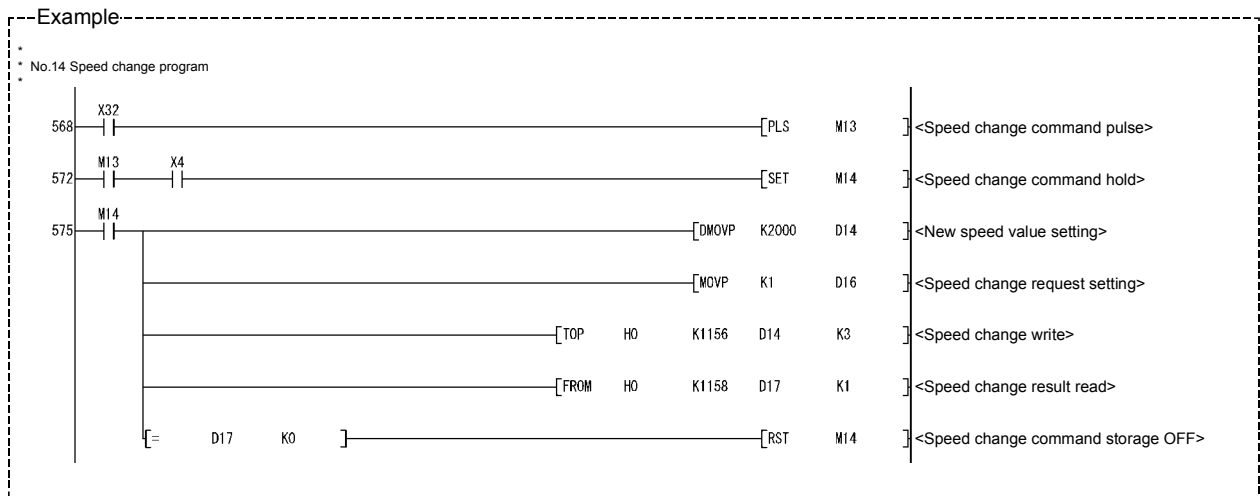

(4) Setting the speed change function using an external start signal

The speed can also be changed using an "external start signal".

The following shows the data settings and sequence program example for changing the control speed of axis 1 using an "external start signal". (In this example, the control speed is changed to "10000.00mm/min".)

- (a) Set the following data to change the speed using an external start signal. (Use the start time chart shown in section (2) below as a reference, and set using the sequence program shown in section (3).)

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Pr.43 External start function selection	1	Set "1: External speed change request".	62	212	362
Cd.16 New speed value	1000000	Set the new speed.	1156	1206	1256
			1157	1207	1257
Cd.25 External start valid	1	Set "1: Validate the external start".	1171	1221	1271

\* Refer to section "5.2 List of parameters" and "5.7 List of control data" for details on the setting details.

- (b) The following shows the speed change time chart.


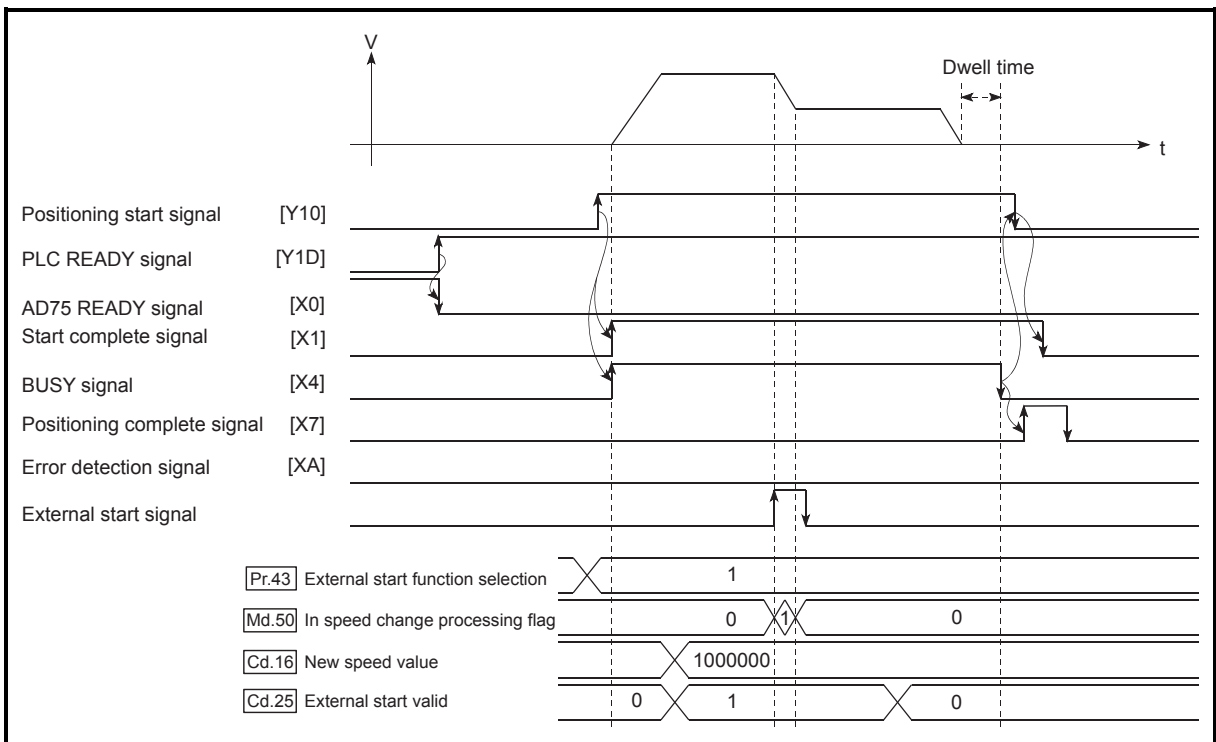


Fig. 12.26 Time chart for changing the speed using an external start signal

(c) Add the following sequence program to the control program, and write it to the programmable controller CPU.

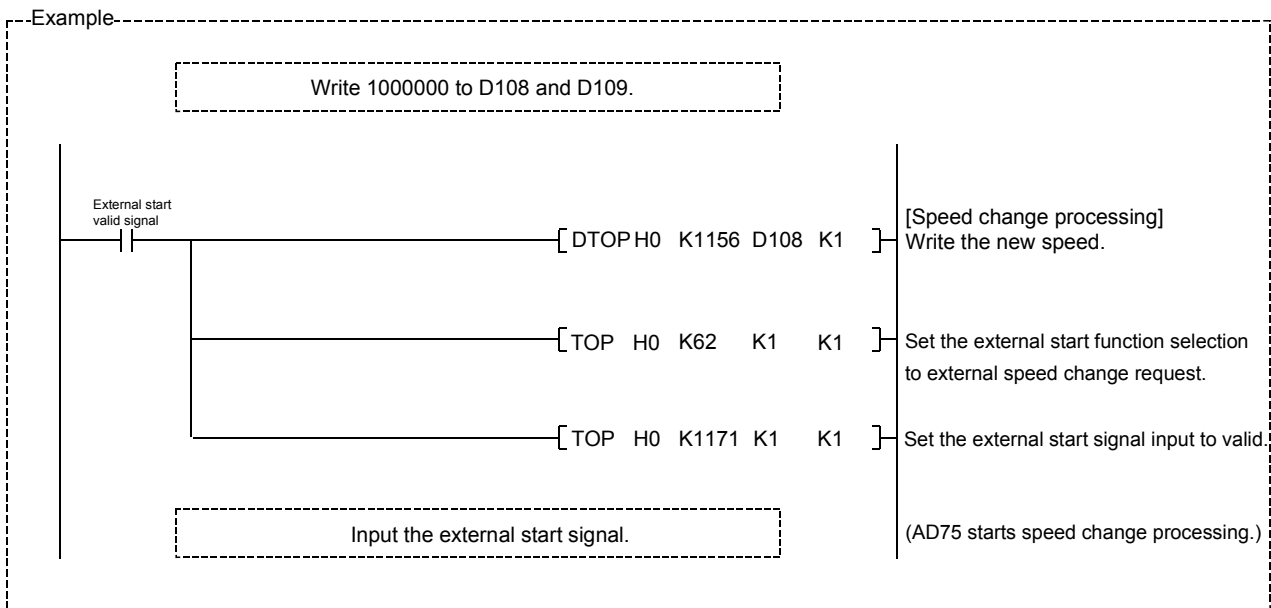

12.5.2 Override function

The override function changes the command speed by a designated percentage (1 to 300%) for all control to be executed.

The speed can be changed by setting the percentage (%) by which the speed is changed in "[Cd.18] Positioning operation speed override".

- (1) Control details
- (2) Precautions during control
- (3) Setting the override function

(1) Control details

The following shows that operation of the override function.

- 1) A value changed by the override function is monitored by "[Md.31] Feedrate".
- 2) If "[Cd.18] Positioning operation speed override" is set to 100%, the speed will not change.
- 3) If "[Cd.18] Positioning operation speed override" is set a value less than 100%, control will be carried out at speed unit "1" at the time "[Md.31] Feedrate" becomes a value of "1" or less.
- 4) If there is not enough remaining distance to change the speed when the speed is changed during the position control of speed/position changeover control, the operation will be carried out at the speed that could be changed.
- 5) If the speed changed by the "override function" is greater than the "[Pr.7] Speed limit value", a warning "speed limit value over" (warning code: 501) will occur and the speed will be controlled at the "[Pr.7] Speed limit value". The "[Md.49] In speed limit flag" will turn ON.

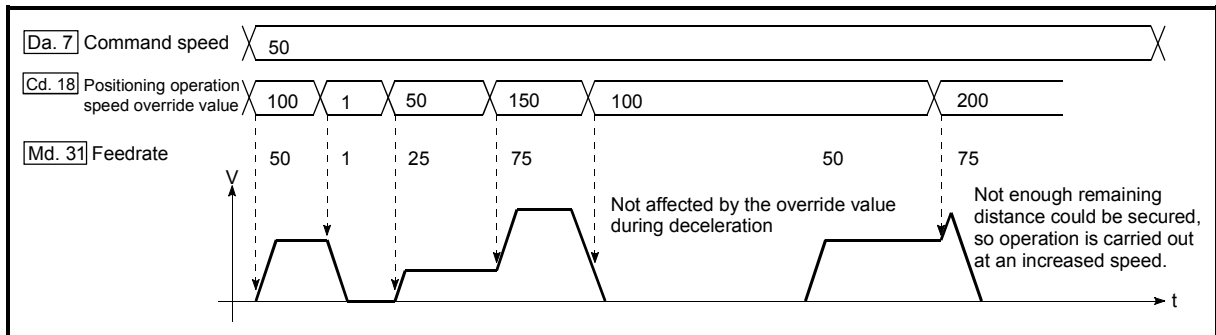


Fig. 12.27 Override function operation

(2) Precaution during control

- (a) When changing the speed during continuous path control, the speed change will be ignored if there is not enough distance remaining to carry out the change.
- (b) A warning "deceleration and stop speed change" (warning code: 500) occurs and the speed cannot be changed in the following cases.
  - During deceleration by a stop command
  - During automatic deceleration during positioning control
- (c) When the speed is changed during interpolation control, the required speed is set in the reference axis.

(3) Setting the override function

The following shows the data settings and sequence program example for setting the override value of axis 1 to "200%".

- (a) Set the following data. (Use the start time chart shown in section (2) below as a reference, and set using the sequence program shown in section (3).)

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.18 Positioning operation speed override	200	Set the new speed as a percentage (%).	1159	1209	1259

\* Refer to section "5.7 List of control data" for details on the setting details.

- (b) The following shows a time chart for changing the speed using the override function.


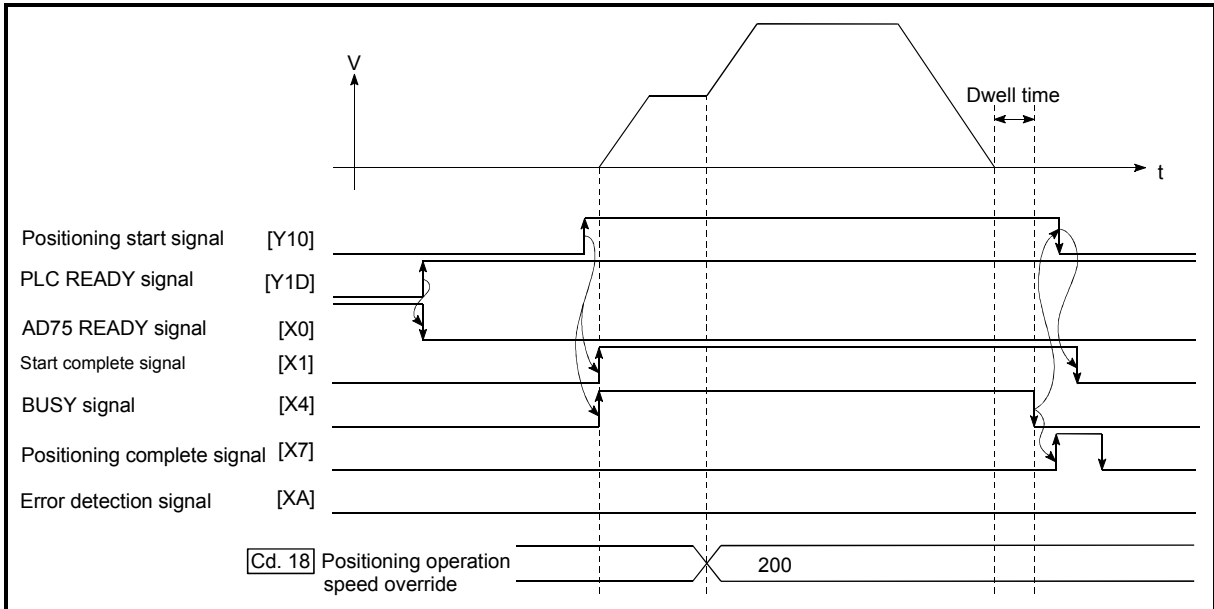


Fig. 12.28 Time chart for changing the speed using the override function

- (c) Add the following sequence program to the control program, and write it to the programmable controller CPU.



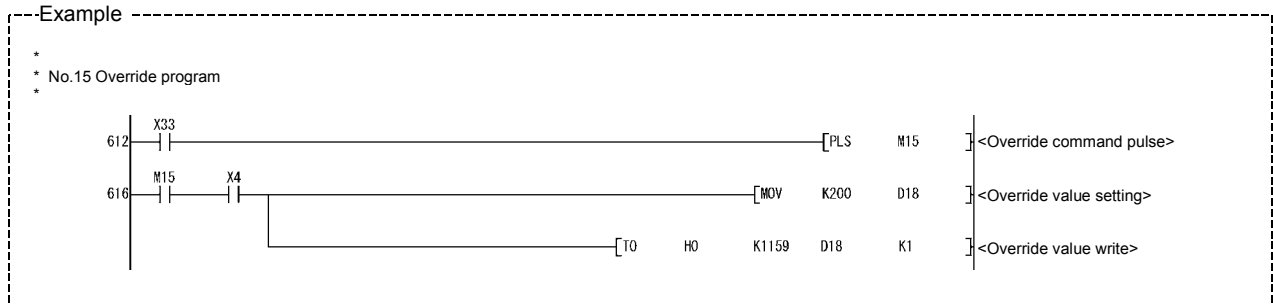

12.5.3 Acceleration/deceleration time change function

The "acceleration/deceleration time change function" is used to change the acceleration/deceleration time during a speed change to a random value when carrying out the speed change indicated in section "12.5.1 Speed change function". In a normal speed change (when the acceleration/deceleration time is not changed), the acceleration/deceleration time previously set in the parameters (Pr.8, Pr.9, and Pr.26 to Pr.31 values) is set in the positioning parameter data items Da.3 and Da.4, and control is carried out with that acceleration/deceleration time. However, by setting the new acceleration/deceleration time (Cd.33, Cd.34) in the control data, and issuing an acceleration/deceleration time change enable command (Cd.35 Acceleration/deceleration time change during speed change, enable/disable selection) to change the speed when the acceleration/deceleration time change is enabled, the speed will be changed with the new acceleration/deceleration time (Cd.33, Cd.34).

The details shown below explain about the "acceleration/deceleration time change function".

- (1) Control details
- (2) Precautions during control
- (3) Setting the acceleration/deceleration time change function

(1) Control details

The following drawing shows the operation during an acceleration/deceleration time change.


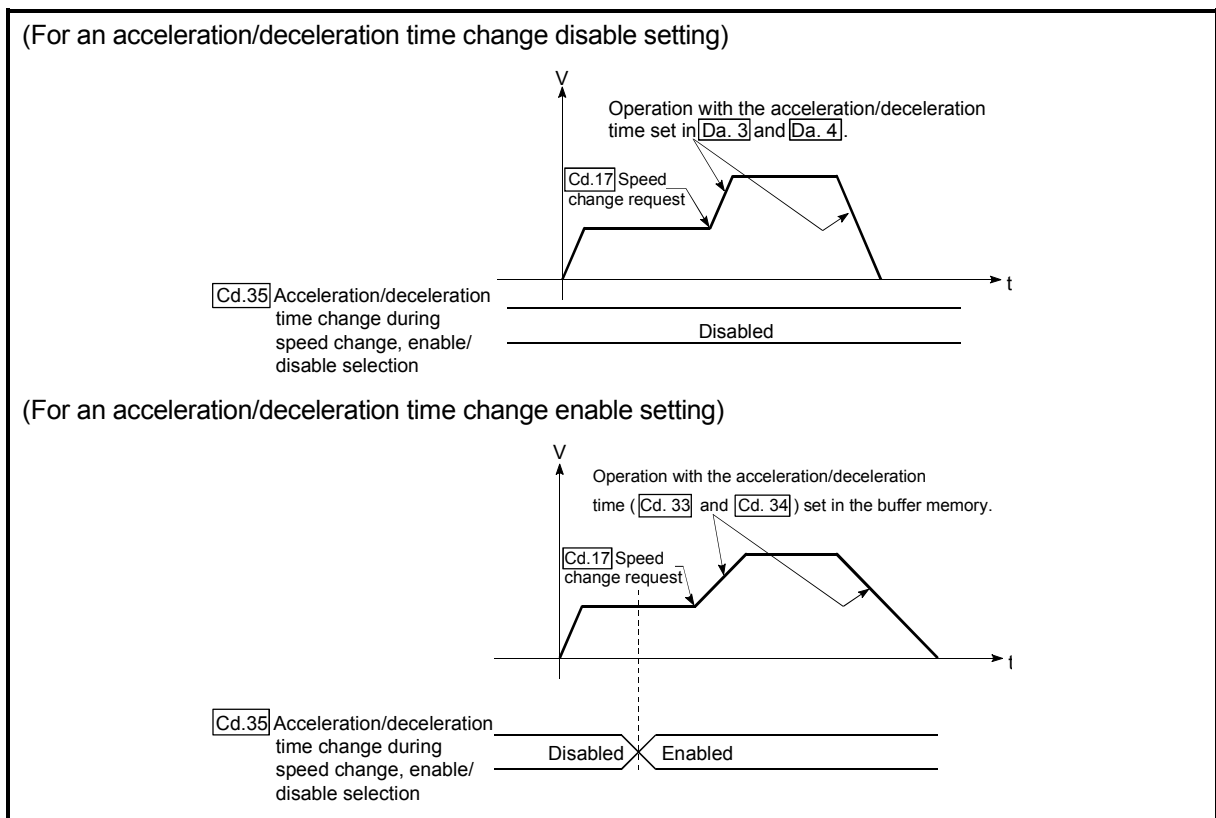



Fig. 12.29 Operation during an acceleration/deceleration time change

(2) Precautions during control

- (a) When "0" is set in "[Cd.33] New acceleration time value" and "[Cd.34] New deceleration time value", the acceleration/deceleration time will not be changed even if the speed is changed. In this case, the operation will be controlled at the acceleration/deceleration time previously set in the parameters.
- (b) The "new acceleration/deceleration time" is valid during execution of the positioning data for which the speed was changed. In continuous positioning control and continuous path control, the speed is changed and control is carried out with the previously set acceleration/deceleration time at the changeover to the next positioning data, even if the acceleration/deceleration time is changed to the "new acceleration/deceleration time ([Cd.33], [Cd.34])".
- (c) Even if the acceleration/deceleration time change is set to disable after the "new acceleration/deceleration time" is validated, the positioning data for which the "new acceleration/deceleration time" was validated will continue to be controlled with that value. (The next positioning data will be controlled with the previously set acceleration/deceleration time.)

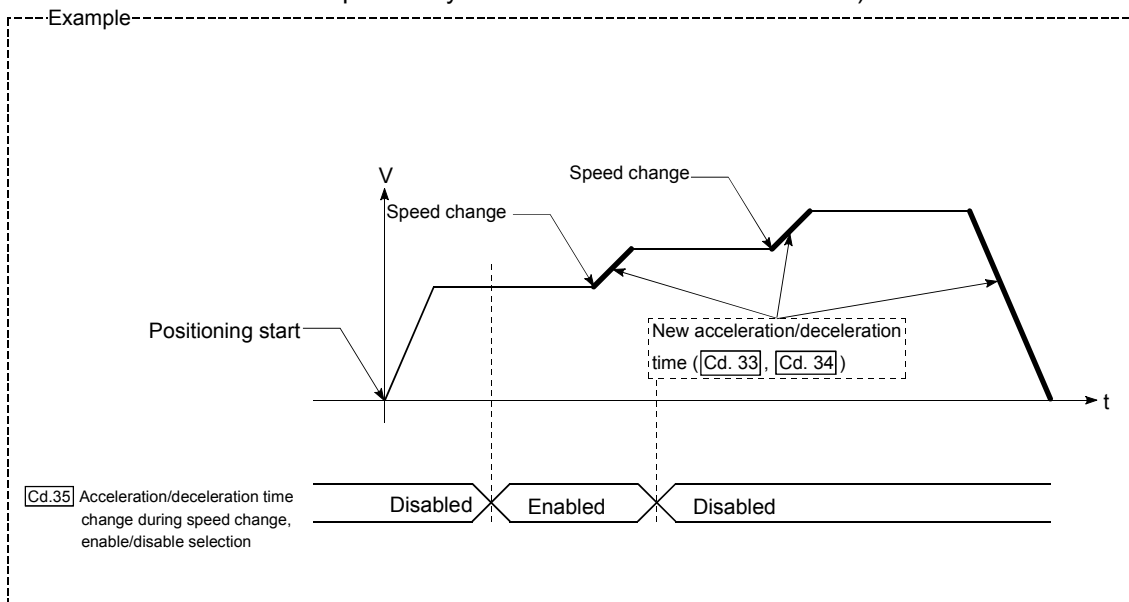

- (d) If the "new acceleration/deceleration time" is set to "0" and the speed is changed after the "new acceleration/deceleration time" is validated, the operation will be controlled with the previous "new acceleration/deceleration time".

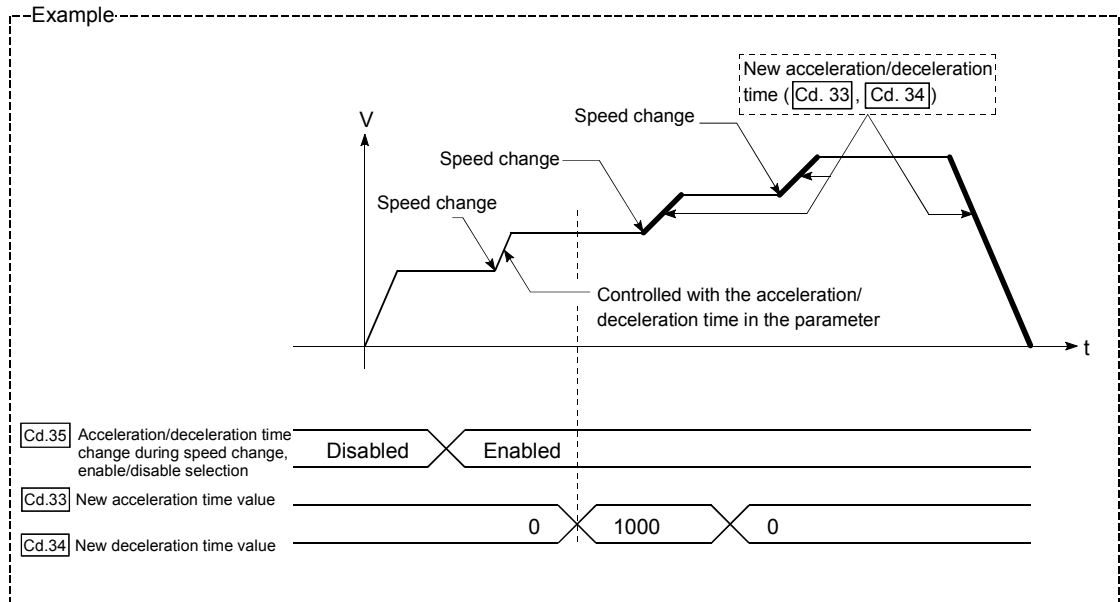

- (e) During JOG operation, the acceleration/deceleration time change function does not function.

**POINT**

If the speed is changed when an acceleration/deceleration change is enabled, the "new acceleration/deceleration time" will become the acceleration/deceleration time of the positioning data being executed. The "new acceleration/deceleration time" remains valid until the changeover to the next positioning data. (The automatic deceleration processing at the completion of the positioning will also be controlled by the "new acceleration/deceleration time".)

**(3) Setting the acceleration/deceleration time change function**

To use the "acceleration/deceleration time change function", write the data shown in the following table to the AD75 using the sequence program.

The set details are validated when a speed change is executed after the details are written to the AD75.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.33 New acceleration time value	→	Set the new acceleration time.	1184 1185	1234 1235	1284 1285
Cd.34 New deceleration time value	→	Set the new deceleration time.	1186 1187	1236 1237	1286 1287
Cd.35 Acceleration/deceleration time change during speed change, enable/disable selection	1	Set "1: Acceleration/deceleration time change enable".	1188	1238	1288

\* Refer to section "5.7 List of control data" for details on the setting details.

12.5.4 Torque change function

The "torque change function" is used to change the torque limit value during torque limiting.

The torque limit value during torque limiting is normally the value set in the "[Cd.101 Torque output setting value]" that was set in the axis control data. However, by setting the new torque limit value in the positioning data "[Cd.30 New torque value]", and writing it to the AD75, the torque generated by the servomotor during control can be limited with the new torque value.

(The "[Cd.30] New torque value" is validated when written to the AD75.)

The details shown below explain about the "control torque change function".

- (1) Control details
- (2) Precautions during control
- (3) Setting the torque change function start signal

(1) Control details

The following drawing shows the torque change operation.

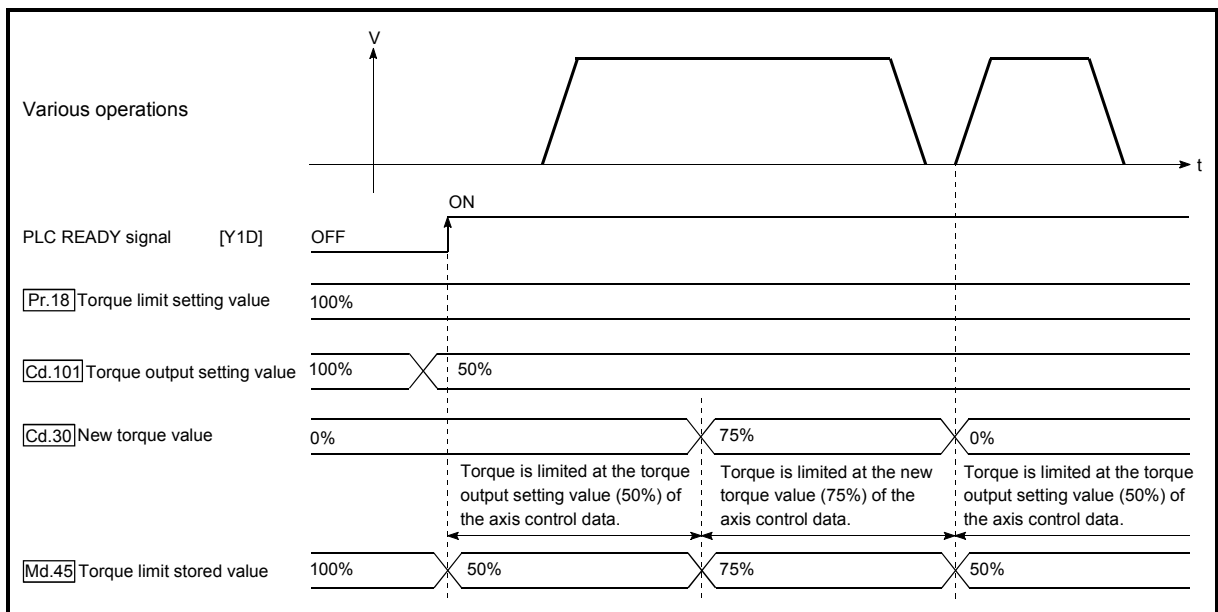


Fig. 12.30 Torque change operation

(2) Precautions during control

- (a) If a value other than "0" is set in the "[Cd.30] New torque value", the torque generated by the servomotor will be limited by that value. To limit the torque with the value set in "[Cd.101] Torque output setting value", set "0" in the "[Cd.30] New torque value".  
To limit the torque with the value set in "[Pr.18] Torque limit setting value", set "0" in the "[Cd.101] Torque output setting value" and "[Cd.30] New torque value".
- (b) The "[Cd.30] New torque value" is validated when it is written to the AD75. However, there is a maximum delay of 56.8ms from when the new torque value is written until the torque is limited with the new value.
- (c) At a start of the corresponding control, the "[Cd.30] New torque value" is cleared to "0", and the torque is limited with the "[Cd.101] Torque output setting value".
- (d) If the setting value is outside the setting range, a warning "Outside torque change value range" (warning code: 113) will occur and the torque will not be changed.

(3) Setting the torque change function start signal

To use the "torque change function", write the data shown in the following table to the AD75 using the sequence program.

The set details are validated when written to the AD75.

Setting item		Setting value	Setting details	Buffer memory address		
				Axis 1	Axis 2	Axis 3
[Cd.30]	New torque value	→	Set the new torque limit value.	1176	1226	1276

\* Refer to section "5.7 List of control data" for details on the setting details.

12.6 Absolute position restoration function

The "absolute position restoration function" restores the absolute position of the axis automatically at power-on of the AD75 by an absolute position detection system. This function eliminates the need for a zero point return after power-off, such as an instantaneous power failure or emergency stop, facilitating on-site recovery.

12.6.1 Outline of absolute position restoration function

The following details will be explained for the "absolute position restoration function".  
 [1] Configuration and preparations of absolute position detection system  
 [2] Outline of absolute position detection data communication  
 [3] Precautions during control

[1] Configuration and preparations of absolute position detection system

(1) Configuration

The following shows the configuration of an absolute position detection system.

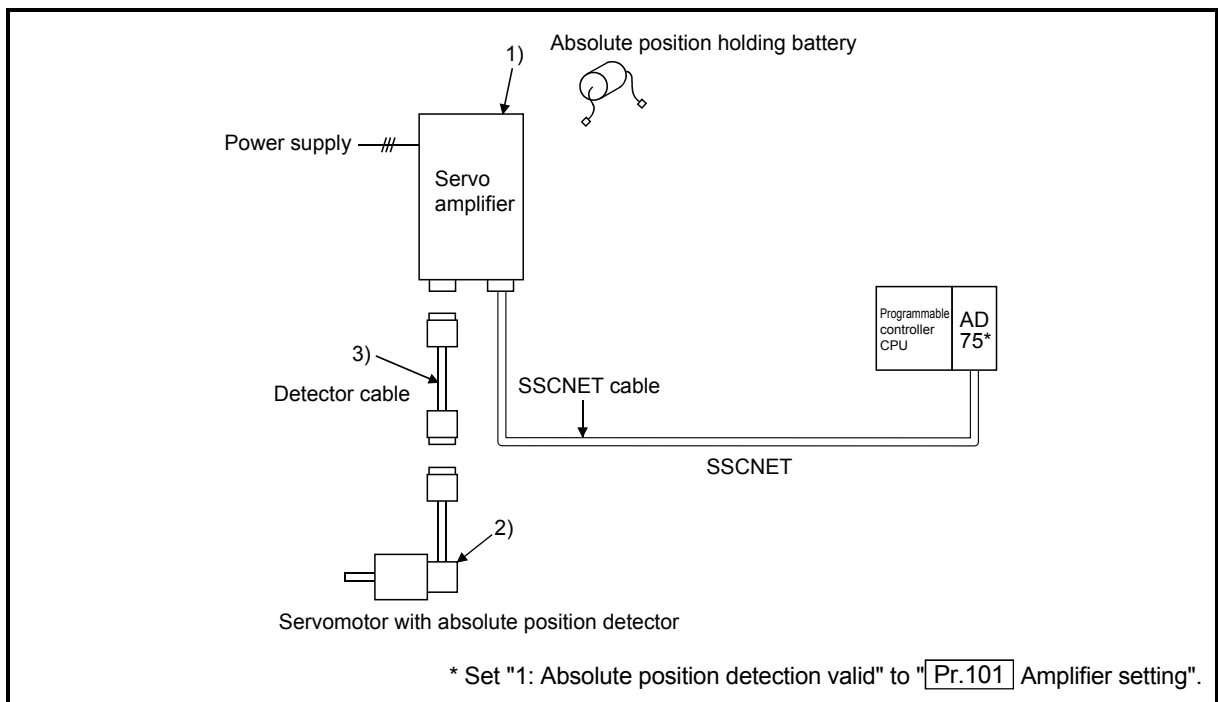


Fig. 12.31 Absolute position detection system configuration

(2) Preparations

Note the contents of the following table for preparations of the absolute position detection system.

Component	Description
1) Servo amplifier (MR-H-B (MR-H-BN), MR-J-B, MR-J2-B, MR-J2S-B)	<ul style="list-style-type: none"> <li>• Install the battery (MR-BAT, A6BAT) to the servo amplifier.</li> <li>• Validate the absolute position detection function of the servo amplifier.</li> </ul> For other details, refer to the manual of the servo amplifier.
2) Servomotor	<ul style="list-style-type: none"> <li>• Use the servomotor with absolute position detector.</li> </ul> For other details, refer to the manual of the servomotor.
3) Detector cable	<ul style="list-style-type: none"> <li>• Add the connection of the battery power supply (BAT/LG signal) to the wiring of the incremental detector cable.</li> </ul> For other details, refer to the manual of the cable.

[2] Outline of absolute position detection data communication

As shown in the system block diagram in Fig. 12.32, the current absolute position is stored by the battery fitted to the servo amplifier, and the absolute position of the zero point is stored in the FeRAM of the AD75.

Making a zero point return once at the installation of the machine eliminates the need for a zero point return at subsequent power-on.

After powering on the AD75 and servo amplifier, start communication between the AD75 and servo amplifier to restore the absolute position.

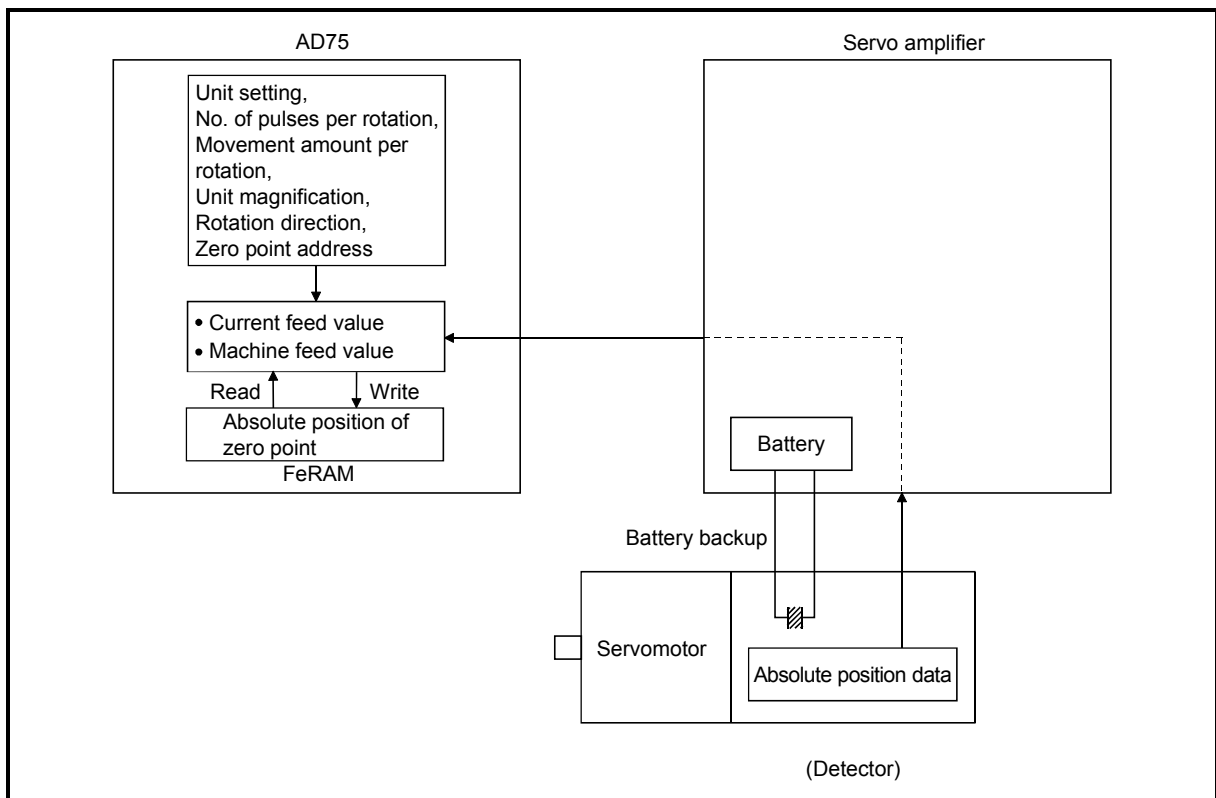


Fig. 12.32 Outline of absolute position restoration function

## [3] Precautions during control

- (1) Since the zero point data in the AD75 is initialized before shipment from the factory, the absolute position (zero point position) cannot be restored normally. When using the AD75 for the first time, always perform machine zero point return control.
- (2) When machine zero point return control is executed in the absolute position detection system, access is made to the FeRAM (Ferroelectric Random Access Memory).  
The FeRAM access count is maximum  $9.9999 \times 10^9$  times.  
Access to the FeRAM is made three times (read is performed twice, and write once) at power-on.  
At a machine zero point return in the absolute position detection system,
  - (a) When the "[Md.121] Absolute position restoration mode" is switched between the "standard mode" and "infinite length mode"  
Access to the FeRAM is made four times (read is performed twice, and write twice)
  - (b) When the "[Md.121] Absolute position restoration mode" is not switched  
Access to the FeRAM is made twice (read is performed once, and write once)  
When the "[Md.120] FeRAM access count" exceeds  $9.0000 \times 10^9$  times, a warning "FeRAM count warning" (warning code: 10) occurs.  
When the "[Md.120] FeRAM access count" exceeds  $9.9999 \times 10^9$  times, an error "FeRAM count over" (error code: 10) occurs. In this case, the AD75 has reached the end of its service life. Therefore, replace the module.  
When the FeRAM access count exceeds  $9.9999 \times 10^9$  times, the absolute position (zero point position) cannot be restored normally at a system startup (power on, reset, etc.).
- (3) When the absolute position detection system has been configured, start communication between the AD75 and servo amplifier after power-on or reset to perform absolute position restoration. The parameters on the OS memory are used for absolute position restoration. (Refer to CHAPTER 7 for details of the OS memory.)
- (4) When the AD75 is used in the absolute position detection system, the followings cannot be performed.
  - Infinite length feed control\* that performs control in the given direction only
  - Control in which the movement amount from the zero point address is outside the range of Condition 1 and Condition 2 indicated below
 When performing positioning in the absolute position detection system, use the AD75 within the range that satisfies Condition 1 and Condition 2 indicated below.  
If it is used in the range that does not satisfy Condition 1 and Condition 2, a normal current value cannot be restored at the time of absolute position restoration and therefore the AD75 cannot be used in the absolute position detection system.
 

\* When the control unit is degree, set the absolute position restoration mode to the "infinite length mode" to enable infinite length feed control. (Refer to section 12.6.2 for details.)




Condition 1. Number of output pulses

- (a) It indicates the number of pulses that can be output to the servo amplifier when positioning is started from the zero point in the absolute position detection system. In the absolute position detection system, pulses within the range of the following expression can be output.

$$[-32768 \times (\text{number of feedback pulses})] \leq [\text{number of output pulses}] \leq [32768 \times (\text{number of feedback pulses}) - 1]$$

- (b) The direction in which the address increases from the zero point is positive, and the direction in which the address decreases from the zero point is negative.

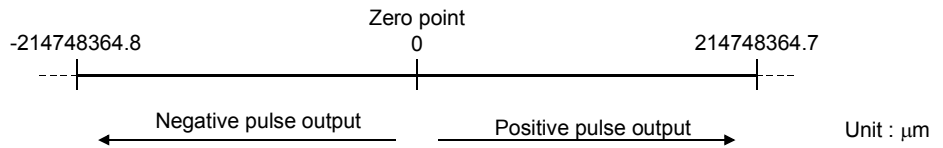

- (c) The number of output pulses changes depending on the number of feedback pulses as indicated below.
  - When the number of feedback pulses is 8192 (pulse):  
-268435456 (pulse) to 268435455 (pulse)
  - When the number of feedback pulses is 16384 (pulse):  
-536870912 (pulse) to 536870911 (pulse)

Condition 2. Positioning address

- (a) The positioning addresses that can be specified for the AD75 are as indicated below.

- When the unit is mm: -214748364.8 (μm) to 214748364.7 (μm)
- When the unit is inch: -21474.83648 (inch) to 21474.83647 (inch)
- When the unit is pulse: -2147483648 (pulse) to 2147483647 (pulse)
- When the unit is degree: 0° to 359.99999°

[Calculation of positioning address and concept of absolute position detection system]

Calculate the positioning address with the following expression.

$$(\text{Positioning address}) = (\text{movement amount per pulse}) \times (\text{number of output pulses}) + (\text{zero point address}) \dots\dots\dots \text{Expression 1}$$

1. Concept in the case where the unit is mm, inch or pulse

The range that satisfies Condition 1 and Condition 2 can be used as the positioning address of the absolute position detection system.


The range that does not satisfy Condition 1 and Condition 2 cannot be used as the positioning address of the absolute position detection system.

Since the concept of the positioning address is the same, an example of the case where the unit is mm is given below.

Example 1.

- (1) The conditions for calculating the positioning address are indicated below.
  - Movement amount per pulse: 0.1 (μm)
  - Zero point address: 0.0 (μm)
  - Number of feedback pulses = 8192 (pulse)
  
- (2) Calculate the upper and lower limit values of the positioning address that can be specified from the range of using the number of output pulses in Condition 1 and the expression for calculating the positioning address (Expression 1).
  - Lower limit value of positioning address (use the number of negative side pulses in Condition 1 for calculation)
 
$$\begin{aligned} \text{(Positioning address)} &= (\text{movement amount per pulse}) \times (\text{number of output pulses}) + (\text{zero point address}) \\ &= 0.1 \times (-268435456) + 0.0 \\ &= -26843545.6 \text{ (}\mu\text{m)} \end{aligned}$$
  - Upper limit value of positioning address (use the number of positive side pulses in Condition 1 for calculation)
 
$$\begin{aligned} \text{(Positioning address)} &= (\text{movement amount per pulse}) \times (\text{number of output pulses}) + (\text{zero point address}) \\ &= 0.1 \times 268435455 + 0.0 \\ &= 26843545.5 \text{ (}\mu\text{m)} \end{aligned}$$
  
- (3) The upper and lower limit values of the calculated positioning address are within the range of Condition 2.  
 Hence, the positioning range calculated under Condition 1 [−26843545.6 (μm) to 26843545.5 (μm)] can be used in the absolute position detection system.  
 For positioning outside the range −26843545.6 (μm) to 26843545.5 (μm), the AD75 cannot be used in the absolute position detection system.

Unit: μm

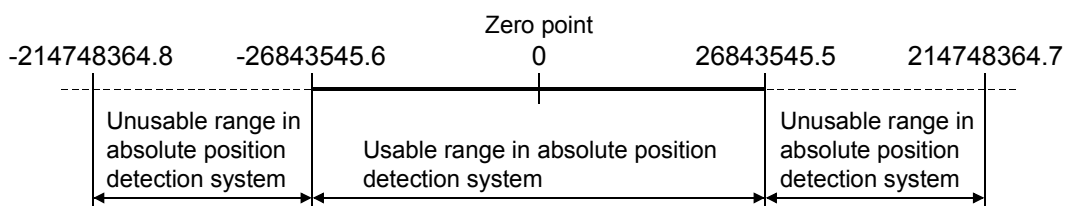


## Example 2.

- (1) Using Expression 1, calculate the positioning address that can be specified in the system where the zero point address in Example 1 is 214740000.0 ( $\mu\text{m}$ ).
- Lower limit value of positioning address  

$$\begin{aligned} \text{(Positioning address)} &= 0.1 \times (-268435456) + 214740000.0 \\ &= 187896454.4 \text{ (}\mu\text{m)} \end{aligned}$$
  - Upper limit value of positioning address  

$$\begin{aligned} \text{(Positioning address)} &= 0.1 \times 268435455 + 214740000.0 \\ &= 241583545.5 \text{ (}\mu\text{m)} \end{aligned}$$
- (2) Since the lower limit value of the calculated positioning address is within the range of Condition 2, the calculated address 187896454.4 ( $\mu\text{m}$ ) is the lower limit for positioning in the absolute position detection system.
- Since the upper limit value of the calculated positioning address is outside the range of Condition 2, the upper limit value 214748364.7 ( $\mu\text{m}$ ) in the positioning range of Condition 2 is the upper limit for positioning in the absolute position detection system.
- Use the AD75 within the range 187896454.4 ( $\mu\text{m}$ ) to 214748364.7 ( $\mu\text{m}$ ) in the absolute position detection system.
- For positioning in excess of 187896454.4 ( $\mu\text{m}$ ), the AD75 cannot be used in the absolute position detection system.

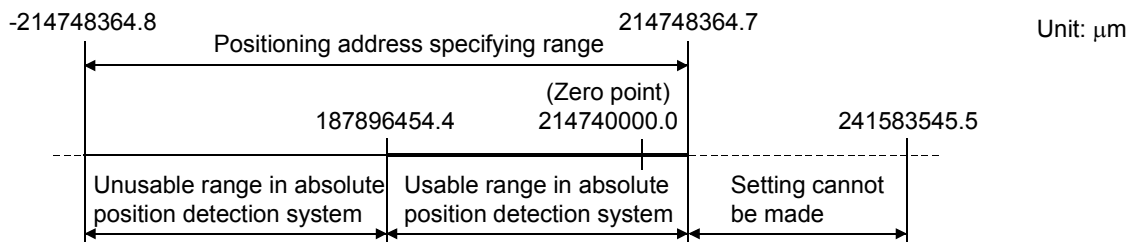


## Example 3.

- (1) The conditions for calculating the positioning address are indicated below.
- Movement amount per pulse: 0.9 ( $\mu\text{m}$ )
  - Zero point address: 0.0 ( $\mu\text{m}$ )
  - Number of feedback pulses = 8192 (pulse)
- (2) Calculate the positioning address from the range of using the number of output pulses in Condition 1 and the expression for calculating the positioning address (Expression 1).
- Lower limit value of positioning address (use the number of negative side pulses in Condition 1 for calculation)  

$$\begin{aligned} \text{(Positioning address)} &= (\text{movement amount per pulse}) \times (\text{number of output pulses}) + (\text{zero point address}) \\ &= 0.9 \times (-268435456) + 0.0 \\ &= -241591910.4 \text{ (}\mu\text{m)} \end{aligned}$$
  - Upper limit value of positioning address (use the number of positive side pulses in Condition 1 for calculation)  

$$\begin{aligned} \text{(Positioning address)} &= (\text{movement amount per pulse}) \times (\text{number of output pulses}) + (\text{zero point address}) \\ &= 0.9 \times 268435455 + 0.0 \\ &= 241591909.5 \text{ (}\mu\text{m)} \end{aligned}$$

- (3) Since the upper and lower limit values of the calculated positioning address are outside the range of Condition 2, use the AD75 within the positioning range of Condition 2 (−214748364.8 (μm) to 214748364.7 (μm)).

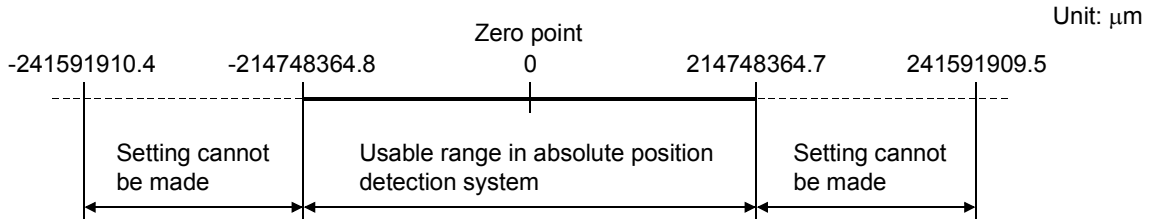


2. Concept in the case where the unit is degree

The positioning address is the address of the position reached by the machine zero point return, and its range is 0° to 359.99999°.

The range 0° to 359.99999° also applies to the case where the zero point position is not 0°.

<When the mode for absolute position restoration is the "standard mode" ("Md.121 Absolute position restoration mode" = 0)>


For positioning in the same direction, out of bound control (when the address increases: 359.99999° → 0° / when the address decreases: 0° → 359.99999°) cannot be performed.

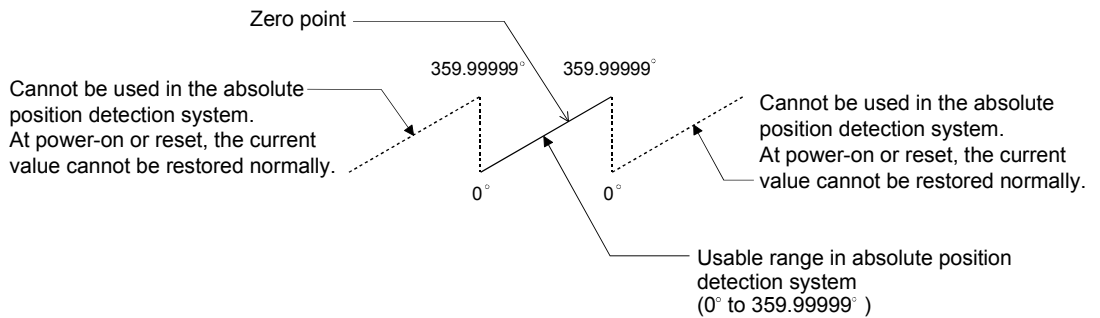

To make the software stroke limit valid, set the upper and lower limit values within the range 0° to 359.99999°.

<When the mode for absolute position restoration is the "infinite length mode" ("Md.121 Absolute position restoration mode" = 1)>

For positioning in the same direction, out of bound control (when the address increases: 359.99999° → 0° / when the address decreases: 0° → 359.99999°) can be performed.

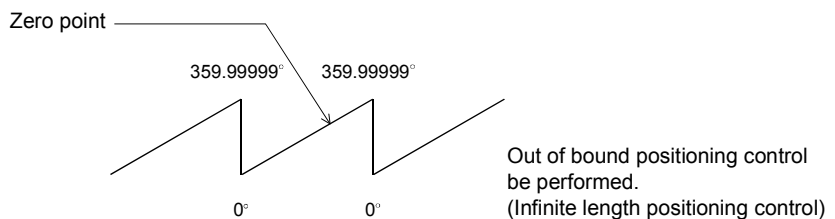

Make the software stroke limit invalid.

For details of the mode for absolute position restoration, refer to section "12.6.2 Absolute position restoration mode switching function".

12.6.2 Absolute position restoration mode switching function

The "absolute position restoration mode switching function" switches the mode for absolute position restoration in the absolute position detection system of control unit "degree". This enables absolute position detection for infinite length positioning control where control is performed in only the given direction, e.g. turn table.

- [1] About absolute position restoration mode
- [2] Control details
- [3] Precautions during control
- [4] Absolute position restoration mode switching method

[1] About absolute position restoration mode

There are the following two absolute position restorable ranges (absolute position restoration modes) in an absolute position detection system of control unit "degree" ("Pr.1 Unit setting" is "2").

(a) Standard mode

In this mode, the absolute position can be restored only within the range where out of bound operation (operation where "Md.29 Current feed value" changes from 359.99999° to 0° when the address increases, or "Md.29 Current feed value" changes from 0° to 359.99999° when the address decreases) is not performed from the zero point return position.

(b) Infinite length mode

In this mode, the absolute position can be restored in the range where out of bound operation (operation where "Md.29 Current feed value" changes from 359.99999° to 0° when the address increases, or "Md.29 Current feed value" changes from 0° to 359.99999° when the address decreases) is performed from the zero point return position.

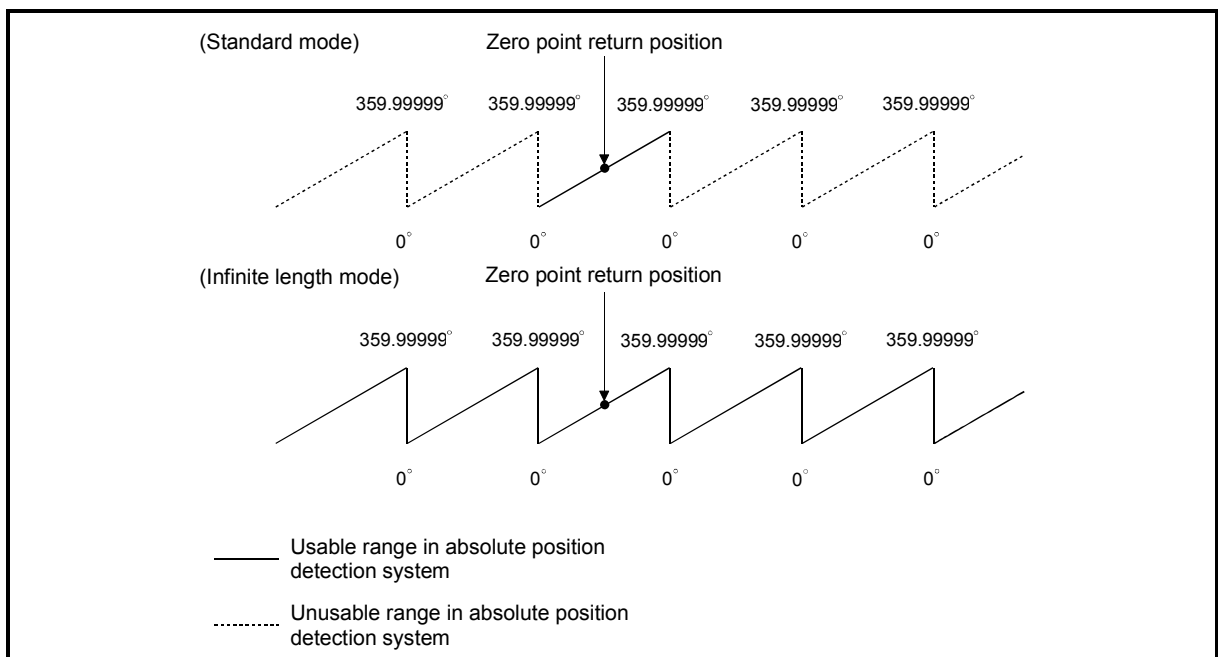


Fig. 12.33 Ranges where absolute position can be restored in absolute position detection system of control unit "degree"

[2] Control details

The operation performed for absolute position restoration mode switching is described below.

- 1) To switch the absolute position restoration mode, select the mode in "Pr.59 Absolute position restoration selection" and make a machine zero point return.  
The absolute position restoration mode is established when the zero point return complete flag (Md.40 Status: b4) turns ON.
- 2) When power is switched from OFF to ON after execution of Step 1), the system starts up in the mode established in Step 1) and restores the absolute position.

The established absolute position restoration mode can be checked in the "Md.121 Absolute position restoration mode".

When the "Md.121 Absolute position restoration mode" is "1: Infinite length mode", the AD75 automatically updates the absolute position of the zero point stored in the FeRAM every time the machine moves the given distance\* (servomotor shaft: 8142 to 8192 revolutions). This detects the absolute position for infinite length positioning control. Every time the absolute position is automatically updated, the "Md.120 FeRAM access count" is incremented by "2".

\* The given distance is automatically determined by the setting of "Pr.2 No. of pulses per rotation".

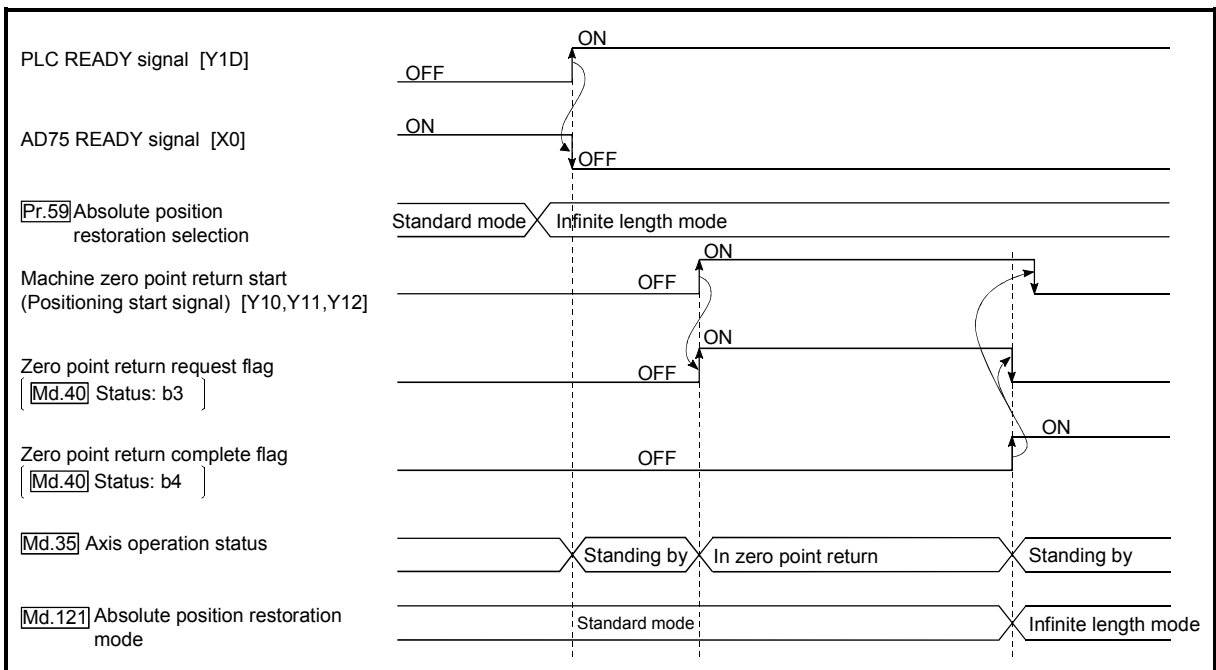


Fig. 12.34 Absolute position restoration mode switching operation

## [3] Precautions during control

The following precautions are for the case where the "infinite length mode" is selected as the absolute position restoration mode and the absolute position is detected for infinite positioning control.

- (1) The following table indicates usable hardware versions and software versions of the modules.

Model name	Hardware version	Software version
AD75M1	F or later	W or later
AD75M2	F or later	
AD75M3	G or later	
A1SD75M1	G or later	
A1SD75M2	G or later	
A1SD75M3	H or later	

If the hardware version is earlier than the one indicated in the above table and the software version is as indicated in the above table, selection of the "infinite length mode" in "[Pr.59] Absolute position restoration selection" will result in an error "absolute position restoration selection error" (error code: 998) when the PLC READY signal (Y1D) turns from OFF to ON.

- (2) To switch the absolute position restoration mode to the "infinite length mode", make a machine zero point return after satisfying the following conditions (a) to (c). If any of (a) to (c) is not satisfied, the absolute position restoration mode turns to the "standard mode" on completion of the machine zero point return.
- (a) "[Pr.1] Unit setting" is "2: degree".
- (b) The software stroke limit function (refer to section 12.4.3) is invalid.
- (c) "[Pr.101] Amplifier setting" is "1: Absolute position detection valid".
- (3) "[Md.30] Machine feed value" cannot be used.
- (4) The following control methods cannot be executed.
- "[Da.2] Control method" "03H: 1-axis fixed-dimension feed control"
  - "[Da.2] Control method" "06H: 2-axis fixed-dimension feed control"
  - "[Da.2] Control method" "0FH: Speed/position changeover control (forward run)"
  - "[Da.2] Control method" "10H: Speed/position changeover control (reverse run)"
  - "[Da.2] Control method" "11H: Current value change"
- If any of the above is executed, an error "control method setting error" (error code: 524) occurs.
- (5) The following positioning starts cannot be executed.
- Positioning start when the "[Cd.11] Positioning start No." is "9002: High-speed zero point return"
  - Positioning start when the "[Cd.11] Positioning start No." is "9003: Current value change"
- If either of the above is executed, an error "outside start number range" (error code: 543) occurs.

- (6) When "[Da.2] Control method" "0DH: Speed control (forward run)" or "0EH: Speed control (reverse run)" is to be executed, "[Pr.22] Current feed value during speed control" must be set to "1: Update current feed value". If either of the above control methods is executed at the setting of other than "1", an error "control method setting error" (error code: 524) occurs.
- (7) If the servomotor shaft has rotated more than 15000 turns without the AD75 and servo amplifier making communication, e.g. at power-off, absolute position restoration may not be made normally at the next power-on. If external force, etc. may cause the servomotor shaft to rotate more than 15000 turns, use the servomotor equipped with brake, for example, to secure the servomotor shaft.
- (8) When any of the following parameters has been changed from the setting at execution of a machine zero point return, always make a machine zero point return. If a machine zero point return is not executed, normal absolute position restoration cannot be performed.
- (a) Basic parameters 1
    - [Pr.1] Unit setting, [Pr.2] No. of pulses per rotation, [Pr.3] Movement amount per rotation, [Pr.4] Unit magnification
  - (b) Detailed parameters 1
    - [Pr.13] Software stroke limit upper limit value,
    - [Pr.14] Software stroke limit lower limit value
  - (c) Zero point return basic parameters
    - [Pr.47] Zero point address
  - (d) Zero point return detailed parameters
    - [Pr.59] Absolute position restoration selection
  - (e) Servo basic parameters\*
    - [Pr.101] Amplifier setting, [Pr.107] Rotation direction
- \*: When the servo basic parameters in above (e) are changed after the AD75 and servo amplifier has started communication, power the AD75 or servo amplifier OFF, then ON and make communication between the AD75 or servo amplifier.
- (9) If either of the following settings is made with "[Md.121] Absolute position restoration mode" set to "1: infinite length mode" and "[Pr.59] Absolute position restoration selection" set to "1: infinite length mode", an error occurs when the PLC READY signal (Y1D) turns from OFF to ON.
- (a) When "[Pr.1] Unit setting" is set to other than "2: degree"
    - Error "outside unit setting range" (error code: 900)
  - (b) When the software stroke limit function (refer to section 12.4.3) is set valid
    - Error "software stroke limit upper limit" (error code: 921), error "software stroke limit lower limit" (error code: 922)
- (10) Every time a machine zero point return is executed, "[Md.120] FeRAM access count" increases as described below.
- (a) When "[Md.121] Absolute position restoration mode" is switched between the "standard mode" and "infinite length mode"
    - "[Md.120] FeRAM access count" increases by "4".



(b) When "Md.121 Absolute position restoration mode" is not switched "Md.120 FeRAM access count" increases by "2".

(11) If the "Md.120 FeRAM access count" exceeds  $9.9999 \times 10^9$  times at automatic updating of the absolute position of the zero point, a warning "automatic update count over" (warning code: 11) occurs.

(12) If write to the FeRAM is not completed normally at automatic updating of the absolute position of the zero point, a warning "automatic update failure" (warning code: 12) occurs.

[4] Absolute position restoration mode switching method

The method of switching the absolute position restoration mode is described below.

(1) Set the following parameter.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Pr.59 Absolute position restoration selection	→	Select the mode for absolute position restoration in an absolute position detection system. 0: Standard mode 1: Infinite length mode	91	241	391

\* Refer to section "5.2 List of parameters" for the setting details.

<b>POINT</b>
When the "infinite length mode" is selected as the absolute position restoration selection, set the parameters to satisfy the following (a) to (c). (a) Set "Pr.1 Unit setting" to "2: degree". (b) Set the software stroke limit function invalid. (c) Set "Pr.101 Amplifier setting" to "1: Absolute position detection valid".

- (2) Turn ON the PLC READY signal (Y1D).
- (3) Using the servo ON/OFF function (refer to section 12.4.5), turn ON the all axes servo ON signal (Y15).
- (4) Execute a machine zero point return.
- (5) After completion of the machine zero point return, the absolute position restoration mode is established. The established mode is stored into the following monitor data.

Setting item	Monitor value	Storage details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Md.121 Absolute position restoration mode	→	The mode for absolute position restoration selected in Pr.59 is stored. 0: Standard mode 1: Infinite length mode	879	979	1079

\* Refer to section "5.6 List of monitor data" for the storage details.

12.7 Other functions

Other functions include the "step function", "skip function", "M code output function", "teaching function", "command in-position function", "acceleration/deceleration processing function" and "indirectly specification function". Each function is executed by parameter setting or sequence program creation and writing.

12.7.1 Step function

The "step function" is used to confirm each operation of the positioning control one by one.

It is mainly used in debugging work for positioning control, etc.

A positioning operation in which a "step function" is used is called a "step operation".

In step operations, the timing for stopping the control can be set. (This is called the "step mode".) Control stopped by a step operation can be continued by setting "step continue" (to continue the control)" or restarted by setting "restart" in the "step start information".

The details shown below explain about the "step function".

- (1) Relation between the step function and various controls
- (2) Step mode
- (3) Step start information
- (4) Using the step operation
- (5) Control details
- (6) Precautions during control
- (7) Step function settings

(1) Relation between the step function and various controls

The following table shows the relation between the "step function" and various controls.

Control type		Step function	Step applicability
Zero point return control	Machine zero point return control	×	Step operation not possible
	High-speed zero pint return control	×	
Main positioning control	Position control	1-axis linear control	○
		2-axis linear interpolation control	○
		1-axis fixed-dimension feed control	○
		2-axis fixed-dimension feed control (interpolation)	○
		2-axis circular interpolation control	○
	Speed control	×	Step operation not possible
	Speed/position changeover control	○	Step operation possible
Other control	○		
	JUMP command	○	
Manual control	JOG operation	×	Step operation not possible
	Manual pulse generator operation	×	

○ : Set when required. × : Setting not possible

(2) Step mode

In step operations, the timing for stopping the control can be set. This is called the "step mode". (The "step mode" is set in the control data "[Cd.27] Step mode".)

The following shows the two types of "step mode" functions.

(a) Deceleration unit step

The operation stops at positioning data requiring automatic deceleration. (A normal operation will be carried out until the positioning data requiring automatic deceleration is found. Once found, that positioning data will be executed, and the operation will then automatically decelerate and stop.)

(b) Data No. unit step

The operation automatically decelerates and stops for each positioning data. (Even in continuous path control, an automatic deceleration and stop will be forcibly carried out.)

(3) Step start information

Control stopped by a step operation can be continued by setting "step continue" (to continue the control) or restarted by setting "restart" in the "step start information". (The "step start information" is set in the control data "[Cd.28] Step start information".)

The following table shows the results of starts using the "step start information" during step operation.

(Warnings will only be output when the step valid flag is ON.)

Stop status in the step operation	[Md.35] Axis operation status	[Cd.28] Step start information	Step start results
1 step of positioning stopped normally	Step standing by	1: Step continue	The next positioning data is executed.
		2: Restart	A "step start information invalid warning" occurs.
Control stopped by a stop signal	Step stopped	1: Step continue	A restart is carried out at the positioning data where the control was stopped.
		2: Restart	
An error occurred, and the control stopped	Step error occurring	1: Step continue	A "step start information invalid warning" occurs.
		2: Restart	

The following warnings will occur if the "[Md.35] Axis operation status" is not appropriate when step start information is set.

[Md.35] Axis operation status	Step start results
Standing by	Step start information invalid warning
Stopped	
Error occurring	
Servo has not been connected	
In servo OFF	Start during operation warning
In interpolation	
In JOG operation	
In manual pulse generator operation	
Analyzing	
Waiting for special start	
In zero point return	
In position control	
In speed control	
In speed control of speed/position changeover control	
In position control of speed/position changeover control	

**(4) Using the step operation**

The following shows the procedure for checking positioning data using the step operation.

- (a) Turn ON the step valid flag before starting the positioning data.  
(Write "1" (carry out step operation) in "[Cd.26] Step valid flag".)
- (b) Set the step mode before starting the positioning data.  
(Set in "[Cd.27] Step mode".)
- (c) Turn ON the positioning start signal, and check that the positioning control starts normally.
- (d) The control will stop for the following reasons.
  - 1) One step of positioning stopped normally. (Go to step (f))
  - 2) Control stopped by a stop signal (Take appropriate measures, go to step (e))
  - 3) An error occurred and the control stopped. (Take appropriate measures, go to step (c))
- (e) Write "2" (restart) to "[Cd.28] Step start information", and check that the positioning data where the control stopped operates normally. (Go to (d)).
- (f) Write "1" (step continue) to "[Cd.28] Step start information", and check that the next positioning data where the control stopped operates normally.
  - 1) One step of positioning stopped normally. (Go to step (f))
  - 2) Control stopped by a stop signal (Take appropriate measures, go to step (e))
  - 3) An error occurred and the control stopped. (Take appropriate measures, go to step (c))
  - 4) All positioning data operated normally (Go to step (g))
- (g) Turn OFF the step valid flag, and quit the "step function".  
(Write "0" (do not carry out step operation) in "[Cd.26] Step valid flag".)

(5) Control details

(a) The following drawing shows a step operation during a "deceleration unit step".

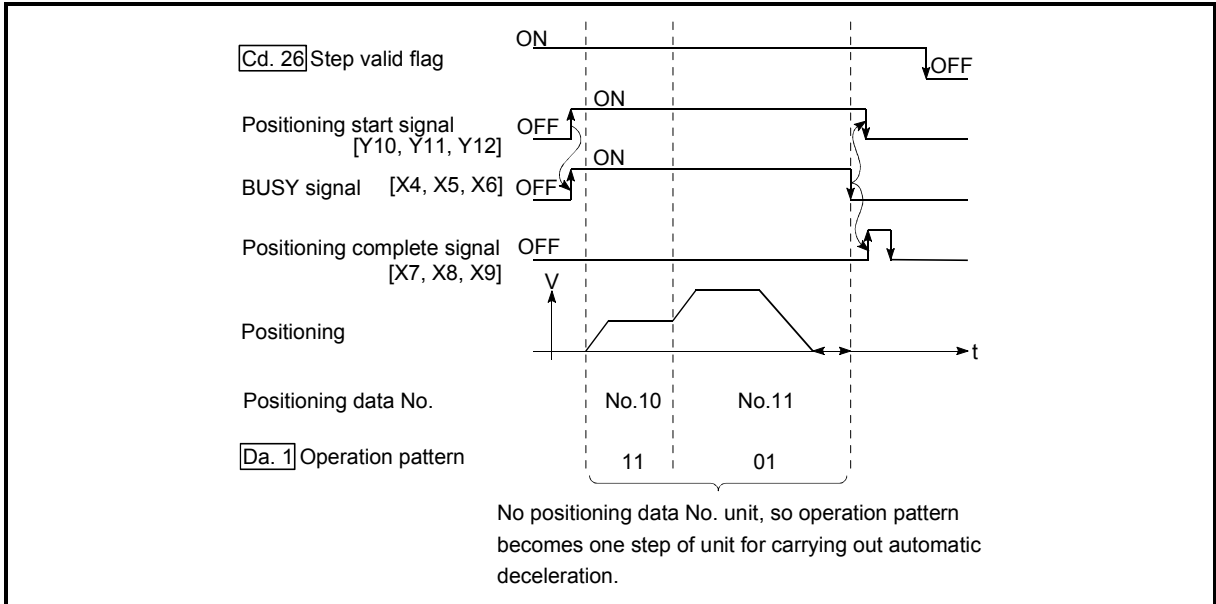


Fig. 12.35 Operation during step execution by deceleration unit step

(b) The following drawing shows a step operation during a "data No. unit step".

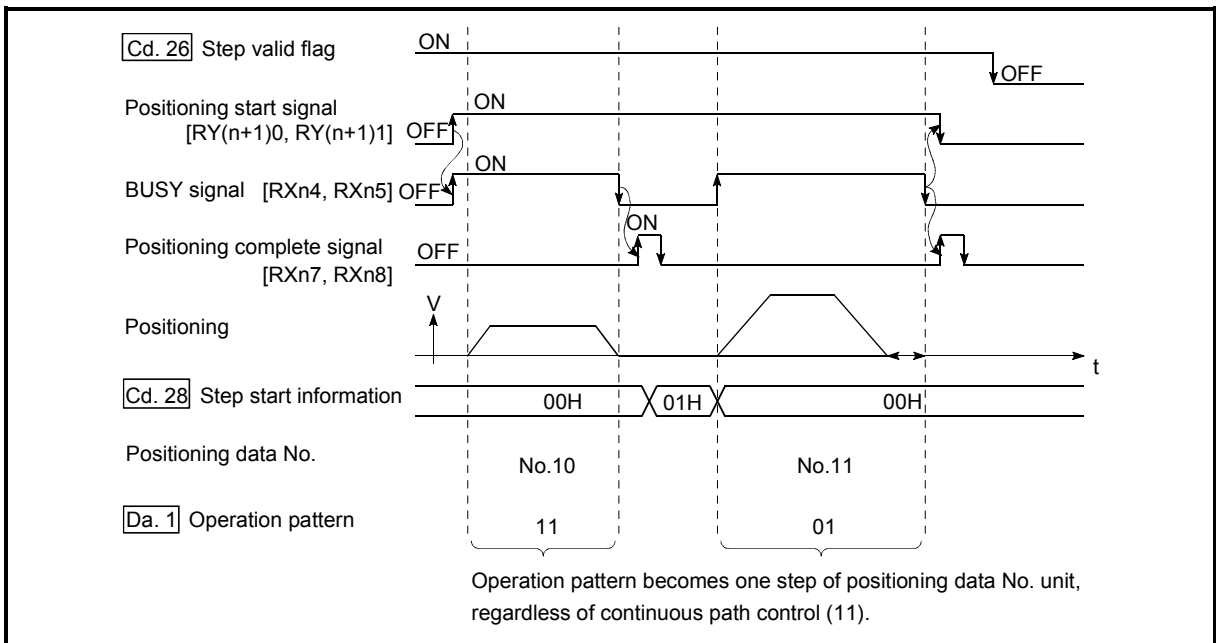


Fig. 12.36 Operation during step execution positioning data No. unit step

## (6) Precautions during control

- (a) When step operation is carried out using interpolation control positioning data, the step function settings are carried out for the reference axis.
- (b) When the step valid flag is ON, the step operation will start from the beginning if the positioning start signal is turned ON while "[Md.35] Axis operation status" is "step standing by", "step stopped", or "step error occurring". (The step operation will be carried out from the positioning data set in "[Cd.11] Positioning start No.".)

## (7) Step function settings

To use the "step function", write the data shown in the following table to the AD75 using the sequence program. Refer to section "(4) Using the step operation" for the timing of the settings.

The set details are validated when written to the AD75.

Setting item		Setting value	Setting details	Buffer memory address		
				Axis 1	Axis 2	Axis 3
[Cd.26]	Step valid flag	1	Set "1: Carry out step operation".	1172	1222	1272
[Cd.27]	Step mode	→	Set "0: Deceleration unit step" or "1: Data No. unit step".	1173	1223	1273
[Cd.28]	Step start information	→	Set "1: Step continue" or "2: Restart", depending on the stop status.	1174	1224	1274

\* Refer to section "5.7 List of control data" for details on the setting details.

### 12.7.2 Skip function

The "skip function" is used to stop (deceleration stop) the control of the positioning data being executed at the time of the skip signal input, and execute the next positioning data.

A skip is executed by a skip command ([Cd.29](#) Skip command) or external start signal. The "skip function" can be used during control in which positioning data is used.

The details shown below explain about the "skip function".

- (1) Control details
- (2) Precautions during control
- (3) Setting the skip function from the programmable controller CPU
- (4) Setting the skip function using an external start signal

#### (1) Control details

The following drawing shows the skip function operation.

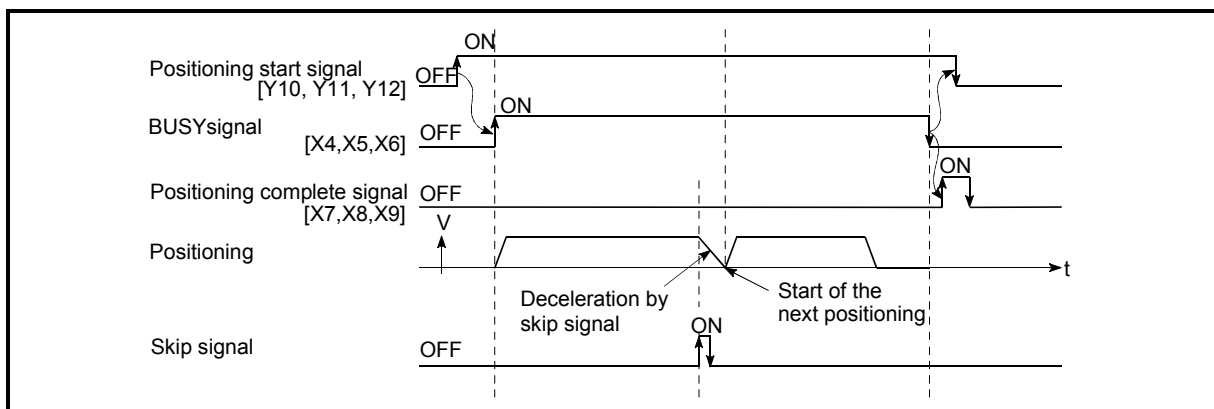


Fig. 12.37 Operation when a skip signal is input during positioning control

#### (2) Precautions during control

- (a) If the skip signal is turned ON at the last of an operation, a deceleration stop will occur and the operation will be terminated.
- (b) When a control is skipped (when the skip signal is turned ON during a control), the positioning complete signals (X7, X8, X9) will not turn ON.
- (c) When the skip signal is turned ON during the dwell time, the remaining dwell time will be ignored, and the next positioning data will be executed.
- (d) When a control is skipped during interpolation control, the reference axis skip signal is turned ON. When the reference axis skip signal is turned ON, a deceleration stop will be carried out for both axes, and the next reference axis positioning data will be executed.
- (e) The M code ON signals (XD, XE, XF) will not turn ON when the M code output is set to the AFTER mode (when "1: AFTER mode" is set in "[Pr.19](#) M code ON signal output timing").  
(In this case, the M code will not be stored in "[Md.32](#) Valid M code".)

(3) Setting the skip function from the programmable controller CPU  
 The following shows the settings and sequence program example for skipping the control being executed in axis 1 with a command from the programmable controller CPU.


- (a) Set the following data.  
 (The setting is carried out using the sequence program shown below in section (2)).

Setting item	Setting value	Setting details	Buffer memory address			
			Axis 1	Axis 2	Axis 3	
Cd.29	Skip command	1	Set "1: Skip request".	1175	1225	1275

\* Refer to section "5.7 List of control data" for details on the setting details.

- (b) Add the following sequence program to the control program, and write it to the programmable controller CPU.

- 1) When the "skip command" is input, the value "1" (skip request) set in "Cd.29 Skip command" is written to the AD75 buffer memory (1175).

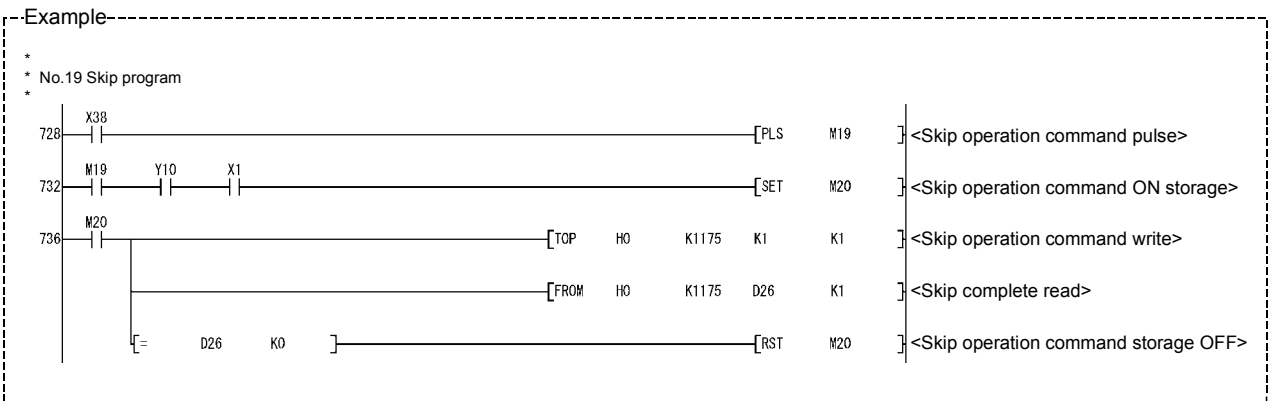



(4) Setting the skip function using an external start signal


The skip function can also be executed using an "external start signal".  
The following shows the settings and sequence program example for skipping the control being executed in axis 1 using an "external start signal".

- (a) Set the following data to execute the skip function using an external start signal.  
(The setting is carried out using the sequence program shown below in section (2)).

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Pr.43	External start function selection	2	Set "2: Skip request".		
Cd.25	External start valid	1	Set "1: Validate external start".		
			62	212	362
			1171	1221	1271

\* Refer to section "5.7 List of control data" for details on the setting details.

- (b) Add the following sequence program to the control program, and write it to the programmable controller CPU.

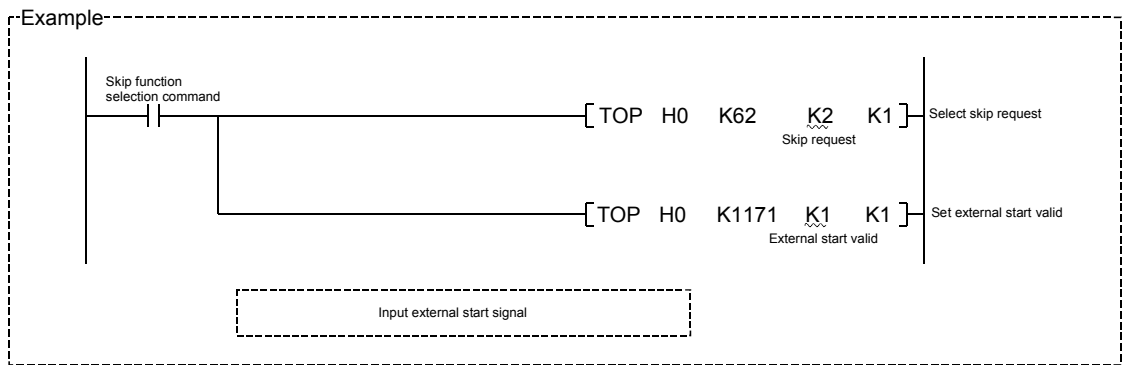

12.7.3 M code output function

The "M code output function" is used to command auxiliary work (clamping, drill rotation, tool replacement, etc.) related to the positioning data being executed. When the M code ON signal (XD, XE, XF) is turned ON during positioning execution, a No. called the M code is stored in "[Md.32] Valid M code".

These "[Md.32] Valid M code" are read from the programmable controller CPU, and used to command auxiliary work. M codes can be set for each positioning data. (Set in setting item "[Da.9] M code" of the positioning data.)

The timing for outputting (storing) the M codes can also be set in the "M code output function".

The details shown below explain about the "M code output function".

- (1) M code ON signal output timing
- (2) M code OFF request
- (3) Precautions during control
- (4) Setting the M code output function
- (5) Reading M codes

(1) M code ON signal output timing

The timing for outputting (storing) the M codes can be set in the "M code output function". (The M code is stored in "[Md.32] Valid M code" when the M code ON signal is turned ON.)

The following shows the two types of timing for outputting M codes: the "WITH" mode and the "AFTER" mode.

(a) WITH mode

The M code ON signal (XD, XE, XF) is turned ON at the positioning start, and the M code is stored in "[Md.32] Valid M code".

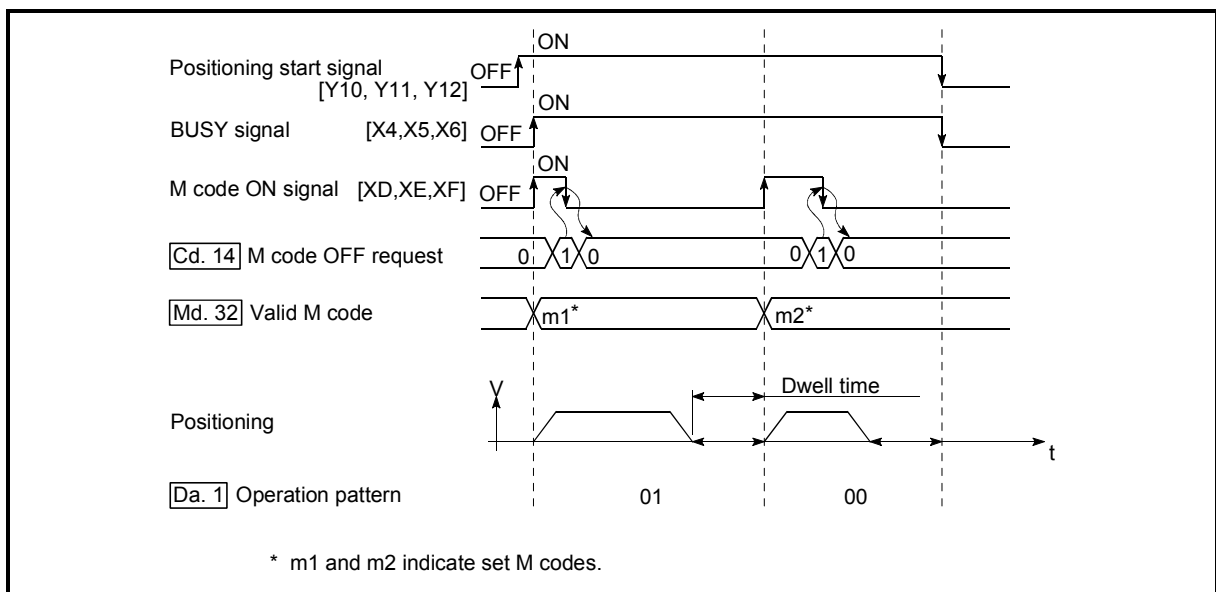


Fig. 12.38 M code ON/OFF timing (WITH mode)

(b) AFTER mode

The M code ON signal (XD, XE, XF) is turned ON at the positioning completion, and the M code is stored in "[Md.32] Valid M code".

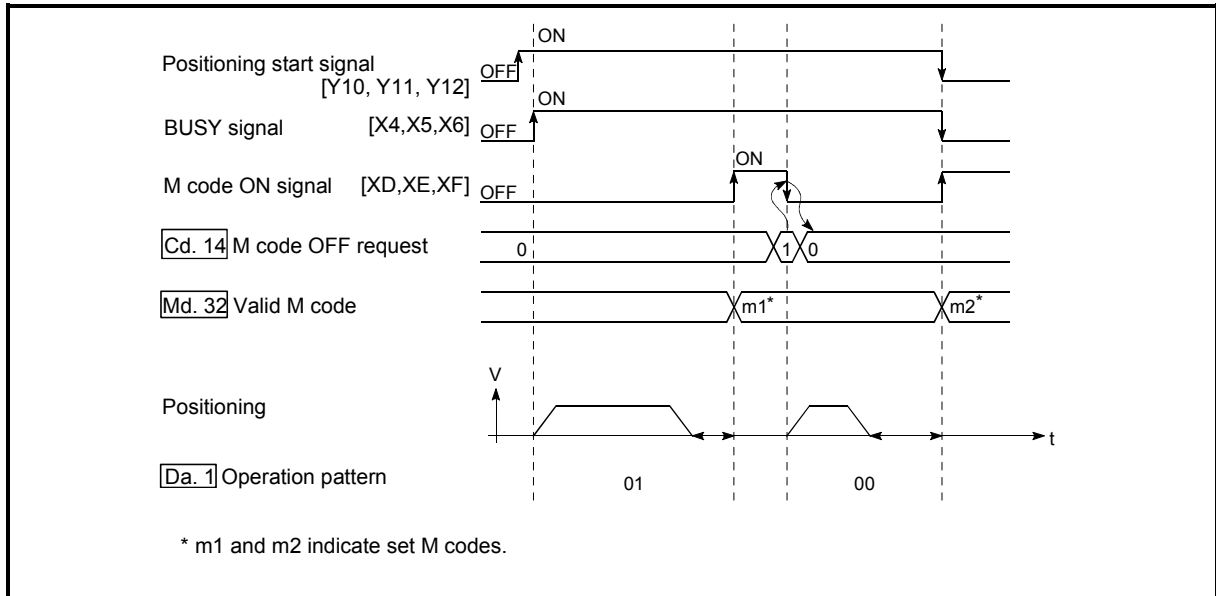


Fig. 12.39 M code ON/OFF timing (AFTER mode)

(2) M code OFF request

When the M code ON signal (XD, XE, XF) is ON, it must be turned OFF by the sequence program.

To turn OFF the M code ON signal, set "1" (turn OFF the M code signal) in "[Cd.14] M code OFF request".

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
[Cd.14] M code OFF request	1	Set "1": Turn OFF the M code ON signal".	1153	1203	1253

\* Refer to section "5.7 List of control data" for details on the setting details.

The next positioning data will be processed as follows if the M code ON signal is not turned OFF. (The processing differs according to the "[Da.1] Operation pattern".)

[Da.1] Operation pattern	Processing
00 Independent positioning control (Positioning complete)	The next positioning data will not be executed until the M code ON signal is turned OFF.
01 Continuous positioning control	The next positioning data will be executed, but a warning "M code ON signal ON start" (warning code: 503) will occur.
11 Continuous path control	The next positioning data will be executed, but a warning "M code ON signal ON start" (warning code: 503) will occur.

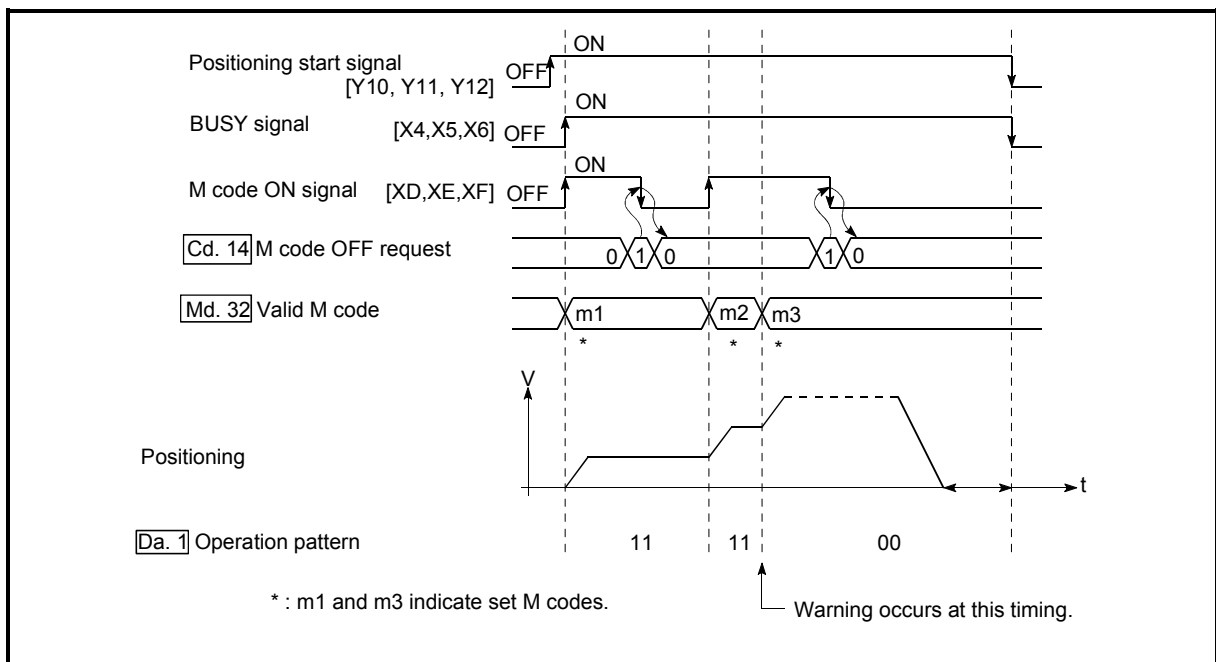


Fig. 12.40 Warning due to an M code ON signal during continuous path control

**POINT**

If the M code output function is not required, set a "0" in setting item "Da.9 M code" of the positioning data.

(3) Precautions during control

- (a) During interpolation control, the reference axis M code ON signal is turned ON.
- (b) The M code ON signal will not turn ON if "0" is set in "Da.9 M code". (The M code will not be output, and the previously output value will be held in "Md.32 Valid M code".)
- (c) If the M code ON signal is ON at the positioning start, an error "M code ON signal ON start" (error code: 536) will occur, and the positioning will not start.
- (e) If the PLC READY signal (Y1D) is turned OFF, the M code ON signal will turn OFF and "0" will be stored in "Md.32 Valid M code".
- (f) If the positioning operation time is short during continuous path control, there will not be enough time to turn OFF the M code ON signal, and a warning may occur. In this case, set a "0" in the "Da.9 M code" of that section's positioning data.
- (g) In the AFTER mode during speed control, the M code is not output and the M code ON signal does not turn ON.

(4) Setting the M code output function

The following shows the settings to use the "M code output function".

- (a) Set the M code No. in the positioning data "[Da.9] M code".
- (b) Set the timing to output the M code ON signal (XD, XE, XF).

Set the required value in the following parameter, and write it to the AD75.  
The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D).

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
[Pr.19] M code ON signal output timing	→	Set the timing to output the M code ON signal. 0: WITH mode 1: AFTER mode	25	175	325

\* Refer to section "5.2 List of parameters" for setting details.

(5) Reading M codes


"M codes" are stored in the following buffer memory when the M code ON signal turns ON.

Monitor item	Monitor value	Storage details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
[Md.32] Valid M code	→	The M code No. ([Da.9] M code) set in the positioning data is stored.	806	906	1006

\* Refer to section "5.6 List of monitor data" for information on the storage details.

The following shows a sequence program example for reading the "[Md.32] Valid M code" to the programmable controller CPU data register (D110). (The read value is used to command the auxiliary work.)

Read M codes not as "rising edge commands", but as "ON execution commands".

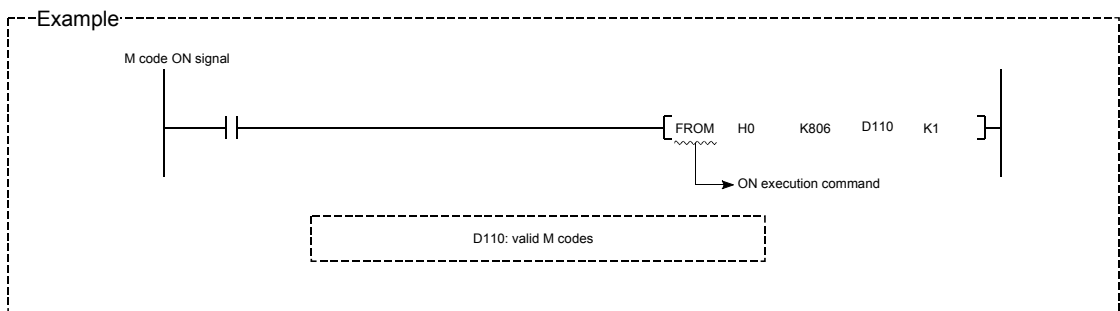

### 12.7.4 Teaching function

The "teaching function" is used to set addresses aligned using the manual control (JOG operation, manual pulse generator operation) in the positioning data addresses ([Da.5] Positioning address/movement amount, [Da.6] Arc address).

The details shown below explain about the "teaching function".

- (1) Control details
- (2) Precautions during control
- (3) Data used in teaching
- (4) Teaching procedure


#### (1) Control details

##### (a) Teaching timing

Teaching is executed using the sequence program when the BUSY signal (X4, X5, X6) is OFF. (During manual control, teaching can be carried out as long as the axis is not BUSY, even when an error or warning has occurred.)

##### (b) Addresses for which teaching is possible

The addresses for which teaching is possible are "[Md.29] Current feed value" having the zero point as a reference. The settings of the "movement amount" used in increment system positioning cannot be used. In the teaching function, these "current feed values" are set in the "[Da.5] Positioning address/movement amount" or "[Da.6] Arc address".

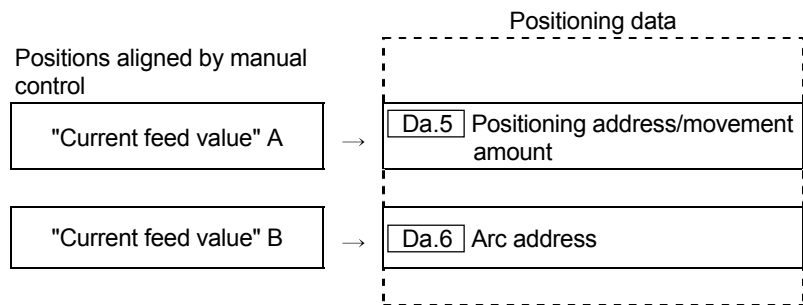

##### (c) Teaching target axis ([Cd.4] Target axis)

Teaching can be executed for the "designated axis only" or the "2 axes carrying out interpolation control". When teaching is executed for the "2 axes carrying out interpolation control", the "current feed value" is set for both the reference axis and the interpolation axis.

## (2) Precautions during control

- (a) Before teaching, a "machine zero point return" must be carried out to establish the zero point. (When a current value change function, etc., is carried out, "[Md.29] Current feed value" may not show absolute addresses having the zero point as a reference.)
- (b) Teaching cannot be carried out for positions to which movement cannot be executed by manual control (positions to which the workpiece cannot physically move). (During center point designation circular interpolation control, etc., teaching of "[Da.6] Arc address" cannot be carried out if the center point of the arc is not within the moveable range of the workpiece.)
- (c) Writing to the flash ROM can be executed up to 100,000 times.  
Writing to the flash ROM will become impossible after 100,000 times.

## (3) Data used in teaching

The following control data is used in teaching.


Setting item		Setting value	Setting details	Buffer memory address		
				Axis 1	Axis 2	Axis 3
[Cd.4]	Target axis	→	Set the writing destination axis. 1: Axis 1 2: Axis 2 3: Axis 3 4: Interpolation of axis 1 and axis 2 5: Interpolation of axis 2 and axis 3 6: Interpolation of axis 3 and axis 1	1103		
[Cd.5]	Positioning data No.	→	Set the "positioning data No."(1 to 600) of the writing destination.	1104		
[Cd.6]	Write pattern	→	Set the address to which the "current feed value" will be written. 5: Write to the "[Da.5] Positioning address/movement amount" 6: Write to the "[Da.6] Arc address".	1105		
[Cd.7]	Read/write request	2	Request writing to the positioning data.	1106		
[Cd.9]	Flash ROM write request	1	Write the set details to the flash ROM (backup the changed data).	1138		

\* Refer to section "5.7 List of control data" for details on the setting details.

(4) Teaching procedure


The following shows the procedure for a teaching operation.


(a) When teaching to the "[Da.5] Positioning address/movement amount"

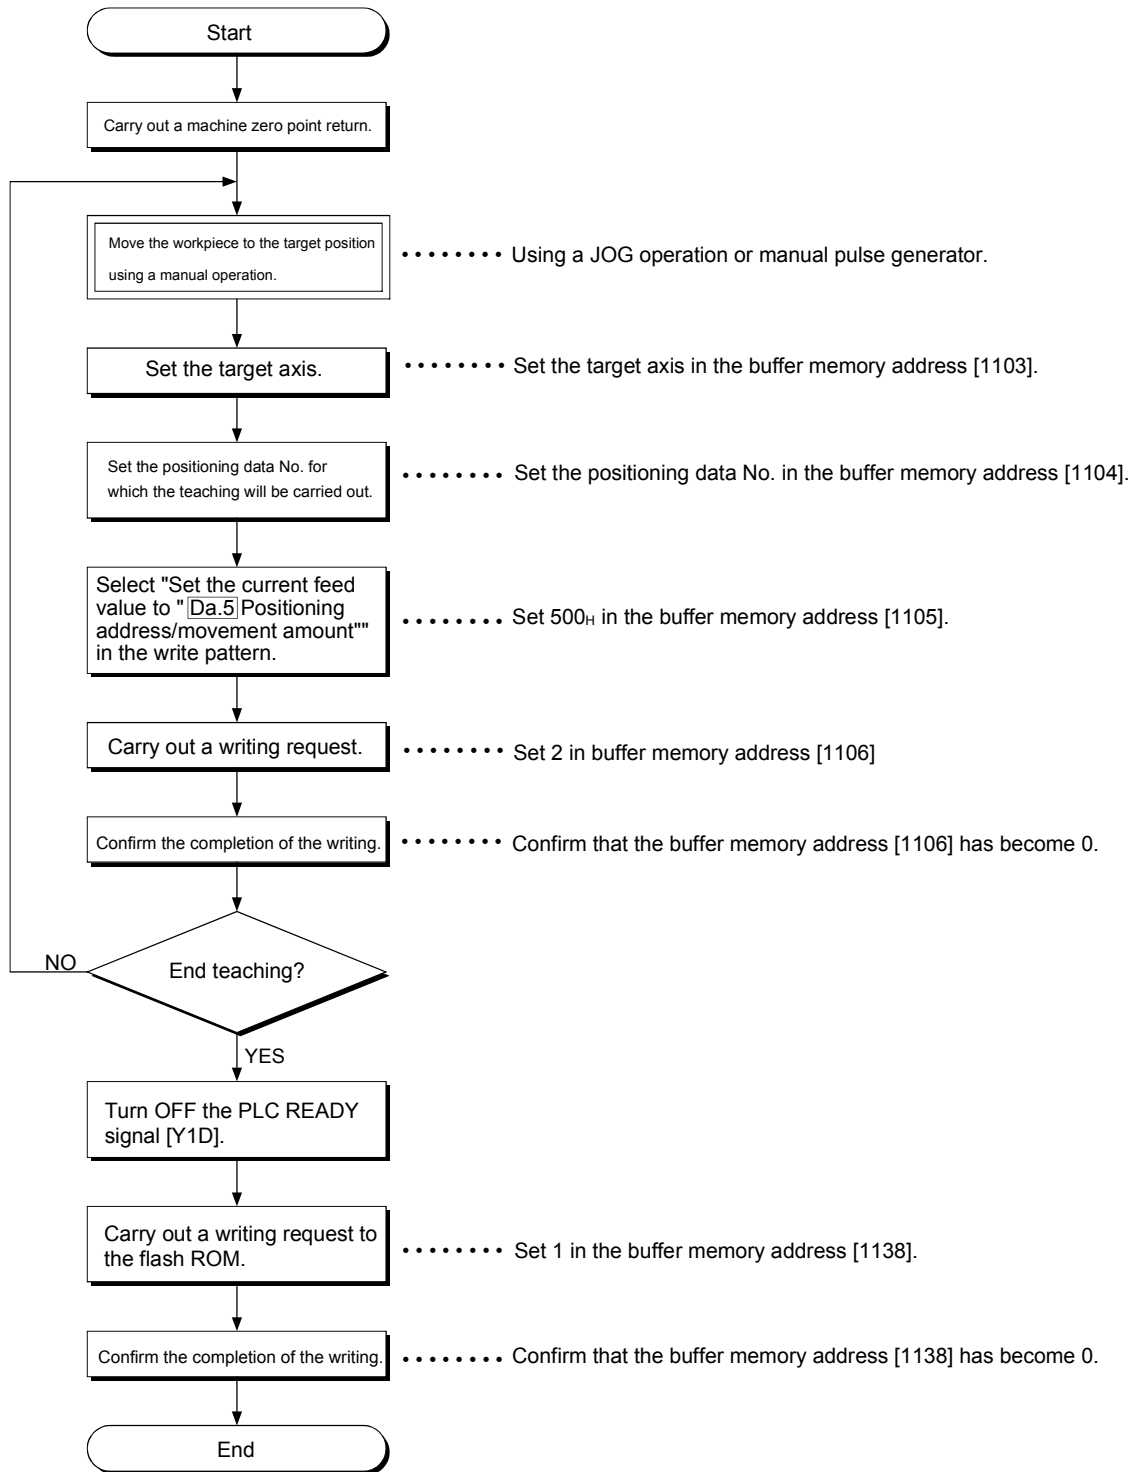



(b) When teaching to the "[Da.6] Arc address", then teaching to the "[Da.5] Positioning address/movement amount"

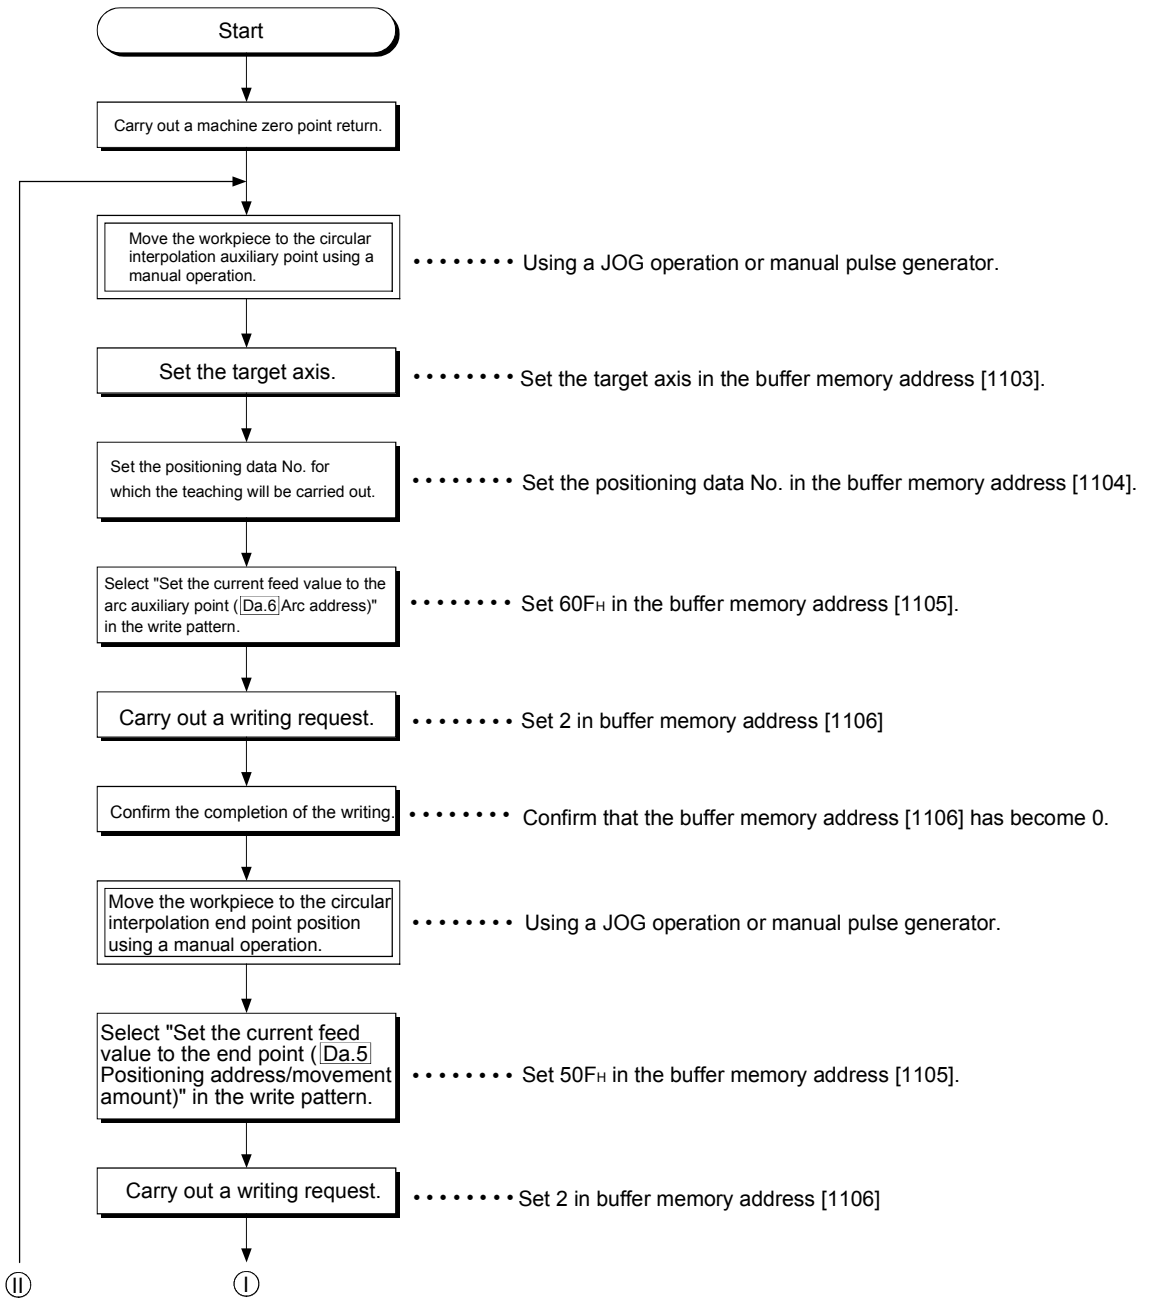

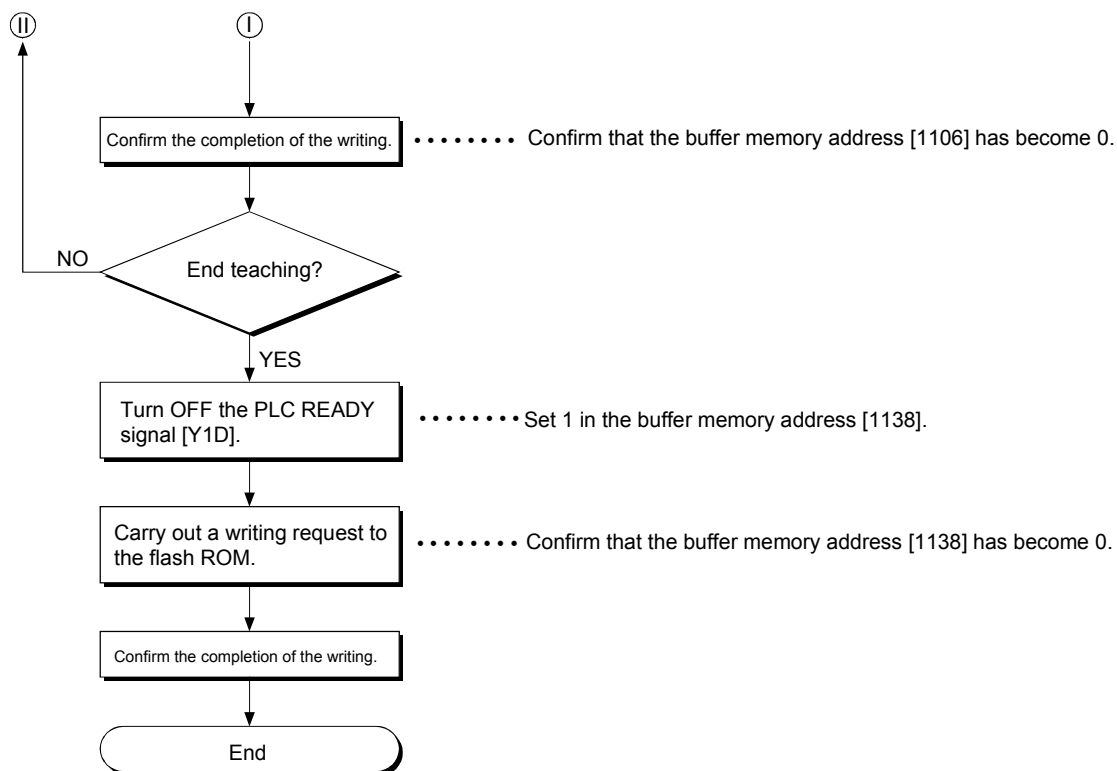

(5) Teaching program example


The following shows a sequence program example for setting (writing) the positioning data obtained with the teaching function to the AD75.

(a) Setting conditions


- When setting the current feed value as the positioning address/arc auxiliary point, write it when the BUSY signal is OFF.

(b) Program example 1


- The following example shows a program in which the "[Md.29] Current feed value" is written to the "positioning address" of the axis 1 positioning data No. 1, and the positioning data stored in D40 to D45 is written to the other positioning data.

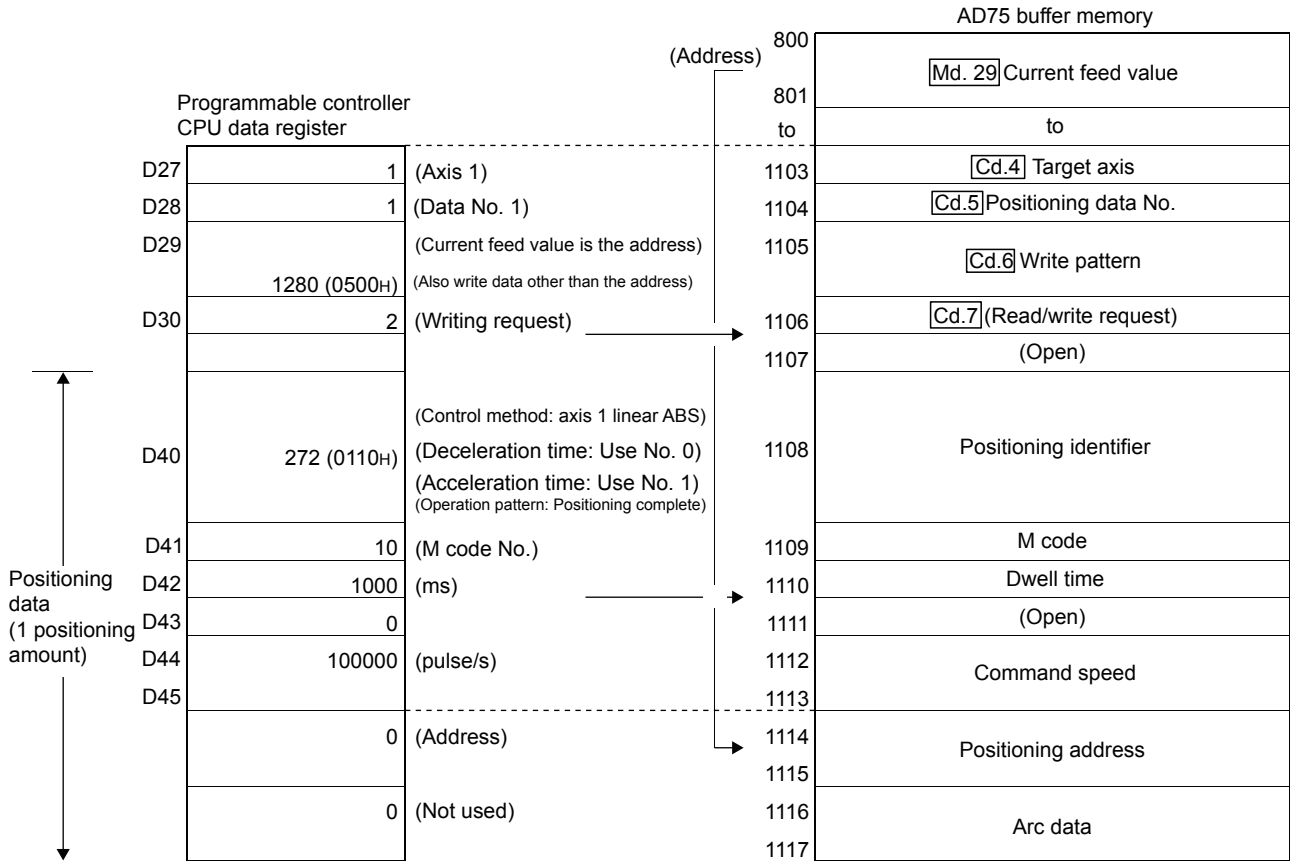

- 1) Move the workpiece to the target position using a JOG operation (or a manual pulse generator operation).

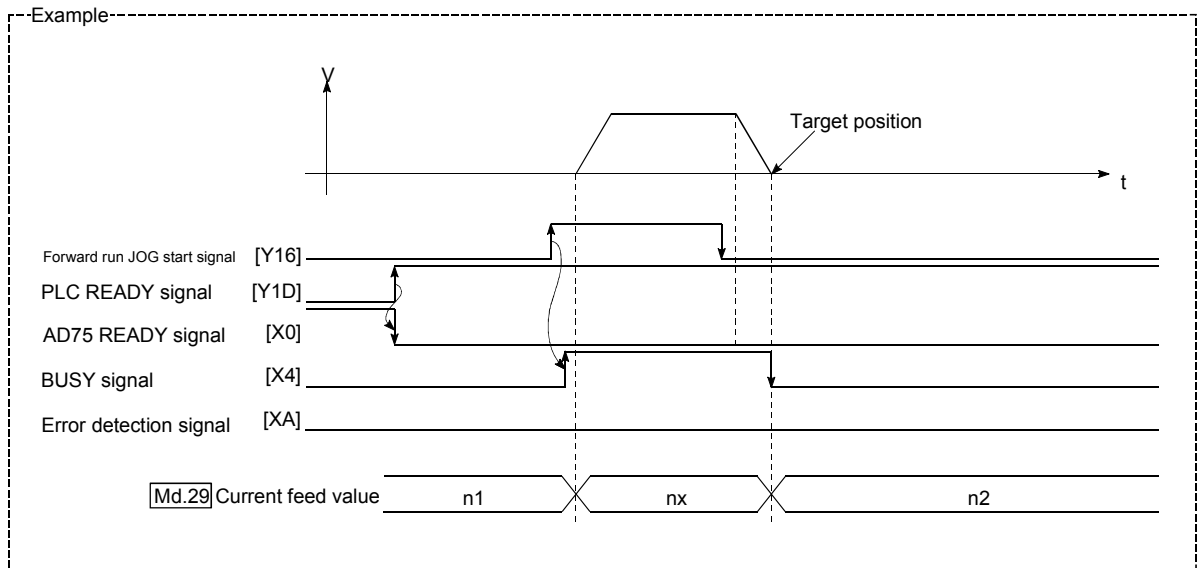

2) Carry out the teaching operation with the following program.

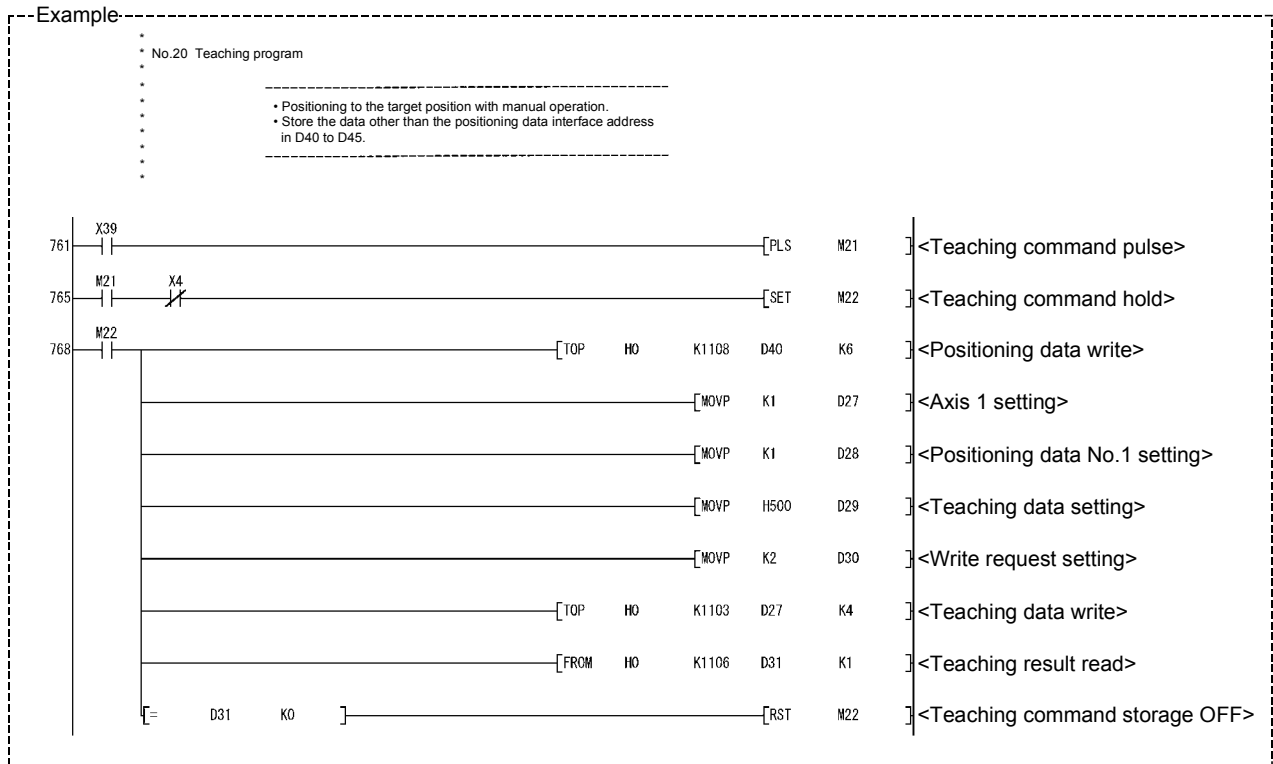


**POINT**


- (1) Use the address 1103 to 1137 areas in the system control data area as the buffer memory for the positioning data interface.
- (2) Confirm the teaching function and teaching procedure before setting the positioning data.
- (3) The positioning addresses that are written are absolute address (ABS) values.
- (4) If the positioning operation is correctly completed with the written positioning data, it is recommended that the positioning data be registered in the AD75 flash ROM.

(c) Program example 2

- The following example shows a program in which the "Md.29 Current feed value" is written to the "positioning address" and "arc address" of the circular interpolation control positioning data No. 2 of axis 1 and axis 2.

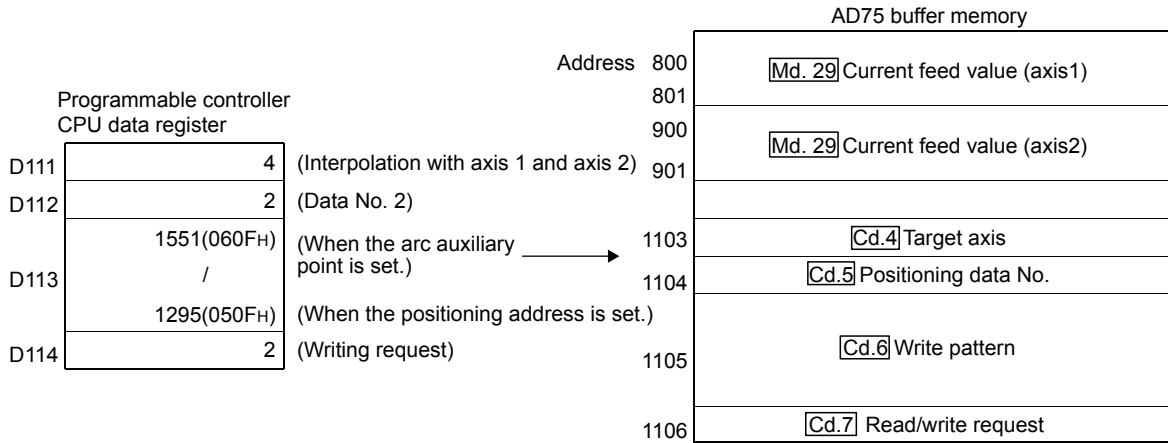

- Move the workpiece to the target position using a JOG operation (or a manual pulse generator operation).

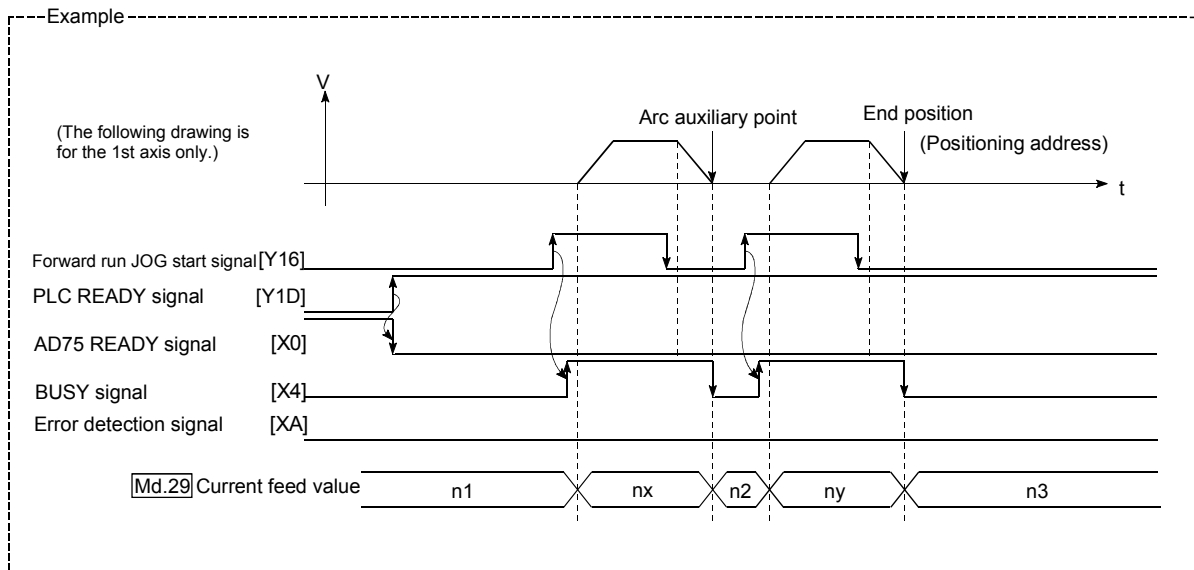

2) Carry out the teaching operation with the following program.

**Example**

Teaching program

-----

- Set the positioning data other than the positioning address and circle data of data No. 2.

-----

- Position the workpiece to the auxiliary point of the circular interpolation using a manual operation.
- Store the data for the positioning data interface in D111 to D114. (Write pattern: 060FH)

-----

-----

- Position the workpiece to the end (positioning address) of the circular interpolation using a manual operation.
- Store the data for the positioning data interface in D111 to D114. (Write pattern: 050F)

-----

-----

X4 : BUSY signal  
 X40, X41 : Teaching 1, 2 command  
 M105, M107 : Teaching command 1, 2 pulse  
 M106, M108 : Teaching command 1, 2 storage  
 D111 to D114 : Positioning data interface  
 D115, D116 : Teaching results

POINT
(1) Use the address 1103 to 1137 areas in the system control data area as the buffer memory for the positioning data interface.
(2) Confirm the teaching function and teaching procedure before setting the positioning data.
(3) The positioning addresses that are written are absolute address (ABS) values.
(4) If the positioning operation is correctly completed with the written positioning data, it is recommended that the positioning data be registered in the AD75 flash ROM.

12.7.5 Command in-position function

The "command in-position function" checks the remaining distance to the stop position during the automatic deceleration of positioning control, and set a flag. This flag is called the "command in-position flag". The command in-position flag is used as a front-loading signal indicating beforehand the completion of the position control.

The details shown below explain about the "command in-position function".

- (1) Control details
- (2) Precautions during control
- (3) Setting the command in-position function
- (4) Confirming the command in-position flag

(1) Control details

The following shows control details of the command in-position function.

- (a) When the remaining distance to the stop position during the automatic deceleration of positioning control becomes equal to or less than the value set in "[Pr.17] Command in-position width", "1" is stored in the command in-position flag ([Md.40] Status: b2).

(Command in-position width check)

$$\text{Remaining distance} \leq \text{[Pr.17] Command in-position width setting value}$$

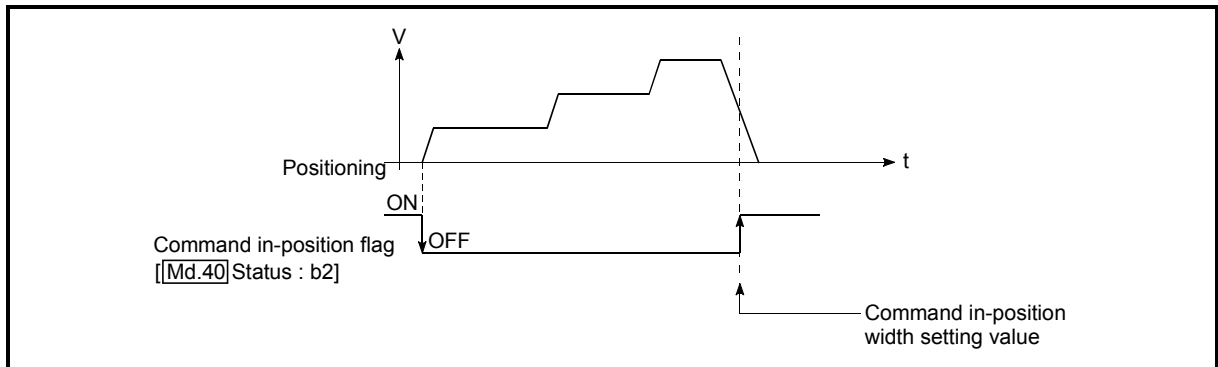


Fig. 12.41 Command in-position operation

- (b) A command in-position width check is carried out every 56.8ms.



## (2) Precautions during control

- (a) The range check of the command in-position is not performed during speed control and that of speed/position changeover control.

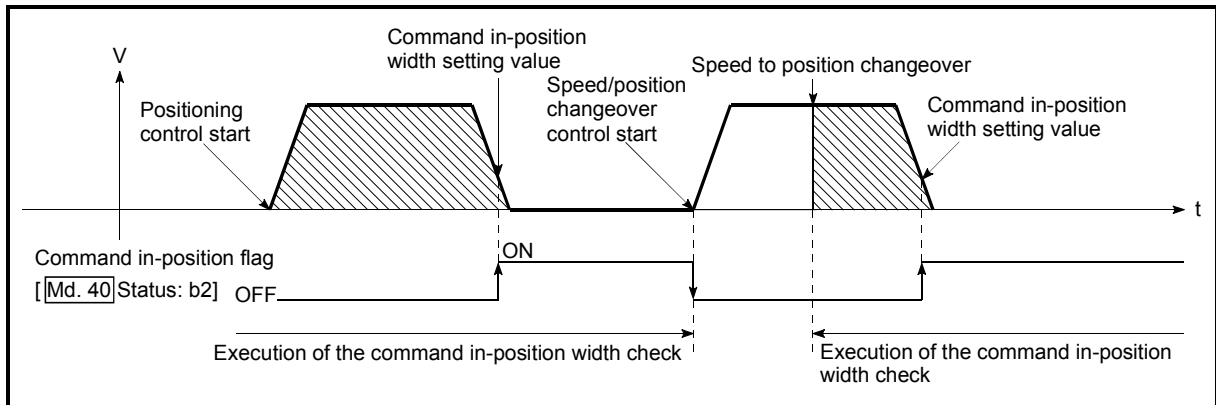


Fig. 12.42 Command in-position width check

- (b) The command in-position flag will be turned OFF in the following cases. ("0" will be stored in "[Md.40] Status: b2".)
- At the positioning control start
  - At the speed control start
  - At the zero point return control start
  - At the JOG operation start
  - When the manual pulse generator operation is enabled.
- (c) The "[Pr.17] Command in-position width" and command in-position flag ([Md.40] Status: b2) of the reference axis are used during interpolation control.

## (3) Setting the command in-position function

To use the "command in-position function", set the required value in the parameter shown in the following table, and write it to the AD75.

The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D).

Setting item		Setting value	Setting details	Factory-set initial value
Pr.17	Command in-position width	→	Turn ON the command in-position flag, and set the remaining distance to the stop position of the position control.	100

\* Refer to section "5.2 List of parameters" for setting details.

## (4) Confirming the command in-position flag

The "command in-position flag" is stored in the following buffer memory.

Monitor item	Monitor value	Storage details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Md.40	Status	→	The command in-position flag is stored in the "b2" position.		
			817	917	1017

\* Refer to section "5.6 List of monitor data" for information on the storage details.

**REMARK**

- Parameters are set for each axis.
- It is recommended that the parameters be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

12.7.6 Acceleration/deceleration processing function

The "acceleration/deceleration processing function" adjusts the acceleration/deceleration when each control is executed.

Adjusting the acceleration/deceleration processing to match the control enables more precise control to be carried out.

There are three acceleration/deceleration adjustment items that can be set: "Acceleration/deceleration time size selection", "acceleration/deceleration time 0 to 3", and "acceleration/deceleration method setting".

The details shown below explain about the "acceleration/deceleration processing function".

- (1) "Acceleration/deceleration time size selection" control details and setting
- (2) "Acceleration/deceleration time 0 to 3" control details and setting
- (3) "Acceleration/deceleration method setting" control details and setting

(1) "Acceleration/deceleration time size selection" control details and setting

In the "acceleration/deceleration time size selection", the sizes (setting ranges) of the acceleration time, deceleration time, and sudden stop deceleration time are selected and set.

- Acceleration time: The time from speed 0 until the "[Pr.7] Speed limit value" is reached.
- Deceleration time: The time from the "[Pr.7] Speed limit value" until speed 0 is reached.
- Sudden stop deceleration time: The time from "[Pr.7] Speed limit value" until speed 0 is reached.

Set the required values for the acceleration/deceleration time size in the parameters shown in the following table, and write them to the AD75.

The set details are validated at the rising edge (OFF → ON) of the PLC READY signal (Y1D).

Setting item		Setting value	Setting details	Factory-set initial value
[Pr.25]	Size selection for acceleration/deceleration time	→	Select the acceleration/deceleration time size (setting range) from the following two sizes, and set the appropriate value. 0: 1 to 65535ms 1: 1 to 8388608ms	0

\* Refer to section "5.2 List of parameters" for setting details.

- (2) "Acceleration/deceleration time 0 to 3" control details and setting
- In the AD75, four types each of acceleration time and deceleration time can be set. By using separate acceleration/deceleration times, control can be carried out with different acceleration/deceleration times for positioning control, JOG operation, zero point returns, etc.
- Set the required values for the acceleration/deceleration time in the parameters shown in the following table, and write them to the AD75.
- The set details are validated when written to the AD75.

Setting item	Setting value	Setting details	Factory-set initial value
Pr.8	Acceleration time 0	→	1000
Pr.26	Acceleration time 1	→	Set the acceleration time within the setting value range set in "[Pr.25] Size selection for acceleration/deceleration time".
Pr.27	Acceleration time 2	→	
Pr.28	Acceleration time 3	→	
Pr.9	Deceleration time 0	→	
Pr.29	Deceleration time 1	→	Set the deceleration time within the setting value range set in "[Pr.25] Size selection for acceleration/deceleration time".
Pr.30	Deceleration time 2	→	
Pr.31	Deceleration time 3	→	

\* Refer to section "5.2 List of parameters" for setting details.

- (3) "Acceleration/deceleration method setting" control details and setting

In the "acceleration/deceleration method setting", the acceleration/deceleration processing method is selected and set. The set acceleration/deceleration processing is applied to all acceleration/deceleration.

The two types of "acceleration/deceleration method setting" are shown below.

- (a) Automatic trapezoidal acceleration/deceleration processing method

This is a method in which linear acceleration/deceleration is carried out based on the acceleration time, deceleration time, and speed limit value set by the user.

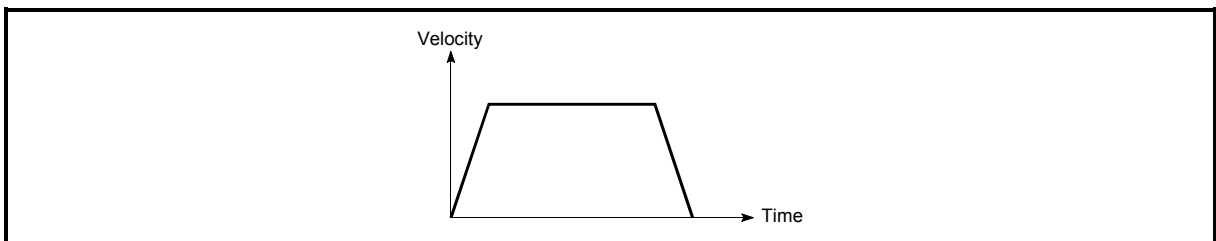


Fig. 12.43 Automatic trapezoidal acceleration/deceleration processing method

(b) S-curve acceleration/deceleration processing method

In this method, the motor burden is reduced during starting and stopping. This is a method in which acceleration/deceleration is carried out gradually, based on the acceleration time, deceleration time, speed limit value, and "Pr.36 S-curve ratio" (1 to 100%) set by the user.

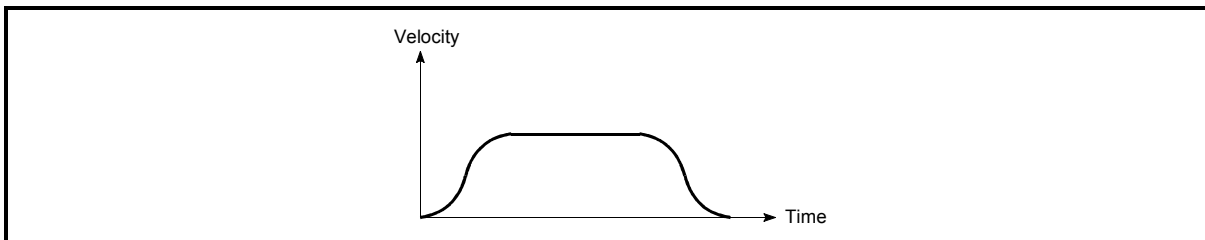


Fig. 12.44 S-curve acceleration/deceleration processing method

When a speed change request is given during S-curve acceleration/deceleration processing, S-curve acceleration/deceleration processing begins at a speed change request start.

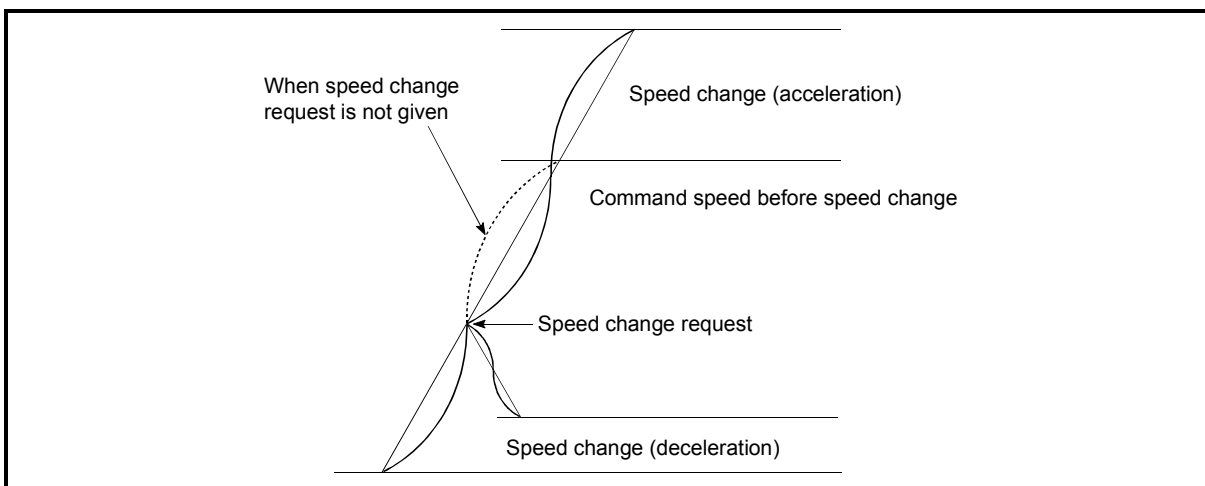


Fig. 12.45 Speed change during S-curve acceleration/deceleration processing

Set the required values for the "acceleration/deceleration method setting" in the parameters shown in the following table, and write them to the AD75. The set details are validated when written to the AD75.

Setting item		Setting value	Setting details	Factory-set initial value
Pr.35	Acceleration/deceleration process selection	→	Set the acceleration/deceleration method. 0: Automatic trapezoidal acceleration/deceleration method 1: S-curve acceleration/deceleration processing	0
Pr.36	S-curve ratio	→	Set the acceleration/deceleration curve when "1" is set in "Pr.35 Acceleration/deceleration processing selection".	100

\* Refer to section "5.2 List of parameters" for setting details.

### REMARK

- Parameters are set for each axis.
  - It is recommended that the parameters be set whenever possible with the AD75 software package. Execution by sequence program uses many sequence programs and devices. The execution becomes complicated, and the scan times will increase.

12.7.7 Indirectly specification function

The "indirectly specification function" specifies indirectly and starts the positioning data No.

The "indirectly specification function" is executed by setting the positioning data No. 1 to 600 desired to be started to the "indirectly specification data area" and starting that "indirectly specification data".

The "indirectly specification data" can be set on an "indirectly specification No. (8001 to 8050)" basis and can be set to up to 50 pieces on an axis basis.

The following details will be explained about the "indirectly specification function".

- (1) "Indirectly specification data" setting items and setting details
- (2) "Indirectly specification data" configuration
- (3) Control details and setting


(1) "Indirectly specification data" setting items and setting details

The following indicates the outline of the setting items and setting details of the "indirectly specification data" to be stored into the AD75.

Setting item		Setting details
Indirectly specification data	Positioning data No. for indirectly specification No. 8001	Set the positioning data No. (1 to 600) whose execution will be started when 8001 is set as the positioning start No. and started.
	Positioning data No. for indirectly specification No. 8002	Set the positioning data No. (1 to 600) whose execution will be started when 8002 is set as the positioning start No. and started.
	Positioning data No. for indirectly specification No. 8003	Set the positioning data No. (1 to 600) whose execution will be started when 8003 is set as the positioning start No. and started.
	Positioning data No. for indirectly specification No. 8004	Set the positioning data No. (1 to 600) whose execution will be started when 8004 is set as the positioning start No. and started.
	Positioning data No. for indirectly specification No. 8005	Set the positioning data No. (1 to 600) whose execution will be started when 8005 is set as the positioning start No. and started.
	to	to
	Positioning data No. for indirectly specification No. 8046	Set the positioning data No. (1 to 600) whose execution will be started when 8046 is set as the positioning start No. and started.
	Positioning data No. for indirectly specification No. 8047	Set the positioning data No. (1 to 600) whose execution will be started when 8047 is set as the positioning start No. and started.
	Positioning data No. for indirectly specification No. 8048	Set the positioning data No. (1 to 600) whose execution will be started when 8048 is set as the positioning start No. and started.
	Positioning data No. for indirectly specification No. 8049	Set the positioning data No. (1 to 600) whose execution will be started when 8049 is set as the positioning start No. and started.
	Positioning data No. for indirectly specification No. 8050	Set the positioning data No. (1 to 600) whose execution will be started when 8050 is set as the positioning start No. and started.

(2) "Indirectly specification data" configuration

The following AD75 buffer memory can store the "indirectly specification data (positioning data No. 1 to 600)" corresponding to the "indirectly specification No. (8001 to 8050)" on an axis basis.

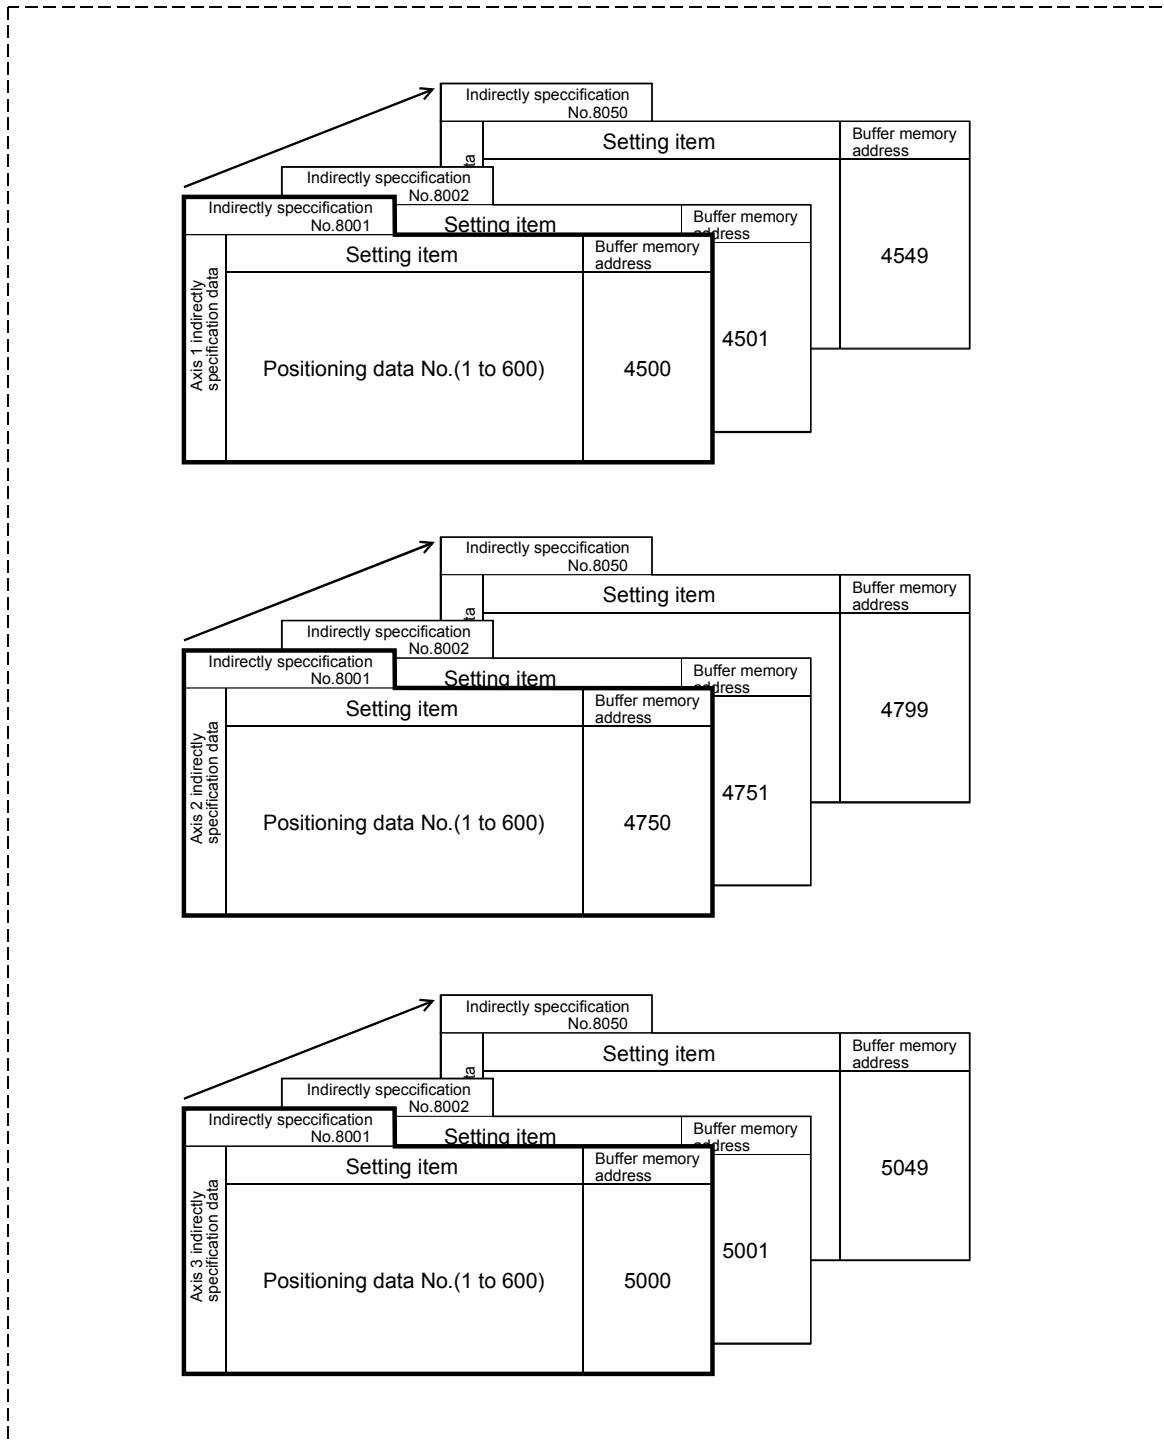

\* Set to the AD75 using a sequence program or the AD75 software package.



(3) Control details and setting

The following shows the control details and setting when the indirectly specification data set to the indirectly specification No. 8001 of axis 1 is started.

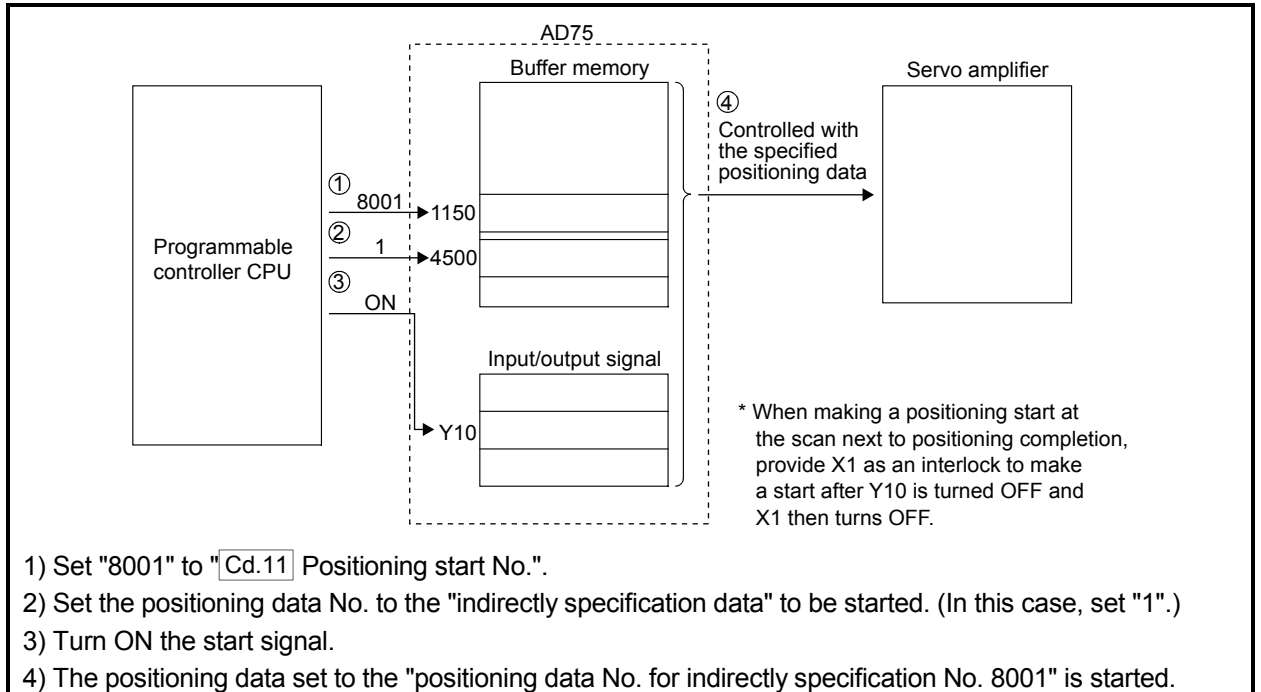


Fig. 12.46 Indirectly specification function operating procedure (for axis 1)

## (a) Control data that requires setting

The following control data must be set to execute the indirectly specification function. Make this setting using a sequence program.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.11	Positioning start No.	8001	Set "8001" that indicates the control using the "indirectly specification data".		
			1150	1200	1250

\* For the setting details, refer to section "5.7 List of control data".

## (b) Starting conditions

The following conditions must be satisfied to make a start. Also, the required conditions must be incorporated into the sequence program, and the data must be disabled from starting if the conditions are not satisfied.

Signal name	Signal state	Device			
		Axis 1	Axis 2	Axis 3	
Interface signal	All axes servo ON signal	ON	Servo operation possible		
	PLC READY signal	ON	Programmable controller CPU preparation completed		
	AD75 READY signal	OFF	AD75 preparation completed		
	Axis stop signal	OFF	Y13	Y14	Y1C
	Start complete signal	OFF	X1	X2	X3
	BUSY signal	OFF	X4	X5	X6
	Error detection signal	OFF	XA	XB	XC
	M code ON signal	OFF	XD	XE	XF
External signal	Stop signal	OFF	Stop signal is OFF		
	Upper limit (FLS)	ON	Within limit range		
	Lower limit (RLS)	ON	Within limit range		
Monitor data	Servo ON	On	Servo On is ON		Md.116 Servo status: b1

(c) Start time chart

The following time chart assumes that the positioning data No. 1, 2, 3, 4 and 5 of axis 1 are executed consecutively by "indirectly specification" as an example.

1) Indirectly specification data setting example

Axis 1 indirectly specification No.	Positioning data No. for indirectly specification No. 8001 for axis 1
8001	1

2) Positioning data setting example

Axis 1 positioning data No.	Da.1 Operation pattern
1	11: Continuous path control
2	01: Continuous positioning control
3	11: Continuous path control
4	11: Continuous path control
5	00: Positioning complete

3) Start time chart

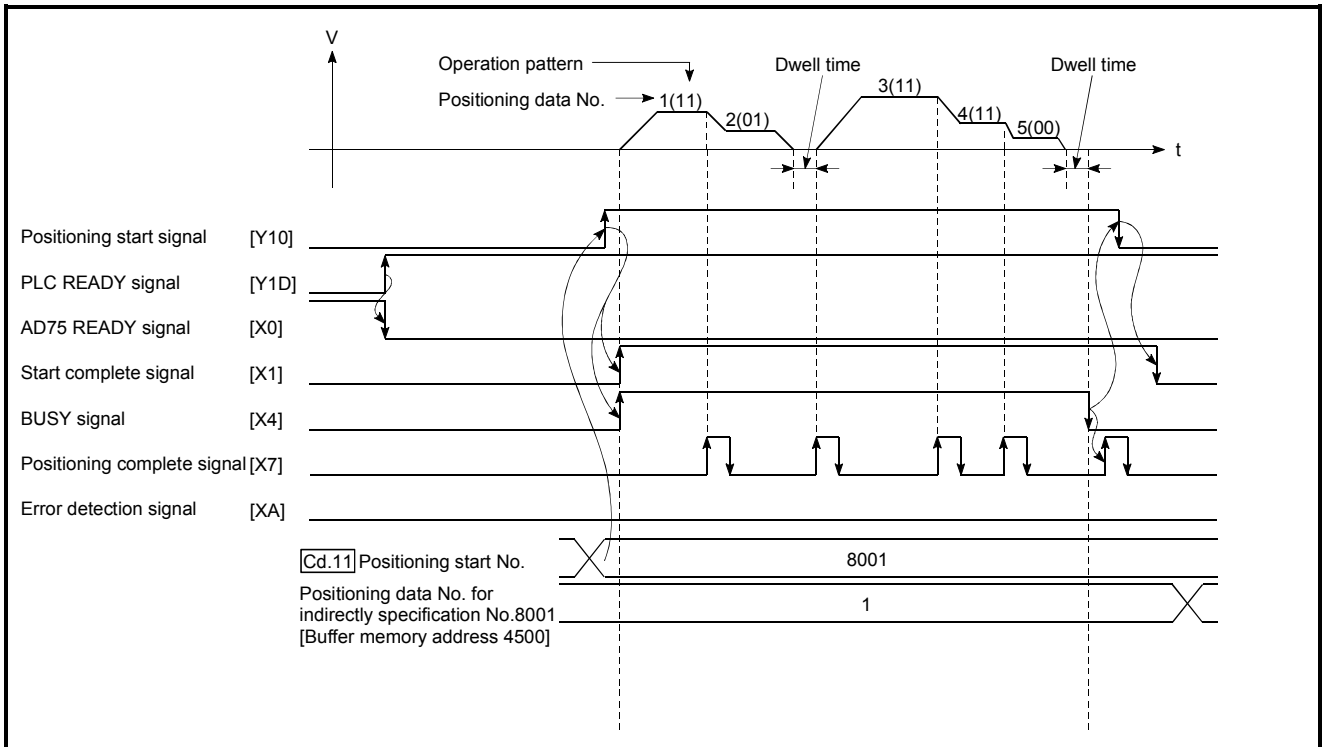


Fig. 12.47 Start time chart for positioning control using indirectly specification function



---

# CHAPTER 13

---

## COMMON FUNCTIONS

The details and usage of the "common functions" executed according to the user's requirements are explained in this chapter.

Common functions include functions required when using the AD75, such as parameter initialization and execution data backup.

Read the setting and execution procedures for each common function thoroughly, and execute the appropriate function where required.

13.1	Outline of common functions.....	13- 2
13.2	Parameter initialization function .....	13- 3
13.3	Execution data backup function .....	13- 5
13.4	LED display function .....	13- 7
13.5	Clock data function .....	13- 11

## 13.1 Outline of common functions

"Common functions" are executed according to the user's requirements, regardless of the control method, etc.

Common functions include "parameter initialization", "execution data backup", "work status and error code display", etc. These common functions are executed by commands from the AD75 software package, common function sequence programs, mode switches on the front panel of the main unit, etc.

The following table shows the functions included in the "common functions".

Common function	Details
Parameter initialization function	This function returns the "setting data" stored in the AD75 flash ROM to the factory-set initial value. There are two methods for this function. 1) Method using the sequence program 2) Method using the AD75 software package
Execution data backup function	This function stores (backs up) the "setting data", currently being executed, in the flash ROM. There are two methods for this function. 1) Method using the sequence program 2) Method using the AD75 software package
LED display function	This function displays the AD75 work status, signal status, error details, etc., on the 17-segment LED on the front of the main unit. The display details are changed over using the mode switch on the front of the main unit.
Clock data function	This function sets the programmable controller CPU clock data in the AD75. This is used for various history data, etc.

## 13.2 Parameter initialization function

"The parameter initialization function" is used to return the setting data set in the AD75 flash ROM and OS memory to their factory-set initial values.

This function is used when several parameter errors occur and the AD75 will not start. In this case, resetting is carried out after the setting data are initialized. (If there is an abnormality in the parameters set in the AD75 when the PLC READY signal (Y1D) is turned ON, the AD75 READY signal (X0) will not turn OFF, and control will not be possible.)

Parameter initialization is carried out using one of the following methods.

- Method using the sequence program.
- Method using the AD75 software package.

"The execution method using the sequence program" is explained in this section.

Refer to the AD75 Software Package Operating Manual for details on the execution method using the AD75 software package.

The details shown below explain about the "parameter initialization function".

- (1) Control details
- (2) Precautions during control
- (3) Initializing the parameters

### (1) Control details

The following table shows the setting data initialized by the "parameter initialization function".

(Initialized are "flash ROM" and "OS memory" following data.)

Setting data
Basic parameters ( Pr.1 to Pr.10 )
Detailed parameters ( Pr.12 to Pr.44 , Pr.150 )
Zero point return basic parameters ( Pr.45 to Pr.50 )
Zero point return detailed parameters ( Pr.52 to Pr.59 )
Servo basic parameters ( Pr.100 to Pr.109 )
Servo adjustment parameters ( Pr.112 to Pr.125 )
Servo extension parameters ( Pr.127 to Pr.138 , Pr.149 )
Positioning data
Start block data
Condition data

(2) Precautions during control

- (a) Parameter initialization is only executed when the PLC READY signal (Y1D) is OFF.  
(A warning "In PLC READY" (warning code: 111) will occur if executed when the PLC READY signal (Y1D) is ON.)
- (b) A "programmable controller CPU reset" or "programmable controller power restart" must be carried out after the parameters are initialized. (Parameter initialization is carried out for the AD75 "flash ROM" and "OS memory". Data stored in the "buffer memory" will not be initialized.)
- (c) The flash ROM can be written up to 100,000 times. The flash ROM cannot be written after 100,000 writing cycles.

**Important**

Parameter initialization takes about 10 seconds. (Up to 30 seconds are sometimes required.)  
Do not turn the power ON/OFF; reset the programmable controller CPU, etc., during parameter initialization. The flash ROM data may be corrupted.

(3) Initializing the parameters

To use the "parameter initialization function", set the data shown in the following table, and write it to the AD75 using the sequence program.

Parameter initialization is carried out when the data is written to the AD75.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.10 Parameter initialization request	1	Set "1" (parameter initialization request).	1139		

\* Refer to section "5.7 List of control data" for details on the setting details.

When the initialization is complete, "0" will be set in "Cd.10 Parameter initialization request" by the AD75.



### 13.3 Execution data backup function

When the AD75 buffer memory data is rewritten from the programmable controller CPU, "the data backed up in the AD75 flash ROM" may differ from "the data for which control is being executed". In cases like these, the data being executed will be lost when the programmable controller power is turned OFF. (Refer to CHAPTER 7.) In cases like these, the "execution data backup function" backs up the data being executed by writing it to the flash ROM. The data that was backed up is then written to the buffer memory when the power is turned ON next.

The execution data is backed up (written to the flash ROM) using one of the following methods.

- Method using the sequence program
- Method using the AD75 software package


"The execution method using the sequence program" is explained in this section. Refer to the AD75 Software Package Operating Manual for details on the execution method using the AD75 software package.

The details shown below explain about the "execution data backup function".

- (1) Control details
- (2) Precautions during control
- (3) Backing up the execution data

#### (1) Control details

The following shows the data that can be written to the flash ROM using the "execution data backup function".

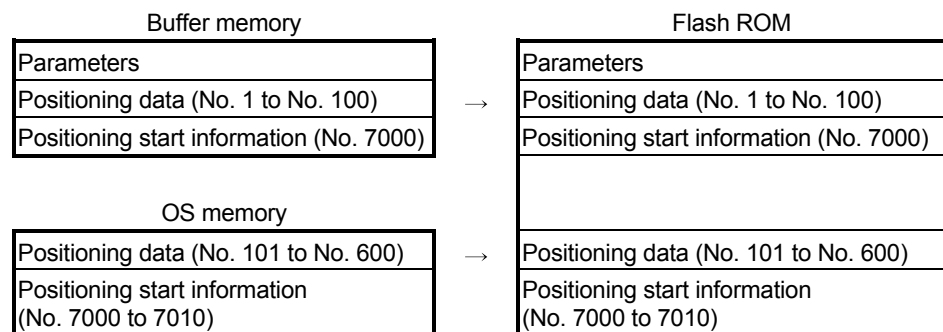

#### (2) Precautions during control

- (1) Data can only be written to the flash ROM when the PLC READY signal (Y1D) is OFF.
- (2) Writing to the flash ROM can be executed up to 100,000 times. (Writing to the flash ROM will become impossible after 100,000 times.)

#### IMPORTANT

- Do not turn on/off the power or reset the programmable controller CPU while data is written to a flash ROM. The flash ROM data may be corrupted.
- Do not write data to the buffer memory while data is written to a flash ROM. The AD75 may not operate normally.

**(3) Backing up the execution data**

To use the "execution data backup function", set the data shown in the following table, and write it to the AD75 using the sequence program.

The writing to the flash ROM is carried out when the data is written to the AD75.

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.9 Flash ROM write request	1	Set "1" (flash ROM write request).	1138		

\* Refer to section "5.7 List of control data" for details on the setting details.

When the writing to the flash ROM is complete, "0" will be set in "Cd.9 Flash ROM write request" by the AD75.

13.4 LED display function


The AD75 status, control status of each axis, input signal status, etc., can be confirmed using the LED display on the front of the AD75 main unit.  
 Monitor the operation condition as required when the AD75 is not operating normally, etc. (Constant monitoring is possible.)

The details shown below explain about the "LED display function".

- (1) LED display position
- (2) Display details
- (3) Changing the display details

(1) LED display position

The various types of information are displayed on the "17-segment LED" and "axis display LED" on the front of the main unit.  
 The display is changed over by the "mode switch".  
 The following drawing shows the positions of the "17-segment LED", "axis display LED", and "mode switch".

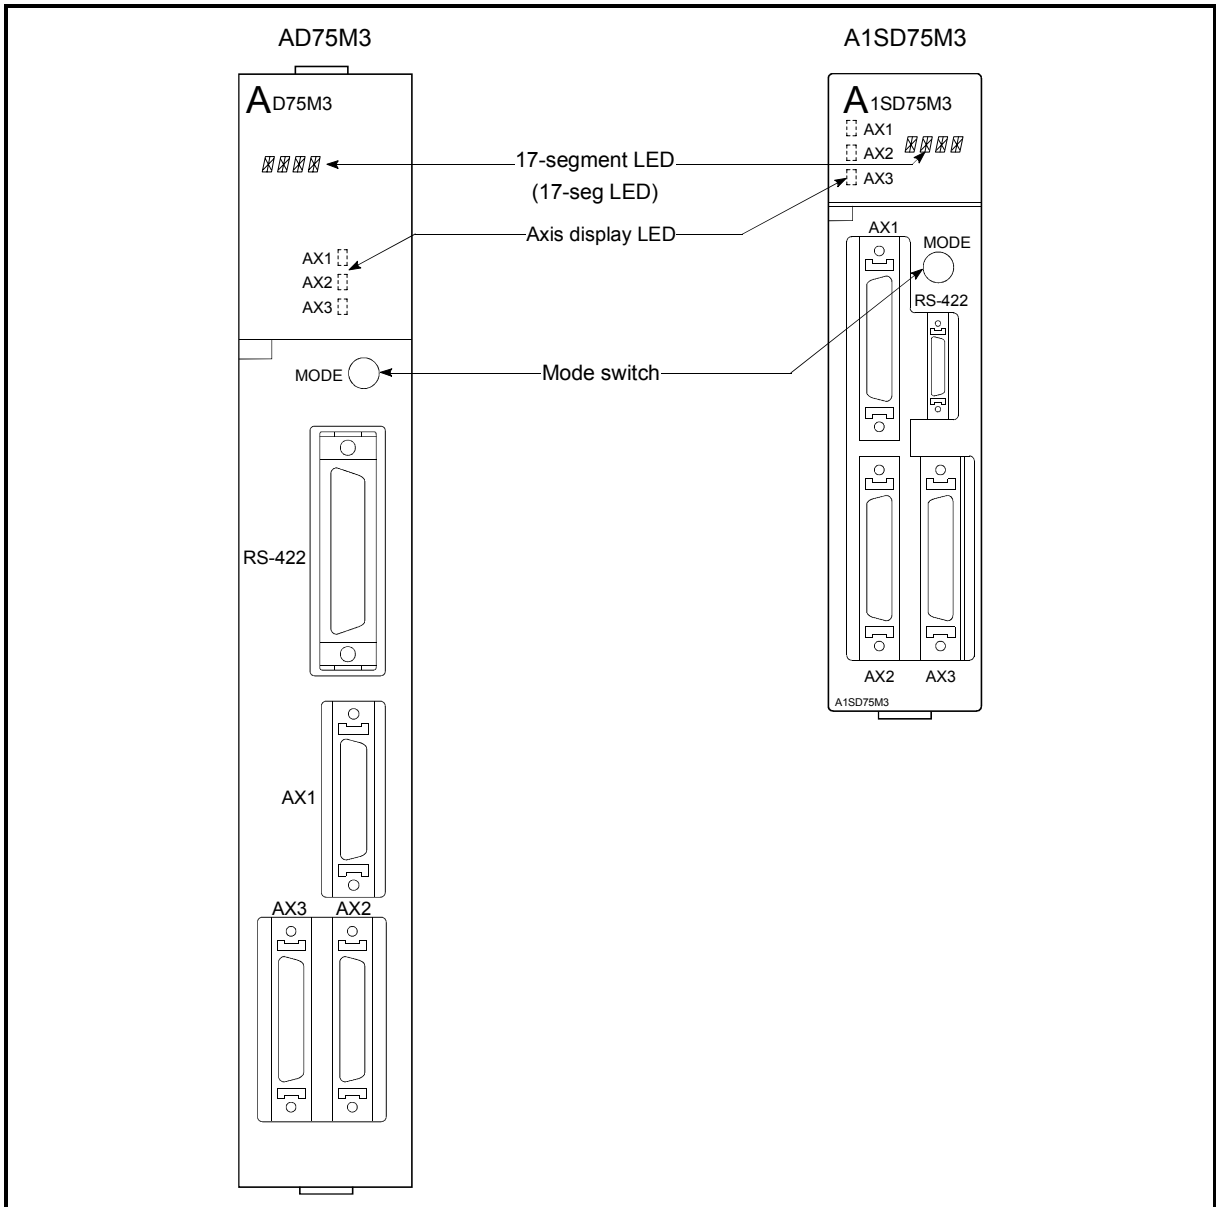

## (2) Display details

The details displayed in the LED display area are classified into several types of information (called "modes"). The following types of information are displayed according to the various modes on the "17-segment LED display" and "axis display LED".

(The display is changed over by the "mode switch". Refer to section "(3) Changing the display details" for more information.)

## (a) List of display details

Mode	17-segment LED display	Axis display LED
Operation monitor 1	When there is no error	
	One of the following is displayed.	
	RUN (during operation)	The display of the axis in operation is in operation blinks.
	TEST (during a test mode)	The displays of all axes are in operation blinks.
	IDL (standing by)	OFF
	When an error occurs	
	The following is displayed. Display: ERR	The LED of the axis in which the error occurred is flickering.
Operation monitor 2	The operation status is displayed for the axis whose axis display LED is lit.	The AXn display changes over every 0.5 seconds.
Internal information 1	The OS type information is displayed. Display: S000	OFF
Internal information 2	The OS version is displayed. Display: V* * *	OFF
Input information n	The signal name designated by the mode switch is displayed.	Lights when the selected signal is ON.

**REMARK**

The "OS type" appears in the LED display area for 1 second after the programmable controller power is turned ON, then the "operation monitor 1" display appears.

## (b) "Operation monitor 2" display details

The axis operation status is displayed in the "operation monitor 2" mode.  
The status display of each axis changes over every 0.5 seconds.

< Display >	< Details >
IDLE .....	Standing by
STOP .....	Stopped
JOG .....	In JOG operation
MANP .....	In manual pulse generator operation
OPR .....	In zero point return
POSI .....	In position control
VELO .....	In speed control
V- P .....	In speed control of speed/position changeover control
V -P .....	In position control of speed/position changeover control
BUSY .....	Waiting for conditions, etc.
E*** .....	When an error occurs

Error No. display

When an error occurs in an axis, that error No. is displayed for 0.5 seconds before the display changes over to the next axis.

## (c) "Input information n" display details

The status of each signal is displayed in the "input information n" mode.  
The displayed signal is changed over in the following order every time the "mode switch" is pressed.  
The "axis display LED" is lit when the displayed signal is ON.

< Display >	< Details >
SVON.....	Servo ON signal
↓	
ULMT .....	Upper limit signal
↓	
LLMT .....	Lower limit signal
↓	
V-P .....	Speed/position changeover signal
↓	
DOG.....	Near-point dog signal

## (d) Other display details

The following details are displayed in the 17-segment LED as error messages, regardless of the mode.

< Display >	< Details >
FALT .....	This error message may be displayed if any of the parameter values saved in the flash ROM becomes illegal. In this case, perform operation in the following procedure. This error is due to a hardware fault if "FALT" is still displayed after the operation has been performed in the following procedure or if "FALT" is displayed in Step 3) of the following procedure.


(Procedure)

- 1) Power OFF the servo amplifier.
- 2) Set the key switch of the programmable controller CPU to STOP.
- 3) Power the programmable controller system OFF once, then ON again. If "FALT" is displayed when the system is powered ON again, the hardware is faulty.
- 4) Then, correct the contents of the flash ROM.  
 Perform the parameter initialization function\* to initialize the set data (parameters, positioning data, start block data, condition data) saved in the flash ROM to the factory settings. After parameter initialization, switch power OFF once, then ON again.
- 5) Set the data, such as the parameters, positioning data, start block data and condition data, to the buffer memory, and turn ON the PLC READY signal (Y1D). At this time, make sure that the AD75 READY signal (X0) turns OFF. If it does not turn OFF, any of the parameter settings is in error. Turn OFF the PLC READY signal (Y1D), refer to the error code (Md.33 Axis error No.), and correct the parameter. Turn ON the PLC READY signal (Y1D) again, and make sure that the AD75 READY signal (X0) turns OFF.
- 6) Turn OFF the PLC READY signal (Y1D) and execute write to flash ROM. (It need not be executed when save to flash ROM is not necessary.)

\* The parameter initialization function initializes all data saved in the flash ROM to the factory settings. When it is not desired to initialize data other than the parameters, back them up using the file register, etc., and then initialize the parameters.

(3) Changing the display details

The details (mode) displayed in the LED display area change over in the following order every time the "mode switch" is pressed.

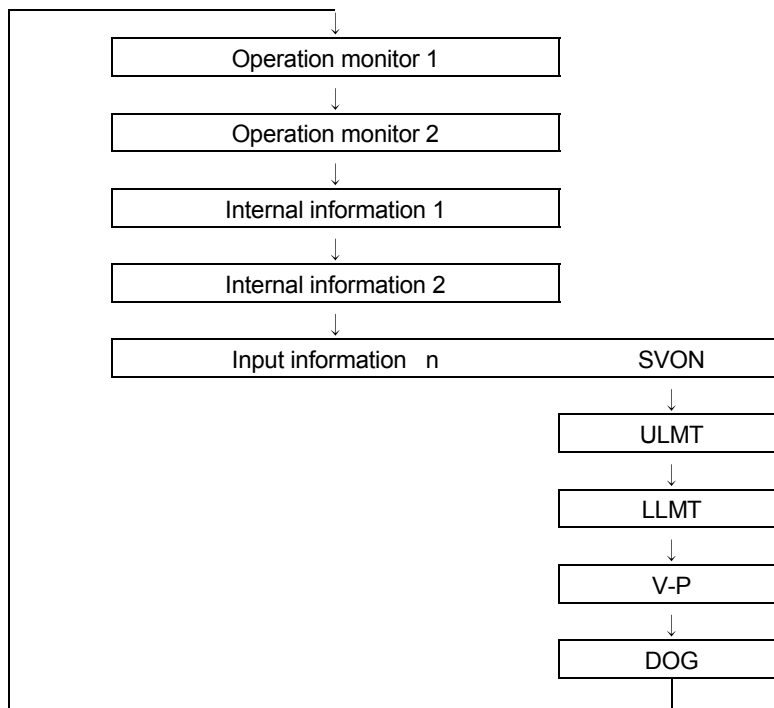

13.5 Clock data function

"The clock data function" utilizes the programmable controller CPU clock data in the AD75.

This clock data is used to monitor the various history data. The clock data is controlled in 0.1 second units in the AD75 to simplify the measurement of cycle time, etc.

The details shown below explain about the "clock data setting function".

- (1) Precautions during control
- (2) Setting the clock data

(1) Precautions during control

- (a) Set the clock data every time the programmable controller CPU is started. If the clock data is not set, counting will begin as "00 hours 00 minute 00 seconds" when the AD75 starts.
- (b) The AD75 clock data count value is less accurate than the programmable controller CPU clock data. Therefore, synchronize it with the programmable controller CPU clock data about once a day.
- (c) Data indicating the "date" in the programmable controller CPU clock data will be ignored.

(2) Setting the clock data

The following shows the setting data and sequence program example for reading the programmable controller CPU clock data and setting it in the AD75.


- (a) Set the following data.

(The setting is carried out using the sequence program shown in section (b) on the next page.)

Setting item	Setting value	Setting details	Buffer memory address		
			Axis 1	Axis 2	Axis 3
Cd.1	Clock data setting (hour)	→	Set the programmable controller CPU clock data (hours).		
Cd.2	Clock data setting (minute, second)	→	Set the programmable controller CPU clock data (minutes, seconds).		
Cd.3	Clock data writing	1	Set "1" (clock data write request).		

\* Refer to section "5.7 List of control data" for details on the setting details.

(b) Add the following sequence program to the control program, and write it to the programmable controller CPU.

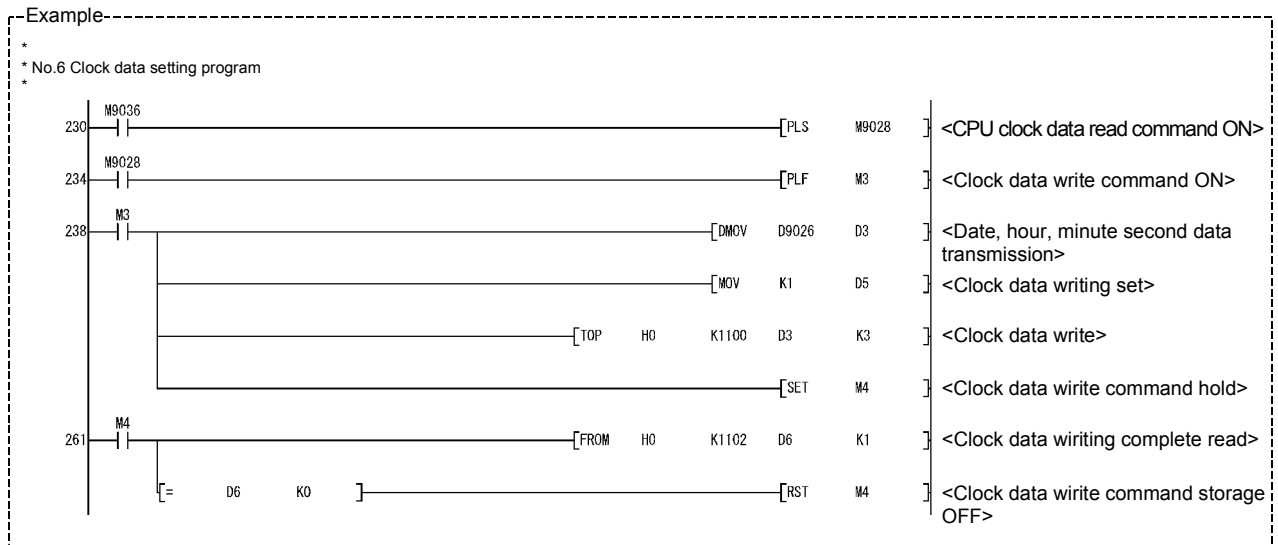



---

# CHAPTER 14

---

## TROUBLESHOOTING

The "errors" and "warnings" detected by the AD75 and servo amplifier are explained in this chapter.

Errors and warnings can be confirmed with the AD75 LED display and peripheral devices. When an "error" or "warning" is detected, confirm the detection details and carry out the required measures.

14.1	Error and warning details.....	14- 2
14.2	List of errors .....	14- 6
14.2.1	Errors detected by AD75 .....	14- 6
14.2.2	Errors detected by MR-H-B (MR-H-BN).....	14- 26
14.2.3	Errors detected by MR-J-B .....	14- 34
14.2.4	Errors detected by MR-J2-B .....	14- 42
14.2.5	Errors detected by MR-J2S-B.....	14- 50
14.2.6	Errors detected by MR-J2-03B5.....	14- 58
14.3	List of warnings .....	14- 64
14.3.1	Warnings detected by AD75.....	14- 64
14.3.2	Warnings detected by MR-H-B (MR-H-BN) .....	14- 70
14.3.3	Warnings detected by MR-J-B.....	14- 72
14.3.4	Warnings detected by MR-J2-B.....	14- 74
14.3.5	Warnings detected by MR-J2S-B .....	14- 76
14.3.6	Warnings detected by MR-J2-03B5 .....	14- 78
14.4	Start during error history .....	14- 80

## 14.1 Error and warning details

### (1) Errors

#### ■ Types of errors

Errors include AD75-detected parameter setting range errors and errors at operation start/during operation, and servo amplifier-detected errors.

#### (1) Parameter setting range errors detected by AD75

The parameters are checked at the rising edge (OFF → ON) of the PLC READY signal [Y1D]. An error will occur if there is a mistake in the parameter setting details at that time.

When this kind of error occurs, the AD75 READY signal does not turn OFF. To cancel this kind of error, set the correct value in the parameter for which the error occurred, and then turn ON the PLC READY signal [Y1D].

POINT
If the AD75 does not start up due to occurrence of many errors 900 to 997, initialize the parameters (refer to section 13.2) and then set them again.

#### (2) Errors detected by AD75 at operation start/during operation

These are errors that occur at the operation start or during operation when using positioning control, JOG operation, manual pulse generator operation, etc. If an axis error occurs during interpolation operation, the error No. will be stored in both the reference axis and the interpolation axis.

Note that in the following cases (a) and (b), the axis error No. will only be stored in the reference axis during analysis of the positioning data set in each point of the positioning start data table.

(a) When the interpolation axis is BUSY

(b) When the error occurred in positioning data or parameters unrelated to interpolation control.

If the error occurred at the simultaneous start of a positioning operation, the axis error storage details will differ depending on whether the error occurred before or after the simultaneous start.

- If the error occurred before the simultaneous start (illegal axis No., other axis BUSY, etc.), an "error before simultaneous start" will occur.
- If the error occurred after the simultaneous start (positioning data error, software stroke limit error, etc.), an error code corresponding to the axis in which the error occurred will be stored. Because a simultaneous start cannot be carried out due to this, a "simultaneous start not possible error" error code will be stored in all axes in which an error has not occurred.

The axis operation status will be displayed as "error occurring" for axes in which an error occurred.

If an error occurs during operation, any moving axes will deceleration stop, and their operation status will be displayed as "error occurring".

Both axes will decelerate to a stop during interpolation operations, even if the error occurs in only one axis.

#### (3) Errors detected by servo amplifier

These are errors that occur due to a hardware fault of the servo amplifier, servomotor, etc. or due to a servo parameter error.

At error occurrence, the servo switches OFF and the axis stops.

After removing the error factor, reset the servo amplifier.

## (4) Types of error codes

Error code	Error type
001 to 019	Fatal error
100 to 199	Common error
200 to 299	Error at zero point return
300 to 399	Error during JOG operation
401	System error
500 to 599	Error during positioning operation
900 to 999	Error during parameter setting range check
2000 to 2999	Error detected by servo amplifier (Error definition changes depending on the servo amplifier model.)

■ Error storage

When an error occurs, the error detection signal turns ON, and the error code corresponding to the error details is stored in the following buffer memory address ([Md.33] Axis error No.) for axis error No. storage. Note that there is a delay of up to 56.8ms after the error detection signal turns ON until the error code is stored.

Axis No.	Error detection signal	Buffer memory address
1	XA	807
2	XB	907
3	XC	1007

A new error code is stored in the buffer memory ([Md.33] Axis error No.) for axis error storage every time an error occurs.

(2) Warnings

■ Types of warnings

Warnings include system warnings and axis warnings detected by the AD75 and warnings detected by the servo amplifier.

(1) System warnings are as follows.

- System control data setting warning ... Axis warning of axis 1.
- Positioning data setting warning ..... Axis warning of the corresponding axis.  
Axis warning of the reference axis in the case of a setting warning for interpolation control.

(2) Axis warnings are as follows.

- Warning that occurred at operation start/during operation such as positioning operation, JOG operation or manual pulse generator operation.
- Warning that occurred due to the system warning.

If the axis warning occurs, the axis operation status does not change.

(3) Warnings detected by servo amplifier

These warnings occur due to a hardware fault of the servo amplifier, servomotor, etc. or when any servo parameter is inadequate. The servo does not switch OFF depending on the warning, but if it is left as-is, an error will occur or normal operation will be disabled. After removing the warning factor, reset the servo amplifier.

(4) Types of warning codes

Warning code	Error type
100 to 199	Common warning
300 to 399	Warning during JOG operation
400 to 499	Warning during manual pulse generator operation
500 to 599	Warning during positioning operation
900 to 999	Warning during system control data range check
2090 to 2999	Warning detected by servo amplifier (Warning definition changes depending on the servo amplifier model.)

### ■ Warning storage

- (1) When an axis warning occurs, the warning code corresponding to the warning details is stored in the following buffer memory ([Md.34] Axis warning No.) for axis warning No. storage.

Axis No.	Buffer memory address
1	808
2	908
3	1008

- (2) When an axis warning occurs, "1" is set in bit 9 (b9) of the following buffer memory ([Md.40] Status) for axis status storage.

Axis No.	Buffer memory address
1	817
2	917
3	1017

### (3) Resetting errors and warnings

An error state is canceled after the following processing has been carried out by setting a "1" in the buffer memory for axis error resetting ([Cd.12] Axis error reset) [1151 (for axis 1)], [1201 (for axis 2)], and [1251 (for axis 3)].

- Axis error detection signal turned OFF
- "[Md.33] Axis error No." cleared
- "Axis warning detection" [Md.40] status : b9 turned OFF
- "[Md.34] Axis warning No." cleared
- Changing of the operation status from "error occurring" to "standing by".
- Changing of the operation status from "step error occurring" to "standing by".

Some errors/warnings cannot be canceled unless their factors are removed.

### (4) Invalid operations

For the following operations, the setting details will be invalidated, and an error or warning will not occur.

- Speed change before operation (Speed override change, skip command, continuous operation interruption request)
- Axis stop during axis stop
- Axis sudden stop during axis stop
- Axis stop before axis operation
- Axis sudden stop before axis operation

### (5) Checking the Error or Warning Number

Use the following methods to check the error or warning number.

- (1) "17-segment LED display function" on the front panel of main body of AD75 (Refer to section 13.4.)
- (2) "Buffer memory batch monitor function" of GPP function software package
- (3) "Monitor function" of software package for AD75

For details of (2) and (3), refer to the GPP Function Software Package Operating Manual or AD75 Software Package Operating Manual.

## 14.2 List of errors

## 14.2.1 Errors detected by AD75

Description of the errors and remedies are shown below.

Division of error	Error code	Error name	Description	Action at occurrence of error
—	000	(Normal)	—	—
Fatal error	001	Fault	<ul style="list-style-type: none"> <li>• Hardware error</li> <li>• Any of the parameters saved in the flash ROM is illegal.</li> </ul>	The system is stopped.
	003	Division by zero	Hardware error	
	004	Overflow		
	005	Underflow		
	10	FeRAM count over	FeRAM access count exceeded $9.9999 \times 10^9$ times.	The system is stopped.
11	Illegal zero point data	<ul style="list-style-type: none"> <li>• The backed up zero point data are illegal.</li> <li>• Write of zero point data to the FeRAM failed.</li> </ul>		
Common	100	Peripheral device stop during operation	A stop command is supplied during operation from a peripheral device.	Stopping according to the sudden stop (stopping group 2) setting (deceleration and stop/sudden stop) selected in detail parameter 2 (However, deceleration and stop only during manual pulse generator operation)
	101	PLC READY OFF during operation	The "PLC READY" signal (Y1D) is turned OFF during operation.	Stopping according to sudden stop (stopping group 2) setting (deceleration and stop/sudden stop) selected in detail parameter 2 (However, deceleration and stop only during manual pulse generator operation)
	102	Servo alarm occurrence during operation	Servo alarm ( $\overline{\text{Md.116}}$ Servo status: b13) turned ON during operation.	Immediate stop.
	103	Test mode fault during operation	Communication between the personal computer and AD75 is interrupted in test mode.	Stopping according to sudden stop (stopping group 3) setting (deceleration and stop/sudden stop) selected in detail parameter 2 (However, deceleration and stop only during manual pulse generator operation)

	Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	—
	—	—	—	—	<ul style="list-style-type: none"> <li>• Correct the flash ROM data (refer to [2] (4) in section 13.4).</li> <li>• Check if there are effects of noise or the like.</li> <li>• Check for hardware errors.</li> </ul>
	880 to 883	980 to 983	1080 to 1083	—	Replace the module.
	—	—	—	—	Continuous operation can be performed if the machine zero point return executed after an error reset is completed normally. However, since the FeRAM access count is erased at occurrence of error 11, normal service life judgment cannot be made. Therefore, replace the module.
	—	—	—	—	Remove the cause of stopping and perform axis error resetting (refer to [3] in section 14.1) to remove the error.
	—	—	—	—	<ul style="list-style-type: none"> <li>• Examine the sequence program in which the "PLC READY" signal (Y1D) is turned ON or OFF.</li> <li>• Perform axis error resetting (refer to [3] in section 14.1) to remove the error.</li> </ul>
	873	973	1073	—	<ul style="list-style-type: none"> <li>• Confirm the error definition of the servo amplifier, and perform axis error resetting (refer to [3] in Section 14.1) to remove the error.</li> <li>• Check the power supply status of the servo amplifier, wiring to the servo amplifier, and the connector connection status, and check for influence of noise.</li> </ul>
	—	—	—	—	Check the I/F on the PC side of cable connection for errors.

Division of error	Error code	Error name	Description	Action at occurrence of error
Common	104	Hardware stroke limit (+)	An upper hardware stroke limit signal (FLS) is turned OFF.	Stopping according to sudden stop (stopping group 1) setting (deceleration and stop/sudden stop) selected in detail parameter 2 (However, deceleration and stop only during manual pulse generator operation)
	105	Hardware stroke limit (-)	A lower hardware stroke limit signal (RLS) is turned OFF.	
	106	Stop signal ON at start	A start request is issued while the stop signal is turned ON.	Positioning start is not carried out.
	107	PLC READY OFF --> ON in busy	The "PLC READY" signal is turned OFF while the busy signal is turned ON.	The AD75 READY signal (X0) is not turned OFF.
	108	Start not possible	A start request was made with "Md. 35 Axis operation status" in the status of other than "Standby", "Stop", "Step standby" and "Step stop".	Positioning start is not carried out.
Zero point return	201	Start at zero point	Near-point dog method machine zero point return is started with an invalidated zero point return retry setting when the zero point return completion flag is ON.	Machine zero point return start is not carried out.
	206	Count method movement amount fault	The "setting for the movement amount after near-point dog ON" zero point return detail parameter is smaller than the distance necessary for deceleration and stop from the zero point return speed in count method 1), 2), 3) machine zero point return.	
	207	Zero point return request ON	The zero point return request flag is set at the start of high-speed zero point return (positioning start No. 9002).	High-speed zero point return start is not carried out.
	208	Outside creep speed range	The value specified as a creep speed exceeds the value specified as a zero point return speed.	Machine zero point return start is not carried out.
	209	Zero point return restart not possible	The restart command is turned ON after the machine zero point return is stopped using a stop signal.	The restart is not carried out.



Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
—	—	—	—	After making an axis error reset (refer to [3] in Section 14.1), perform manual control operation (refer to CHAPTER 11) to move the axis to the position where the upper limit signal (FLS) will not be turned OFF.
—	—	—	—	After making an axis error reset (refer to [3] in Section 14.1), perform manual control operation (refer to CHAPTER 11) to move the axis to the position where the lower limit signal (RLS) will not be turned OFF.
—	—	—	—	Check the ON/OFF statuses of the stop command (output signal/external input issued to AD75) and turn OFF the active stop commands. <ul style="list-style-type: none"> <li>Output signals issued to AD75 ... Axis 1: Y13, Axis 2: Y14, Axis 3: Y1C</li> <li>External inputs ... External device connection connector: Stop signal (STOP)</li> </ul> After checking the status of the stop command, perform axis error resetting (refer to [3] in section 14.1) to remove the error, then turn ON the start signal.
—	—	—	—	Turn ON the PLC READY signal (Y1D) with the BUSY signals of all axes OFF.
809	909	1009	—	<ul style="list-style-type: none"> <li>Reset the axis error (refer to [3] in section 14.1) to cancel the error.</li> <li>Reexamine the sequence program that has turned ON the positioning start signal [Y10, Y11, Y12], forward run JOG start signal [Y16, Y18, Y1A], reverse run JOG start signal [Y17, Y19, Y1B] or "[Cd. 22] Manual pulse generator enable flag".</li> </ul>
78	228	378	<Zero point return retry> 0, 1	<ul style="list-style-type: none"> <li>The zero point return retry function (refer to section 12.2.1) is validated (setting: 1).</li> <li>Using manual control operation (refer to CHAPTER 11) to move from the current position (zero point) and perform machine zero point return.</li> </ul>
80 81	230 231	380 381	<Setting for the movement amount after near-point dog ON> 0 to 2147483647	<ul style="list-style-type: none"> <li>Calculate the distance of travel according to the speed limit, zero point return speed and deceleration speed, and determine the movement amount after activation at the near-point dog so that the distance of travel is larger than the deceleration distance.</li> </ul>
74 75	224 225	374 375	<Zero point return speed> 1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	<ul style="list-style-type: none"> <li>Set a smaller zero point return speed.</li> <li>Adjust the near-point dog position so that the movement amount after activation at the near-point dog becomes longer. (Refer to sections 8.2.5 to 8.2.7)</li> </ul>
1150	1200	1250	<Positioning start No.> 1 to 600, 7000 to 7010 8001 to 8050, 9001 to 9003	Execute mechanical zero point return (positioning start No. 9001). (Refer to section 8.2)
76 77	226 227	376 377	<Creep speed> 1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	Correct the creep speed to within the zero point return speed. (Refer to section 5.2.5)
1150	1200	1250	<Positioning start No.> 1 to 600, 7000 to 7010 8001 to 8050, 9001 to 9003	Execute mechanical zero point return (positioning start No. 9001). (Refer to section 8.2)

Division of error	Error code	Error name	Description	Action at occurrence of error
Zero point return	210	Zero point not pass at zero point return	In the near-point dog method or count method 1), the zero point is not passed between a machine zero point return start and machine zero point return completion. After power-on, data setting method machine zero point return control was performed without the servo motor being rotated more than one turn.	The machine zero point return is not completed.
	211	ZCT read error	A time-out occurred when the data used for machine zero point return control were read from the servo amplifier.	The machine zero point return is not completed.
	212	ABS reference point read error		The machine zero point return is not completed.
JOG	300	Outside JOG speed range	The JOG speed is out of the setting range at the start of JOG operation.	If the setting is out of the range at the start of JOG operation, JOG operation is not carried out.
System	401	System error	Value other than 0 was set in the buffer memory address 1146.	The operation is stopped.
Positioning operation	500	Illegal condition data No.	The condition data number specified in the parameter of special positioning start data is out of the setting range at the block start in the special starting method when the conditional start, wait start, simultaneous start or FOR (condition) requiring condition data is commanded. (1 ≤ Condition data No. ≤ 10)	Operation is terminated.
	501	Simultaneous start fault	<ul style="list-style-type: none"> <li>The target axis of simultaneous start is busy.</li> <li>No axis designation is given in condition data.</li> <li>The axis designated in condition data is the own axis.</li> </ul>	At start: Operation does not start. During operation: Operation is terminated.
	502	Illegal start data No.	<ul style="list-style-type: none"> <li>The positioning data number to be executed is other than 1 to 600, 7000 to 7010, or 9001 to 9003.</li> </ul>	Positioning data is not executed.
	503	No command speed	The current speed ("-1") is specified as a command speed of the positioning data to be executed first in positioning start.	Operation at the start is not carried out.
	504	Outside linear movement amount range	<ul style="list-style-type: none"> <li>The movement amount in each axis for each piece of data exceeds 1073741824 (<math>2^{30}</math>) during linear interpolation with "synthetic speed" specified as an "interpolation speed designation method" parameter.</li> <li>The positioning address of the INC command is equal to or smaller than -360.00000 or equal to or larger than 360.00000 with the "degree" unit setting and inequality between the upper and the lower software stroke limits.</li> </ul>	At start: Operation does not start. During operation: Immediate stop
	506	Large arc error deviation	The difference between the radius from the start point to the center point and the radius from the end point to the center point exceeds the "allowable range of arc interpolation error" during arc interpolation with center point designation.	At start: The arc interpolation control with center point designation is not executed. During operation: Immediate stop

Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
70	220	370	<Zero point return method> Near-point dog method 2), count method 3), Data setting method	<ul style="list-style-type: none"> <li>Use the near-point dog method 2) or count method 3) as the zero point return method. (Refer to section 8.2.)</li> <li>When performing data setting method machine zero point return control, rotate the servomotor more than one turn and then perform data setting method machine zero point return control again.</li> </ul>
—	—	—	—	Reset the axis error (refer to [3] in section 14.1) and start a machine zero point return again.
101	251	401	<Amplifier setting> 0, 1	Check whether "Absolute position detection valid" is set to the servo basic parameter "Amplifier setting" for start of communication with the servo amplifier. (Refer to (11) in section 7.2.)
1160 1161	1210 1211	1260 1261	<JOG speed> 1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	Correct the JOG speed to within the setting range. (Refer to section 11.2)
1146			0	In the sequence program, remove the part relevant to the setting in the buffer memory address 1146. Then, power up the system again or reset the programmable controller CPU.
Refer to section "5.4 List of start block data."			<Condition data No.> 1 to 10	Examine the condition data number. (Refer to <a href="#">Da. 13</a> in section 5.4)
Refer to section "5.5 List of condition data."			<Condition operator> Axis designation: 09 <sub>H</sub> , 0A <sub>H</sub> , 0B <sub>H</sub> , 0C <sub>H</sub> , 0D <sub>H</sub> , 0E <sub>H</sub>	Correct the condition operator. (Refer to section 5.5 <a href="#">Da. 15</a> )
1150	1200	1250	<Positioning start No.> 1 to 600, 7000 to 7010, 9001 to 9003	Correct the positioning start number.
Refer to section "5.3 List of positioning data."			<Command speed> 1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	Correct the positioning data.
			<Positioning address/movement amount> <ul style="list-style-type: none"> <li>[mm] [inch] [pulse] [degree (INC)] -2147483648 to 2147483647</li> <li>[degree (ABS)] 0 to 3599999</li> <li>Speed/position changeover 0 to 2147483647</li> </ul> <Arc address> -2147483648 to 2147483647	Examine the positioning address. <ul style="list-style-type: none"> <li>Correct the center point address (positioning address).</li> <li>Correct the end point address (arc address).</li> </ul>
60 61	210 211	360 361	<Allowable circular interpolation error width> 0 to 1000000	Correct the allowable range value of the arc interpolation error.

Division of error	Error code	Error name	Description	Action at occurrence of error
Positioning operation	507	Start outside stroke limit (+)	Positioning is started at a position outside the upper software stroke limit.	Operation at the start is not carried out.
	508	Start outside stroke limit (-)	Positioning is started at a position outside the lower software stroke limit.	
	509	Movement outside stroke limit (+)	Positioning start is made to a position beyond the upper software stroke limit.	
	510	Movement outside stroke limit (-)	Positioning start is made to a position beyond the lower software stroke limit.	
	511	Movement outside stroke limit (+)	The address of the positioning data to be executed next exceeds the upper software stroke limit.	Immediate stop after completion of preceding positioning data during continuous path control
	512	Movement outside stroke limit (-)	The address of the positioning data to be executed next exceeds the lower software stroke limit.	
	514	Outside current value change range	The address of current value change is outside the range between 0 and 359.99999 in the degree unit.	The current value is not changed.
	515	Current value change not possible	<ul style="list-style-type: none"> <li>The "continuous path control" operation pattern is specified in the positioning data of the current value change control method.</li> <li>The "current value change" control method is specified in the data following the positioning data of the "continuous path control" operation pattern.</li> </ul>	
	516	Continuous path control not possible	<ul style="list-style-type: none"> <li>Continuous path control is designated with the speed control, speed/position changeover, sizing feed or other control method where continuous path control is impossible.</li> <li>The data preceding speed control, speed/position changeover or sizing feed is continuous path control.</li> <li>The continuous positioning control is designated for speed control.</li> </ul>	Operation at the start is not carried out.
	518	Outside operation pattern range	The operation pattern setting is "2."	At start: Operation does not start. During operation: Stopping according to sudden stop (stopping group 3) setting (deceleration and stop/sudden stop) selected in detail parameter 2 (However, deceleration and stop only during manual pulse generator operation)
	519	Interpolation while target axis is BUSY	Interpolation is started during operation in the target axis.	
	520	Unit group disagreement	The unit group of the target axis of interpolation is different.	
	521	Illegal interpolation description command	<ul style="list-style-type: none"> <li>Interpolation data is specified with 1-axis module.</li> <li>Interpolation data is specified for axis 2 with 2-axis module.</li> </ul>	

Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
Software stroke limit upper limit value			<Software stroke limit upper/lower limit value> • [mm] [inch] [pulse] -2147483648 to 2147483647 • [degree] 0 to 35999999	Change the current feed to within the range of the software stroke limit, using manual control operation (refer to CHAPTER 11).
16 17	166 167	316 317		
Software stroke limit lower limit value				
18 19	168 169	318 319		
Refer to section "5.3 List of positioning data."			<Positioning address/movement amount> • [mm] [inch] [pulse] -2147483648 to 2147483647 • [degree] 0 to 35999999	<ul style="list-style-type: none"> <li>• Correct the positioning address to within the range of the software stroke limit.</li> <li>• Change the current feed to within the range of the software stroke limit, using manual control operation (refer to CHAPTER 11).</li> </ul>
				Correct the positioning address/movement amount of the positioning data to within the range of the software stroke limit. (Refer to section 5.3 <a href="#">Da. 5</a> )
1154 1155	1204 1205	1254 1255	<New current value> [degree] 0 to 35999999	Change the new current value to within the setting range. (Refer to section 9.2.10)
Refer to section "5.3 List of positioning data."			<Control method> 01 <sub>H</sub> to 11 <sub>H</sub> , 20 <sub>H</sub> • 03 <sub>H</sub> , 06 <sub>H</sub> : 1 to 2 axis fixed-dimension control • 0D <sub>H</sub> , 0E <sub>H</sub> : Speed control • 11 <sub>H</sub> : Current value change • Speed/position changeover control: 0F <sub>H</sub> , 10 <sub>H</sub> <Operation pattern> 00, 01, 11 • 01: Continuous positioning control • 11: Continuous path control	Do not designate the current value change in the positioning data following continuous path control. (Refer to section 9.2.10)
				<ul style="list-style-type: none"> <li>• Do not designate speed control, sizing feed, or speed/position changeover control in the positioning data following continuous path control.</li> <li>• Do not perform sizing feed, speed control, or speed/position changeover control in the operation pattern of continuous path control.</li> <li>• Do not perform speed control in the operation pattern of continuous positioning control. (Refer to CHAPTER 9)</li> </ul>
			<Operation pattern>00, 01, 11 • 00: Positioning complete • 01: Continuous positioning control • 11: Continuous path control	Correct the operation pattern. (Refer to section 5.3 <a href="#">Da. 1</a> )
				Correct the control method. (Refer to section 5.3 <a href="#">Da. 2</a> )
0	150	300	<Unit setting> 0, 1, 2, 3	Correct the positioning data or the "unit setting" parameter. (Refer to section 9.1.6)
			<Control method> 01 <sub>H</sub> to 11 <sub>H</sub> , 20 <sub>H</sub> • 03 <sub>H</sub> , 06 <sub>H</sub> : 1 to 2 axis fixed-dimension control • 0D <sub>H</sub> , 0E <sub>H</sub> : Speed control • 11 <sub>H</sub> : Current value change • Speed/position changeover control: 0F <sub>H</sub> , 10 <sub>H</sub>	Correct the control method. (Refer to section 5.3 <a href="#">Da. 2</a> )

Division of error	Error code	Error name	Description	Action at occurrence of error
Positioning operation	522	Command speed setting error	The command speed is set at "0."	At start: Operation does not start. During operation: Stopping according to sudden stop (stopping group 3) setting (deceleration and stop/sudden stop) selected in detail parameter 2  (However, deceleration and stop only during manual pulse generator operation)
	524	Control method setting error	<ul style="list-style-type: none"> <li>The control method setting is out of the range.</li> <li>When the absolute position restoration mode is the "infinite length mode", any of the following control methods has been set. 1, 2-axis fixed-dimension feed control Speed/position changeover control Current value change</li> <li>When the absolute position restoration mode is the "infinite length mode", speed control has been executed with the detailed parameter 1 "Current feed value during speed control" set to other than "1: Update current feed value".</li> </ul>	
	525	Auxiliary point setting error	<p>One of the following cases is applicable with auxiliary point-designated arc interpolation.</p> <ul style="list-style-type: none"> <li>Start point = Auxiliary point</li> <li>End point = Auxiliary point</li> <li>The start point, end point and auxiliary point are in a line.</li> <li>The auxiliary point address or center point address is out of the range between -2147483648 and 2147483647.</li> </ul>	At start: Operation does not start. During operation: Immediate stop
	526	End point setting error	<ul style="list-style-type: none"> <li>The start point is the end point with the auxiliary point-designated arc interpolation.</li> <li>The end point address is outside the scope of -2147483648 to 2147483647 in the circular interpolation with auxiliary point designation and center point designation.</li> </ul>	
	527	Center point setting error	<p>Circular interpolation with center point designation applicable to one of the following</p> <ul style="list-style-type: none"> <li>Start point = Center point</li> <li>End point = Center point</li> <li>The center point address is out of the range between -2147483648 and 2147483647</li> </ul>	
	530	Outside address range	<ul style="list-style-type: none"> <li>The positioning address setting is a negative value in the speed/position changeover control mode.</li> <li>The positioning address setting of ABS1 or ABS2 is out of the range between 0 and 359.99999 [degrees].</li> </ul>	At start: Operation does not start. During operation: Stopping according to sudden stop (stopping group 3) setting (deceleration and stop/sudden stop) selected in detail parameter 2  (However, deceleration and stop only during manual pulse generator operation)
	532	Simultaneous start not possible	An error other than this one is developed to a target axis of simultaneous start.	

Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
Address storing the command speed of each of positioning data No. 1 to 600			<Command speed> 1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	Correct the command speed. (Refer to section 5.3 [Da. 7])
<Control method> 01 <sub>H</sub> to 11 <sub>H</sub> , 20 <sub>H</sub> <ul style="list-style-type: none"> <li>• 03<sub>H</sub>, 06<sub>H</sub>: 1 to 2 axis fixed-dimension control</li> <li>• 0D<sub>H</sub>, 0E<sub>H</sub>: Speed control</li> <li>• 11<sub>H</sub>: Current value change</li> <li>• Speed/position changeover control: 0F<sub>H</sub>, 10<sub>H</sub></li> </ul>				Correct the control method or parameter. (Refer to section 9.1.6)
Refer to section "5.3 List of positioning data."			<Positioning address/movement amount> • [mm] [inch] [pulse] -2147483648 to 2147483647 (Unit [degree] cannot be set.)	Correct the address of the auxiliary point (arc address). (Refer to section 9.2.6)
			<Arc address> -2147483648 to 2147483647	Correct the end point address (positioning address). (Refer to section 9.2.6)
			<Positioning address/movement amount> • [mm] [inch] [pulse] [degree (INC)] -2147483648 to 2147483647	Correct the center point address (arc address). (Refer to section 9.2.7)
			• [degree (ABS)] 0 to 35999999 <Arc address> -2147483648 to 2147483647	Correct the positioning address. (Refer to section 9.2.9)
Refer to section "5.3 List of positioning data" and section "5.4 Start block data."			—	Refer to the error history to search for axes developing errors other than this one and remove the causes of the errors. Correct the start block data and positioning data.

Division of error	Error code	Error name	Description	Action at occurrence of error
Positioning operation	533	Condition data error	One of the following is applicable when condition data is referred to for a conditional start, wait start or JUMP command. <ul style="list-style-type: none"> <li>• The target condition setting is out of the setting range.</li> <li>• The condition operator setting is out of the setting range.</li> <li>• The conditional operator has been [parameter 1 &gt; parameter 2] with 05<sub>H</sub>(P1 ≤ ** ≤ P2).</li> </ul>	Operation is terminated.
	534	Special start command error	The command code of the special start command is out of the setting range.	
	536	M code ON signal ON start	Positioning start is performed when the "M code ON" signal (XD, XE, XF) is turned ON.	Operation does not start at the start.
	537	PLC READY OFF start	Positioning start is performed when "PLC READY" (Y1D) is turned OFF.	
	538	READY ON start	Positioning start is performed when AD75 READY (X0) is turned ON.	
	543	Outside start number range	<ul style="list-style-type: none"> <li>• The "positioning start number" setting is other than 1 to 600, 7000 to 7010, 8001 to 8050, or 9000 to 9003 at positioning start.</li> <li>• When the absolute position restoration mode is the "infinite length mode", the "positioning start No." setting in the axis control data is 9002 or 9003 at a positioning start.</li> </ul>	
544	Outside radius range	<ul style="list-style-type: none"> <li>• The arc radius exceeds 536870912.</li> <li>• The address of auxiliary point, center point and end point are outside the scope of -2147483648 to 2147483647 with circular interpolation."</li> </ul>	At start: Operation does not start. During operation: Immediate stop	
Parameter	900	Outside unit setting range	<ul style="list-style-type: none"> <li>• The setting range of "unit setting" in basic parameter 1 is out of the setting range.</li> <li>• When the zero point return detailed parameter "absolute position restoration selection" is "1: infinite length mode" and the axis monitor data "absolute position restoration mode" is "1: infinite length mode", the basic parameter 1 "unit setting" setting is other than "2: degree".</li> </ul>	At start: Operation does not start. During operation: Immediate stop
	901	No. of pulses per rotation setting error	The setting range of "No. of pulses per rotation" in basic parameter 1 is out of the setting range.	
	902	Movement amount per rotation setting error	The setting range of "movement amount per rotation" in basic parameter 1 is out of the setting range.	
	903	Unit magnification setting error	The setting range of "unit magnification" in basic parameter 1 is out of the setting range.	



Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
Refer to section "5.4 Start block data."			—	Correct the start block data.
			<Special command> 00 <sub>H</sub> to 07 <sub>H</sub>	Correct the special start data. (Refer to section 5.4 [Da. 12])
1153	1203	1253	<M code OFF request> 1: The M code ON signal is turned OFF.	Turn the "M code ON" signal OFF then start. (Refer to section 12.7.3)
—	—	—	—	Check the sequence program in which the PLC READY signal (Y1D) is turned ON or OFF. Turn PLC READY ON then start.
—	—	—	—	Check AD75 READY OFF then start. (Refer to section 3.4.2)
1150	1200	1250	<Positioning start No.> 1 to 600, 7000 to 7010, 8001 to 8050, 9001 to 9003	Correct the positioning start No.
Refer to section "5.3 List of positioning data."			<Max. radius> 536870912	Correct the positioning data. (Refer to sections 9.2.6 and 9.2.7)
0	150	300	0, 1, 2, 3	Change the setting to within the setting range and turn OFF then ON the PLC READY signal (Y1D).
1	151	301	1 to 65535	
2	152	302	1 to 65535	
3	153	303	1, 10, 100, 1000	

Division of error	Error code	Error name	Description	Action at occurrence of error
Parameter	910	Outside speed limit value range	The setting range of "speed limit value" in basic parameter 2 is out of the setting range.	At power-on or when the PLC READY signal (Y1D) is turned ON: The AD75 READY signal (X0) is not turned ON. At start: Operation does not start.
	911	Outside acceleration time range	The setting range of "acceleration time 0" in basic parameter 2 is out of the setting range.	
	912	Outside deceleration time range	The setting range of "deceleration time 0" in basic parameter 2 is out of the setting range.	
	913	Outside bias speed range	The setting range of "bias speed at start" in basic parameter 2 is out of the setting range.	
	921	Software stroke limit upper limit	<ul style="list-style-type: none"> <li>• The "software stroke limit upper limit value" setting in detail parameter 1 is out of the setting range with "degree" unit.</li> <li>• The software stroke limit upper limit value is smaller than the software stroke limit lower limit value with a unit other than "degree".</li> <li>• When the zero point return detailed parameter "absolute position restoration selection" is "1: infinite length mode" and the axis monitor data "absolute position restoration mode" is "1: infinite length mode", the software stroke limit function is valid (software stroke limit upper limit value <math>\neq</math> software stroke limit lower limit value).</li> </ul>	The AD75 READY signal (X0) is not turned OFF.
	922	Software stroke limit lower limit	<ul style="list-style-type: none"> <li>• The "software stroke limit lower limit value" setting in detail parameter 1 is out of the setting range with "degree" unit.</li> <li>• The software stroke limit upper limit value is smaller than the software stroke limit lower limit value with a unit other than "degree."</li> <li>• When the zero point return detailed parameter "absolute position restoration selection" is "1: infinite length mode" and the axis monitor data "absolute position restoration mode" is "1: infinite length mode", the software stroke limit function is valid (software stroke limit upper limit value <math>\neq</math> software stroke limit lower limit value).</li> </ul>	
	923	Software stroke limit selection	The setting range of "software stroke limit selection" in detail parameter 1 is out of the setting range.	
	924	Software stroke limit valid/invalid setting	The setting range of the "software stroke limit valid/invalid setting" in detail parameter 1 is out of the setting range.	
	925	Illegal torque limit setting value	The setting range of the "torque limit setting value" in detail parameter 1 is out of the setting range.	
	926	Command in-position range	The setting range of the "command in-position range" in detail parameter 1 is out of the setting range.	
	927	M code ON timing error	The setting range of the "M code ON signal output timing" in detail parameter 1 is out of the setting range.	

Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy	
Axis 1	Axis 2	Axis 3			
6	156	306	1 to 1000000 [pulse/s]	Change the setting to within the setting range and turn OFF then ON the PLC READY signal (Y1D).	
7	157	307	1 to 600000000 [mm/min, etc.]		
8	158	308	(One-word type) 1 to 65535		
9	159	309	(Two-word type) 1 to 8388608		
10	160	310	(One-word type) 1 to 65535		
11	161	311	(Two-word type) 1 to 8388608		
12	162	312	1 to 1000000 [pulse/s]	Change the setting to within the setting range and turn OFF then ON the PLC READY signal (Y1D).	
13	163	313	1 to 600000000 [mm/min, etc.]		
16	166	316	• [mm] [inch] [pulse] -2147483648 to 2147483647		<ul style="list-style-type: none"> <li>• Change the setting to within the setting range.</li> <li>• In case of a unit other than "degree," change the settings so that the lower limit value is smaller than the upper limit value.</li> <li>• When the absolute position restoration mode is the "infinite length mode", make the software stroke limit function invalid. (Refer to section 12.4.3, section 12.6.2.)</li> </ul>
17	167	317	• [degree] 0 to 35999999		
18	168	318	• [mm] [inch] [pulse] -2147483648 to 2147483647		<ul style="list-style-type: none"> <li>• Change the setting to within the setting range.</li> <li>• Change the settings so that the lower limit value is smaller than the upper limit value with a unit other than "degree."</li> <li>• When the absolute position restoration mode is the "infinite length mode", make the software stroke limit function invalid. (Refer to section 12.4.3, section 12.6.2.)</li> </ul>
19	169	319	• [degree] 0 to 35999999		
20	170	320	0, 1	Change the setting to within the setting range and turn OFF then ON the PLC READY signal (Y1D).	
21	171	321	0, 1		
22	172	322	• [mm] [inch] [pulse] 1 to 32767000		
23	173	323	• [degree] 1 to 32767		
24	174	324	1 to 500		
25	175	325	0, 1		

Division of error	Error code	Error name	Description	Action at occurrence of error
Parameter	928	Speed changeover mode error	The setting range of the "speed changeover mode" in detail parameter 1 is out of the setting range.	The AD75 READY signal (X0) is not turned OFF.
	929	Interpolation speed designation method	The setting range of the "interpolation speed designation method" in detail parameter 1 is out of the setting range.	
	930	Current value update request error	The setting range of the "current feed value during speed control" in detail parameter 1 is out of the setting range.	
	931	Manual pulse generator selection error	The "manual pulse generator selection" setting in detail parameter 1 is out of the setting range.	
	933	Acceleration/deceleration time size error	The "size selection for acceleration/deceleration time" setting in detail parameter 1 is out of the setting range.	
	938	Backlash compensation amount error 2	The movement amount per pulse converted to the pulse count exceeds 256 pulses.	
	950	Acceleration time 1 setting error	The setting range of "acceleration time 1" in detail parameter 2 is out of the setting range.	At start: Failure to start During operation: Stopping according to sudden stop (stopping group 3) setting (deceleration and stop/sudden stop) selected in detail parameter 2 (However, deceleration and stop only during manual pulse generator operation)
	951	Acceleration time 2 setting error	The setting range of "acceleration time 2" in detail parameter 2 is out of the setting range.	
	952	Acceleration time 3 setting error	The setting range of "acceleration time 3" in detail parameter 2 is out of the setting range.	
	953	Deceleration time 1 setting error	The setting range of "deceleration time 1" in detail parameter 2 is out of the setting range.	
	954	Deceleration time 2 setting error	The setting range of "deceleration time 2" in detail parameter 2 is out of the setting range.	
	955	Deceleration time 3 setting error	The setting range of "deceleration time 3" in detail parameter 2 is out of the setting range.	
	956	JOG speed limit value error	<ul style="list-style-type: none"> <li>The setting range of the "JOG speed limit value" in detail parameter 2 is out of the setting range.</li> <li>The "JOG speed limit value" setting in detail parameter 2 exceeds the speed limit value.</li> </ul>	

Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
26	176	326	0, 1	Change the setting to within the setting range and turn OFF then ON the PLC READY signal (Y1D).
27	177	327	0, 1	
28	178	328	0, 1, 2	
29	179	329	0: Manual pulse generator operation ignored 1: Manual pulse generator connected to axis 1 is used. 2: Manual pulse generator connected to axis 2 is used. 3: Manual pulse generator connected to axis 3 is used.	
31	181	331	0: One-word type 1: Two-word type	
15	165	315	0 to 255	Change the setting so that the movement per pulse converted to the pulse count becomes fewer than 256 pulses. (Refer to section 12.3.1)
36 37	186 187	336 337	(One-word type) 1 to 65535 (Two-word type) 1 to 8388608	Change the setting to within the setting range and turn OFF then ON the PLC READY signal (Y1D).
38 39	188 189	338 339	(One-word type) 1 to 65535 (Two-word type) 1 to 8388608	
40 41	190 191	340 341	(One-word type) 1 to 65535 (Two-word type) 1 to 8388608	
42 43	192 193	342 343	(One-word type) 1 to 65535 (Two-word type) 1 to 8388608	
44 45	194 195	344 345	(One-word type) 1 to 65535 (Two-word type) 1 to 8388608	
46 47	196 197	346 347	(One-word type) 1 to 65535 (Two-word type) 1 to 8388608	
48 49	198 199	348 349	1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	

Division of error	Error code	Error name	Description	Action at occurrence of error
Parameter	957	JOG acceleration selection setting error	The setting range of "JOG acceleration time selection" in detail parameter 2 is out of the setting range.	At start: Failure to start During operation: Stopping according to sudden stop (stopping group 3) setting (deceleration and stop/sudden stop) selected in detail parameter 2 (However, deceleration and stop only during manual pulse generator operation)
	958	JOG deceleration selection setting error	The setting range of "JOG deceleration time selection" in detail parameter 2 is out of the setting range.	
	959	Acceleration/deceleration selection setting error	The setting range of "acceleration/deceleration process selection" in detail parameter 2 is out of the setting range.	
	960	S-curve ratio	The setting range of the "S-curve ratio" in detail parameter 2 is out of the setting range.	
	962	Illegal sudden stop deceleration time	The setting range of the "sudden stop deceleration time" in detail parameter 2 is out of the setting range.	
	963	Stop group 1 sudden stop selection error	The setting range of "stop group 1 sudden stop selection" in detail parameter 2 is out of the setting range.	
	964	Stop group 2 sudden stop selection error	The setting range of "stop group 2 sudden stop selection" in detail parameter 2 is out of the setting range.	
	965	Stop group 3 sudden stop selection error	The setting range of "stop group 3 sudden stop selection" in detail parameter 2 is out of the setting range.	
	966	Outside allowable circular interpolation error width range	The setting range of the "allowable circular interpolation error width range" in detail parameter 2 is out of the setting range.	
	967	External start selection error	The setting range of "external start function selection" in detail parameter 2 is out of the setting range.	
	970	Restart allowable range error	The detailed parameter 2 "setting for the restart allowable range when servo OFF to ON" setting is outside the setting range.	The AD75 READY signal (X0) is not turned OFF.
	971	Path control mode error	The "near pass mode selection for path control" setting in detail parameter 2 is out of the setting range.	
	980	Zero point return method error	The setting range of the "zero point return method" zero point return basic parameter is out of the setting range.	
	981	Zero point return direction error	The setting range of the "zero point return direction" zero point return basic parameter is out of the setting range.	
	982	Zero point address setting error	The setting range of the "zero point address" zero point return basic parameter is out of the setting range.	

Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
50	200	350	0, 1, 2, 3	Change the setting to within the setting range and turn OFF then ON the PLC READY signal (Y1D).
51	201	351	0, 1, 2, 3	
52	202	352	0, 1	
53	203	353	1 to 100	
54	204	354	(One-word type) 1 to 65535	
55	205	355	(Two-word type) 1 to 8388608	
56	206	356	0, 1	
57	207	357	0, 1	
58	208	358	0, 1	
60	210	360	1 to 100000	
61	211	361		
62	212	362	0, 1, 2	
64	214	364	0 : Restart not allowed 1 to 163840 : Restart allowable range (pulse)	
65	215	365		
66	216	366	0: Positioning address pass mode 1: Near pass mode	
70	220	370	0, 1, 2, 3, 4, 5	
71	221	371	0, 1	
72	222	372	• [mm] [inch] [pulse] -2147483648 to 2147483647 • [degree] 0 to 35999999	
73	223	373		

Division of error	Error code	Error name	Description	Action at occurrence of error
Parameter	983	Zero point return speed error	The setting range of the "zero point return speed" zero point return basic parameter is out of the setting range.	The AD75 READY signal (X0) is not turned OFF.
	984	Creep speed error	The setting range of the "creep speed" zero point return basic parameter is out of the setting range.	
	985	Zero point return retry error	The setting range of the "zero point return retry" zero point return basic parameter is out of the setting range.	
	991	Zero point return torque limit value	The setting range of the "zero point return torque limit value" zero point return detail parameter is out of the setting range.	
	992	Setting for the movement amount after near-point dog ON error	The setting range of the "setting for the movement amount after near-point dog ON" zero point return detail parameter is out of the setting range.	
	993	Zero point return acceleration selection error	The setting range of the "zero point return acceleration time selection" zero point return detail parameter is out of the setting range.	
	994	Zero point return deceleration selection error	The setting range of the "zero point return deceleration time selection" zero point return detail parameter is out of the setting range.	
	997	Speed selection at zero point shift error	The setting range of the "speed designation during zero point shift" zero point return detail parameter is out of the setting range.	
	998	Absolute position restoration selection error	In the hardware version that does not support the absolute position restoration mode switching function (refer to Appendix 4), the zero point return detailed parameter "absolute position restoration selection" is set to "1: infinite length mode".	
	999	Flash ROM sum check error	Flash ROM writing is terminated erroneously.	

If a reserved error code is displayed, unnecessary data is stored in the buffer memory not described in the manual.

If a reserved error occurs, write the following data to the designated buffer memory.

Error code	Setting data	Relevant buffer memory address		
		Axis 1	Axis 2	Axis 3
934	0	32	182	332
935	1	33	183	333
936	3	34	184	334
937	0	35	185	335
996	1	87	237	387



Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
74 75	224 225	374 375	1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	Change the setting to within the setting range and turn OFF then ON the PLC READY signal (Y1D).
76 77	226 227	376 377	1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	
78	228	378	0, 1	
86	236	386	1 to 300	
80 81	230 231	380 381	0 to 2147483647	
82	232	382	0, 1, 2, 3	
83	233	383	0, 1, 2, 3	
88	238	388	0, 1	
91	241	391	0, 1	Change the setting to "0: standard mode" and turn the PLC READY signal (Y1D) OFF, then ON.
—			—	<ul style="list-style-type: none"> <li>• Write the flash ROM again.</li> <li>• If the same error persists, replace the module.</li> </ul>

## 14.2.2 Errors detected by MR-H-B (MR-H-BN)

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2010	10	Undervoltage	Power supply voltage dropped. 160VAC or less	1. Power supply voltage is low.
				2. Power failed instantaneously. In case of MR-H700BN or less: 15ms or more In case of MR-H11KBN or less: 10ms or more
				3. Shortage of power supply capacity caused the power supply voltage to drop at start, etc.
				4. Power switched ON within 5s after it had switched OFF.
				5. Faulty parts in the servo amplifier.
2012	12	Memory error 1	RAM, ROM memory fault	Faulty parts in the servo amplifier.
2013	13	Clock error	Printed board fault	
2014	14	Watchdog	CPU part fault	
2015	15	Memory error 2	E <sup>2</sup> PROM fault	
2016	16	Encoder error 1	Communication error occurred between encoder and servo amplifier.	1. Encoder connector disconnected.
				2. Servomotor encoder faulty.
				3. Encoder cable faulty (open cable or short circuit)
2017	17	Board error	CPU/parts fault	Faulty parts in the servo amplifier
2019	19	Memory error 3	Flash memory fault	
2020	1A	Motor combination error	Motor combination error	When using HC-MF, HA-FF, HC-SF or HC-UF series servomotor, improper motor was connected with servo amplifier.
2020	20	Encoder error 2	Communication error occurred between encoder and servo amplifier.	1. Encoder connector disconnected.
				2. Encoder cable faulty (open cable or short circuit)
2024	24	Ground fault	Ground fault occurred at the servomotor outputs (U, V and W phases) of the servo amplifier.	1. Power input cable and servomotor output cable are making contact at the main circuit terminal block (TE1).
				2. Servomotor power cable insulation deteriorated.
2025	25	Absolute position erase	Absolute position data in error	1. Reduced voltage of super capacitor in encoder
				2. Battery voltage low
				3. Battery cable or battery is faulty.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	Review the power supply.
	—	—	—		
	—	—	—		
	—	—	—		
	—	—	—	Error code 2010 occurs if power is switched on after all connectors are disconnected.	Change the servo amplifier.
	—	—	—	Any of error codes 2012 to 2015 occurs if power is switched ON after all connectors are disconnected.	Change the servo amplifier.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Repair or change the cable.
	—	—	—	Either of error codes 2017 and 2019 occurs if power is switched ON after all connectors are disconnected.	Change the servo amplifier.
	—	—	—	—	Use correct combination.
	—	—	—	—	Connect correctly.
	—	—	—	—	Repair or change the cable.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the cable.
	—	—	—	—	After error has occurred, hold power ON for a few minutes, and switch it OFF once, then ON again (make zero point return again).
	—	—	—	—	Change battery (make home position return again).
	—	—	—	—	

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2030	30	Regenerative error	Permissible regenerative power of the built-in regenerative brake resistor or regenerative brake option is exceeded.	1. Wrong setting of "[Pr.102] Regenerative brake resistor"
				2. Built-in regenerative brake resistor or regenerative brake option is not connected.
				3. High-duty operation or continuous regenerative operation caused the permissible regenerative power of the regenerative brake option to be exceeded.
				4. Power supply voltage is abnormal. 260V or more
			Regenerative transistor fault	5. Regenerative transistor faulty.
				6. Built-in regenerative brake resistor or regenerative brake option faulty.
			Cooling fan stop	7. Unusual overheat due to cooling fan stop.
2031	31	Overspeed	Speed has exceeded the instantaneous permissible speed.	1. Input command pulse frequency exceeded the permissible instantaneous speed frequency.
				2. Small acceleration/deceleration time constant caused overshoot to be large.
				3. Servo system is instable to cause overshoot.
				4. "[Pr.103] Motor type" or "[Pr.105] Motor speed" setting error
				5. Encoder faulty.
2032	32	Overcurrent	Current that flew is higher than the permissible current of the servo amplifier.	1. Short occurred in servo amplifier output phases U, V and W.
				2. Transistor (IPM) of the servo amplifier faulty.
				3. Ground fault occurred in servo amplifier output phases U, V and W.
				4. External noise caused the overcurrent detection circuit to misoperate.
2033	33	Overvoltage	Servo amplifier bus voltage exceeded 400V.	1. Lead of built-in regenerative brake resistor or regenerative brake option is open or disconnected.
				2. Regenerative transistor faulty.
				3. Wire breakage of built-in regenerative brake resistor or regenerative brake option
				4. Capacity of built-in regenerative brake resistor or regenerative brake option is insufficient.
				5. Power supply voltage high.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	102	252	402	—	Set correctly.
	—	—	—	—	Connect correctly.
	—	—	—	Call the status display and check the regenerative load ratio.	1. Reduce the frequency of positioning. 2. Use the regenerative brake option of larger capacity. 3. Reduce the load.
	—	—	—	—	Review the power supply.
	—	—	—	1) The regenerative brake option has overheated abnormally. 2) Error occurs even after removal of the built-in regenerative brake resistor or regenerative brake option.	Change the servo amplifier.
	—	—	—	—	Change the servo amplifier or regenerative brake option.
	—	—	—	—	1. Change the servo amplifier or cooling fan. 2. Reduce ambient temperature.
	—	—	—	—	Set command pulses correctly.
	—	—	—	—	Increase acceleration/deceleration time constant.
	112	252	402	—	1. Re-set servo gain to proper value. 2. If servo gain cannot be set to proper value: 1) Reduce "[Pr.112] Load inertia ratio" (load inertia moment ratio); or 2) Reexamine acceleration/deceleration time constant.
	Motor type			—	Set correctly.
	103	253	403		
	Motor speed				
	105	255	405		
	—	—	—	—	Change the servomotor.
	—	—	—	—	Correct the wiring.
	—	—	—	Error code 2032 occurs if power is switched ON after U, V and W are disconnected.	Change the servo amplifier.
	—	—	—	—	Correct the wiring.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	1. Change lead. 2. Connect correctly.
	—	—	—	—	Change the servo amplifier.
	—	—	—	—	1. For wire breakage of built-in regenerative brake resistor, change servo amplifier. 2. For wire breakage of regenerative brake option, change regenerative brake option.
	—	—	—	—	Add regenerative brake option or increase capacity.
	—	—	—	—	Review the power supply.

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2034	34	CRC error	SSCNET cable communication error	1. SSCNET cable is disconnected.
				2. SSCNET cable fault.
				3. Noise entered the SSCNET cable.
				4. The terminal connector is disconnected.
2035	35	Command pulse frequency alarm	Input command pulse is too high.	1. Command pulse frequency too high. 2. Noise entered the command pulse.
2036	36	Transfer error	SSCNET cable or printed board fault	1. SSCNET cable is disconnected.
				2. SSCNET cable fault.
				3. Printed board H-C10 fault.
				4. The terminal connector is disconnected.
2037	37	Parameter error	Parameter setting error	1. Servo amplifier fault caused the parameter setting to be rewritten.
				2. Mis-setting of servo amplifier parameter data
2042	42	Feedback alarm	Encoder signal is faulty.	Encoder faulty.
2045	45	Main circuit device overheat	Main circuit overheated abnormally.	1. Servo amplifier faulty.
				2. The power supply was turned ON and OFF continuously by overloaded status.
				3. Air cooling fan of servo amplifier stopped.
2046	46	Servomotor overheat	Servomotor temperature rise actuated the thermal protector.	1. Ambient temperature of servomotor is over 40°C.
				2. Servomotor is overloaded.
				3. Thermal protector in encoder is faulty.
				4. Air cooling fan of servomotor stopped.
2050	50	Overload 1	Load exceeded overload protection characteristic of servo amplifier. Load ratio 300%: 2.5s or more Load ratio 200%: 100s or more	1. Servo amplifier is used in excess of its continuous output current.
				2. Servo system is instable and hunting.
				3. Machine struck something.
				4. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W.
				5. Encoder faulty.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the cable.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the command pulse frequency to a proper value.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the cable.
	—	—	—	—	Change the servo amplifier.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the servo amplifier.
	Refer to section "5.2.7 Servo parameters for MR-H-B (MR-H-BN)".			—	Set correctly.
	—	—	—	—	Change the servo amplifier.
	—	—	—	—	Change the servo amplifier.
	—	—	—	—	Review the operation method.
	—	—	—	—	Review the cooling method.
	—	—	—	—	Review environment so that ambient temperature is 0 to 40°C.
	—	—	—	—	1. Reduce load. 2. Review operation pattern. 3. Use servomotor that provides larger output.
	—	—	—	—	Change servomotor.
	—	—	—	—	Change servomotor.
	—	—	—	—	1. Reduce load. 2. Review operation pattern. 3. Use servomotor that provides larger output.
	Servo response setting			—	1. Repeat acceleration/deceleration to execute auto tuning. 2. Change "[Pr.109] Servo response setting". 3. Set auto tuning to OFF and make gain adjustment manually.
	109	259	409		
	—	—	—	—	1. Review operation pattern. 2. Install limit switches.
	—	—	—	—	Connect correctly.
	—	—	—	When the servomotor shaft is rotated slowly with the servo OFF, the cumulative feedback pulses should vary in proportion to the rotary angle. (If the indication skips or returns midway, the encoder is faulty.)	Change the servomotor.

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2051	51	Overload 2	Machine collision or like caused max. output current to flow successively for several seconds. Servomotor locked: 1s or more	1. Machine struck something.
				2. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W.
				3. Servo system is instable and hunting.
				4. The bus voltage of the unit has decreased.
				5. Encoder faulty.
2052	52	Error excessive	Droop pulse value of the deviation counter exceeded 80kpulses.	1. Acceleration/deceleration time constant is small.
				2. Motor cannot be started due to torque shortage caused by power supply voltage drop.
				3. $\text{Pr.113}$ Position loop gain 1" value is small.
				4. Bus voltage of the unit dropped due to failure.
				5. Servomotor shaft was rotated by external force.
				6. Machine struck something.
				7. Encoder faulty.
				8. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W.
2086	8E	RS-232 alarm	Serial communication error occurred between servo amplifier and telecommunication equipment (parameter unit, personal computer or similar device).	1. Communication cable faulty (open cable or short circuit).
				2. Telecommunication equipment faulty.



	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	1. Review operation pattern. 2. Install limit switches.
	—	—	—	—	Connect correctly.
	Servo response setting			—	1. Repeat acceleration/deceleration to execute auto tuning. 2. Change "[Pr.109] Servo response setting". 3. Set auto tuning to OFF and make gain adjustment manually.
	109	259	409		
	—	—	—	—	Change the servo amplifier.
	—	—	—	When the servomotor shaft is rotated slowly with the servo OFF, the cumulative feedback pulses should vary in proportion to the rotary angle. (If the indication skips or returns midway, the encoder is faulty.)	Change the servomotor.
	—	—	—	—	Increase the acceleration/deceleration time constant.
	—	—	—	—	1. Review the power supply capacity. 2. Use servomotor that provides larger output.
	113	263	413	—	Increase the setting and adjust to ensure proper operation.
	—	—	—	—	Change the servo amplifier.
	Torque limit setting value			—	1. When torque is limited, increase the limit value. 2. Reduce load. 3. Use servomotor that provides larger output.
	24	174	324		
	Zero point return torque limit value				
	86	236	386		
	Torque output setting value				
	1180	1230	1280		
	—	—	—	—	1. Review operation pattern. 2. Install limit switches.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Connect correctly.
	—	—	—	—	Repair or change the cable.
	—	—	—	—	Change the telecommunication equipment.

## 14.2.3 Errors detected by MR-J-B

Error code	Servo amplifier LED display	Name and definition	Occurrence factor
2010	10	Undervoltage The power supply voltage (R, S, T) dropped to or below the given level (160VAC).	1. Power supply voltage is 160VAC or less.
			2. An instantaneous power failure occurred for 15ms or longer.
			3. Shortage of power supply capacity caused the power supply voltage to drop at start, etc.
2012	12	Memory error 1 ROM, RAM	J-C21 printed board fault
2013	13	Clock error	J-C21 printed board fault
2015	15	Memory error 2 E <sup>2</sup> PROM	J-C21 printed board fault
2016	16	Encoder error 1	1. Encoder connector disconnected.
			2. Servomotor encoder faulty.
			3. Encoder cable faulty (open cable or short circuit)
2017	17	Board error	J-P4 □ printed board fault
2020	20	Encoder error 2	1. Excessive noise generated.
			2. Encoder cable fault (open cable or short circuit)
2025	25	Absolute position erase	1. Voltage low in the super capacitor in the detector (set-up start)
			2. Battery voltage low
			3. Battery cable or battery is faulty.
2030	30	Regenerative error	1. "[Pr.102] Regenerative brake resistor" setting error
			2. Regenerative brake resistor not connected.
			3. Max. regenerative load exceeded. (1) High-duty operation caused the maximum load capacity of the regenerative brake resistor to be exceeded. (2) Continuous regenerative operation caused the maximum load capacity of the regenerative brake resistor to be exceeded.
			4. Regenerative power transistor damaged (short circuit).
			5. Regenerative brake resistor faulty.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	Measure the input voltage (R, S, T) with a voltmeter.	Review the power supply capacity.
	—	—	—	Check if an instantaneous power failure occurred. Observe the input voltage with an oscilloscope.	—
	—	—	—	Measure the input voltage (R, S, T) with a voltmeter.	Review the power supply capacity.
	—	—	—	Change the unit.	Change the unit.
	—	—	—	Change the unit.	Change the unit.
	—	—	—	Change the unit.	Change the unit.
	—	—	—	Make visual check (to see if the connector is disconnected or almost disconnected).	Connect correctly.
	—	—	—	Change the servomotor.	Change the servomotor.
	—	—	—	Check the cable (change the cable).	Repair or change the cable (do not apply external force to the cable).
	—	—	—	Change the unit.	Change the unit.
	—	—	—	Check if the MC, etc. are operated at error occurrence timing.	Take noise suppression measures.
	—	—	—	Check the cable (change the cable).	Repair or change the cable (do not apply external force to the cable).
	—	—	—	Keep the power ON for a few minutes in the error state and switch the power OFF, then ON.	Keep the power ON for a few minutes to charge the super capacitor, and switch the power OFF, then ON. Perform initial setting of the zero point.
	—	—	—	After switching the power OFF, measure the voltage across the battery.	—
	—	—	—	If the error still persists after the above remedy.	Change the battery.
	102	252	402	Check the setting of "[Pr.102] Regenerative brake resistor".	Set correctly.
	—	—	—	Check the connection.	Connect correctly.
	—	—	—	1. Reconsider the regenerative brake torque and the frequency of use of regenerative braking. 2. Check the regenerative load factor in the monitor mode.	1. Reduce the frequency of use of positioning. 2. Add the regenerative brake option. 3. Increase the servomotor capacity. 4. Reduce the load.
	—	—	—	Check the resistance of the regenerative power transistor using a tester.	Change the unit.
	—	—	—	Check the resistance of the regenerative brake resistor.	Change the regenerative brake resistor.

Error code	Servo amplifier LED display	Name and definition	Occurrence factor
2031	31	Overspeed Motor speed reached or exceeded the permissible speed.	1. The command speed exceeded the permissible speed.
			2. The acceleration/deceleration time constant is so small that overshoot occurs.
			3. The servo system is instable to cause overshoot.
			4. "[Pr.103] Motor type" or "[Pr.105] Motor speed" setting error
			5. Encoder faulty.
2032	32	Overcurrent Current not less than the permissible value flew in the servo amplifier bus.	1. Output phases U, V and W of the servo amplifier were connected with each other.
			2. Servo amplifier transistor damaged.
			3. Ground fault occurred in the servo amplifier output phases U, V, W.
			4. Noise entered the overcurrent detection circuit.
2033	33	Overvoltage Converter bus voltage reached or exceeded 400V.	1. Regenerative brake resistor connection fault.
			2. Regenerative power transistor damaged.
			3. Regenerative brake resistor in the servo amplifier switched OFF.
			4. Power supply voltage high.
2034	34	CRC error Command cable fault	SSCNET cable is disconnected.
			SSCNET cable fault.
			Noise entered the SSCNET cable .
			The terminal connector is disconnected.
2035	35	Command pulse frequency alarm	1. Command pulse frequency too high.
			2. Noise entered the command pulse.

Relevant buffer memory address			Checking method	Remedy
Axis 1	Axis 2	Axis 3		
—	—	—	1. Check the speed command (pulse train frequency). 2. Check if the motor speed determined by the set speed of the AD75 has exceeded the rated speed of the servomotor.	Set the speed correctly. (600kpps or less)
—	—	—	1. Increase acceleration/deceleration time constant. 2. Reduce the speed.	Reconsider the acceleration/deceleration time constant.
112	262	412	1. Adjust the servo gain. 2. Check "[Pr.112] Load inertia ratio" (load inertia moment ratio). 3. Increase the acceleration/deceleration time constant. 4. Reduce the speed.	1. Re-set servo gain to proper value. 2. If setting cannot be made by the servo gain: 1) Reduce "[Pr.112] Load inertia ratio" (load inertia moment ratio); or 2) Reexamine the acceleration/deceleration time constant.
Motor type			Check the servo parameters "[Pr.103] Motor type" and "[Pr.105] Motor speed".	Set correctly.
103	253	403		
Motor speed				
105	255	405		
—	—	—	1. Change the cable. 2. Change the servomotor.	Change the cable. Change the servomotor.
—	—	—	Check if the U, V, W cables have been connected using a tester.	Correct the wiring.
—	—	—	Measure the resistance across transistor module terminals using a tester.	Change the transistor module or unit.
—	—	—	1. Check across terminal block U, V, W phases and case using a tester. 2. Check across servomotor U, V, W phases and core using a tester and megger.	Correct the ground fault. Change the unit or servomotor.
—	—	—	Check if the relay or valve has operated in the periphery.	Take noise suppression measures.
—	—	—	Check the connection across terminal block C-P.	Connect correctly.
—	—	—	Check the resistance of the regenerative power transistor using a tester.	Change the unit.
—	—	—	Measure across terminal block C-P using a tester (measure about 3 minutes after the charge lamp goes OFF).	Change the unit.
—	—	—	Measure the input voltage (R, S, T) with a voltmeter.	Reconsider the power supply capacity.
—	—	—	Check for disconnection of the cable connector.	Connect correctly.
—	—	—	Check for an open cable, etc.	Change the cable.
—	—	—	The relay or valve has operated in the periphery.	Take noise suppression measures.
—	—	—	Check for disconnection of the terminal connector.	Connect correctly.
—	—	—	Check if the input pulse is faulty.	Change the AD75.
—	—	—	Check if the relay or valve has operated in the periphery.	Take noise suppression measures.

Error code	Servo amplifier LED display	Name and definition	Occurrence factor
2036	36	Transfer error Command cable fault	SSCNET cable is disconnected.
			SSCNET cable fault.
			Printed board fault
			The terminal connector is disconnected.
2037	37	Parameter error	1. Parameter data corrupted.
			2. Parameter data mis-setting
2045	45	Main circuit device overheat	1. Servo amplifier faulty (rated output exceeded).
			2. Power ON/OFF repeated in overload state.
			3. Cooling fault.
2046	46	Servomotor overheat	1. Servomotor overloaded.
			2. Servomotor ambient temperature exceeded the operating temperature of 40°C.
			3. Thermal protector built in the encoder is faulty.
			4. Cooling fan faulty.
2050	50	Overload 1 About 200% of overload current flew continuously.	1. Current exceeded the continuous output current of the servo amplifier.
			2. Servo system is instable to cause hunting.
			3. Machine struck something.
			4. Servomotor mis-wiring. Servo amplifier terminals U, V, W do not match servomotor terminals U, V, W.
			5. Encoder faulty.
2051	51	Overload 2 Max. current flew for several seconds.	1. Machine struck something.
			2. Servomotor mis-wiring. Servo amplifier terminals U, V, W do not match servomotor terminals U, V, W.
			3. Servo system is instable to cause hunting.
			4. Bus voltage in the servo amplifier low.
			5. Encoder faulty.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	Check for disconnection of the cable connector.	Connect correctly.
	—	—	—	Check for an open cable, etc.	Change the cable.
	—	—	—	Change the unit.	Change the unit.
	—	—	—	Check for disconnection of the terminal connector.	Connect correctly.
	Refer to section "5.2.8 Servo parameters for MR-J-B".			1. Check if dirt, etc. stuck on the card. 2. Re-set the parameters.	1. Remove the dirt on the card and re-set. 2. Change the card and re-set.
	—	—	—	—	Change the unit.
	—	—	—	Check if the servomotor is operated by switching the power ON/OFF.	Reconsider the operating method.
	—	—	—	1. Check if the servo amplifier fan is at a stop (MR-H150B or more). 2. Check if ventilation is inhibited. 3. Check if temperature in panel is too high (0 to +55°C). 4. Check the effective load factor in the monitor mode.	Improve cooling.
	—	—	—	1. Check the effective load factor in the monitor mode. 2. Measure the motor input current. 3. Measure a motor temperature rise. 4. Reduce the load.	1. Reduce the load. 2. Increase the capacity.
	—	—	—	• Check the ambient temperature of the servomotor (0 to +40°C). • Check if the servomotor is overheated by a nearby furnace or like.	Operate at the ambient temperature of 0 to +40°C.
	—	—	—	Change the servomotor.	Change the servomotor.
	—	—	—	Check if the motor cooling fan is rotating.	Change the servomotor.
	—	—	—	Refer to the error code 2046-1.	—
	—	—	—	Refer to the error code 2031-3.	—
	—	—	—	1. Check if the machine struck something. 2. Check if the stroke end limit switch is actuated properly.	1. Reconsider the operation pattern. 2. Change the limit switch.
	—	—	—	Check the connection of U, V, W.	Connect correctly.
	—	—	—	1. Change the cable. 2. Change the servomotor.	1. Change the cable. 2. Change the servomotor.
	—	—	—	Refer to the error code 2050-2.	—
	—	—	—	Refer to the error code 2050-4.	—
	—	—	—	Refer to the error code 2031-3.	—
	—	—	—	Check if the charge lamp is ON.	Change the unit.
	—	—	—	Refer to the error code 2050-5.	—

Error code	Servo amplifier LED display	Name and definition	Occurrence factor	
2052	52	Error excessive Droop pulse value of the deviation counter exceeded 80kpulses.	1. Acceleration/deceleration time constant is too small.	
			2. Start disabled due to torque shortage.	
			3. Servo gain (PG1) setting too low.	
			4. Bus voltage in the unit low.	
			5. Servomotor rotated one turn by external force.	
			6. Machine struck something.	
			7. Encoder faulty.	



Relevant buffer memory address			Checking method	Remedy
Axis 1	Axis 2	Axis 3		
—	—	—	Increase the acceleration/deceleration time constant.	Increase the acceleration/deceleration time constant.
—	—	—	—	—
113	263	413	Increase the setting of "Pr.113" Position loop gain 1".	Set a proper value.
—	—	—	Refer to the error code 2051-3.	—
Torque limit setting value			1. Check the droop pulse value and cumulative regenerative load factor value in the monitor mode. Check if the values have changed at the time of motor stop. 2. Check the torque limit value. Check if the servo torque setting is smaller than external force.	1. Change the torque limit value. 2. Reduce the load. 3. Increase the capacity.
24	174	324		
Zero point return torque limit value				
86	236	386		
Torque output setting value				
1180	1230	1280		
—	—	—	Check if the machine struck something.	Reconsider the operation pattern.
—	—	—	Refer to the error code 2050-5.	—

## 14.2.4 Errors detected by MR-J2-B

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2010	10	Undervoltage	Power supply voltage dropped to 160VAC or less.	1. Power supply voltage is low.
				2. An instantaneous power failure occurred for 100ms or longer.
				3. Shortage of power supply capacity caused the power supply voltage to drop at start, etc.
				4. Power was restored after the bus voltage dropped to 200VDC. (Main circuit power switched ON within 5s after it had switched OFF.)
				5. Faulty parts in the servo amplifier.
2011	11	Board error 1	Printed board fault	Faulty parts in the servo amplifier.
2012	12	Memory error 1	RAM, ROM memory fault	
2013	13	Clock error	Printed board fault	
2015	15	Memory error 2	E <sup>2</sup> PROM fault	
2016	16	Encoder error 1	Communication error occurred between encoder and servo amplifier.	1. Encoder connector disconnected.
				2. Servomotor encoder faulty.
				3. Encoder cable faulty (open cable or short circuit)
				4. Incorrect combination of servo amplifier and servomotor
2017	17	Board error 2	CPU/parts fault	Faulty parts in the servo amplifier.
2018	18	Board error 3	—	
2020	20	Encoder error 2	Communication error occurred between encoder and servo amplifier.	1. Encoder connector disconnected.
				2. Encoder cable faulty (open cable or short circuit)
2024	24	Ground fault	Ground fault occurred at U, V and W.	1. Ground fault occurred at U, V and W phases of servo amplifier output.
2025	25	Absolute position erase	Absolute position data in error	1. Reduced voltage of super capacitor in encoder
				2. Battery voltage low
				3. Battery cable or battery is faulty.
			Power was switched ON for the first time in absolute position detection system.	4. The super capacitor of the absolute position detector is not charged.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	Review the power supply.
	—	—	—		
	—	—	—		
	—	—	—		
	—	—	—	Error code 2010 occurs if power is switched ON after all connectors are disconnected.	Change the servo amplifier.
	—	—	—	Any of error codes 2011 to 2013 and 2015 occurs if power is switched ON after all connectors are disconnected.	Change the servo amplifier.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Repair or change the cable.
	—	—	—	—	Use correct combination.
	—	—	—	Any of error codes 2017 and 2018 occurs if power is switched ON after all connectors are disconnected.	Change the servo amplifier.
	—	—	—	—	Connect correctly.
	—	—	—	—	Repair or change the cable.
	—	—	—	—	Correct the wiring.
	—	—	—	—	After error has occurred, hold power ON for a few minutes, and switch it OFF once, then ON again (make zero point return again).
	—	—	—	—	Change battery (make zero point return again).
	—	—	—	—	—
	—	—	—	—	After error has occurred, hold power ON for a few minutes, and switch it OFF once, then ON again (make zero point return again).

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2030	30	Regenerative error	Permissible regenerative power of the built-in regenerative brake resistor or regenerative brake option is exceeded.	1. "[Pr.102] Regenerative brake resistor" setting error
				2. Built-in regenerative brake resistor or regenerative brake option is not connected.
				3. High-duty operation or continuous regenerative operation caused the permissible regenerative power of the regenerative brake option to be exceeded.
				4. Power supply voltage increased to 260V or more.
		Regenerative transistor fault	5. Regenerative transistor faulty.	
			6. Built-in regenerative brake resistor or regenerative brake option faulty.	
2031	31	Overspeed	Speed has exceeded the instantaneous permissible speed.	1. Small acceleration/deceleration time constant caused overshoot to be large.
				2. Servo system is instable to cause overshoot.
				3. Encoder faulty.
2032	32	Overcurrent	Current that flew is higher than the permissible current of the servo amplifier.	1. Short occurred in servo amplifier output phases U, V and W.
				2. Transistor (IPM) of the servo amplifier faulty.
				3. Ground fault occurred in servo amplifier output phases U, V and W.
				4. External noise caused the overcurrent detection circuit to misoperate.
2033	33	Overvoltage	Converter bus voltage exceeded 400V.	1. Lead of built-in regenerative brake resistor or regenerative brake option is open or disconnected.
				2. Regenerative transistor faulty.
				3. Wire breakage of built-in regenerative brake resistor or regenerative brake option
				4. Capacity of built-in regenerative brake resistor or regenerative brake option is insufficient.
2034	34	CRC error	SSCNET cable communication error	1. SSCNET cable is disconnected.
				2. SSCNET cable fault (open cable or short circuit).
				3. Noise entered the SSCNET cable.
				4. The terminal connector is disconnected.
2035	35	Command speed error	Input command pulse frequency exceeded 2.5Mpps.	1. Command pulse frequency exceeded 2.5Mpps.
				2. Noise entered the SSCNET cable.
				3. AD75 fault
2036	36	Transfer error	SSCNET cable fault	1. SSCNET cable is disconnected.
				2. SSCNET cable fault (open cable or short circuit).
		Printed board fault	Faulty parts in servo amplifier	

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	102	252	402	—	Set correctly.
	—	—	—	—	Connect correctly.
	—	—	—	Call the status display and check the regenerative load ratio.	1. Reduce the frequency of positioning. 2. Use the regenerative brake option of larger capacity. 3. Reduce the load.
	—	—	—	—	Review the power supply.
	—	—	—	1) The regenerative brake option has overheated abnormally. 2) Error occurs even after removal of the built-in regenerative brake resistor or regenerative brake option.	Change the servo amplifier.
	—	—	—	—	Change the servo amplifier or regenerative brake option.
	—	—	—	—	Increase acceleration/deceleration time constant.
	—	—	—	—	1. Re-set servo gain to proper value. 2. If servo gain cannot be set to proper value: 1) Reduce "[Pr.112] Load inertia ratio" (load inertia moment ratio); or 2) Reexamine acceleration/deceleration time constant.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Correct the wiring.
	—	—	—	Error code 2032 occurs if power is switched ON after U, V and W are disconnected.	Change the servo amplifier.
	—	—	—	—	Correct the wiring.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	1. Change lead. 2. Connect correctly.
	—	—	—	—	Change the servo amplifier.
	—	—	—	—	1. For wire breakage of built-in regenerative brake resistor, change servo amplifier. 2. For wire breakage of regenerative brake option, change regenerative brake option.
	—	—	—	—	Add regenerative brake option or increase capacity.
	—	—	—	—	Connect correctly.
	—	—	—	—	Repair or change the cable.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	Connect correctly.
	—	—	—	—	Review the operation program.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	Change the AD75.
	—	—	—	—	Connect correctly.
	—	—	—	—	Repair or change the cable.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the servo amplifier.

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2037	37	Parameter error	Parameter setting error	1. Servo amplifier fault caused the parameter setting to be rewritten. 2. Regenerative brake option not combined with used servo amplifier was selected in "[Pr.102] Regenerative brake resistor".
2046	46	Servomotor overheat	Servomotor temperature rise actuated the thermal protector.	1. Ambient temperature of servomotor is over 40°C. 2. Servomotor is overloaded. 3. Thermal protector in encoder is faulty.
2050	50	Overload 1	Load exceeded overload protection characteristic of servo amplifier. Load ratio 300%: 2.5s or more Load ratio 200%: 100s or more	1. Servo amplifier is used in excess of its continuous output current. 2. Servo system is instable and hunting. 3. Machine struck something. 4. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W. 5. Encoder faulty.
2051	51	Overload 2	Machine collision or like caused max. output current to flow successively for several seconds. Servomotor locked: 1s or more	1. Machine struck something. 2. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W. 3. Servo system is instable and hunting. 4. Encoder faulty.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	Change the servo amplifier.
	102	252	402	—	Set "[Pr.102] Regenerative brake resistor" correctly.
	—	—	—	—	Review environment so that ambient temperature is 0 to 40°C.
	—	—	—	—	1. Reduce load. 2. Review operation pattern. 3. Use servomotor that provides larger output.
	—	—	—	—	Change servomotor.
	—	—	—	—	1. Reduce load. 2. Review operation pattern. 3. Use servomotor that provides larger output.
	Servo response setting			—	1. Repeat acceleration/deceleration to execute auto tuning. 2. Change "[Pr.109] Servo response setting". 3. Set auto tuning to OFF and make gain adjustment manually.
	109	259	409		
	—	—	—	—	1. Review operation pattern. 2. Install limit switches.
	—	—	—	—	Connect correctly.
	—	—	—	When the servomotor shaft is rotated slowly with the servo OFF, the cumulative feedback pulses should vary in proportion to the rotary angle. (If the indication skips or returns midway, the encoder is faulty.)	Change the servomotor.
	—	—	—	—	1. Review operation pattern. 2. Install limit switches.
	—	—	—	—	Connect correctly.
	Servo response setting			—	1. Repeat acceleration/deceleration to execute auto tuning. 2. Change "[Pr.109] Servo response setting". 3. Set auto tuning to OFF and make gain adjustment manually.
	109	259	409		
	—	—	—	When the servomotor shaft is rotated slowly with the servo OFF, the cumulative feedback pulses should vary in proportion to the rotary angle. (If the indication skips or returns midway, the encoder is faulty.)	Change the servomotor.

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2052	52	Error excessive	Droop pulse value of the deviation counter exceeded the "Pr.131 Error excessive alarm level" (initial value: 80kpulses).	1. Acceleration/deceleration time constant is small.
				2. Motor cannot be started due to torque shortage caused by power supply voltage drop.
				3. "Pr.113" Position loop gain 1" value is small.
				4. Servomotor shaft was rotated by external force.
				5. Machine struck something.
				6. Encoder faulty.
				7. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W.
2086	8E	RS-232 alarm	Serial communication error occurred between servo amplifier and telecommunication equipment (personal computer or similar device).	1. Communication connector disconnected.
				2. Communication cable faulty (open cable or short circuit).
				3. Telecommunication equipment (personal computer or similar device) faulty.



	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	Increase the acceleration/deceleration time constant.
	—	—	—	—	1. Review the power supply capacity. 2. Use servomotor that provides larger output.
	113	263	413	—	Increase the setting and adjust to ensure proper operation.
	Torque limit setting value			—	1. When torque is limited, increase the limit value. 2. Reduce load. 3. Use servomotor that provides larger output.
	24	174	324		
	Zero point return torque limit value				
	86	236	386		
	Torque output setting value				
	1180	1230	1280		
	—	—	—	—	1. Review operation pattern. 2. Install limit switches.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Connect correctly.
	—	—	—	—	Connect correctly.
	—	—	—	—	Repair or change the cable.
	—	—	—	—	Change the telecommunication equipment (personal computer or similar device).

## 14.2.5 Errors detected by MR-J2S-B

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2010	10	Undervoltage	Power supply voltage dropped. MR-J2S-□B: 160VAC or less MR-J2S-□B1: 83VAC or less	1. Power supply voltage is low.
				2. An instantaneous power failure occurred for 60ms or longer.
				3. Shortage of power supply capacity caused the power supply voltage to drop at start, etc.
				4. Power was restored after the bus voltage dropped to 200VDC. (Main circuit power switched ON within 5s after it had switched OFF.)
				5. Faulty parts in the servo amplifier.
2012	12	Memory error 1	RAM memory fault	Faulty parts in the servo amplifier.
2013	13	Clock error	Printed board fault	
2015	15	Memory error 2	E <sup>2</sup> PROM fault	
2016	16	Encoder error 1	Communication error occurred between encoder and servo amplifier.	1. CN2 connector disconnected.
				2. Encoder faulty.
				3. Encoder cable faulty (open cable or short circuit)
2017	17	Board error 2	CPU/parts fault	Faulty parts in the servo amplifier.
2019	19	Memory error 3	ROM memory fault	
2020	1A	Motor combination error	Servo amplifier and servomotor combined incorrectly.	Servo amplifier and servomotor were connected in incorrect combination.
2020	20	Encoder error 2	Communication error occurred between encoder and servo amplifier.	1. Encoder connector (CN2) disconnected.
				2. Encoder cable faulty (open cable or short circuit)
2024	24	Ground fault	Ground fault occurred at the servomotor outputs (U, V and W phases) of the servo amplifier.	1. Power input cable and servomotor output cable are making contact at the main circuit terminal block (TE1).
				2. Servomotor power cable insulation deteriorated.
2025	25	Absolute position erase	Absolute position data in error	1. Reduced voltage of super capacitor in encoder
				2. Battery voltage low
				3. Battery cable or battery is faulty.
			Power was switched ON for the first time in absolute position detection system.	4. The super capacitor of the absolute position detector is not charged.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	Review the power supply.
	—	—	—		
	—	—	—		
	—	—	—		
	—	—	—	Error code 2010 occurs if power is switched ON after CN1A, CN1B and CN3 connectors are disconnected.	Change the servo amplifier.
	—	—	—	Any of error codes 2011 to 2015 occurs if power is switched ON after CN1A, CN1B and CN3 connectors are disconnected.	Change the servo amplifier.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Repair or change the cable.
	—	—	—	Any of error codes 2017 and 2019 occurs if power is switched ON after CN1A, CN1B and CN3 connectors are disconnected.	Change the servo amplifier.
	—	—	—	—	Use correct combination.
	—	—	—	—	Connect correctly.
	—	—	—	—	Repair or change the cable.
	—	—	—	—	Change the cable.
	—	—	—	—	
	—	—	—	—	After error has occurred, hold power ON for a few minutes, and switch it OFF once, then ON again (make zero point return again).
	—	—	—	—	Change battery (make zero point return again).
	—	—	—	—	
	—	—	—	—	After error has occurred, hold power ON for a few minutes, and switch it OFF once, then ON again (make zero point return again).

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2030	30	Regenerative error	Permissible regenerative power of the built-in regenerative brake resistor or regenerative brake option is exceeded.	1. "Pr.102 Regenerative brake resistor" setting error
				2. Built-in regenerative brake resistor or regenerative brake option is not connected.
				3. High-duty operation or continuous regenerative operation caused the permissible regenerative power of the regenerative brake option to be exceeded.
				4. Power supply voltage is abnormal. MR-J2S-□B: 260V or more MR-J2S-□B1: 135V or more
		Regenerative transistor fault		5. Regenerative transistor faulty.
				6. Built-in regenerative brake resistor or regenerative brake option faulty.
2031	31	Overspeed	Speed has exceeded the instantaneous permissible speed.	1. Small acceleration/deceleration time constant caused overshoot to be large.
				2. Servo system is instable to cause overshoot.
				3. Encoder faulty.
2032	32	Overcurrent	Current that flew is higher than the permissible current of the servo amplifier.	1. Short occurred in servo amplifier output phases U, V and W.
				2. Servo amplifier transistor faulty.
				3. Ground fault occurred in servo amplifier output phases U, V and W.
				4. External noise caused the overcurrent detection circuit to misoperate.
2033	33	Overvoltage	Input value of converter bus voltage exceeded 400V.	1. Lead of built-in regenerative brake resistor or regenerative brake option is open or disconnected.
				2. Regenerative transistor faulty.
				3. Wire breakage of built-in regenerative brake resistor or regenerative brake option
				4. Capacity of built-in regenerative brake resistor or regenerative brake option is insufficient.
				5. Power supply voltage high.
2034	34	CRC error	SSCNET cable communication error	1. SSCNET cable is disconnected.
				2. SSCNET cable fault.
				3. Noise entered the SSCNET cable.
				4. The terminal connector is disconnected.
				5. The same No. exists in the servo amplifier side axis setting.
2035	35	Command pulse frequency alarm	Input command frequency is too high.	1. Command of higher than servomotor maximum speed was given.
				2. Noise entered the SSCNET cable.
				3. AD75 faulty

	Relevant buffer memory addresses			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	102	252	402	—	Set correctly.
	—	—	—	—	Connect correctly.
	—	—	—	Call the status display and check the regenerative load ratio.	1. Reduce the frequency of positioning. 2. Use the regenerative brake option of larger capacity. 3. Reduce the load.
	—	—	—	—	Review the power supply.
	—	—	—	1) The regenerative brake option has overheated abnormally. 2) Error occurs even after removal of the built-in regenerative brake resistor or regenerative brake option.	Change the servo amplifier.
	—	—	—	—	Change the servo amplifier or regenerative brake option.
	—	—	—	—	Increase acceleration/deceleration time constant.
	112	262	412	—	1. Re-set servo gain to proper value. 2. If servo gain cannot be set to proper value: 1) Reduce "Pr.112 Load inertia ratio" (load inertia moment ratio); or 2) Reexamine acceleration/deceleration time constant.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Correct the wiring.
	—	—	—	Error code 2032 occurs if power is switched ON after U, V and W are disconnected.	Change the servo amplifier.
	—	—	—	—	Correct the wiring.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	1. Change lead. 2. Connect correctly.
	—	—	—	—	Change the servo amplifier.
	—	—	—	—	1. For wire breakage of built-in regenerative brake resistor, change servo amplifier. 2. For wire breakage of regenerative brake option, change regenerative brake option.
	—	—	—	—	Add regenerative brake option or increase capacity.
	—	—	—	—	Review the power supply.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the cable.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	Connect correctly.
	—	—	—	—	Set correctly.
	—	—	—	—	Review the operation program.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	Change the AD75.

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2036	36	Transfer error	SSCNET cable or printed board fault	1. SSCNET cable is disconnected. 2. SSCNET cable fault. 3. The terminal connector is disconnected.
2037	37	Parameter error	Parameter setting error	1. Servo amplifier fault caused the parameter setting to be rewritten. 2. There is parameter set to outside setting range by AD75.
2045	45	Main circuit device overheat	Main circuit overheated abnormally.	1. Servo amplifier faulty. 2. The power supply was turned ON and OFF continuously by overloaded status. 3. Air cooling fan of servo amplifier stopped.
2046	46	Servomotor overheat	Servomotor temperature rise actuated the thermal protector.	1. Ambient temperature of servomotor is over 40°C. 2. Servomotor is overloaded. 3. Thermal protector in encoder is faulty.
2050	50	Overload 1	Load exceeded overload protection characteristic of servo amplifier. Load ratio 300%: 2.5s or more Load ratio 200%: 100s or more	1. Servo amplifier is used in excess of its continuous output current. 2. Servo system is instable and hunting. 3. Machine struck something. 4. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W. 5. Encoder faulty.
2051	51	Overload 2	Machine collision or like caused max. output current to flow successively for several seconds. Servomotor locked: 1s or more	1. Machine struck something. 2. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W. 3. Servo system is instable and hunting. 4. Encoder faulty.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the cable.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the servo amplifier.
	Refer to section "5.2.10 Servo parameters for MR-J2S-B".			—	Set the parameter value to within the setting range.
	—	—	—	—	Change the servo amplifier.
	—	—	—	—	Review the operation method.
	—	—	—	—	1. Change the servo amplifier or cooling fan. 2. Reduce the ambient temperature.
	—	—	—	—	Review environment so that ambient temperature is 0 to 40°C.
	—	—	—	—	1. Reduce load. 2. Review operation pattern. 3. Use servomotor that provides larger output.
	—	—	—	—	Change servomotor.
	—	—	—	—	1. Reduce load. 2. Review operation pattern. 3. Use servomotor that provides larger output.
	Servo response setting			—	1. Repeat acceleration/deceleration to execute auto tuning. 2. Change "[Pr.109] Servo response setting". 3. Set auto tuning to OFF and make gain adjustment manually.
	109	259	409		
	—	—	—	—	1. Review operation pattern. 2. Install limit switches.
	—	—	—	—	Connect correctly.
	—	—	—	—	When the servomotor shaft is rotated slowly with the servo OFF, the cumulative feedback pulses should vary in proportion to the rotary angle. (If the indication skips or returns midway, the encoder is faulty.) Change the servomotor.
	—	—	—	—	1. Review operation pattern. 2. Install limit switches.
	—	—	—	—	Connect correctly.
	Servo response setting			—	1. Repeat acceleration/deceleration to execute auto tuning. 2. Change "[Pr.109] Servo response setting". 3. Set auto tuning to OFF and make gain adjustment manually.
	109	259	409		
	—	—	—	—	When the servomotor shaft is rotated slowly with the servo OFF, the cumulative feedback pulses should vary in proportion to the rotary angle. (If the indication skips or returns midway, the encoder is faulty.) Change the servomotor.

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor	
2052	52	Error excessive	Droop pulse value of the deviation counter exceeded the "Pr.131 Error excessive alarm level" value (initial value: 2 revolutions).	1. Acceleration/deceleration time constant is small.	
				2. Torque limit value is small.	
				3. Motor cannot be started due to torque shortage caused by power supply voltage drop.	
				4. "Pr.113 Position loop gain 1" value is small.	
				5. Servomotor shaft was rotated by external force.	
				6. Machine struck something.	
				7. Encoder faulty.	
				8. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W.	
2086	8E	RS-232 alarm	Serial communication error occurred between servo amplifier and telecommunication equipment (personal computer or similar device).	1. Communication cable faulty (open cable or short circuit).	
				2. Telecommunication equipment (personal computer or similar device) faulty.	



Relevant buffer memory address			Checking method	Remedy
Axis 1	Axis 2	Axis 3		
—	—	—	—	Increase the acceleration/deceleration time constant.
Torque limit setting value			—	Increase the torque limit value.
24	174	324		
Zero point return torque limit value				
86	236	386		
Torque output setting value				
1180	1230	1280		
—	—	—	—	1. Review the power supply capacity. 2. Use servomotor that provides larger output.
—	—	—	—	Increase the setting and adjust to ensure proper operation.
Torque limit setting value			—	1. When torque is limited, increase the limit value. 2. Reduce load. 3. Use servomotor that provides larger output.
24	174	324		
Zero point return torque limit value				
86	236	386		
Torque output setting value				
1180	1230	1280		
—	—	—	—	1. Review operation pattern. 2. Install limit switches.
—	—	—	—	Change the servomotor.
—	—	—	—	Connect correctly.
—	—	—	—	Repair or change the cable.
—	—	—	—	Change the telecommunication equipment (personal computer or similar device).

## 14.2.6 Errors detected by MR-J2-03B5

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2010	10	Undervoltage	Power supply voltage dropped to 20VDC or less.	1. Power supply voltage is low.
				2. An instantaneous power failure occurred for 40ms or longer.
				3. Shortage of power supply capacity caused the power supply voltage to drop at start, etc.
				4. Power was restored after the bus voltage dropped to 15VDC. (Main circuit power switched ON within 5s after it had switched OFF.)
				5. Faulty parts in the servo amplifier.
2011	11	Board error 1	Printed board fault	Faulty parts in the servo amplifier.
2012	12	Memory error 1	RAM, ROM memory fault	
2013	13	Clock error	Printed board fault	
2015	15	Memory error 2	E <sup>2</sup> PROM fault	
2016	16	Encoder error 1	Communication error occurred between encoder and servo amplifier.	1. CNP2 connector disconnected.
				2. Encoder faulty.
				3. Encoder cable faulty (open cable or short circuit)
2017	17	Board error 2	CPU/parts fault	Faulty parts in the servo amplifier
2020	20	Encoder error 2	Communication error occurred between encoder and servo amplifier.	1. CNP2 connector disconnected.
				2. Encoder faulty
				3. Servomotor cable faulty (Encoder wiring is open or shorted)
2024	24	Main circuit error	Ground fault occurred at the servomotor output U, V and W phases of the servo amplifier.	1. Servomotor power cable insulation deteriorated, resulting in ground fault.
				2. Main circuit of servo amplifier faulty.
2031	31	Overspeed	Speed has exceeded the instantaneous permissible speed.	1. Small acceleration/deceleration time constant caused overshoot to be large.
				2. Servo system is instable to cause overshoot.
				3. Encoder faulty.
2032	32	Overcurrent	Current that flew is higher than the permissible current of the servo amplifier.	1. Short occurred in servo amplifier output phases U, V and W.
				2. Servo amplifier transistor faulty
				3. Ground fault occurred in servo amplifier output phases U, V and W.
				4. External noise caused the overcurrent detection circuit to malfunction.
2033	33	Overvoltage	Input value of converter bus voltage exceeded 35V.	Power supply voltage is higher than permissible voltage range.

	Relevant buffer memory address			Checking method	Remedy
	Axis 1	Axis 2	Axis 3		
	—	—	—	—	Review the power supply.
	—	—	—		
	—	—	—		
	—	—	—		
	—	—	—	Error code 2010 occurs if power is switched ON after CN1A, CN1B, CNP2 and CNP3 connectors are disconnected.	Change the servo amplifier.
	—	—	—	Any of error codes 2011 to 2013 and 2015 occurs if power is switched ON after CN1A, CN1B, CNP2 and CNP3 connectors are disconnected.	Change the servo amplifier.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Repair or change the cable.
	—	—	—	Error code 2017 occurs if power is switched ON after CN1A, CN1B, CNP2 and CNP3 connectors are disconnected.	Change the servo amplifier.
	—	—	—	—	Connect correctly.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Repair or change the cable.
	—	—	—	—	Change the cable.
	—	—	—	Error code 2024 occurs if power is switched ON after CNP2 connector is disconnected.	Change the servo amplifier.
	—	—	—	—	Increase acceleration/deceleration time constant.
	—	—	—	—	1. Re-set servo gain to proper value. 2. If servo gain cannot be set to proper value: 1) Reduce "[Pr.112] Load inertia ratio" (load inertia moment ratio); or 2) Reexamine acceleration/deceleration time constant.
	—	—	—	—	Change the servomotor.
	—	—	—	—	Correct the wiring.
	—	—	—	Error code 2032 occurs if power is switched ON after CNP2 connector is disconnected.	Change the servoamplifier.
	—	—	—	—	Correct the wiring.
	—	—	—	—	Take noise suppression measures.
	—	—	—	—	Change the power supply.

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2034	34	CRC error	SSCNET cable communication error	1. SSCNET cable is disconnected.
				2. SSCNET cable fault (open cable or short circuit).
				3. Noise entered the SSCNET cable.
				4. The terminal connector is disconnected.
				5. The same No. exists in the servo amplifier side axis setting.
2035	35	Command pulse frequency alarm	Input command pulse is too high.	1. Command of higher than servomotor maximum speed was given.
				2. Noise entered the SSCNET cable.
				3. AD75 faulty
2036	36	Transfer error	SSCNET cable fault	1. SSCNET cable is disconnected.
				2. SSCNET cable fault.
				3. Printed board faulty
				4. The terminal connector is disconnected.
2037	37	Parameter error	Parameter setting error	1. Servo amplifier fault caused the parameter setting to be rewritten.
				2. There is parameter set to outside setting range by AD75.
2050	50	Overload 1	Load exceeded overload protection characteristic of servo amplifier. Load ratio 200%: 85s or more	1. Servo amplifier is used in excess of its continuous output current.
				2. Servo system is instable and hunting.
				3. Machine struck something.
				4. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W.
				5. Encoder faulty.
2051	51	Overload 2	Machine collision or like caused max. output current to flow successively for several seconds. Servomotor locked: 1s or more	1. Machine struck something.
				2. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W.
				3. Servo system is instable and hunting.
				4. Encoder faulty.

Relevant buffer memory address				Checking method	Remedy
Axis 1	Axis 2	Axis 3			
—	—	—		—	Connect correctly.
—	—	—		—	Change the cable.
—	—	—		—	Take noise suppression measures.
—	—	—		—	Connect correctly.
—	—	—		—	Set correctly.
—	—	—		—	Review the operation program.
—	—	—		—	Take noise suppression measures.
—	—	—		—	Change the AD75.
—	—	—		—	Connect correctly.
—	—	—		—	Change the cable.
—	—	—		—	Change the servo amplifier.
—	—	—		—	Connect correctly.
—	—	—		—	Change the servo amplifier.
Refer to section "5.2.11 Servo parameters for MR-J2-03B5".				—	Set the parameter value to within the setting range.
—	—	—		—	1. Reduce load. 2. Review operation pattern. 3. Use servomotor that provides larger output.
Servo response setting				—	1. Repeat acceleration/deceleration to execute auto tuning. 2. Change "[Pr.109] Servo response setting". 3. Set auto tuning to OFF and make gain adjustment manually.
109	259	409			
—	—	—		—	1. Review operation pattern. 2. Install limit switches.
—	—	—		—	Connect correctly.
—	—	—		—	When the servomotor shaft is rotated slowly with the servo OFF, the cumulative feedback pulses should vary in proportion to the rotary angle. (If the indication skips or returns midway, the encoder is faulty.) Change the servomotor.
—	—	—		—	1. Review operation pattern. 2. Install limit switches.
—	—	—		—	Connect correctly.
Servo response setting				—	1. Repeat acceleration/deceleration to execute auto tuning. 2. Change "[Pr.109] Servo response setting". 3. Set auto tuning to OFF and make gain adjustment manually.
109	259	409			
—	—	—		—	When the servomotor shaft is rotated slowly with the servo OFF, the cumulative feedback pulses should vary in proportion to the rotary angle. (If the indication skips or returns midway, the encoder is faulty.) Change the servomotor.

Error code	Servo amplifier LED display	Name	Definition	Occurrence factor
2052	52	Error excessive	Droop pulse value of the deviation counter exceeded the "Pr.131 Error excessive alarm level" value (initial value: 80kpulses).	1. Acceleration/deceleration time constant is small.
				2. Torque limit value is small.
				3. Motor cannot be started due to torque shortage caused by power supply voltage drop.
				4. "Pr.113 Position loop gain 1" value is small.
				5. Servomotor shaft was rotated by external force.
				6. Machine struck something.
				7. Encoder faulty.
				8. Wrong connection of servomotor. Servo amplifier's output terminals U, V, W do not match servomotor's input terminals U, V, W.
2086	8E	RS-232 alarm	Serial communication error occurred between servo amplifier and telecommunication equipment (personal computer or similar device).	1. Communication cable faulty (open cable or short circuit).
				2. Telecommunication equipment (personal computer or similar device) faulty.

Relevant buffer memory address			Checking method	Remedy
Axis 1	Axis 2	Axis 3		
—	—	—	—	Increase the acceleration/deceleration time constant.
Torque limit setting value			—	Increase the torque limit value.
24	174	324		
Zero point return torque limit value				
86	236	386		
Torque output setting value				
1180	1230	1280		
—	—	—	—	1. Review the power supply capacity. 2. Use servomotor that provides larger output.
113	263	413	—	Increase the setting and adjust to ensure proper operation.
Torque limit setting value			—	1. When torque is limited, increase the limit value. 2. Reduce load. 3. Use servomotor that provides larger output.
24	174	324		
Zero point return torque limit value				
86	236	386		
Torque output setting value				
1180	1230	1280		
—	—	—	—	1. Review operation pattern. 2. Install limit switches.
—	—	—	—	Change the servomotor.
—	—	—	—	Connect correctly.
—	—	—	—	Repair or change the cable.
—	—	—	—	Change the telecommunication equipment (personal computer or similar device).

## 14.3 List of warnings

## 14.3.1 Warnings detected by AD75

The following table shows the warning details and remedies when warnings occur.

Division of warning	Warning code	Warning name	Description	Action at occurrence of warning
—	000	(Normal)	—	—
Common	10	FeRAM count warning	FeRAM access count exceeded $9 \times 10^9$ times.	Operation continues.
	11	Automatic update count over	When the absolute position of the zero point is automatically updated in the infinite length positioning control of control unit "degree", the FeRAM access count exceed $9.9999 \times 10^9$ times.	
	12	Automatic update failure	When the absolute position of the zero point is automatically updated in the infinite length positioning control of control unit "degree", write to FeRAM is not completed normally.	
	100	Start during operation	A start request is issued when the axis is busy.	Operation continues.
	101	Current value change when BUSY	The current value is changed when the axis is busy.	The current value change request is ignored.
	104	Restart not possible	A restart command is issued in other than the "stopped" axis status.	Operation continues.
	105	Illegal target axis	The target axis of reading/writing is out of the setting range.	<ul style="list-style-type: none"> <li>• The warning is for the reference axis.</li> <li>• Reading/writing is not made.</li> </ul>
	106	Illegal positioning data No.	The positioning data number to be read/written is out of the setting range.	<ul style="list-style-type: none"> <li>• The warning is for the target axis.</li> <li>• Reading/writing is not made.</li> </ul>
	107	Illegal writing pattern	The writing pattern to be read/written is out of the setting range.	<ul style="list-style-type: none"> <li>• The warning is for the target axis.</li> <li>• Reading/writing is not made.</li> </ul>
	108	Illegal flash ROM writing	A flash ROM writing request is issued when AD75 READY (X0) is OFF.	<ul style="list-style-type: none"> <li>• The warning is for axis 1.</li> <li>• The flash ROM is not written.</li> </ul>
	109	Writing when BUSY	A request is issued when the axis is busy.	The warning is for the target axis of the writing request.
111	In PLC READY	A request to write the flash ROM is issued when PLC READY is ON (during request to teach).	The warning is for axis 1.	



	Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy		
	Axis 1	Axis 2	Axis 3				
	—	—	—	—	—		
	880 to 883	980 to 983	1080 to 1083	—	Prepare a new module until the error "FeRAM count over" (error code: 10) occurs.  Replace the module.		
	—	—	—	—	Correct the start request issuance timing.		
	1150	1200	1250	<Positioning start No.> 9003: Current value change	Do not change the current value during operation of the axis. (Refer to section 9.2.10)		
	1152	1202	1252	<Restart command> 1: Restart	Correct the start request issuance timing. (Refer to section 6.5.5) (Do not issue a restart command in other than the "stopped" axis operation status.)		
	1103			<Target axis> 1: Axis 1, 2: Axis 2, 3: Axis 3, 4: Interpolation in axis 1 and axis 2, 5: Interpolation in axis 2 and axis 3, 6: Interpolation in axis 3 and axis 1.	Set a value within the setting range.		
	1104			<Positioning data No.> 1 to 600	Set a value within the setting range.		
	1105			<table border="1"> <tr> <td>&lt;Write pattern&gt; &lt;Upper order&gt; 00H to 07H</td> <td>&lt;Write pattern&gt; &lt;Lower order&gt; 00H to 0FH</td> </tr> </table> Refer to section "5.7.1 System control data."	<Write pattern> <Upper order> 00H to 07H	<Write pattern> <Lower order> 00H to 0FH	Set a value within the setting range.
<Write pattern> <Upper order> 00H to 07H	<Write pattern> <Lower order> 00H to 0FH						
	1138			<Flash ROM write request> 1: Flash ROM write request	—		
	Target axis	<table border="1"> <tr> <td>&lt;Target axis&gt; 1, 2, 3, 4, 5, 6</td> </tr> <tr> <td>&lt;Read/write request&gt; 2: Write request</td> </tr> </table>			<Target axis> 1, 2, 3, 4, 5, 6	<Read/write request> 2: Write request	A write request is issued when the axis is not busy.
<Target axis> 1, 2, 3, 4, 5, 6							
<Read/write request> 2: Write request							
1103							
Read/write request							
	1106	None (The write request issued in the teach mode is responded as soon as the PLC READY signal (Y1D) is turned OFF.)					
	Same as warning code 109						

Division of warning	Warning code	Warning name	Description	Action at occurrence of warning
Common	112	Illegal override value	A value outside the range from 1 to 300 is specified as an override value.	<ul style="list-style-type: none"> <li>Setting "0": Controlled to 100.</li> <li>"301" or larger setting: Controlled to 300.</li> </ul>
	113	Outside new torque value range	A value outside the range from 1 to 500 is specified as a new torque value.	Torque change is not carried out.
	114	Below bias speed	The command speed is smaller than the starting bias speed.	Operation is made at the bias speed at start.
	115	Illegal No. of read/write data	The No. of read/write data of positioning data No. 101 to 600 is outside the range from 1 to 100.	<ul style="list-style-type: none"> <li>The warning is for the target axis.</li> <li>Reading/writing is not made.</li> </ul>
	116	Parameter transmission failure	When the PLC READY signal [Y1D] turned from OFF to ON, parameter transmission to the servo amplifier failed.	The warning is for the target axis.
JOG	300	Speed change during deceleration	A speed change request is issued during deceleration and stop caused by turned OFF of the JOG start signal.	Speed change is not made.
	301	JOG speed limit value	The new speed value in JOG operation exceeds the JOG speed limit value.	<ul style="list-style-type: none"> <li>If the JOG speed limit value is exceeded, JOG operation continues at the JOG speed limit value.</li> <li>The "in speed limit flag" is turned ON while the JOG speed limit is active.</li> </ul>
Manual pulse generator	401	Outside manual pulse generator input magnification	The manual pulse generator 1 pulse input magnification is "0" or equal to or larger than "101."	<ul style="list-style-type: none"> <li>Input magnification <math>\geq 101</math>: 100</li> <li>Input magnification "0": 1</li> </ul>
	402	Manual pulse generator selection 0	The manual pulse generator enable flag is set when "manual pulse generator selection" in detail parameter 1 is set at "0."	Failure to start manual pulse generator operation

Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
1159	1209	1259	<Positioning operation speed override> 1 to 300	Set a value within the setting range.
1176	1226	1276	<New torque value> 1 to [torque limit setting value]	
24	174	324	<Torque limit setting> 1 to 500	
Refer to section "5.3 List of positioning data" for the command speed.			<Command speed, bias speed at start> 0 to 1000000 [pulse/s] 0 to 600000000 [mm/min, etc.]	Change the command speed and bias speed at start so that the command speed is equal to or larger than the bias speed at start.
Bias speed at start				
12, 13	162, 163	312, 313		
5102			<No. of read/write data> 1 to 100	Change the setting to within the setting range and issue a read/write request. (Refer to section 7.2)
—	—	—	—	Turn the PLC READY signal [Y1D] OFF, then ON again.
1158	1208	1258	<Speed change request> 1: Speed change request	Do not change the JOG speed during deceleration caused by turned OFF of the JOG start signal.
New speed value			<New speed value or JOG speed limit value> 0 to 1000000 [pulse/s] 0 to 600000000 [mm/min, etc.]	Change the setting to within the setting range.
1156	1206	1256		
1157	1207	1257		
JOG speed limit value				
48, 49	198, 199	348, 349		
1168	1218	1268	<Manual pulse generator 1 pulse input magnification> 1 to 100	Change the manual pulse generator 1 pulse input magnification to within the setting range.
1169	1219	1269		
Manual pulse generator enable flag			<Manual pulse generator enable flag> 0: Operation using the manual pulse generator is not enabled. 1: Operation using the manual pulse generator is enabled.	<ul style="list-style-type: none"> <li>• Change the manual pulse generator enable flag to prohibition.</li> <li>• Change the manual pulse generator selection setting to a value between 1 and 3.</li> </ul>
1167	1217	1267		
Manual pulse generator selection				
29	179	329	<Manual pulse generator selection> 0: Manual pulse generator operation ignored 1: Manual pulse generator connected to axis 1 is used. 2: Manual pulse generator connected to axis 2 is used. 3: Manual pulse generator connected to axis 3 is used.	

Division of warning	Warning code	Warning name	Description	Action at occurrence of warning
Positioning operation	500	Deceleration and stop speed change	A speed change request is issued during deceleration and stop.	Speed change is not carried out.
	501	Speed limit value over	The new speed value given during operation exceeds the speed limit value.	<ul style="list-style-type: none"> <li>• The speed is controlled to the "speed limit value."</li> <li>• The "in speed limit flag" is turned ON.</li> </ul>
	503	M code ON signal ON start	The M code ON signal is turned ON during execution of positioning data.	Execution of positioning data continues.
	505	No operation end setting	In the block start positioning operation, the setting at 50th point in the positioning start data indicates continuation.	Operation is terminated.
	506	FOR to NEXT nesting structure	There is a nested set of FOR and NEXT.	Operation continues.
	508	Speed/position changeover signal ON during acceleration	The changeover signal is turned ON during acceleration under speed/position changeover control.	
	509	Insufficient remaining distance	The deceleration distance for a speed change request is insufficient.	A speed change occurs at the nearest value. (However, the request is ignored if the operation pattern is continuous path control.)
	511	Invalid step start information	<p>"2: Restart" is specified for the step start information in the "in step wait" axis operation status.</p> <p>"1: Step continue" or "2: Restart" is set to the step start information in the axis operation status of "step error occurring", "error occurring", "waiting", "stopped", "servo has not been connected" or "in servo OFF".</p>	Step operation does not start.
	512	Illegal external start function	The "external start function selection" setting in detail parameter 2 exceeds the setting range.	Nothing occurs in response to the external start signal.
	513	Insufficient movement amount	There is no movement amount necessary for automatic deceleration.	Immediate stop after the positioning address is reached
514	Outside command speed range	The command speed exceeds the speed limit value.	<ul style="list-style-type: none"> <li>• The command speed is controlled to the "speed limit value."</li> <li>• The "in speed limit flag" is set.</li> </ul>	

Relevant buffer memory address			Setting range (Setting given in sequence program)	Remedy
Axis 1	Axis 2	Axis 3		
1158	1208	1258	<Speed change request> 1: Speed change request	Do not change the speed during deceleration or stoppage caused by a stop command or during automatic deceleration under position control.
New speed value			<New speed value, speed limit value> 1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	Change the new speed to a value within the range from 0 to the "speed limit value."
1156	1206	1256		
1157	1207	1257		
Speed limit value				
6, 7	156, 157	306, 307		
1153	1203	1253	<M code OFF request> 1: The M code ON signal is turned OFF.	Correct the ON/OFF timing of the "M code OFF request." (Refer to section 12.6.3)
Refer to section "5.3 List of positioning data."			<Operation pattern> 00: Positioning complete 01: Continuous positioning control 11: Continuous path control	Specify the end of operation at the 50th point. (Refer to CHAPTER 10)
—	—	—	—	Reduce the FOR to NEXT nesting structure to one. (Refer to section 10.3.9)
—	—	—	—	Do not turn ON the speed/position changeover signal during acceleration. (Refer to section 9.2.9)
—	—	—	—	Issue a speed change request at a position where the sufficient remaining distance is left.
1174	1224	1274	<Step start information> 0: End of reception of step start 1: Step continue 2: Restart	Do not specify "1: Step continue" in the "step waiting" axis status.  Do not set "1: Step continue" or "2: Restart" in the axis operation status of "step error occurring", "error occurring", "waiting", "stopped", "servo has not been connected" or "in servo OFF".
62	212	362	<External start function selection> 0, 1, 2	Change "external start function selection" in detail parameter 2 to within the setting range.
Refer to section "5.3 List of positioning data."			—	Change the positioning data to an address or movement amount sufficient for deceleration.
Refer to section "5.3 List of positioning data" for the command speed.			<Command speed, speed limit value> 1 to 1000000 [pulse/s] 1 to 600000000 [mm/min, etc.]	Change the command speed to within the setting range.
Speed limit value				
6, 7	156, 157	306, 307		

## 14.3.2 Warnings detected by MR-H-B (MR-H-BN)

Warning code	Servo amplifier LED display	Name	Definition	Occurrence factor
2092	92	Open battery cable warning	Absolute position detection system battery voltage is low.	1. Battery cable is open. 2. Battery voltage dropped to 2.8V or less.
2096	96	Zero point setting warning	1. In incremental system: Zero point return could not be made. 2. In absolute position detection system: Zero point setting could not be made.	Droop pulses remaining are greater than the in-position range setting.
2102	9F	Battery warning	Voltage of battery for absolute position detection system reduced.	Battery voltage dropped to 3.2V or less.
2140	E0	Excessive regenerative warning	There is a possibility that regenerative power may exceed permissible regenerative power of built-in regenerative brake resistor or regenerative brake option.	Regenerative power increased to 85% of permissible regenerative power of built-in regenerative brake resistor or regenerative brake option.
2141	E1	Overload warning	There is a possibility that overload 1 (error code: 2050) or overload 2 (error code: 2051) may occur.	Load increased to 85% or more of overload 1 (error code: 2050) or overload 2 (error code: 2051) occurrence level.
2144	E4	Parameter warning	Parameter is outside the setting range.	Parameter was set from AD75 to value outside setting range.
2146	E6	Servo emergency stop	EM1-EM2 open.	External emergency stop was made valid. (EM1-EM2 opened)
2147	E7	PC emergency stop	Servo system controller emergency stop was input.	1. EMG (pin 6) or EMG* (pin 16) in SSCNET cable is open. 2. Servo amplifier connector faulty 3. AD75 connector faulty 4. AD75 has WDT error.
2149	E9	Main circuit OFF warning	Servo ON (SON) signal was turned ON with main circuit power OFF.	—

	Relevant buffer memory address			Servo status at warning occurrence	Checking method	Remedy
	Axis 1	Axis 2	Axis 3			
	—	—	—	Servo ON continued	—	Repair cable or change battery.
	—	—	—		—	Change battery.
	120	270	420	Servo ON continued	—	Remove the cause of droop pulse occurrence.
	—	—	—	Servo ON continued	—	Change battery.
	—	—	—	Servo ON continued	Call the status display and check regenerative load ratio.	1. Reduce frequency of positioning. 2. Change regenerative brake option for the one with larger capacity. 3. Reduce load.
	—	—	—	Servo ON continued	Refer to overload 1 (error code: 2050) or overload 2 (error code: 2051) in section "14.2.2 Errors detected by MR-H-B (MR-H-BN)".	Refer to overload 1 (error code: 2050) or overload 2 (error code: 2051) in section "14.2.2 Errors detected by MR-H-B (MR-H-BN)".
	—	—	—	Servo ON continued	—	Set correctly.
	—	—	—	Servo OFF	—	Ensure safety and deactivate emergency stop.
	—	—	—	Servo OFF	SSCNET cable continuity check	Repair or change the cable.
	—	—	—		—	Change the servo amplifier.
	—	—	—		—	Change the AD75.
	—	—	—		—	AD75 may have a hardware fault. Please contact your local Mitsubishi representative.
	—	—	—	Servo OFF	—	Switch ON main circuit power.

14.3.3 Warnings detected by MR-J-B

Warning code	Servo amplifier LED display	Name	Definition	Occurrence factor
2092	92	Open battery cable warning	Absolute position detection system battery voltage is low.	1. Battery cable is open. 2. Battery voltage dropped to 2.8V or less.
2096	96	Zero point setting warning	1. In incremental system: Zero point return could not be made. 2. In absolute position detection system: Zero point setting could not be made.	Droop pulses remaining are greater than the in-position range setting.
2144	E4	Parameter warning	Parameter is outside the setting range.	Parameter was set from AD75 to value outside setting range.
2147	E7	PC emergency stop	Servo system controller emergency stop was input.	1. EMG (pin 6) or EMG* (pin 16) in SSCNET cable is open. 2. Servo amplifier connector faulty 3. AD75 connector faulty 4. AD75 has WDT error.



	Relevant buffer memory address			Servo status at warning occurrence	Checking method	Remedy
	Axis 1	Axis 2	Axis 3			
	—	—	—	Servo ON continued	—	Repair cable or change battery.
	—	—	—		—	Change battery.
	120	270	420	Servo ON continued	—	Remove the cause of droop pulse occurrence.
	—	—	—	Servo ON continued	—	Set correctly
	—	—	—	Servo OFF	SSCNET cable continuity check	Repair or change the cable.
	—	—	—		—	Change the servo amplifier.
	—	—	—		—	Change the AD75.
	—	—	—		—	AD75 may have a hardware fault. Please contact your local Mitsubishi representative.

## 14.3.4 Warnings detected by MR-J2-B

Warning code	Servo amplifier LED display	Name	Definition	Occurrence factor
2092	92	Open battery cable warning	Absolute position detection system battery voltage is low.	1. Battery cable is open. 2. Battery voltage dropped to 2.8V or less.
2096	96	Zero point setting warning	1. In incremental system: Zero point return could not be made. 2. In absolute position detection system: Zero point setting could not be made.	Droop pulses remaining are greater than the in-position range setting.
2140	E0	Excessive regenerative warning	There is a possibility that regenerative power may exceed permissible regenerative power of built-in regenerative brake resistor or regenerative brake option.	Regenerative power increased to 85% of permissible regenerative power of built-in regenerative brake resistor or regenerative brake option.
2141	E1	Overload warning	There is a possibility that overload 1 (error code: 2050) or overload 2 (error code: 2051) may occur.	Load increased to 85% or more of overload 1 (error code: 2050) or overload 2 (error code: 2051) occurrence level.
2143	E3	Absolute position counter warning	Absolute position encoder pulses faulty.	1. Noise entered the encoder. 2. Encoder faulty.
2144	E4	Parameter warning	Parameter is outside the setting range.	Parameter was set from AD75 to value outside setting range.
2146	E6	Servo emergency stop	EM1-SG open.	External emergency stop was made valid. (EM1-SG opened)
2147	E7	Controller emergency stop	Servo system controller emergency stop was input.	1. EMG (pin 6) or EMG* (pin 16) in SSCNET cable is open. 2. Servo amplifier connector faulty 3. AD75 connector faulty 4. AD75 has WDT error.
2149	E9	Main circuit OFF warning	Servo turned ON with main circuit power OFF.	Servo turned ON with main circuit power OFF.

	Relevant buffer memory address			Servo status at warning occurrence	Checking method	Remedy
	Axis 1	Axis 2	Axis 3			
	—	—	—	Servo ON continued	—	Repair cable or change battery.
	—	—	—		—	Change battery.
	120	270	420	Servo ON continued	—	Remove the cause of droop pulse occurrence.
	—	—	—	Servo ON continued	Call the status display and check regenerative load ratio.	1. Reduce frequency of positioning. 2. Change regenerative brake option for the one with larger capacity. 3. Reduce load.
	—	—	—	Servo ON continued	Refer to overload 1 (error code: 2050) or overload 2 (error code: 2051) in section "14.2.4 Errors detected by MR-J2-B".	Refer to overload 1 (error code: 2050) or overload 2 (error code: 2051) in section "14.2.4 Errors detected by MR-J2-B".
	—	—	—	Servo ON continued	—	Take noise suppression measures.
	—	—	—		—	Change the servomotor.
	Refer to section "5.2.9 Servo parameters for MR-J2-B".			Servo ON continued	—	Set correctly.
	123	273	423	Servo OFF	—	Ensure safety and deactivate emergency stop.
	—	—	—	Servo OFF	SSCNET cable continuity check	Repair or change the cable.
	—	—	—		—	Change the servo amplifier.
	—	—	—		—	Change the AD75.
	—	—	—		—	AD75 may have a hardware fault. Please contact your local Mitsubishi representative.
	—	—	—	Servo OFF	—	Switch ON main circuit power.

## 14.3.5 Warnings detected by MR-J2S-B

Warning code	Servo amplifier LED display	Name	Definition	Occurrence factor
2092	92	Open battery cable warning	Absolute position detection system battery voltage is low.	1. Battery cable is open. 2. Battery voltage dropped to 2.8V or less.
2096	96	Zero point setting warning	Zero point return could not be made to the accurate position.	1. Droop pulses remaining are greater than the in-position range setting. 2. Zero point return was executed during operation command. 3. Creep speed high.
2102	9F	Battery warning	Voltage of battery for absolute position detection system reduced.	Battery voltage dropped to 3.2V or less. (Detected with the servo amplifier)
2140	E0	Excessive regenerative warning	There is a possibility that regenerative power may exceed permissible regenerative power of built-in regenerative brake resistor or regenerative brake option.	Regenerative power increased to 85% of permissible regenerative power of built-in regenerative brake resistor or regenerative brake option.
2141	E1	Overload warning	There is a possibility that overload 1 (error code: 2050) or overload 2 (error code: 2051) may occur.	Load increased to 85% or more of overload 1 (error code: 2050) or overload 2 (error code: 2051) occurrence level.
2143	E3	Absolute position counter warning	Absolute position encoder pulses faulty.	1. Noise entered the encoder. 2. Encoder faulty.
2144	E4	Parameter warning	Parameter is outside the setting range.	Parameter was set from AD75 to value outside setting range.
2146	E6	Servo forced stop	EM1-SG open.	Forced stop was made valid. (EM1-SG opened)
2147	E7	Controller emergency stop	Servo system controller emergency stop was input.	1. EMG (pin 6) or EMG* (pin 16) in SSCNET cable is open. 2. Servo amplifier connector faulty 3. AD75 connector faulty 4. AD75 has WDT error.
2149	E9	Main circuit OFF warning	Servo turned ON with main circuit power OFF.	Servo turned ON with main circuit power OFF.

	Relevant buffer memory address			Servo status at warning occurrence	Checking method	Remedy
	Axis 1	Axis 2	Axis 3			
	—	—	—	Servo ON continued	—	Repair cable or change battery.
	—	—	—		—	Change battery.
	120	270	420	Servo ON continued	—	Remove the cause of droop pulse occurrence.
	—	—	—		—	—
	76 77	226 227	476 477		—	Reduce creep speed.
	—	—	—	Servo ON continued	—	Change battery.
	—	—	—	Servo ON continued	Call the status display and check regenerative load ratio.	1. Reduce frequency of positioning. 2. Change regenerative brake option for the one with larger capacity. 3. Reduce load.
	—	—	—	Servo ON continued	Refer to error code: 2050, 2051 (Section 14.2.4).	Refer to error code: 2050, 2051 (Section 14.2.4).
	—	—	—	Servo ON continued	—	Take noise suppression measures.
	—	—	—		—	Change the servomotor.
	Refer to section "5.2.10 Servo parameters for MR-J2S-B".			Servo ON continued	—	Set correctly.
	123	273	423	Servo OFF	—	Ensure safety and deactivate emergency stop.
	—	—	—	Servo OFF	SSCNET cable continuity check	Repair or change the cable.
	—	—	—		—	Change the servo amplifier.
	—	—	—		—	Change the AD75.
	—	—	—		—	AD75 may have a hardware fault. Please contact your local Mitsubishi representative.
	—	—	—	Servo OFF	—	Switch ON main circuit power.

## 14.3.6 Warnings detected by MR-J2-03B5

Warning code	Servo amplifier LED display	Name	Definition	Occurrence factor
2141	E1	Overload warning	There is a possibility that overload 1 (error code: 2050) or overload 2 (error code: 2051) may occur.	Load increased to 85% or more of overload 1 (error code: 2050) or overload 2 (error code: 2051) occurrence level.
2144	E4	Parameter warning	Parameter is outside the setting range.	Parameter was set from AD75 to value outside setting range.
2146	E6	Servo forced stop	EM1-P24G open.	Forced stop was made valid. (EM1-P24G opened)
2147	E7	Controller emergency stop	Servo system controller emergency stop was input.	1. EMG (pin 6) or EMG* (pin 16) in SSCNET cable is open.
				2. Servo amplifier connector faulty
				3. AD75 connector faulty
				4. AD75 has WDT error.
2149	E9	Main circuit OFF warning	Servo turned ON with main circuit power OFF.	Servo turned ON with main circuit power OFF.

	Relevant buffer memory address			Servo status at warning occurrence	Checking method	Remedy
	Axis 1	Axis 2	Axis 3			
	—	—	—	Servo ON continued	Refer to overload 1 (error code: 2050) or overload 2 (error code: 2051) in section "14.2.6 Errors detected by MR-J2-03B5".	Refer to overload 1 (error code: 2050) or overload 2 (error code: 2051) in section "14.2.6 Errors detected by MR-J2-03B5".
	Refer to section "5.2.11 Servo parameters for MR-J2-03B5".			Servo ON continued	—	Set correctly.
	123	273	423	Servo OFF	—	Ensure safety and deactivate emergency stop.
	—	—	—	Servo OFF	SSCNET cable continuity check	Repair or change the cable.
	—	—	—		—	Change the servo amplifier.
	—	—	—		—	Change the AD75.
	—	—	—		—	AD75 may have a hardware fault. Please contact your local Mitsubishi representative.
	—	—	—	Servo OFF	—	Switch ON main circuit power.

#### 14.4 Start during error history

If an error occurs when starting, all the data in the buffer memory start history area (address: 462 to 541) is copied to the start during error history area (addresses: 543 to 622).

The data stored in the start during error history area is lost when the power is turned OFF.

(When the power is turned ON, a "0" is stored in the start during error history.)

Up to 16 start history items from turning the power ON can be stored in the start during error history area.

(The previous history items are cleared in order from No. 1 when the No. of history items is exceeded.)

The start during error history can be monitored with a peripheral device.

Refer to the AD75 Software Package Operating Manual for details on operation of the peripheral device.

< Example of display on the peripheral device >

No.	Axis	Start	Type	Time	Judgment
1	1	External	100	21:34:56.7	OK
2	2	PC	Manual pulse generator	21:43:12.3	OK
3	2	PC	JOG	21:43:34.4	201
4	1	External	Restart 100	21:43:54.8	OK
5	3	Peripheral	101	10:18:03.7	201



---


# APPENDICES

---

Appendix 1 External dimension drawing .....	Appendix- 2
Appendix 2 Format sheets .....	Appendix- 4
Appendix 2.1 Positioning module operation chart.....	Appendix- 4
Appendix 2.2 Parameter setting value entry table .....	Appendix- 6
Appendix 2.3 Positioning data setting value entry table [data No. to ].....	Appendix- 26
Appendix 3 Positioning data (No. 1 to 100), List of buffer memory addresses .....	Appendix- 27
Appendix 4 Comparisons with old versions of A1SD75M1 / A1SD75M2 / A1SD75M3, and AD75M1 / AD75M2 / AD75M3 models.....	Appendix- 30
Appendix 5 MELSEC Explanation of positioning terms .....	Appendix- 32
Appendix 6 Positioning control troubleshooting .....	Appendix- 48
Appendix 7 List of buffer memory addresses .....	Appendix- 54


Appendix 1 External dimension drawing

(1) AD75M1/AD75M2/AD75M3

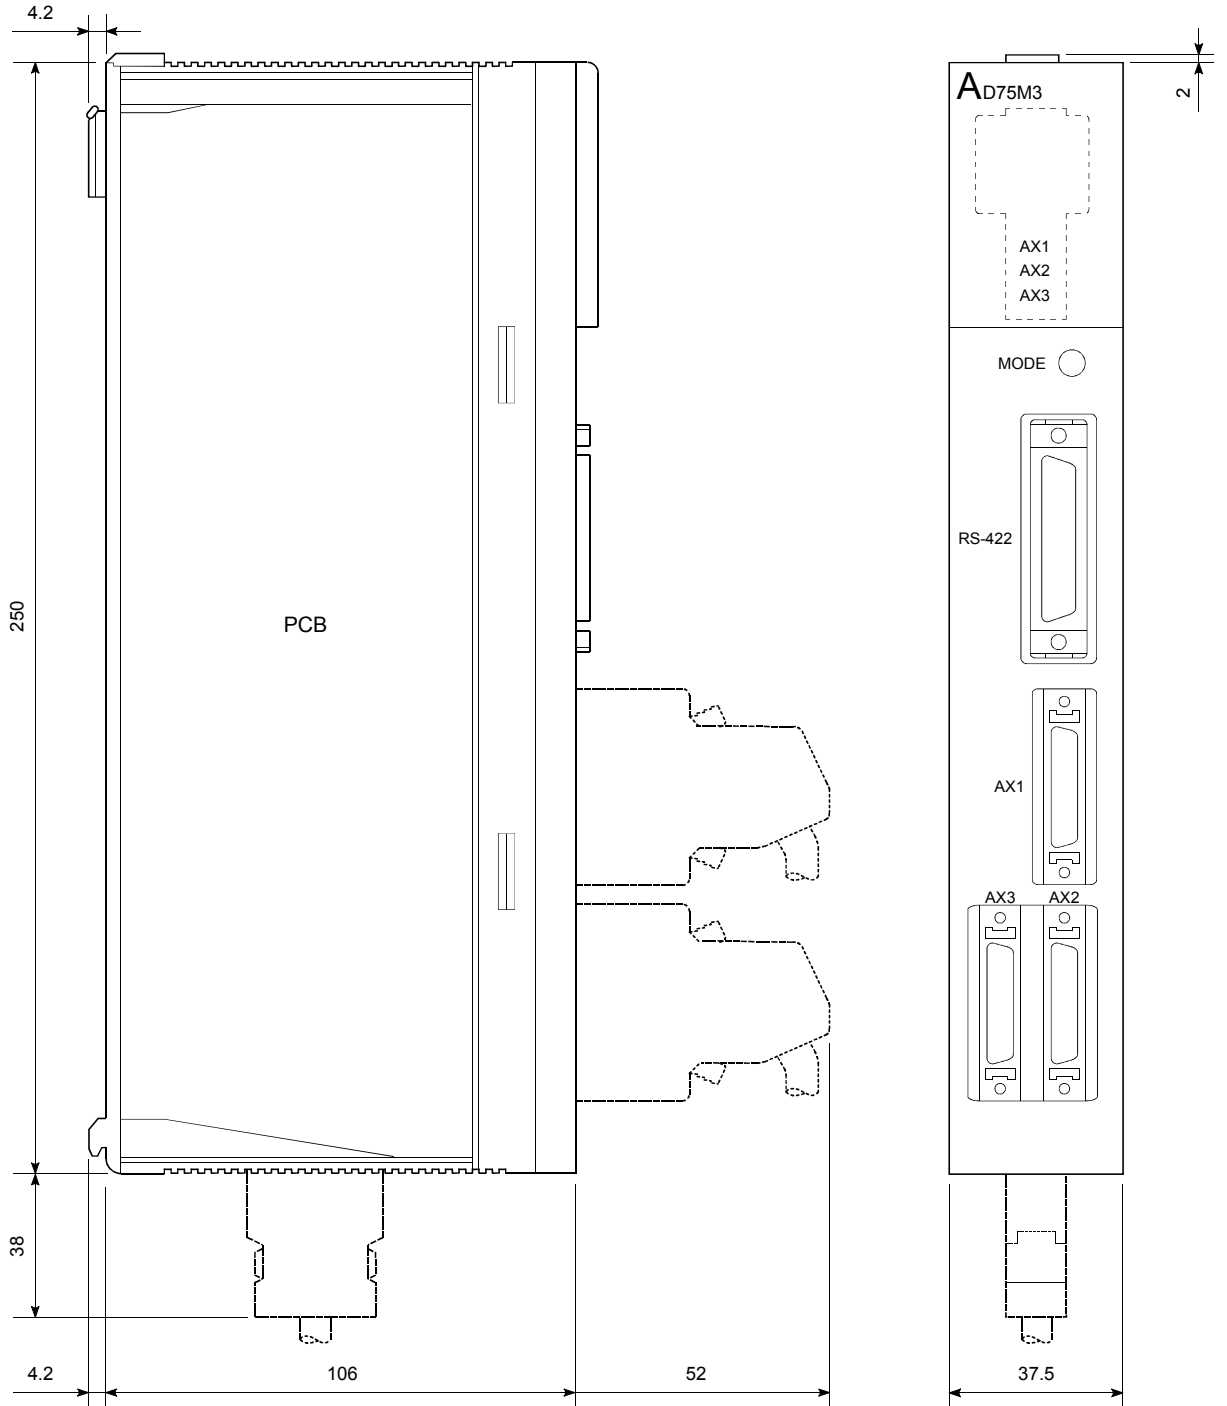

(Unit: mm)

(2) A1SD75M1/A1SD75M2/A1SD75M3

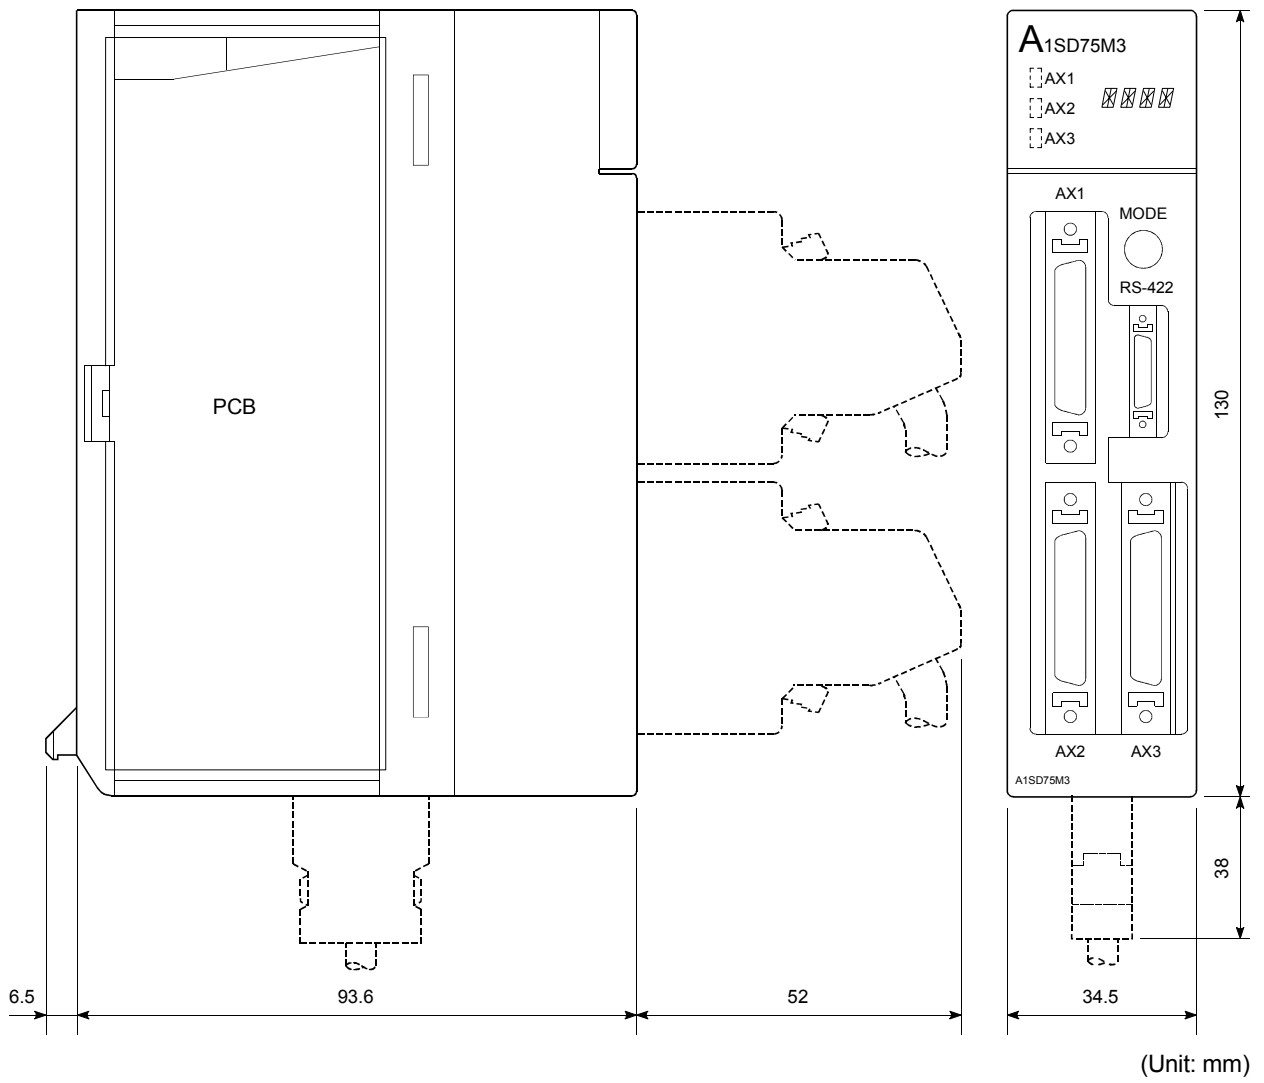





Appendix 2.2 Parameter setting value entry table

[1] Parameters

Item		Setting range			
		mm	inch	degree	pulse
Basic parameters 1	Pr.1 Unit setting	0	1	2	3
	Pr.2 No. of pulses per rotation (Ap)	1 to 65535 pulse			
	Pr.3 Movement amount per rotation (Al)	1 to 65535 × 10 <sup>-1</sup> μm	1 to 65535 × 10 <sup>-5</sup> inch	1 to 65535 × 10 <sup>-5</sup> degree	1 to 65535 pulse
	Pr.4 Unit magnification (Am)	1: 1-fold, 10: 10-fold, 100: 100-fold, 1000: 1000-fold			
Basic parameters 2	Pr.7 Speed limit value	1 to 600000000 × 10 <sup>-2</sup> mm/min	1 to 600000000 × 10 <sup>-3</sup> inch/min	1 to 600000000 × 10 <sup>-3</sup> degree/min	1 to 600000000 pulse
	Pr.8 Acceleration time 0	1 to 65535ms/1 to 8388608ms			
	Pr.9 Deceleration time 0				
	Pr.10 Bias speed at start	0 to 600000000 × 10 <sup>-2</sup> mm/min	0 to 600000000 × 10 <sup>-3</sup> inch/min	0 to 600000000 × 10 <sup>-3</sup> degree/min	0 to 1000000 pulse/s
Detailed parameters 1	Pr.12 Backlash compensation amount	1 to 65535 × 10 <sup>-1</sup> μm	1 to 65535 × 10 <sup>-5</sup> inch	1 to 65535 × 10 <sup>-5</sup> degree	1 to 65535 pulse
	Pr.13 Software stroke limit upper limit value	-2147483648 to 2147483647	-2147483648 to 2147483647	0 to 35999999 × 10 <sup>-5</sup> degree	-2147483648 to 2147483647 pulse
	Pr.14 Software stroke limit lower limit value	× 10 <sup>-1</sup> μm	× 10 <sup>-5</sup> inch		
	Pr.15 Software stroke limit selection	0: Apply software stroke limit on current feed value 1: Apply software stroke limit on machine feed value			
	Pr.16 Software stroke limit valid/invalid setting	0: Software stroke limit invalid during JOG operation and manual pulse generator operation 1: Software stroke limit valid during JOG operation and manual pulse generator operation			
	Pr.17 Command in-position width	1 to 32767000 × 10 <sup>-1</sup> μm	1 to 32767000 × 10 <sup>-5</sup> inch	1 to 32767000 × 10 <sup>-5</sup> degree	1 to 32767 pulse
	Pr.18 Torque limit setting value	1 to 500%			
	Pr.19 M code ON signal output timing	0: WITH mode, 1: AFTER mode			
	Pr.20 Speed changeover mode	0: Standard speed changeover mode 1: Front-loading speed changeover mode			
	Pr.21 Interpolation speed designation method	0: Composite speed, 1: Reference axis speed			
Pr.22 Current feed value during speed control	0: Do not update current feed value, 1: Update current feed value 2: Clear current feed value to zero				

	Initial value	Axis 1	Axis 2	Axis 3	Remarks
	3				
	20000				
	20000				
	1				
	200000				
	1000				
	1000				
	0				
	0				
	2147483647				
	-2147483648				
	0				
	0				
	100				
	300				
	0				
	0				
	0				
	0				

Item		Setting range			
		mm	inch	degree	pulse
Detailed parameters 1	Pr.23 Manual pulse generator selection	0: Ignore manual pulse generator operation 1: Use manual pulse generator 1 (control using manual pulse generator connected to axis 1) 2: Use manual pulse generator 2 (control using manual pulse generator connected to axis 2) 3: Use manual pulse generator 3 (control using manual pulse generator connected to axis 3)			
	Pr.25 Size selection for acceleration/ deceleration time	0: 1-word type (1 to 65535ms), 1: 2-word type (1 to 8388608ms)			
Detailed parameters 2	Pr.26 Acceleration time 1	0 to 65535ms/1 to 8388608ms			
	Pr.27 Acceleration time 2				
	Pr.28 Acceleration time 3				
	Pr.29 Deceleration time 1				
	Pr.30 Deceleration time 2				
	Pr.31 Deceleration time 3				
	Pr.32 JOG speed limit value	1 to 600000000 × 10 <sup>-2</sup> mm/min	1 to 600000000 × 10 <sup>-3</sup> inch/min	1 to 600000000 × 10 <sup>-3</sup> degree/min	1 to 600000000 pulse
	Pr.33 JOG operation acceleration time selection	0 to 3			
	Pr.34 JOG operation deceleration time selection				
	Pr.35 Acceleration/deceleration process selection	0: Automatic trapezoidal acceleration/deceleration process 1: S-curve acceleration/deceleration process			
	Pr.36 S-curve ratio	1 to 100%			
	Pr.37 Sudden stop deceleration time	1 to 65535ms/1 to 8388608ms			
	Pr.38 Stop group 1 sudden stop selection	0: Normal deceleration stop, 1: Sudden stop			
	Pr.39 Stop group 2 sudden stop selection				
	Pr.40 Stop group 3 sudden stop selection				
Pr.41 Positioning complete signal output time	0 to 65535ms				
Pr.42 Allowable circular interpolation error width	1 to 100000 × 10 <sup>-1</sup> μm	1 to 100000 × 10 <sup>-5</sup> inch	1 to 100000 × 10 <sup>-5</sup> degree	1 to 100000 pulse	
Pr.43 External start function selection	0: External speed change request, 1: External speed change request, 2: Skip request				
Pr.44 Near pass mode selection for path control	0: Positioning address pass mode, 1: Near pass mode				
Pr.150 Setting for the restart allowable range when servo OFF to ON	0 : Restart not allowed when servo switches from OFF to ON 1 to 16384: Restart allowable range (pulse)				



	Initial value	Axis 1	Axis 2	Axis 3	Remarks
	Axis 1: 1, Axis 2: 2, Axis 3: 3				
	0				
	1000				
	1000				
	1000				
	1000				
	1000				
	1000				
	20000				
	0				
	0				
	0				
	100				
	1000				
	0				
	0				
	0				
	300				
	100				
	0				
	0				
	0				
	0				

Item		Setting range			
		mm	inch	degree	pulse
Zero point return basic parameters	Pr.45 Zero point return method	0: Near-point dog method, 4: Count method 1) 5: Count method 2), 6: Data setting method 7: Near-point dog method 2), 8: Count method 3)			
	Pr.46 Zero point return direction	0: Positive direction (address increment direction) 1: Negative direction (address decrement direction)			
	Pr.47 Zero point address	-2147483648 to 2147483647 × 10 <sup>-1</sup> μm	-2147483648 to 2147483647 × 10 <sup>-5</sup> inch	0 to 35999999 × 10 <sup>-5</sup> degree	-2147483648 to 2147483647 pulse/s
	Pr.48 Zero point return speed	1 to 600000000 × 10 <sup>-2</sup> mm/min	1 to 600000000 × 10 <sup>-3</sup> inch/min	1 to 600000000 × 10 <sup>-3</sup> degree/min	1 to 1000000 pulse/s
	Pr.49 Creep speed				
	Pr.50 Zero point return retry	0: Do not retry zero point return with limit switch 1: Retry zero point return with limit switch			
Zero point return detailed parameters	Pr.52 Setting for the movement amount after near-point dog ON	0 to 2147483647 × 10 <sup>-1</sup> μm	0 to 2147483647 × 10 <sup>-5</sup> inch	0 to 2147483647 × 10 <sup>-5</sup> degree	0 to 2147483647 pulse
	Pr.53 Zero point return acceleration time selection	0 to 3			
	Pr.54 Zero point return deceleration time selection				
	Pr.55 Zero point shift amount	-2147483648 to 2147483647 × 10 <sup>-1</sup> μm	-2147483648 to 2147483647 × 10 <sup>-5</sup> inch	0 to 35999999 × 10 <sup>-5</sup> degree	-2147483648 to 2147483647 pulse/s
	Pr.56 Zero point return torque limit value	0 to 300%			
	Pr.57 Speed designation during zero point shift	0: Zero point return speed, 1: Creep speed			
	Pr.58 Dwell time during zero point return retry	0 to 65535ms			
	Pr.59 Absolute position restoration selection	0: Standard mode 1: Infinite length mode			

	Initial value	Axis 1	Axis 2	Axis 3	Remarks
	0				
	0				
	0				
	1				
	1				
	0				
	0				
	0				
	0				
	0				
	300				
	0				
	0				
	0				

[2] Servo parameters

(1) Servo parameters for MR-H-B (MR-H-BN)

Item		Setting range	
Servo basic parameters	Pr.100 Servo series	0: MR-H-B (MR-H-BN), 1: MR-J-B, 2: MR-J2-B, 1E: Other	
	Pr.101 Amplifier setting	0: Absolute position detection invalid 1: Absolute position detection valid	
	Pr.102 Regenerative brake resistor	Regenerative brake option	00: External regenerative brake option not used, 01: FR-RC, FR-BU, 02: MR-RB013, 03: MR-RB033, 05: MR-RB32, 06: MR-RB34, 07: MR-RB54, 08: MR-RB30, 09: MR-RB50, 0B: MR-RB31, 0C: MR-RB51, 0E: Standard + fan
		External dynamic brake selection	0: External dynamic brake invalid, 1: External dynamic brake valid
	Pr.103 Motor type	0000 <sub>H</sub> : HA-SH Standard, 0001 <sub>H</sub> : HA-LH Low inertia, 0002 <sub>H</sub> : HA-UH Flat, 0003 <sub>H</sub> : HA-FH/HA-FF, 0005 <sub>H</sub> : HA-MH, 0007 <sub>H</sub> : HC-SF, 0008 <sub>H</sub> : HC-RF, 0009 <sub>H</sub> : HC-UF, 000A <sub>H</sub> : HC-FF, 000B <sub>H</sub> : HC-MF, 0080 <sub>H</sub> : Automatic setting	
	Pr.104 Motor capacity	0000 <sub>H</sub> to 9999 <sub>H</sub>	
	Pr.105 Motor speed	1 to 3	
	Pr.106 Feedback pulse	0: 16384pulse, 1: 8192pulse	
	Pr.107 Rotation direction	0: Forward run with positioning address increment 1: Reverse run with positioning address increment	
	Pr.108 Auto tuning	0: Auto tuning selected for use of interpolation axis control in position control, 1: Auto tuning for ordinary operation, 2: Invalid	
Pr.109 Servo response setting	1: Normal (low response), 2: Normal (low/middle response), 3: Normal (middle response), 4: Normal (middle/high response), 5: Normal (high response), 8: Large friction (low response), 9: Large friction (low/middle response), A: Large friction (middle response), B: Large friction (middle/high response), C: Large friction (high response)		
Servo adjustment parameters	Pr.112 Load inertia ratio	0.0 to 100.0%	
	Pr.113 Position loop gain 1	4 to 1000rad/s	
	Pr.114 Speed loop gain 1	20 to 5000rad/s	
	Pr.115 Position loop gain 2	1 to 500rad/s	
	Pr.116 Speed loop gain 2	20 to 8000rad/s	
	Pr.117 Speed integral compensation	1 to 1000 ms	
	Pr.118 Notch filter selection	0: Not used, 1: 1125, 2: 563, 3: 375, 4: 282, 5: 225, 6: 1881, 7: 161	
	Pr.119 Feed forward gain	0 to 100%	
	Pr.120 In-position range	0 to 50000pulse	
	Pr.121 Solenoid brake output	0 to 1000ms	
	Pr.122 Monitor output mode selection	0: Servomotor speed, 1: Torque, 2: Servomotor speed (+), 3: Torque (+), 4: Current command, 5: Command speed, 6: Droop pulse 1/1, 7: Droop pulse 1/4, 8: Droop pulse 1/16, 9: Droop pulse 1/32, A: Droop pulse 1/64	
	Pr.123 Option function 1	Carrier frequency selection	0: 2.25KHz (Standard), 3: 9.0KHz (Low noise)
		Serial encoder cable selection	0: 2-wire, 1: 4-wire (Supports long distance cables)
	Pr.124 Option function 2	Motor-less operation selection	0: Invalid, 1: Valid
Solenoid brake interlock output selection		0: Independent of motor speed (Output under specific condition) 1: Output under specific condition at motor speed of zero speed or less	

	Initial value	Axis 1	Axis 2	Axis 3	Remarks
	0				
	0				
	0				
	0				
	0000H				
	0				
	1				
	0				
	0				
	1				
	1				
	30				
	70				
	1200				
	25				
	600				
	20				
	0				
	0				
	100				
	100				
	1				
	0				
	0				
	0				
	0				

Item		Setting range		
Servo extension parameters	Pr.127	Monitor output 1 offset	-9999 to 9999mV	
	Pr.128	Monitor output 2 offset	-9999 to 9999mV	
	Pr.129	Pre-alarm data selection	Data selection 1	0: Servomotor speed, 1: Torque, 2: Servomotor speed (+), 3: Torque (+), 4: Current command, 5: Command speed, 6: Droop pulse 1/1, 7: Droop pulse 1/4, 8: Droop pulse 1/16, 9: Droop pulse 1/32, A: Droop pulse 1/64
			Data selection 2	
			Pre-alarm data sampling time selection	0: 1.77ms, 1: 3.55ms, 2: 7.11ms, 3: 14.2ms, 4: 28.4ms
	Pr.130	Zero speed	0 to 10000r/min	
	Pr.131	Error excessive alarm level	1 to 1000kpulse	
	Pr.132	Option function 5	PI-PID control switching	0: PI control is always valid 1: Switched to PID control when value set to "PI-PID switching position droop" is reached or exceeded during position control 2: PID control is always valid
	Pr.134	PI-PID switching position droop	0 to 50000pulse	
	Pr.136	Speed differential compensation	0 to 1000	

	Initial value	Axis 1	Axis 2	Axis 3	Remarks
	0				
	0				
	1				
	0				
	0				
	50				
	80				
	0				
	0				
	980				

(2) Servo parameters for MR-J-B

Item		Setting range	
Servo basic parameters	Pr.100 Servo series	0: MR-H-B (MR-H-BN), 1: MR-J-B, 2: MR-J2-B, 1E: Other	
	Pr.101 Amplifier setting	0: Absolute position detection invalid 1: Absolute position detection valid	
	Pr.102 Regenerative brake resistor	Regenerative brake option	00: External regenerative brake option not used, 02: MR-RB013, 03: MR-RB033, 04: MR-RB064 × 2, 05: MR-RB32, 06: MR-RB34, 07: MR-RB54, 0F: MR-RB064
		External dynamic brake selection	0: External dynamic brake invalid 1: External dynamic brake valid
	Pr.103 Motor type	0000H: HA-SH Standard, 0003H: HA-FH, 0005H: HA-MH	
	Pr.104 Motor capacity	0000H to 9999H	
	Pr.105 Motor speed	1 to 3	
	Pr.106 Feedback pulse	0: 16384pulse, 1: 8192pulse	
	Pr.107 Rotation direction	0: Forward run with positioning address increment 1: Reverse run with positioning address increment	
	Pr.108 Auto tuning	0: Auto tuning selected for use of interpolation axis control in position control, 1: Auto tuning for ordinary operation, 2: Invalid	
Pr.109 Servo response setting	1: Normal (low response), 2: Normal (low/middle response), 3: Normal (middle response), 4: Normal (middle/high response), 5: Normal (high response)		
Servo adjustment parameters	Pr.112 Load inertia ratio	0.0 to 100.0%	
	Pr.113 Position loop gain 1	4 to 1000rad/s	
	Pr.114 Speed loop gain 1	20 to 5000rad/s	
	Pr.115 Position loop gain 2	1 to 500rad/s	
	Pr.116 Speed loop gain 2	20 to 8000rad/s	
	Pr.117 Speed integral compensation	1 to 1000 ms	
	Pr.118 Notch filter selection	0: Not used, 1: 1125, 2: 563, 3: 375, 4: 282, 5: 225, 6: 1881, 7: 161	
	Pr.119 Feed forward gain	0 to 100%	
	Pr.120 In-position range	0 to 50000pulse	
	Pr.122 Monitor output mode selection	0: Servomotor speed, 1: Torque, 2: Servomotor speed (+), 3: Torque (+), 4: Current command, 5: Command speed, 6: Droop pulse 1/1, 7: Droop pulse 1/4, 8: Droop pulse 1/16, 9: Droop pulse 1/32	
Pr.123 Option function 1	Carrier frequency selection	0: 2.25KHz (Standard), 3: 9.0KHz (Low noise)	
	Serial encoder cable selection	0: 2-wire, 1: 4-wire (Supports long distance cables)	
Pr.124 Option function 2	Motor-less operation selection	0: Invalid, 1: Valid	
Servo extension parameters	Pr.127 Monitor output 1 offset	-9999 to 9999mV	
	Pr.130 Zero speed	0 to 10000r/min	
	Pr.131 Error excessive alarm level	1 to 1000kpulse	
	Pr.136 Speed differential compensation	0 to 1000	



	Initial value	Axis 1	Axis 2	Axis 3	Remarks
	0				
	0				
	0				
	0				
	0000H				
	0				
	1				
	0				
	0				
	1				
	1				
	30				
	70				
	1200				
	25				
	600				
	20				
	0				
	0				
	100				
	1				
	0				
	0				
	0				
	0				
	50				
	80				
	980				

(3) Servo parameters for MR-J2-B

Item		Setting range	
Servo basic parameters	Pr.100	Servo series 0: MR-H-B (MR-H-BN), 1: MR-J-B, 2: MR-J2-B, 1E: Other	
	Pr.101	Amplifier setting 0: Absolute position detection invalid, 1: Absolute position detection valid	
	Pr.102	Regenerative brake resistor	00: External regenerative brake option not used, 05: MR-RB32, 08: MR-RB30, 09: MR-RB50, 10: MR-RB032, 11: MR-RB12
		External dynamic brake selection	0: External dynamic brake invalid, 1: External dynamic brake valid
	Pr.103	Motor type 0080 <sub>H</sub> : Automatic setting, 00FF <sub>H</sub> : Special motor	
	Pr.104	Motor capacity 0000 <sub>H</sub> to 9999 <sub>H</sub>	
	Pr.107	Rotation direction 0: Forward run with positioning address increment 1: Reverse run with positioning address increment	
	Pr.108	Auto tuning 0: Auto tuning selected for use of interpolation axis control in position control, 1: Auto tuning for ordinary operation, 2: Invalid	
	Pr.109	Servo response setting 1: Normal (low response), 2: Normal (low/middle response), 3: Normal (middle response), 4: Normal (middle/high response), 5: Normal (high response), 8: Large friction (low response), 9: Large friction (low/middle response), A: Large friction (middle response), B: Large friction (middle/high response), C: Large friction (high response)	
Servo adjustment parameters	Pr.112	Load inertia ratio 0.0 to 100.0%	
	Pr.113	Position loop gain 1 4 to 1000rad/s	
	Pr.114	Speed loop gain 1 20 to 5000rad/s	
	Pr.115	Position loop gain 2 1 to 500rad/s	
	Pr.116	Speed loop gain 2 20 to 8000rad/s	
	Pr.117	Speed integral compensation 1 to 1000 ms	
	Pr.118	Notch filter selection 0: Not used, 1: 1125, 2: 563, 3: 375, 4: 282, 5: 225, 6:1881, 7: 161	
	Pr.119	Feed forward gain 0 to 100%	
	Pr.120	In-position range 0 to 50000pulse	
	Pr.121	Solenoid brake output 0 to 1000ms	
	Pr.122	Monitor output mode selection 0: Servomotor speed, 1: Torque, 2: Servomotor speed (+), 3: Torque (+), 4: Current command, 5: Command speed, 6: Droop pulse 1/1, 7: Droop pulse 1/16, 8: Droop pulse 1/64, 9: Droop pulse 1/256, A: Droop pulse 1/1024	
	Pr.123	Option function 1	Amplifier EMG selection 0: Valid, 1: Invalid
Serial encoder cable selection 0: 2-wire, 1: 4-wire (Supports long distance cables)			
Pr.124	Option function 2	Slight vibration suppression function selection 0: Invalid, 1: Valid	
		Motor-less operation selection 0: Invalid, 1: Valid	
Servo extension parameters	Pr.127	Monitor output 1 offset -999 to 999mV	
	Pr.128	Monitor output 2 offset -999 to 999mV	
	Pr.130	Zero speed 0 to 10000r/min	
	Pr.131	Error excessive alarm level 1 to 1000kpulse	
	Pr.132	Option function 5 PI-PID control switching 0: PI control is always valid 1: Switched to PID control when value set to "PI-PID switching position droop" is reached or exceeded during position control 2: PID control is always valid	
	Pr.134	PI-PID switching position droop 0 to 50000pulse	
	Pr.136	Speed differential compensation 0 to 1000	

Initial value	Axis 1	Axis 2	Axis 3	Remarks
0				
0				
0				
0				
0000H				
0				
0				
1				
1				
30				
70				
1200				
25				
600				
20				
0				
0				
100				
100				
1				
0				
0				
0				
0				
0				
0				
50				
80				
0				
0				
980				

(4) Servo parameters for MR-J2S-B

Item		Setting range	
Servo basic parameters	Pr.100 Servo series	0: MR-H-B (MR-H-BN), 1: MR-J-B, 2: MR-J2-B, 1E: Other	
	Pr.101 Amplifier setting	0: Absolute position detection invalid 1: Absolute position detection valid	
	Pr.102 Regenerative brake resistor	Regenerative brake option	00: External regenerative brake option not used, 05: MR-RB32, 08: MR-RB30, 09: MR-RB50, 10: MR-RB032, 11: MR-RB12
		External dynamic brake selection	0: External dynamic brake invalid, 1: External dynamic brake valid
	Pr.103 Motor type	0080H: Automatic setting	
	Pr.104 Motor capacity	0000H to 9999H	
	Pr.106 Feedback pulse	0: 16384pulse, 1: 8192pulse	
	Pr.107 Rotation direction	0: Forward run with positioning address increment 1: Reverse run with positioning address increment	
	Pr.108 Auto tuning	0: Interpolation mode, 1: Auto tuning mode 1, 2: Manual mode 2, 3: Auto tuning mode 2, 4: Manual mode 1	
Pr.109 Servo response setting	1: 15Hz, 2: 20Hz, 3: 25Hz, 4: 30Hz, 5: 35Hz, 6: 45Hz, 7: 55Hz, 8: 70Hz, 9: 85Hz, A: 105Hz, B: 130Hz, C: 160Hz, D: 200Hz, E: 240Hz, F: 300Hz		
Servo adjustment parameters	Pr.112 Load inertia ratio	0.0 to 300.0%	
	Pr.113 Position loop gain 1	4 to 2000rad/s	
	Pr.114 Speed loop gain 1	20 to 8000rad/s	
	Pr.115 Position loop gain 2	1 to 1000rad/s	
	Pr.116 Speed loop gain 2	20 to 20000rad/s	
	Pr.117 Speed integral compensation	1 to 1000 ms	
	Pr.118 Machine resonance suppression filter 1	Notch frequency	00: Invalid, 01: 4500, 02: 2250, 03: 1500, 04: 1125, 05: 900, 06: 750, 07: 642.9, 08: 562.5, 09: 500, 0A: 450, 0B: 409.1, 0C: 375, 0D: 346.2, 0E: 321.4, 0F: 300, 10: 281.3, 11: 264.7, 12: 250, 13: 236.8, 14: 225, 15: 214.3, 16: 204.5, 17: 195.7, 18: 187.5, 19: 180, 1A: 173.1, 1B: 166.7, 1C: 160.1, 1D: 155.2, 1E: 150, 1F: 145.2
		Notch depth	0: -40dB, 1: -14dB, 2: -8dB, 3 -4dB
	Pr.119 Feed forward gain	0 to 100%	
	Pr.120 In-position range	0 to 50000	
	Pr.121 Solenoid brake output	0 to 1000ms	
	Pr.122 Monitor output mode selection	0: Servomotor speed ( $\pm 8V$ /max. speed), 1: Torque ( $\pm 8V$ /max. torque), 2: Servomotor speed (+8V/max. speed), 3: Torque (+8V/max. torque), 4: Current command ( $\pm 8V$ /max. current command), 5: Command speed ( $\pm 8V$ /max. speed), 6: Droop pulse ( $\pm 10V$ /128 pulses), 7: Droop pulse ( $\pm 10V$ /2048 pulses), 8: Droop pulse ( $\pm 10V$ /8192 pulses), 9: Droop pulse ( $\pm 10V$ /32768 pulses), A: Droop pulse ( $\pm 10V$ /131072 pulses), B: Bus voltage	
	Pr.123 Option function 1	Amplifier EMG selection	0: Valid, 1: Invalid
		Serial encoder cable selection	0: 2-wire, 1: 4-wire (Supports long distance cables)
Pr.124 Option function 2	Slight vibration suppression function selection	0: Invalid, 1: Valid	
	Motor-less operation selection	0: Invalid, 1: Valid	

	Initial value	Axis 1	Axis 2	Axis 3	Remarks
	0				
	0				
	0				
	0				
	0000H				
	0				
	0				
	0				
	1				
	1				
	30				
	70				
	1200				
	25				
	600				
	20				
	0				
	0				
	0				
	100				
	100				
	1				
	0				
	0				
	0				
	0				

Item		Setting range	
Servo adjustment parameters	Low pass filter/adaptive vibration suppression control	Low pass filter selection 0: Valid (Automatic adjustment), 1: Invalid	
		Adaptive vibration suppression control selection 0: Invalid, 1: Valid 2: Hold	
		Adaptive vibration suppression control sensitivity 0: Normal, 1: Large sensitivity	
Servo extension parameters	Pr.127	Monitor output 1 offset -999 to 999mV	
	Pr.128	Monitor output 2 offset -999 to 999mV	
	Pr.130	Zero speed 0 to 10000r/min	
	Pr.131	Error excessive alarm level 0.025 to 25.000rev	
	Pr.132	Option function 5 PI-PID control switching 0: PI control is always valid 1: Switched to PID control when value set to "PI-PID switching position droop" is reached or exceeded during position control 2: PID control is always valid	
	Pr.133	Option function 6	Serial communication baud rate selection 0: 9600bps, 1: 19200bps, 2: 38400bps, 3: 57600bps
			Serial communication response delay time 0: Invalid, 1: Valid (reply made after 800μs or more delay time)
			Encoder pulse output setting selection 0: Output pulses setting, 1: Dividing frequency ratio setting
	Pr.134	PI-PID switching position droop 0 to 50000pulse	
	Pr.136	Speed differential compensation 0 to 1000	
	Pr.138	Encoder output pulses 0 to 65535	
Pr.149	Servo parameter transmission setting 0: Invalid, F003H: Valid		

	Initial value	Axis 1	Axis 2	Axis 3	Remarks
	0				
	0				
	0				
	0				
	0				
	50				
	80				
	0				
	0				
	0				
	0				
	0				
	980				
	4000				
	0				

(5) Servo parameters for MR-J2-03B5

Item		Setting range	
Servo basic parameters	Pr.100	Servo series 0: MR-H-B (MR-H-BN), 1: MR-J-B, 2: MR-J2-B, 1E: Other	
	Pr.101	Amplifier setting Reserved (Set initial value)	
	Pr.102	Regenerative brake resistor	Regenerative brake option Reserved (Set initial value)
			External dynamic brake selection Reserved (Set initial value)
	Pr.103	Motor type 0080 <sub>H</sub> : Automatic setting, 00FF <sub>H</sub> : Special motor	
	Pr.104	Motor capacity 0000 <sub>H</sub> to 9999 <sub>H</sub>	
	Pr.107	Rotation direction 0: Forward run with positioning address increment 1: Reverse run with positioning address increment	
	Pr.108	Auto tuning 0: Auto tuning selected for use of interpolation axis control in position control, 1: Auto tuning for ordinary operation, 2: Invalid	
	Pr.109	Servo response setting 1: Normal (low response), 2: Normal (low/middle response), 3: Normal (middle response), 4: Normal (middle/high response), 5: Normal (high response), 8: Large friction (low response), 9: Large friction (low/middle response), A: Large friction (middle response), B: Large friction (middle/high response), C: Large friction (high response)	
Servo adjustment parameters	Pr.112	Load inertia ratio 0.0 to 100.0%	
	Pr.113	Position loop gain 1 4 to 1000rad/s	
	Pr.114	Speed loop gain 1 20 to 5000rad/s	
	Pr.115	Position loop gain 2 1 to 500rad/s	
	Pr.116	Speed loop gain 2 20 to 8000rad/s	
	Pr.117	Speed integral compensation 1 to 1000 ms	
	Pr.118	Notch filter selection 0: Not used, 1: 1125, 2: 563, 3: 375, 4: 282, 5: 225, 6: 1881, 7: 161	
	Pr.119	Feed forward gain 0 to 100%	
	Pr.120	In-position range 0 to 50000pulse	
	Pr.121	Solenoid brake output 0 to 1000ms	
	Pr.122	Monitor output mode selection Reserved (Set initial value)	
	Pr.123	Option function 1	Amplifier EMG selection 0: Valid, 1: Invalid
			Serial encoder cable selection Reserved (Set initial value)
	Pr.124	Option function 2	Slight vibration suppression function selection 0: Invalid, 1: Valid
Motor-less operation selection 0: Invalid, 1: Valid			
Servo extension parameters	Pr.127	Monitor output 1 offset Reserved (Set initial value)	
	Pr.128	Monitor output 2 offset Reserved (Set initial value)	
	Pr.130	Zero speed 0 to 10000r/min	
	Pr.131	Error excessive alarm level 1 to 1000kpulse	
	Pr.132	Option function 5 PI-PID control switching 0: PI control is always valid 1: Switched to PID control when value set to "PI-PID switching position droop" is reached or exceeded during position control 2: PID control is always valid	
	Pr.134	PI-PID switching position droop 0 to 50000pulse	
	Pr.136	Speed differential compensation 0 to 1000	



Initial value	Axis 1	Axis 2	Axis 3	Remarks
0				
0				
0				
0				
0000H				
0				
0				
1				
1				
30				
70				
1200				
25				
600				
20				
0				
0				
100				
100				
1				
0				
0				
0				
0				
0				
0				
0				
50				
80				
0				
0				
980				

Appendix 2.3 Positioning data setting value entry table [data No. to ]

Data	Axis								
	Da.1 Operation pattern	Da.2 Control method	Da.3 Accelera- tion time No.	Da.4 Decelera- tion time No.	Da.5 Positioning address/ movement amount	Da.6 Arc address	Da.7 Command speed	Da.8 Dwell time	Da.9 M code
1									
2									
3									
4									
5									
6									
7									
8									
9									
0									
1									
2									
3									
4									
5									
6									
7									
8									
9									
0									
1									
2									
3									
4									
5									
6									
7									
8									
9									
0									
1									
2									
3									
4									
5									
6									
7									
8									
9									
0									

Appendix 3 Positioning data (No. 1 to 100)  
List of buffer memory addresses

(1) For axis 1

Data No.	Positioning identifier	M code	Dwell time	Command speed		Positioning address		Arc data	
				Low-order	High-order	Low-order	High-order	Low-order	High-order
1	1300	1301	1302	1304	1305	1306	1307	1308	1309
2	1310	1311	1312	1314	1315	1316	1317	1318	1319
3	1320	1321	1322	1324	1325	1326	1327	1328	1329
4	1330	1331	1332	1334	1335	1336	1337	1338	1339
5	1340	1341	1342	1344	1345	1346	1347	1348	1349
6	1350	1351	1352	1354	1355	1356	1357	1358	1359
7	1360	1361	1362	1364	1365	1366	1367	1368	1369
8	1370	1371	1372	1374	1375	1376	1377	1378	1379
9	1380	1381	1382	1384	1385	1386	1387	1388	1389
10	1390	1391	1392	1394	1395	1396	1397	1398	1399
11	1400	1401	1402	1404	1405	1406	1407	1408	1409
12	1410	1411	1412	1414	1415	1416	1417	1418	1419
13	1420	1421	1422	1424	1425	1426	1427	1428	1429
14	1430	1431	1432	1434	1435	1436	1437	1438	1439
15	1440	1441	1442	1444	1445	1446	1447	1448	1449
16	1450	1451	1452	1454	1455	1456	1457	1458	1459
17	1460	1461	1462	1464	1465	1466	1467	1468	1469
18	1470	1471	1472	1474	1475	1476	1477	1478	1479
19	1480	1481	1482	1484	1485	1486	1487	1488	1489
20	1490	1491	1492	1494	1495	1496	1497	1498	1499
21	1500	1501	1502	1504	1505	1506	1507	1508	1509
22	1510	1511	1512	1514	1515	1516	1517	1518	1519
23	1520	1521	1522	1524	1525	1526	1527	1528	1529
24	1530	1531	1532	1534	1535	1536	1537	1538	1539
25	1540	1541	1542	1544	1545	1546	1547	1548	1549
26	1550	1551	1552	1554	1555	1556	1557	1558	1559
27	1560	1561	1562	1564	1565	1566	1567	1568	1569
28	1570	1571	1572	1574	1575	1576	1577	1578	1579
29	1580	1581	1582	1584	1585	1586	1587	1588	1589
30	1590	1591	1592	1594	1595	1596	1597	1598	1599
31	1600	1601	1602	1604	1605	1606	1607	1608	1609
32	1610	1611	1612	1614	1615	1616	1617	1618	1619
33	1620	1621	1622	1624	1625	1626	1627	1628	1629
34	1630	1631	1632	1634	1635	1636	1637	1638	1639
35	1640	1641	1642	1644	1645	1646	1647	1648	1649
36	1650	1651	1652	1654	1655	1656	1657	1658	1659
37	1660	1661	1662	1664	1665	1666	1667	1668	1669
38	1670	1671	1672	1674	1675	1676	1677	1678	1679
39	1680	1681	1682	1684	1685	1686	1687	1688	1689
40	1690	1691	1692	1694	1695	1696	1697	1698	1699
41	1700	1701	1702	1704	1705	1706	1707	1708	1709
42	1710	1711	1712	1714	1715	1716	1717	1718	1719
43	1720	1721	1722	1724	1725	1726	1727	1728	1729
44	1730	1731	1732	1734	1735	1736	1737	1738	1739
45	1740	1741	1742	1744	1745	1746	1747	1748	1749
46	1750	1751	1752	1754	1755	1756	1757	1758	1759
47	1760	1761	1762	1764	1765	1766	1767	1768	1769
48	1770	1771	1772	1774	1775	1776	1777	1778	1779
49	1780	1781	1782	1784	1785	1786	1787	1788	1789
50	1790	1791	1792	1794	1795	1796	1797	1798	1799
51	1800	1801	1802	1804	1805	1806	1807	1808	1809
52	1810	1811	1812	1814	1815	1816	1817	1818	1819
53	1820	1821	1822	1824	1825	1826	1827	1828	1829
54	1830	1831	1832	1834	1835	1836	1837	1838	1839
55	1840	1841	1842	1844	1845	1846	1847	1848	1849
56	1850	1851	1852	1854	1855	1856	1857	1858	1859
57	1860	1861	1862	1864	1865	1866	1867	1868	1869
58	1870	1871	1872	1874	1875	1876	1877	1878	1879
59	1880	1881	1882	1884	1885	1886	1887	1888	1889
60	1890	1891	1892	1894	1895	1896	1897	1898	1899
61	1900	1901	1902	1904	1905	1906	1907	1908	1909
62	1910	1911	1912	1914	1915	1916	1917	1918	1919
63	1920	1921	1922	1924	1925	1926	1927	1928	1929
64	1930	1931	1932	1934	1935	1936	1937	1938	1939
65	1940	1941	1942	1944	1945	1946	1947	1948	1949
66	1950	1951	1952	1954	1955	1956	1957	1958	1959
67	1960	1961	1962	1964	1965	1966	1967	1968	1969
68	1970	1971	1972	1974	1975	1976	1977	1978	1979
69	1980	1981	1982	1984	1985	1986	1987	1988	1989
70	1990	1991	1992	1994	1995	1996	1997	1998	1999
71	2000	2001	2002	2004	2005	2006	2007	2008	2009
72	2010	2011	2012	2014	2015	2016	2017	2018	2019
73	2020	2021	2022	2024	2025	2026	2027	2028	2029
74	2030	2031	2032	2034	2035	2036	2037	2038	2039
75	2040	2041	2042	2044	2045	2046	2047	2048	2049
76	2050	2051	2052	2054	2055	2056	2057	2058	2059
77	2060	2061	2062	2064	2065	2066	2067	2068	2069
78	2070	2071	2072	2074	2075	2076	2077	2078	2079
79	2080	2081	2082	2084	2085	2086	2087	2088	2089
80	2090	2091	2092	2094	2095	2096	2097	2098	2099
81	2100	2101	2102	2104	2105	2106	2107	2108	2109
82	2110	2111	2112	2114	2115	2116	2117	2118	2119
83	2120	2121	2122	2124	2125	2126	2127	2128	2129
84	2130	2131	2132	2134	2135	2136	2137	2138	2139
85	2140	2141	2142	2144	2145	2146	2147	2148	2149
86	2150	2151	2152	2154	2155	2156	2157	2158	2159
87	2160	2161	2162	2164	2165	2166	2167	2168	2169
88	2170	2171	2172	2174	2175	2176	2177	2178	2179
89	2180	2181	2182	2184	2185	2186	2187	2188	2189
90	2190	2191	2192	2194	2195	2196	2197	2198	2199
91	2200	2201	2202	2204	2205	2206	2207	2208	2209
92	2210	2211	2212	2214	2215	2216	2217	2218	2219
93	2220	2221	2222	2224	2225	2226	2227	2228	2229
94	2230	2231	2232	2234	2235	2236	2237	2238	2239
95	2240	2241	2242	2244	2245	2246	2247	2248	2249
96	2250	2251	2252	2254	2255	2256	2257	2258	2259
97	2260	2261	2262	2264	2265	2266	2267	2268	2269
98	2270	2271	2272	2274	2275	2276	2277	2278	2279
99	2280	2281	2282	2284	2285	2286	2287	2288	2289
100	2290	2291	2292	2294	2295	2296	2297	2298	2299

(2) For axis 2

Data No.	Positioning identifier	M code	Dwell time	Command speed		Positioning address		Arc data	
				Low-order	High-order	Low-order	High-order	Low-order	High-order
1	2300	2301	2302	2304	2305	2306	2307	2308	2309
2	2310	2311	2312	2314	2315	2316	2317	2318	2319
3	2320	2321	2322	2324	2325	2326	2327	2328	2329
4	2330	2331	2332	2334	2335	2336	2337	2338	2339
5	2340	2341	2342	2344	2345	2346	2347	2348	2349
6	2350	2351	2352	2354	2355	2356	2357	2358	2359
7	2360	2361	2362	2364	2365	2366	2367	2368	2369
8	2370	2371	2372	2374	2375	2376	2377	2378	2379
9	2380	2381	2382	2384	2385	2386	2387	2388	2389
10	2390	2391	2392	2394	2395	2396	2397	2398	2399
11	2400	2401	2402	2404	2405	2406	2407	2408	2409
12	2410	2411	2412	2414	2415	2416	2417	2418	2419
13	2420	2421	2422	2424	2425	2426	2427	2428	2429
14	2430	2431	2432	2434	2435	2436	2437	2438	2439
15	2440	2441	2442	2444	2445	2446	2447	2448	2449
16	2450	2451	2452	2454	2455	2456	2457	2458	2459
17	2460	2461	2462	2464	2465	2466	2467	2468	2469
18	2470	2471	2472	2474	2475	2476	2477	2478	2479
19	2480	2481	2482	2484	2485	2486	2487	2488	2489
20	2490	2491	2492	2494	2495	2496	2497	2498	2499
21	2500	2501	2502	2504	2505	2506	2507	2508	2509
22	2510	2511	2512	2514	2515	2516	2517	2518	2519
23	2520	2521	2522	2524	2525	2526	2527	2528	2529
24	2530	2531	2532	2534	2535	2536	2537	2538	2539
25	2540	2541	2542	2544	2545	2546	2547	2548	2549
26	2550	2551	2552	2554	2555	2556	2557	2558	2559
27	2560	2561	2562	2564	2565	2566	2567	2568	2569
28	2570	2571	2572	2574	2575	2576	2577	2578	2579
29	2580	2581	2582	2584	2585	2586	2587	2588	2589
30	2590	2591	2592	2594	2595	2596	2597	2598	2599
31	2600	2601	2602	2604	2605	2606	2607	2608	2609
32	2610	2611	2612	2614	2615	2616	2617	2618	2619
33	2620	2621	2622	2624	2625	2626	2627	2628	2629
34	2630	2631	2632	2634	2635	2636	2637	2638	2639
35	2640	2641	2642	2644	2645	2646	2647	2648	2649
36	2650	2651	2652	2654	2655	2656	2657	2658	2659
37	2660	2661	2662	2664	2665	2666	2667	2668	2669
38	2670	2671	2672	2674	2675	2676	2677	2678	2679
39	2680	2681	2682	2684	2685	2686	2687	2688	2689
40	2690	2691	2692	2694	2695	2696	2697	2698	2699
41	2700	2701	2702	2704	2705	2706	2707	2708	2709
42	2710	2711	2712	2714	2715	2716	2717	2718	2719
43	2720	2721	2722	2724	2725	2726	2727	2728	2729
44	2730	2731	2732	2734	2735	2736	2737	2738	2739
45	2740	2741	2742	2744	2745	2746	2747	2748	2749
46	2750	2751	2752	2754	2755	2756	2757	2758	2759
47	2760	2761	2762	2764	2765	2766	2767	2768	2769
48	2770	2771	2772	2774	2775	2776	2777	2778	2779
49	2780	2781	2782	2784	2785	2786	2787	2788	2789
50	2790	2791	2792	2794	2795	2796	2797	2798	2799
51	2800	2801	2802	2804	2805	2806	2807	2808	2809
52	2810	2811	2812	2814	2815	2816	2817	2818	2819
53	2820	2821	2822	2824	2825	2826	2827	2828	2829
54	2830	2831	2832	2834	2835	2836	2837	2838	2839
55	2840	2841	2842	2844	2845	2846	2847	2848	2849
56	2850	2851	2852	2854	2855	2856	2857	2858	2859
57	2860	2861	2862	2864	2865	2866	2867	2868	2869
58	2870	2871	2872	2874	2875	2876	2877	2878	2879
59	2880	2881	2882	2884	2885	2886	2887	2888	2889
60	2890	2891	2892	2894	2895	2896	2897	2898	2899
61	2900	2901	2902	2904	2905	2906	2907	2908	2909
62	2910	2911	2912	2914	2915	2916	2917	2918	2919
63	2920	2921	2922	2924	2925	2926	2927	2928	2929
64	2930	2931	2932	2934	2935	2936	2937	2938	2939
65	2940	2941	2942	2944	2945	2946	2947	2948	2949
66	2950	2951	2952	2954	2955	2956	2957	2958	2959
67	2960	2961	2962	2964	2965	2966	2967	2968	2969
68	2970	2971	2972	2974	2975	2976	2977	2978	2979
69	2980	2981	2982	2984	2985	2986	2987	2988	2989
70	2990	2991	2992	2994	2995	2996	2997	2998	2999
71	3000	3001	3002	3004	3005	3006	3007	3008	3009
72	3010	3011	3012	3014	3015	3016	3017	3018	3019
73	3020	3021	3022	3024	3025	3026	3027	3028	3029
74	3030	3031	3032	3034	3035	3036	3037	3038	3039
75	3040	3041	3042	3044	3045	3046	3047	3048	3049
76	3050	3051	3052	3054	3055	3056	3057	3058	3059
77	3060	3061	3062	3064	3065	3066	3067	3068	3069
78	3070	3071	3072	3074	3075	3076	3077	3078	3079
79	3080	3081	3082	3084	3085	3086	3087	3088	3089
80	3090	3091	3092	3094	3095	3096	3097	3098	3099
81	3100	3101	3102	3104	3105	3106	3107	3108	3109
82	3110	3111	3112	3114	3115	3116	3117	3118	3119
83	3120	3121	3122	3124	3125	3126	3127	3128	3129
84	3130	3131	3132	3134	3135	3136	3137	3138	3139
85	3140	3141	3142	3144	3145	3146	3147	3148	3149
86	3150	3151	3152	3154	3155	3156	3157	3158	3159
87	3160	3161	3162	3164	3165	3166	3167	3168	3169
88	3170	3171	3172	3174	3175	3176	3177	3178	3179
89	3180	3181	3182	3184	3185	3186	3187	3188	3189
90	3190	3191	3192	3194	3195	3196	3197	3198	3199
91	3200	3201	3202	3204	3205	3206	3207	3208	3209
92	3210	3211	3212	3214	3215	3216	3217	3218	3219
93	3220	3221	3222	3224	3225	3226	3227	3228	3229
94	3230	3231	3232	3234	3235	3236	3237	3238	3239
95	3240	3241	3242	3244	3245	3246	3247	3248	3249
96	3250	3251	3252	3254	3255	3256	3257	3258	3259
97	3260	3261	3262	3264	3265	3266	3267	3268	3269
98	3270	3271	3272	3274	3275	3276	3277	3278	3279
99	3280	3281	3282	3284	3285	3286	3287	3288	3289
100	3290	3291	3292	3294	3295	3296	3297	3298	3299

(3) For axis 3

Data No.	Positioning identifier	M code	Dwell time	Command speed		Positioning address		Arc data	
				Low-order	High-order	Low-order	High-order	Low-order	High-order
1	3300	3301	3302	3304	3305	3306	3307	3308	3309
2	3310	3311	3312	3314	3315	3316	3317	3318	3319
3	3320	3321	3322	3324	3325	3326	3327	3328	3329
4	3330	3331	3332	3334	3335	3336	3337	3338	3339
5	3340	3341	3342	3344	3345	3346	3347	3348	3349
6	3350	3351	3352	3354	3355	3356	3357	3358	3359
7	3360	3361	3362	3364	3365	3366	3367	3368	3369
8	3370	3371	3372	3374	3375	3376	3377	3378	3379
9	3380	3381	3382	3384	3385	3386	3387	3388	3389
10	3390	3391	3392	3394	3395	3396	3397	3398	3399
11	3400	3401	3402	3404	3405	3406	3407	3408	3409
12	3410	3411	3412	3414	3415	3416	3417	3418	3419
13	3420	3421	3422	3424	3425	3426	3427	3428	3429
14	3430	3431	3432	3434	3435	3436	3437	3438	3439
15	3440	3441	3442	3444	3445	3446	3447	3448	3449
16	3450	3451	3452	3454	3455	3456	3457	3458	3459
17	3460	3461	3462	3464	3465	3466	3467	3468	3469
18	3470	3471	3472	3474	3475	3476	3477	3478	3479
19	3480	3481	3482	3484	3485	3486	3487	3488	3489
20	3490	3491	3492	3494	3495	3496	3497	3498	3499
21	3500	3501	3502	3504	3505	3506	3507	3508	3509
22	3510	3511	3512	3514	3515	3516	3517	3518	3519
23	3520	3521	3522	3524	3525	3526	3527	3528	3529
24	3530	3531	3532	3534	3535	3536	3537	3538	3539
25	3540	3541	3542	3544	3545	3546	3547	3548	3549
26	3550	3551	3552	3554	3555	3556	3557	3558	3559
27	3560	3561	3562	3564	3565	3566	3567	3568	3569
28	3570	3571	3572	3574	3575	3576	3577	3578	3579
29	3580	3581	3582	3584	3585	3586	3587	3588	3589
30	3590	3591	3592	3594	3595	3596	3597	3598	3599
31	3600	3601	3602	3604	3605	3606	3607	3608	3609
32	3610	3611	3612	3614	3615	3616	3617	3618	3619
33	3620	3621	3622	3624	3625	3626	3627	3628	3629
34	3630	3631	3632	3634	3635	3636	3637	3638	3639
35	3640	3641	3642	3644	3645	3646	3647	3648	3649
36	3650	3651	3652	3654	3655	3656	3657	3658	3659
37	3660	3661	3662	3664	3665	3666	3667	3668	3669
38	3670	3671	3672	3674	3675	3676	3677	3678	3679
39	3680	3681	3682	3684	3685	3686	3687	3688	3689
40	3690	3691	3692	3694	3695	3696	3697	3698	3699
41	3700	3701	3702	3704	3705	3706	3707	3708	3709
42	3710	3711	3712	3714	3715	3716	3717	3718	3719
43	3720	3721	3722	3724	3725	3726	3727	3728	3729
44	3730	3731	3732	3734	3735	3736	3737	3738	3739
45	3740	3741	3742	3744	3745	3746	3747	3748	3749
46	3750	3751	3752	3754	3755	3756	3757	3758	3759
47	3760	3761	3762	3764	3765	3766	3767	3768	3769
48	3770	3771	3772	3774	3775	3776	3777	3778	3779
49	3780	3781	3782	3784	3785	3786	3787	3788	3789
50	3790	3791	3792	3794	3795	3796	3797	3798	3799
51	3800	3801	3802	3804	3805	3806	3807	3808	3809
52	3810	3811	3812	3814	3815	3816	3817	3818	3819
53	3820	3821	3822	3824	3825	3826	3827	3828	3829
54	3830	3831	3832	3834	3835	3836	3837	3838	3839
55	3840	3841	3842	3844	3845	3846	3847	3848	3849
56	3850	3851	3852	3854	3855	3856	3857	3858	3859
57	3860	3861	3862	3864	3865	3866	3867	3868	3869
58	3870	3871	3872	3874	3875	3876	3877	3878	3879
59	3880	3881	3882	3884	3885	3886	3887	3888	3889
60	3890	3891	3892	3894	3895	3896	3897	3898	3899
61	3900	3901	3902	3904	3905	3906	3907	3908	3909
62	3910	3911	3912	3914	3915	3916	3917	3918	3919
63	3920	3921	3922	3924	3925	3926	3927	3928	3929
64	3930	3931	3932	3934	3935	3936	3937	3938	3939
65	3940	3941	3942	3944	3945	3946	3947	3948	3949
66	3950	3951	3952	3954	3955	3956	3957	3958	3959
67	3960	3961	3962	3964	3965	3966	3967	3968	3969
68	3970	3971	3972	3974	3975	3976	3977	3978	3979
69	3980	3981	3982	3984	3985	3986	3987	3988	3989
70	3990	3991	3992	3994	3995	3996	3997	3998	3999
71	4000	4001	4002	4004	4005	4006	4007	4008	4009
72	4010	4011	4012	4014	4015	4016	4017	4018	4019
73	4020	4021	4022	4024	4025	4026	4027	4028	4029
74	4030	4031	4032	4034	4035	4036	4037	4038	4039
75	4040	4041	4042	4044	4045	4046	4047	4048	4049
76	4050	4051	4052	4054	4055	4056	4057	4058	4059
77	4060	4061	4062	4064	4065	4066	4067	4068	4069
78	4070	4071	4072	4074	4075	4076	4077	4078	4079
79	4080	4081	4082	4084	4085	4086	4087	4088	4089
80	4090	4091	4092	4094	4095	4096	4097	4098	4099
81	4100	4101	4102	4104	4105	4106	4107	4108	4109
82	4110	4111	4112	4114	4115	4116	4117	4118	4119
83	4120	4121	4122	4124	4125	4126	4127	4128	4129
84	4130	4131	4132	4134	4135	4136	4137	4138	4139
85	4140	4141	4142	4144	4145	4146	4147	4148	4149
86	4150	4151	4152	4154	4155	4156	4157	4158	4159
87	4160	4161	4162	4164	4165	4166	4167	4168	4169
88	4170	4171	4172	4174	4175	4176	4177	4178	4179
89	4180	4181	4182	4184	4185	4186	4187	4188	4189
90	4190	4191	4192	4194	4195	4196	4197	4198	4199
91	4200	4201	4202	4204	4205	4206	4207	4208	4209
92	4210	4211	4212	4214	4215	4216	4217	4218	4219
93	4220	4221	4222	4224	4225	4226	4227	4228	4229
94	4230	4231	4232	4234	4235	4236	4237	4238	4239
95	4240	4241	4242	4244	4245	4246	4247	4248	4249
96	4250	4251	4252	4254	4255	4256	4257	4258	4259
97	4260	4261	4262	4264	4265	4266	4267	4268	4269
98	4270	4271	4272	4274	4275	4276	4277	4278	4279
99	4280	4281	4282	4284	4285	4286	4287	4288	4289
100	4290	4291	4292	4294	4295	4296	4297	4298	4299

Appendix 4 Comparisons with old versions of A1SD75M1/A1SD75M2/A1SD75M3, and AD75M1/AD75M2/AD75M3 models

The following tables indicate performance comparison and function comparison between the new and old versions of the A1SD75M1/A1SD75M2/A1SD75M3 and AD75M1/AD75M2/AD75M3 and buffer memory addresses for additional functions.

(1) Function comparison

<Comparison on software version >

Item		Software versions of A1SD75M□ and AD75M□				Reference	
		"W" or later	"Q" or later	"G" or later	"F" or earlier		
Restart at servo OFF to ON		Possible	Possible	Possible	Not possible	Section 12.4.5	
Near pass mode function	Positioning address pass mode	Present	Present	Present	Present	Section 12.3.3	
	Near pass mode	Present	Present	Present	Absent		
Parameter initialization function		Possible	Possible	Possible	Not possible	Section 13.2	
Axis monitor	Regenerative load ratio	Possible	Possible	Possible	Not possible	Section 5.6.2	
	Effective load ratio	Possible	Possible	Possible	Not possible		
	Peak load ratio	Possible	Possible	Possible	Not possible		
	Auto tuning	Values set to servo amplifier are always stored*1.	Possible	Possible	Not possible		Not possible
	Load inertia ratio		Possible	Possible	Not possible		Not possible
	Position loop gain 1		Possible	Possible	Not possible		Not possible
	Speed loop gain 1		Possible	Possible	Not possible		Not possible
	Position loop gain 2		Possible	Possible	Not possible		Not possible
	Speed loop gain 2	Possible	Possible	Not possible	Not possible		
Speed integral compensation	Possible	Possible	Not possible	Not possible			
Zero point return method	Near-point dog method 2)	Possible	Possible	Not possible	Not possible	Section 8.2.4	
	Count method 3)	Possible	Possible	Not possible	Not possible	Section 8.2.7	
Absolute position restoration mode switching function		Possible	Not possible	Not possible	Not possible	Section 12.6.2	
Selection of whether encoder output pulse function and slight vibration suppression function are valid or invalid when servo amplifier MR-J2S-B is used		Possible	Not possible	Not possible	Not possible	Section 5.2.10	

\*1: When auto tuning is invalid, the values set to the servo amplifier are also stored.

<Comparison on hardware version>

Item	Hardware versions of A1SD75M□ and AD75M□	
	A1SD75M1/M2 : "G" or later A1SD75M3 : "H" or later AD75M1/M2 : "F" or later AD75M3 : "G" or later	A1SD75M1/M2 : "F" or earlier A1SD75M3 : "G" or earlier AD75M1/M2 : "E" or earlier AD75M3 : "F" or earlier
Memory used for absolute position detection system	FeRAM	E <sup>2</sup> PROM
E <sup>2</sup> PROM/FeRAM access count in absolute position detection system	Max. $9.9999 \times 10^9$ times	Max. 100,000 times

## (2) Added buffer memory addresses


Buffer memory addresses			Name	Used function
Axis 1	Axis 2	Axis 3		
64 65	214 215	364 365	Setting for the restart allowable range when servo OFF to ON	Restart function
66	216	366	Near pass mode selection for path control	Near pass mode function
91	241	391	Absolute position restoration selection	Absolute position restoration mode switching function
138	288	438	Encoder output pulses	Encoder output pulse function*2
149	299	449	Servo parameter transmission setting	Encoder output pulse function*2 Slight vibration suppression function*2
876	976	1076	Regenerative load ratio	Axis monitor
877	977	1077	Effective load ratio	
878	978	1078	Peak load ratio	
879	979	1079	Absolute position restoration mode	
880 to 883	980 to 983	1080 to 1083	FeRAM access count	
1139			Parameter initialization request	Parameter initialization function

\*2: Function of servo amplifier MR-J2S-B.

Appendix 5 MELSEC Explanation of positioning terms


2-SPEED TRAPEZOIDAL CONTROL

In this positioning control method, the positioning pattern, positioning addresses (P1, P2), and positioning speeds (V1, V2) are set in the sequence program. Positioning is carried out to positioning address P1 by issuing the 1st positioning start command. When P1 is reached, the positioning then automatically changes to positioning at the V2 speed.

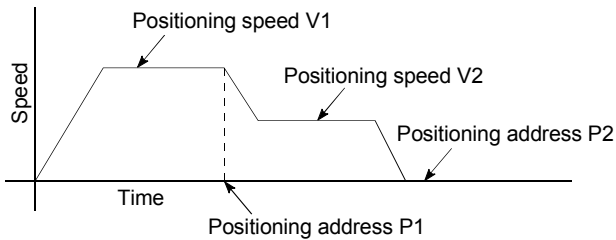

ABSOLUTE ENCODER

This is a detector that enables the angle data within 1 motor rotation to be output to an external destination. Absolute encoders are generally able to output 360° in 8 to 12 bits. Incremental encoders have a disadvantage in that the axis position is lost when a power failure occurs. However, with absolute encoders, the axis position is not lost even when a power failure occurs. Various codes such as a binary code and BCD code can be output. Absolute encoders are more expensive, more accurate, and larger than incremental encoders. Refer to "ENCODER".

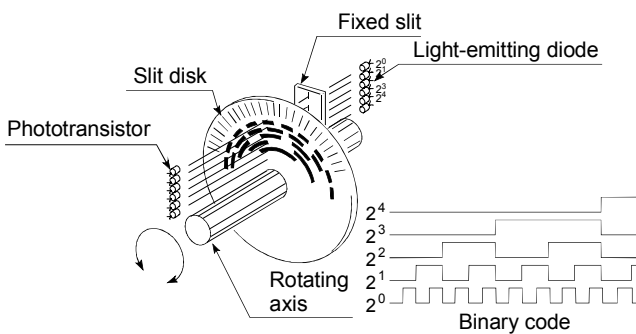


ABSOLUTE POSITION DETECTION SYSTEM

When positioning is carried out using this system, a zero point return can be carried out once when the device is started to allow the machine position to be stored in the memory and the current position to be held even when the power is turned OFF. These will be compensated if mechanical deviation occurs, so a zero point return is not required after the power is turned ON again. A servomotor with an absolute position detector and servo amplifier and positioning module compatible with an absolute position detection system are required to configure this system.


ABSOLUTE SYSTEM

This is one system for expressing a positioning address. Absolute address system. This system uses 0 as a reference, and expresses the address as the distance from 0. The direction is automatically determined, even when it is not designated. The other address system is the increment system.

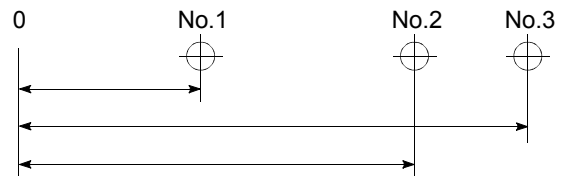

ACCELERATION TIME

The parameter acceleration time refers to the time from a stopped state to the time the speed limit value is reached, so it becomes proportionally shorter as the setting speed decreases. The acceleration time is determined by factors such as machine inertia, motor torque, and load resistance torque.

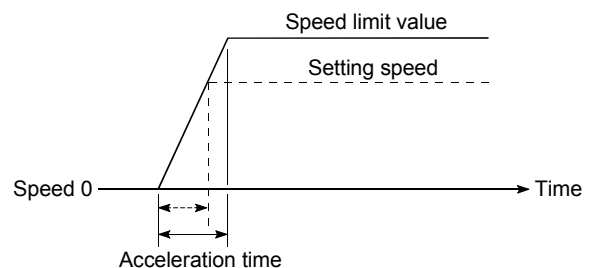




**ADDRESS**

- 1) This is a numerical value to express the positioning position, designated in mm, inch, angle, or No. of pulse units.
- 2) The memory address. Many addresses are stored in the memory. An address is read or written after it is designated.

**AFTER mode**

This is the mode that outputs the M code after positioning is complete (after stopping). Clamping can be commanded, drilling dimensions can be selected, etc., with this mode.

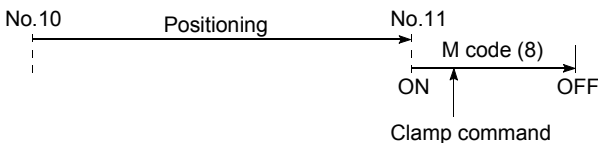


**AUTO TUNING (Automatic Tuning)**

Properties such as responsiveness and stability of machines driven with a servomotor are affected by changes in the inertia moment and rigidity due to changes in the machine load, etc. This function automatically adjusts the speed loop gain and position loop gain to match the machine state, so the machine's performance can be maintained at its optimum state. A real time automatic tuning function should be used for machines having large load fluctuations.


**AUTOMATIC TRAPEZOIDAL ACCELERATION/DECELERATION**

An operation in which a graph of the time and speed takes a trapezoidal shape.

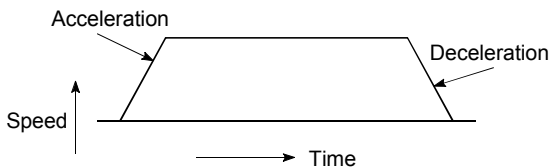

**BACKLASH COMPENSATION**

When a forward run operation changes to a reverse run operation, there is sometimes play (backlash) in the mesh of the toothed gears. This also occurs when using a worm gear. Because of this backlash, a left feed of 1m will not be sufficient to return the machine to its original position. The machine cannot be positioned to its original position without an extra feed equivalent to the backlash amount. This function compensates for that backlash amount.

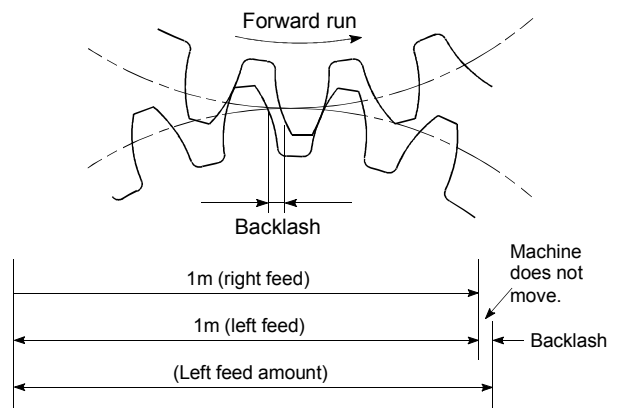


**BACKUP FUNCTION**

Backup functions consist of the following.

- 1) Functions for storing the sequence program and device statuses stored in the RAM memory of the programmable controller CPU, so that they are not lost during power failures, etc.
- 2) Functions for storing the current value in absolute position compatible systems so that it is not lost during power failures, etc.
- 3) Functions for reading the programmable controller CPU data (programmable controller programs, parameters, positioning data, etc.) by a peripheral device when the old CPU is replaced, and then write it to the new programmable controller CPU after the replacement is completed.


**BALL SCREW**

This is a type of screw, with balls lined up in the threads like ball bearings. This reduces backlash, and enables rotation with little force.

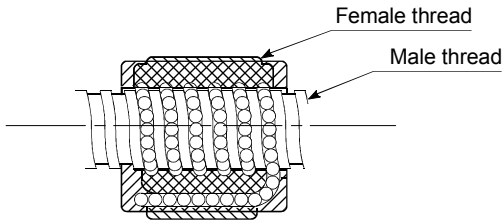

**BIAS SPEED AT START**

A large amount of torque is required when the machine starts moving, but the torque may be unstable at speed 0. Therefore, movement can be smoothly carried out by starting the movement at a given speed from the beginning. The bias speed at start is the speed set at that start.

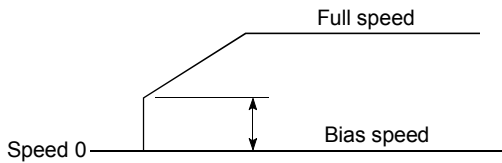

**BUSY**

The device is doing some other work. It is in a positioning operation or in dwell time.

**CCW (Counterclockwise)**


Rotation in the counterclockwise direction. In the motor, this is determined looking from the shaft end side. Also refer to "CW".

**CHANGE signal**

The CHANGE signal is an external signal used to change the speed/position control from the speed control being executed to position control.


**CIRCULAR INTERPOLATION**

Automatic operation in which the machine path makes a circle when positioning is carried out by simultaneously operating both the longitudinal feed and latitudinal feed motors. The normal unit is 90°. Round shapes can be created with this type of interpolation, and obstacles in the machine path can also be avoided. Refer to the terms "INTERPOLATION OPERATION" and "LINEAR INTERPOLATION"

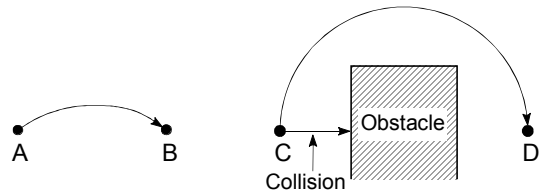

**COMPOSITE SPEED**

The movement speed for the target control during interpolation operations.

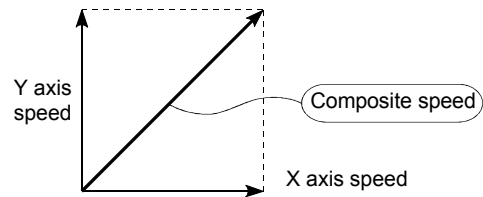

**CONTINUOUS POSITIONING CONTROL**

Refer to the term "OPERATION PATTERN".

**CONTROL UNIT**

This is one type of positioning reference data. The unit to be used is designated as mm, inch, degree, or pulse.

**CP CONTROL (Continuous Path Control)**

Continuous path is a control method in which a path is followed without interrupting such as in uniform speed control.

**CREEP SPEED**

A speed at which the machine moves very slowly.  
 It is difficult for the machine to stop accurately when running at high speed, so the movement must first be changed to the creep speed before stopping.  
 Refer to the term "NEAR-POINT DOG".

**CURRENT FEED VALUE**

The zero point address at the completion of the machine zero point return is stored.  
 The position currently being executed is stored.  
 This value changes when the current value is changed.

**CURRENT LOOP MODE**

This is one servo control mode used in positioning. It is a mode for controlling the torque using the current. Also called the torque loop mode. Refer to "POSITIONING LOOP MODE".

**CURRENT VALUE**

This is the current address (position) when stopped or during positioning.

**CURRENT VALUE CHANGE**


The AD75 has no way of knowing the current value when the machine is assembled and the AD75 is connected, so this function is used to teach it a temporary approximate value as the current value. This function can also be used to write a temporary current value when the current value has been lost due to accidents, etc. If a machine zero point return is carried out after that, the AD75 will recognize the zero point.  
 In fixed-dimension feed, etc., rewriting the current value to 0 after the fixed-dimension feed will keep the accumulated value from being affected by the stroke limit. The current value can be changed during a positioning stop.

**CW (Clockwise)**

Rotation in the clockwise direction. Rotation in the clockwise direction looking from the motor shaft end side.

**DATA NO.**

To carry out positioning to 2 or more addresses, each position is assigned a sequence No. such as No. 1, No. 2, No. 3, etc. The positioning is then carried out following this sequence. The AD75 is capable of positioning up to No. 600.

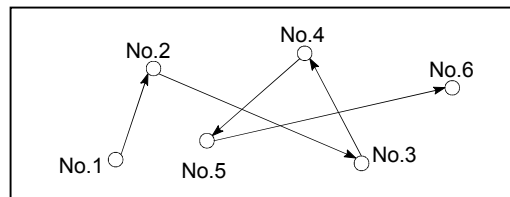


**DECELERATION RATIO**

A ratio used when the machine is decelerated using a toothed gear. This ratio is a numeral larger than 1.

$$\text{Deceleration ratio} = \frac{\text{Input gear speed}}{\text{Output gear speed}}$$

**DECELERATION TIME**


The parameter deceleration time is the same value as the acceleration time. Deceleration time refers to the time from the speed limit value to a stopped state, so it becomes proportionally shorter as the setting speed decreases.

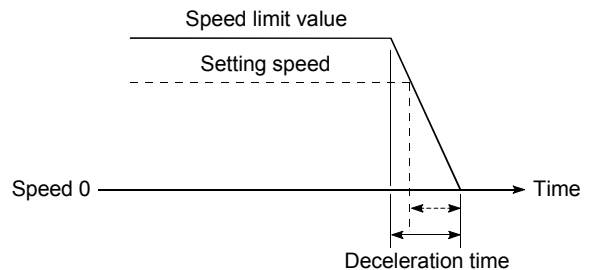

**DEVIATION COUNTER**

Deviation counters have the following two functions.

- 1) To count the command pulses issued from the AD75, and transmit the count value to the D/A converter.
- 2) To subtract the feedback pulses from the command pulses, and run the motor by the deviation value (droop pulse) of the command pulses and feedback pulses until the command pulses reaches 0.

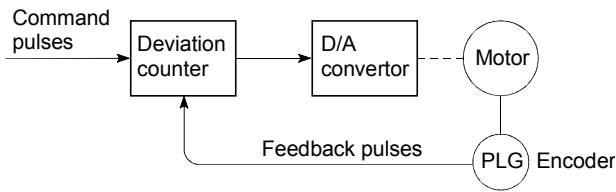

**DOG SIGNAL**


The near-point dog of the machine zero point return.

**DROOP PULSE**

Because of inertia ( $GD^2$ ) in the machine, it will lag behind and not be able to track if the positioning module speed commands are issued in their normal state.

Thus, for a servomotor, a method is used in which the speed command pulses are delayed by accumulation in a deviation counter. These accumulated pulses are called the droop pulse.

The deviation counter emits all pulses and returns to 0 when the machine stops.

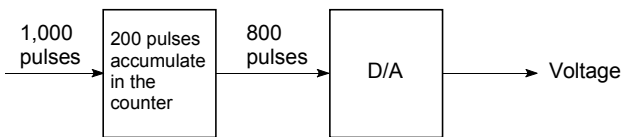

**DWELL TIME**

This is the time taken immediately after the positioning is completed to adjust for the droop pulses in the deviation counter. The positioning will not be accurate if this time is too short.

**DYNAMIC BRAKE**

When protection circuits operate due to power failures, emergency stops (EMG signal) etc., this function is used to short-circuit between servomotor terminals via a resistor, thermally consume the rotation energy, and cause a sudden stop without allowing free run status of the motor.

Braking power is generated by electromagnetic brakes only when running motors with which a large brake torque can be obtained. Because electromagnetic brakes have no holding power, they are used in combination with mechanical brakes to prevent dropping of the vertical axis.

**ELECTROMAGNETIC BRAKE**

This function is supplied on motors with electromagnetic brakes. Electromagnetic brakes are used to prevent slipping during power failures and faults when driving a vertical axis, or as a protective function when the machine is stopped.


These brakes are activated when not excited.

**EMERGENCY STOP**


Emergency stops cannot be carried out by the AD75, so a method of shutting OFF the servo side power supply from outside the programmable controller, etc., must be considered.

**ENCODER**

This device turns the input data into a binary code of 1 (ON) and 0 (OFF). A type of pulse generator.

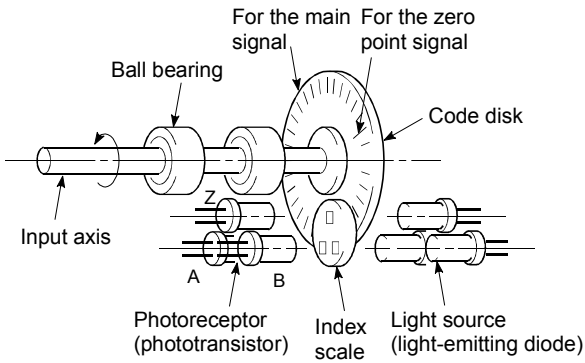

Rotary encoder

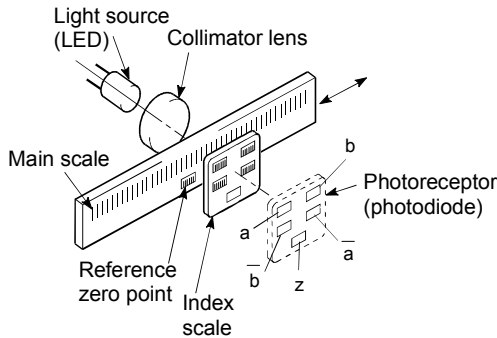

Linear encoder

**ERROR CORRECTION**

If a dimension error occurs in the machine, and that error is actually smaller or larger than 1m in spite of a 1m command being issued from the AD75, that error amount will be compensated. For example, when the error is actually smaller than 1m, the remaining distance to 1m is fed, and the correct 1m of positioning is carried out.

**ERROR RESET**

This resets error of axis. Note that if the cause of the error is not eliminated at that time, the error will occur again.

**EXTERNAL REGENERATIVE BRAKE RESISTOR**

This is also called the regenerative brake. When a machine is moved with a motor, power is normally supplied to the motor from an amplifier. However, the rotation energy in the motor and machine counterflows (regenerates) to the amplifier when the motor is decelerating or when driving a descending load. The external regenerative resistor consumes this regeneration energy with resistance, obtains the regenerative brake torque, and enables the full capacity of the regeneration system during stopping. It is used when carrying out highly repetitive acceleration/deceleration.

**F**

In the AD75, this is a status where there is a fault in the module itself.

**FEEDBACK PULSE**

This is a method of using a returning pulse train to confirm whether the machine faithfully operated according to the commands issued in automatic control. If the machine did not faithfully operate according to the commands, a correction command is issued. For example, if a command is issued for 10,000 pulses, and a feedback pulse of 10,000 pulses is returned, then the balance becomes 0 and it can be judged that the command was faithfully followed. Refer to the term "DEVIATION COUNTER".

**FIXED-DIMENSION FEED**

This is the feeding of a set dimension for cutting sheet and bar workpieces into the designated dimensions. Increment system positioning is often used. The current value is not incremented, even when the feed operation is repeated.

**FLASH MEMORY**

This battery-less memory can be used to store parameters and positioning data for backup. Because it is battery-less, battery maintenance is not required.


**FLS SIGNAL (Forward Limit Signal)**

This is the input signal that notifies the user that the limit switch (b contact configuration, normally continuity) installed at the upper limit of the positioning control enabled range was activated.

The positioning operation stops when the FLS signal turns OFF (non-continuity).

**GAIN**

The changing of the ratio between two values having a proportional relation. Seen on a graph, the changing of the incline of the characteristics.

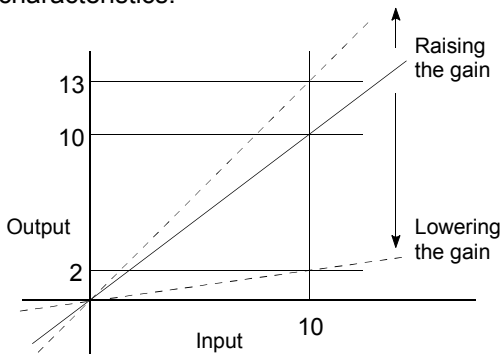


For example, when 10 is output for an input of 10, the output can be changed to 12, 5, etc., by changing the gain.

**HIGH-SPEED MACHINE ZERO POINT RETURN**

In this zero point return method the near-point dog is not detected. The positioning data address is replaced with the machine zero point address, and the positioning data is executed to carry out high-speed positioning to the zero point at a designated speed.

(This is not validated unless a machine zero point return has been carried out first.)


Positioning data command speed

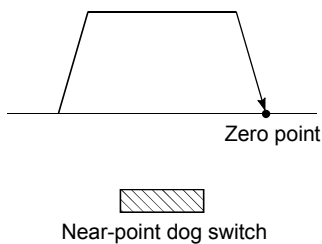

**HIGH-SPEED ZERO POINT RETURN**


The axis returns to the machine zero point at the zero point return speed without detecting the near-point dog.

(This is not validated unless a machine zero point return has been carried out first.)

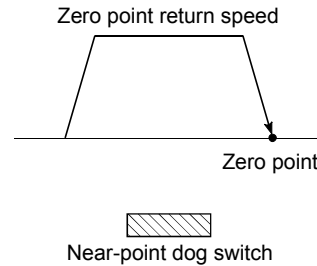


**INCREMENT SYSTEM**

The current value is 0 in this system. Positions are expressed by the designated direction and distance of travel. Also called the relative address system. This system is used in fixed-dimension feed, etc. Compare ABSOLUTE SYSTEM.

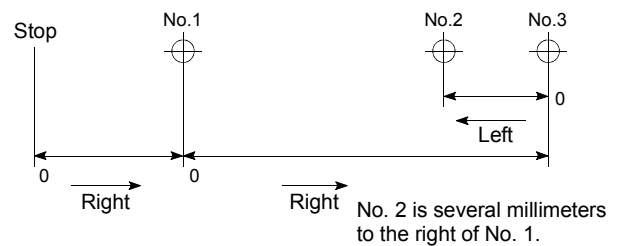

**INCREMENTAL ENCODER**

A device that simply outputs ON/OFF pulses by the rotation of the axis. 1-phase types output only A pulses, and do not indicate the axis rotation direction. 2-phase types output both A and B pulse trains, and can judge the rotation direction. The direction is judged to be forward if the B pulse train turns ON when A is ON, and judged to be reverse if A turns ON when B is ON. There is also another type of incremental encoder with a zero point signal. The most commonly used incremental encoders output between 100 and 10,000 pulses per axis rotation. Refer to "ENCODER".

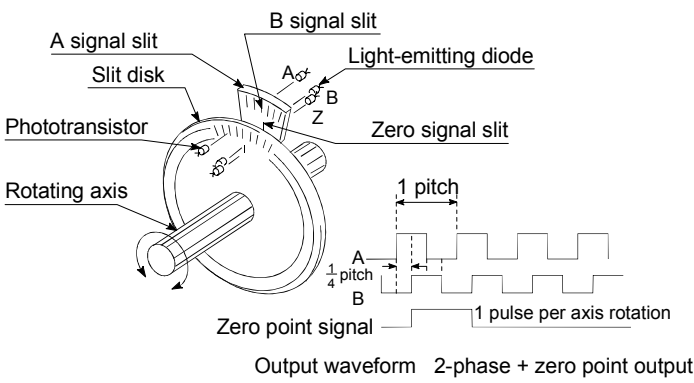

**INERTIA**

The property of an object, when not being affected by external forces, where it tries to maintain its current condition. The inertia moment.

**INPUT TERMINAL**


This is a pin connector wired by the user for inputting data to the AD75 from an external source. It is connected to the machine side. This terminal is used to output the following.

- Near-point dog signal
- Stop signal
- Upper limit signal
- Lower limit signal
- External start signal
- Speed/position changeover signal
- Manual pulse generator

The input No. Xn is not directly related to the program, so it is not used.

**INTERLOCK**

In this condition, the machine is blocked from moving to the next operation until the operation in progress is complete. This function is used to prevent damage to devices and malfunctioning.

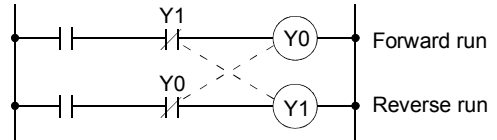

**INTERPOLATION OPERATION**

The operation of two motors simultaneously to carry out a composite operation. The positioning distance, acceleration/deceleration time, speed, etc., for the two motors can be freely set, but they will be combined to move the machine in a straight line, circle, etc. Interpolation operations consist of linear interpolation and circular interpolation.

**INVERTER**

This refers to a device to change a direct current (DC) to an alternating current (AC). The device actually changes the motor speed by changing 50Hz or 60Hz of commercial frequency to direct current once, then changing it again to a 5 to 120Hz alternating current and controlling the motor speed.

**JOG**

This refers to moving the tool in small steps at a time. Inching. Parameter setting is required when carrying out JOG operation.


**KPPS**

This is the abbreviation for "kilopulses per second". 80kPPS equals 80,000 pulses per second.

**LIMIT SWITCH**


This is a switch set to stop a moving object at both ends, etc., of a movement device for safety reasons.

A circuit is created in which the moving body itself presses against the switch to activate the contact and forcibly shut the power OFF. For example, pressing on the actuator in the drawing below activates the internal microswitch. There are various other types.

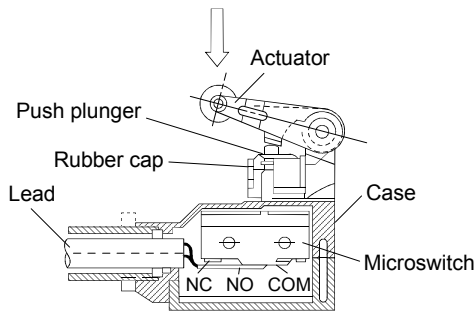

**LINEAR INTERPOLATION**

This automatic operation simultaneously operates the latitudinal (X) feed and longitudinal (Y) feed motors to move the machine in a diagonal line when positioning. Linear interpolation combining axis 1 and axis 2 is possible with the AD75, but the same positioning data Nos. must be used. Refer to the term "INTERPOLATION OPERATION".

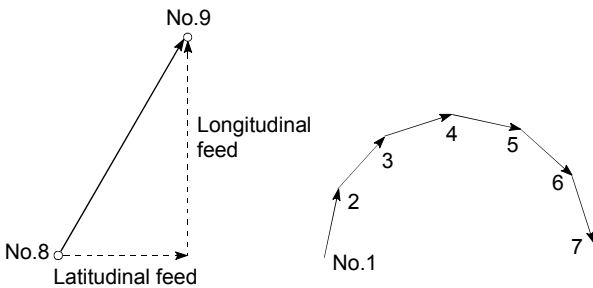

**LOW-INERTIA MOTOR**

This is a motor used when frequent acceleration/deceleration is repeated. Low-inertia motors are longitudinally longer, to decrease the rotor diameter and cover the torque. This enables their inertia moment to be reduced up to 1/3 that of standard motors. The ideal load inertia ratio is 1 or less.

**M CODE (Machine Code)**

These are auxiliary functions that interlock with the positioning operation to replace drills, tighten and loosen clamps, raise and lower welding electrodes, display various data, etc. Either of two modes can be entered when the machine code turns ON: AFTER or WITH. The machine does not move to the next positioning when the machine code is ON. M codes are turned OFF by the programmable controller program.


Code Nos. from 1 to 32767 assigned by the user and used (1: Clamp, 2: Loosen, etc.). Comments can be written after 50 of the M codes, and they can be monitored using a peripheral device or displayed on an external display. Refer to "AFTER MODE" and "WITH MODE".

**MACHINE FEED VALUE**

The zero point address at the completion of the machine zero point return is stored. The current position of the machine coordinates determined by a machine having the zero point address as a reference. Even if the current value is changed, this value will not change.

**MANUAL PULSE GENERATOR**

The handle of this device is manually rotated to generate pulses. This device is used when manually carrying out accurate positioning.

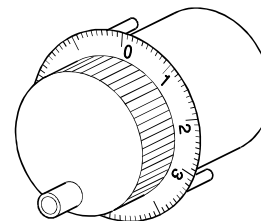

Made by Mitsubishi Electric Corp. (model: MR-HDP01)



**MASTER AXIS**


When carrying out interpolation operations, this is the side on which the positioning data is executed in priority. For example, when positioning with the X axis and Y axis, the side with the largest movement distance will become the master axis, and the speed will follow that axis. The slave axis speed will be ignored.

**MOVEMENT AMOUNT PER PULSE**

When using mm, inch, or angle units, the movement amount is calculated and output from the machine side showing how much the motor shaft moves per pulse. Positioning accuracy in smaller units is not possible. On the motor side, the movement amount per axis rotation is normally designed as a reference, so it is calculated as follows.

Movement amount per pulse =

$$\frac{\text{P rate}}{\text{No. of pulses per encoder rotation}} \times \text{Movement amount per rotation}$$

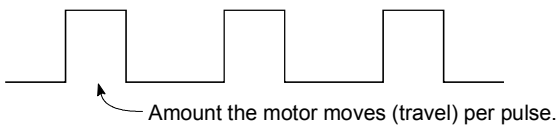


**MULTIPLYING RATE SETTING**

The P rate. Refer to the term "P RATE".

**NEAR-POINT DOG**

This is a switch placed before the zero point. When this switch turns ON, the feedrate is changed to the creep speed. Because of that, the time that this switch is ON must be long enough to allow for the time required for deceleration from the feedrate to the creep speed.

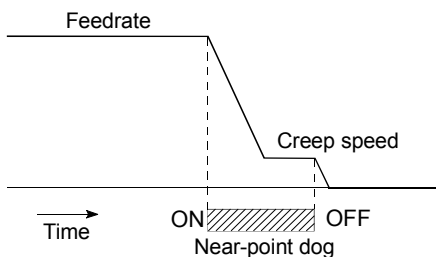

**OPERATION PATTERN**

The kind of operation to be carried out after executing the positioning data is determined.

- 1) If "POSITIONING COMPLETE" is selected, the operation will stop after the positioning is complete.
- 2) If "CONTINUOUS POSITIONING CONTROL" is selected, the next data No. will be automatically executed after the positioning is complete.
- 3) If "CONTINUOUS PATH CONTROL" is selected, the positioning will not be completed. Only the speed will be automatically changed, and the next data No. will be executed.

**OVERRIDE FUNCTION**

With this function, the speed during positioning operations (current speed) can be varied between 1 and 300%.

The speed can also be changed by the same variable rate for continuous positioning with differing designated speeds.

**P RATE (Pulse Rate)**

A coefficient that magnifies the feedback pulses per motor shaft rotation by 2-fold, 3-fold, 1/2 or 1/3.

It is the ratio of the feed pulses and feedback pulses.

For example, when the No. of pulses per motor shaft rotation is set to 2400 pulses, and the P rate is set to 2, the result will be equivalent to 1200 pulses.

The rotation per pulse is 0.15° when 2400 pulses per rotation are set, but this becomes 0.3° when 1200 pulses. The positioning accuracy drops as the P rate is increased.

**PANCAKE MOTOR**

The axial dimension of this motor is approx. 100mm shorter than that of a standard motor. This type of motor is used when the servomotor installation space is narrow.

**PARAMETER**

This is the basic data used in positioning. Parameters are determined by the machine side design, so subsequent changes of parameters must be accompanied by changes in the machine design. Data cannot be written during positioning. The initial parameter values are written by the maker.

**POSITION CONTROL**

This is mainly the control of position and dimension, such as in fixed-dimension feed, positioning, numerical control, etc. This is always controlled with feed pulses. There is also speed control.

**POSITION LOOP GAIN**


This is the ratio of the deviation counter droop pulse count to the command speed (pulse/s).

$$\text{Position loop gain} = \frac{\text{Command speed}}{\text{Droop pulse count}} \text{ (1/s)}$$

The position loop gain can be set with the servo amplifier. Raise the gain to improve the stopping accuracy. However, overshooting will occur if the position loop gain is raised too far, and the operation will become unstable. If the position loop gain is lowered too far, the machine will stop more smoothly but the stopping error will increase.

**POSITION LOOP MODE**

This is one servo control mode used in positioning. It is a mode for carrying out position control. The other servo control modes are the speed loop mode for carrying out speed control, and the torque loop mode for carrying out torque control (current control).

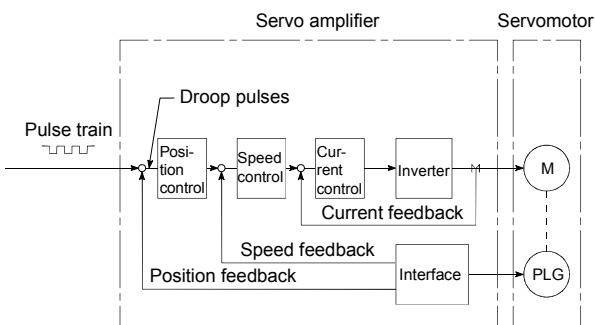


**POSITIONING**

Accurately moving the machine from a point to a determined point. The distance, direction, speed, etc., for that movement are designated by the user. Positioning is used in operations such as cutting sheets, drilling holes in plates, mounting parts on a PCB, and welding. Positioning is also used with robots.

**POSITIONING COMPLETE SIGNAL**

This is a signal that occurs when the positioning is complete. A timer set beforehand starts when this signal is output, and the machine movement stops for that time. This signal is used to turn OFF the positioning start signal.

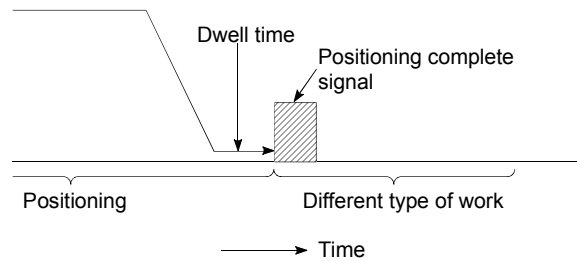

**POSITIONING DATA**

This is data for the user to carry out positioning. The No. of points to which positioning is carried out (the No. of addresses) is designated by the user. In the AD75, this is a maximum of 600 points. As a principle, positioning is executed in the order of the data Nos.

**POSITIONING PARAMETER**

This is basic data for carrying out positioning control. Types of data include control unit, movement amount per pulse, speed limit value, upper and lower stroke limit values, acceleration/deceleration time, positioning method, etc. Parameters have an initial value, so that value is changed to match the control conditions.

**POSITIONING START**

This refers the act of designating a target data No. and starting the positioning.  
The operation after the positioning is complete for that data No. is determined by the data No.'s positioning pattern.

**PTP Control (Point To Point Control)**


This is a type of positioning control. With this control method, the points to be passed are designated at random locations on the path. Movement only to a given target positioning is requested. Path control is not required during movement from a given point to the next value.

**PU (Programming Unit)**

This is the abbreviation for "programming unit".

**PULSE**

The turning ON and OFF of the current (voltage) for short periods. A pulse train is a series of pulses.




**REAL-TIME AUTO TUNING (Real-time Automatic Tuning)**

Refer to "AUTO TUNING".

**REFERENCE AXIS SPEED**

This is the speed of the reference axis during interpolation operations.

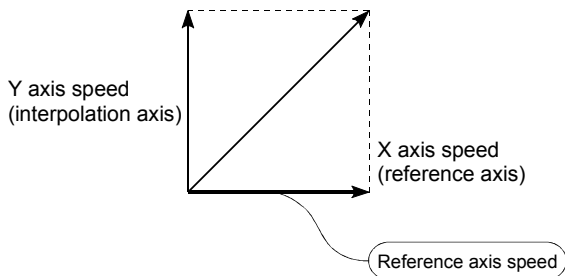

**REGENERATIVE BRAKE OPTION**

This function is an option. It is used when carrying out highly repetitive acceleration/deceleration.  
Refer to "EXTERNAL REGENERATIVE RESISTOR".

**RLS SIGNAL (Reverse Limit Signal)**


This is the input signal that notifies the user that the limit switch (b contact configuration, normally continuity) installed at the lower limit of the positioning control enabled range was activated.  
The positioning operation stops when the RLS signal turns OFF (non-continuity).

**ROTARY TABLE**

A round table on which the workpiece is placed. Positioning control is carried out while rotating the workpiece in a 360° range.


**S-CURVE ACCELERATION/DECELERATION**

In this pattern, the acceleration and deceleration follow a sine curve, and the movement is smooth. The S-curve ratio can be set from 1 to 100%.

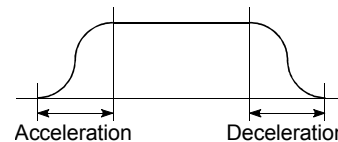


**SERVO LOCK**

In positioning using a servomotor, working power is required to hold the machine at the stop position.  
 (The position will be lost if the machine is moved by external power.)  
 This kind of state is called servo lock or servo lock torque.

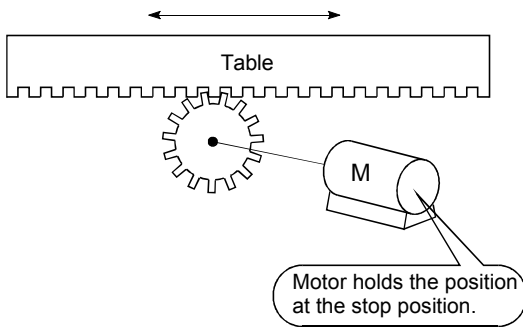

**SERVO ON**

The servo amplifier will not operate if the servo amplifier is in a normal state and this servo ON signal is OFF.

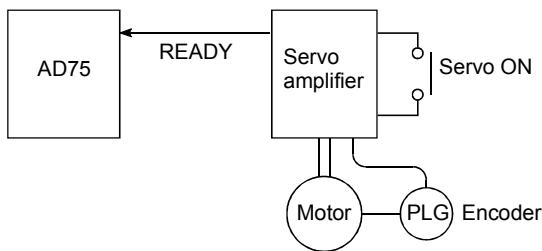

**SERVOMOTOR**

A motor that rotates true to the command. Servomotors are highly responsive, and can carry out frequent high-speed and high-accuracy starts and stops.  
 DC and AC types are available, as well as large-capacity motors. A pulse encoder accessory for speed detection is common, and feedback control is often carried out.

**SETTING UNIT**

This is one setting item of the positioning reference parameters. The unit to be used is designated as mm, inch, degree, or pulse.

**SKIP FUNCTION**

When a SKIP signal is input, the positioning being executed is interrupted, the motor is deceleration stopped, and the next positioning is automatically carried out.

**SLAVE AXIS**

During interpolation operation, the positioning data is partially ignored on this side. This axis is moved by the master axis data.

**SPEED CHANGEOVER CONTROL**

With this control, positioning is carried out to the end point of the movement amount while changing the speed at the speed changeover point during positioning control.

**SPEED CONTROL**

Speed control is mainly carried out with the servomotor. It is an application for grindstone rotation, welding speed, feedrate, etc. Speed control differs from position control in that the current position (address) is not controlled.

**SPEED INTEGRAL COMPENSATION**

This is one item in the servo parameters of the positioning data. It is used to raise the frequency response during speed control, and improve transient characteristics.  
 When adjusting the speed loop gain, raising this value is effective if the overshooting during acceleration/deceleration remains large.  
 This compensation is set in ms units.

**SPEED LIMIT VALUE**

This is the max. speed for positioning. Even if other data is mistakenly set to a higher speed than this, the positioning will be carried out at this speed limit value when it is set in the parameters. The acceleration time becomes the time to accelerate from a stopped state to the speed limit value, and the deceleration time becomes the time to decelerate from the speed limit value to a stopped state.

**SPEED LOOP GAIN**

This is one item in the servo parameters of the positioning data. It expresses the speed of the control response during speed control. When the load inertia moment ratio increases, the control system speed response decreases and the operation may become unstable. If this happens, the operation can be improved by raising this setting value.


The overshoot will become larger if the speed loop gain is raised too far, and motor vibration noise will occur during operation and when stopped.

**SPEED LOOP MODE**

This is one servo control mode used in positioning. It is a mode for carrying out speed control. Refer to "POSITION LOOP MODE".

**SPEED/POSITION CONTROL CHANGEOVER MODE**

This is one method used for positioning. It is an application for operations such as high-speed movement to a point unrelated to positioning, then set dimension movement from the changeover signal activation point.



**START COMPLETE**

This signal gives an immediate response notifying the user that the AD75 that was started is now in a normal state and can start positioning.

**STARTING AXIS**

One of the AD75 axis system axes (axis 1, axis 2, or axis 3) or the reference axis for the interpolation operation is designated as the starting axis.

**STATUS**

Data showing the state of the machine. Collectively refers to signals that turn ON when the battery voltage drops, during zero point requests, during dwell time, etc.

**STEP FUNCTION**

When the operation is designed so that several positioning data Nos. are consecutively run, this function can be used to carry out a test operation for 1 data item at a time.

**STOP SETTling TIME**

Refer to the term "Dwell TIME".

**STOP SIGNAL**

In positioning control, this is the input signal X that directly stops the operation from an external source.

The operation stops when the external STOP signal (a contact) turns ON (continuity), and X turns ON.


**STROKE**

The stroke is the variation in the operation by the distance from a stopped state to the next stopped state after a movement.

**STROKE LIMIT**


This is the range in which a positioning operation is possible, or the range in which the machine can be moved without damage occurring.

For operations using a worm gear, the stroke limit is determined by the length of the screw. For operations using a fixed-dimension feed, it is determined by the max. dimension to be cut. The upper and lower limits are set in the parameters, but a separate limit switch should be established and an emergency stop circuit outside the programmable controller should be created. Refer to the term "LIMIT SWITCH".

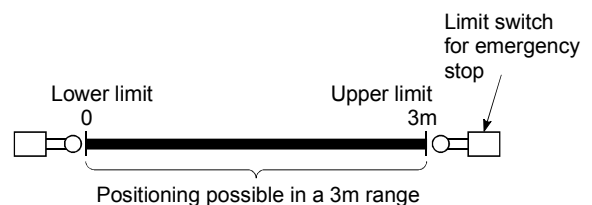

**SUDDEN STOP**

A stop carried out in a shorter time than the deceleration time designated in the parameters.

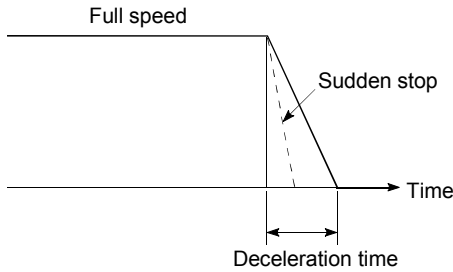

**TEACHING**

When the positioning address is uncertain, or gauging is required, this function is used by the manual operation to search for and teach the position to the machine.

For example, complex addresses such as drawings can be taught by tracing a model, and the positioning operation can be reproduced.

**TEACHING UNIT**

This is a device capable of writing, reading, running, and monitoring data. It is used connected to the AD75. The model is AD75TU.

**TORQUE CONTROL**

In this function, a limit is established for the resistance torque applied to the servomotor. The power is turned OFF if torque exceeding that value is applied to the motor. When excessive torque is applied to a motor, it causes the current to suddenly increase. Motor burning and other stress on the motor occurs, and the life of the motor is shortened. This function utilizes the sudden increase in the torque when the machine returns to the zero point to issue a command to stop the motor.

**TORQUE LOOP MODE**


Also called the current loop mode. Refer to "POSITIONING LOOP MODE".

**TORQUE RIPPLE**

Torque width variations, deviations in the torque.

**TURNTABLE**

A rotating table, which is turned using power. The table is used divided from one 360° rotation into the required locations for work. The positioning control unit is "degree".

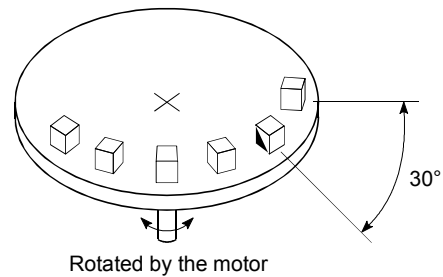

**UNIT SETTING**

This is the setting of the unit for the actual address to which positioning is required, or for the movement amount. The following units can be set: mm, inch, degree and pulse. The initial value in the parameters is a pulse unit.

**WARNING**


A warning is output as a warning code in when an abnormality is detected that is not serious enough to require cancellation or stoppage of the positioning operation. Warnings are handled differently than errors.

**WITH MODE**

This is the mode that outputs the M code before the start of the positioning. This mode turns ON at the positioning start, enabling voltage to be applied to the welding electrodes, display of positioning speeds, etc. Refer to the term "AFTER MODE".


**WORM GEAR**

This is the basic screw in mechanisms that position using screw rotation. Ball screws are often used to reduce backlash and dimension error.

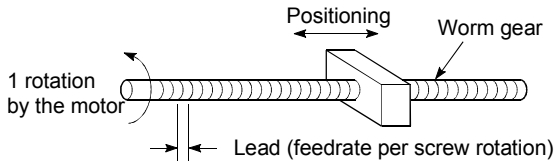


**XY TABLE**

This is a device that moves a table in the X (latitudinal) and Y (longitudinal) directions so that positioning can be carried out easily. There are also commercially available products.

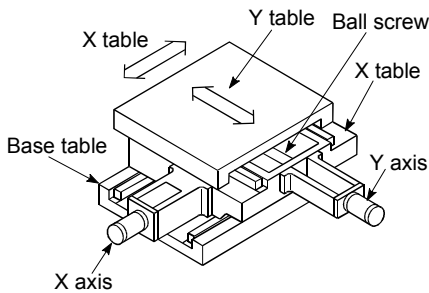

**ZERO POINT**

This is the reference position for positioning. Positioning cannot start without a reference point. The zero point is normally set to the upper or lower stroke limit.



**ZERO POINT RETURN METHOD**

The zero point return methods are shown below. The method used depends on the machine structure, stopping accuracy, etc. Machine zero point returns can be carried out when the zero point return parameters are written.

- 1) Near-point dog method.
- 2) Count method
- 3) Data setting method

**ZERO POINT RETURN PARAMETER**

This parameter is required when returning to the zero point. It is determined by the machine side design, so subsequent changes of this parameter must be accompanied by changes in the machine design.

The zero point is the reference for positioning operations, so if the zero point is lost due to a power failure during positioning, or because the power is turned OFF and the machine is moved manually, etc., it can be restored by carrying out a machine zero point return. When a machine zero point return command is issued, the machine will move in search of the near-point dog regardless of the current value, and will stop at the zero point. At this time, the current value will be rewritten to the zero point address. Data cannot be written during positioning. With the AD75, data is always written for all axes (from 1 to 3 axes). Refer to the term "NEAR-POINT DOG".

**ZERO POINT RETURN REQUEST**

This signal turns ON when there is an error with the AD75. It will turn ON in the following situations.

- 1) When the power is turned ON.
- 2) When the PLC READY signal turns from OFF to ON.
- 3) When the machine zero point return starts.
- 4) When the servo amplifier power is turned OFF.

The user judges whether to carry out a machine zero point return in the above situations.

**ZERO POINT SHIFT FUNCTION**

The zero point position can be shifted to the plus or minus direction by executing a machine zero point return and determining a shift amount for the position at the completion of the machine zero point return.

A zero point can be set at a position besides the zero point position, or outside the dog switch.

**ZERO POINT SIGNAL**

Indicates PG0 (detected once per revolution) of the pulse encoder. Also called the Z phase. (In the case of the SSCNET connection type, data equivalent to the zero point signal is sent from the servo amplifier.)

## Appendix 6 Positioning control troubleshooting

Trouble type	Questions/Trouble	Remedy	No.
Parameter	Display reads "FFFF <sub>H</sub> " when a parameter is read with a AD75 software package.	The programmable controller CPU power was turned OFF or the programmable controller CPU was reset, etc., during flash ROM writing, which deleted the data in the flash ROM. Initialize the parameters, and reset the required parameters. (Refer to section "13.2 Parameter initialization function" for details.)	1
	How can the parameters be returned to their initial values?	Set the [Cd.10] Parameter initialization request to "1". (Refer to section "13.2 Parameter initialization function" for details.)	2
	A parameter error occurred although the parameter was set correctly in the AD75 software package.	The parameter may have been overwritten in the sequence program. Review the sequence program.	3
Hardware stroke limit	The machine overruns if operating at high speeds when the hardware stroke limit range is exceeded.	In the AD75, deceleration stops are executed after the machine exceeds hardware stroke limit range. Because of this, more time is required for the deceleration stop as the speed increases, and the overrun becomes larger. (The deceleration time becomes shorter at lower speeds, so the overrun becomes smaller.)	4
	When the machine exceeded the hardware stroke limit range, positioning toward inside the range was started, but the machine did not start.	Use a "JOG operation" or "Manual pulse generator operation" to return the machine to inside the hardware stroke limit range. (When the hardware stroke limit range is exceeded, positioning will not start toward inside the range even when so commanded. Once the range is exceeded, a return to inside the range can only be executed using a "JOG operation" or "Manual pulse generator operation".)	5
Degree	Exactly one rotation is required, but the setting range for a "degree" unit setting is "0 to 359.999...". Won't the rotation deviate by "0.00...1"?	Designate "360.000" in the INC control. The motor will make exactly one rotation.	6
Movement amount per pulse	If the "movement amount per pulse" is calculated as written in the manual, settings smaller than the basic parameter setting range cannot be carried out.	Set "movement amount per pulse" in the AD75 using the three parameter values of [Pr.2] to [Pr.4]. Try setting the values following the explanations for each parameter.	7
Override	Will an override setting value written before starting be valid?	It will be valid.	8
	During tracking control, will the override still be valid after the point is passed?	It will still be valid.	9
	How can the override be canceled?	Set the "[Cd.18] Positioning operation speed override" to "100".	10



Trouble type	Questions/Trouble	Remedy	No.
Acceleration/deceleration time	How can the deceleration stop time during stopping be shortened using the hardware stroke limit?	Set "1: Sudden stop" in the "[Pr.38] Stop group 1 sudden stop selection", and reduce the setting value of "[Pr.37] Sudden stop deceleration time".	11
	The motor does not operate at "60000ms" although the acceleration/deceleration time is set to "60000ms".	The value set for the acceleration/deceleration time is the time required for the machine to accelerate from speed "0" to the value set in "[Pr.7] Speed limit value". Because of that, the acceleration/deceleration time will also be shorter than "60000ms" if the command speed value is smaller than the "[Pr.7] Speed limit value". (Refer to the explanation for [Pr.8] for details.)	12
	Can each acceleration/deceleration time be individually set to trapezoidal or S-curve acceleration/deceleration?	The trapezoidal and S-curve acceleration/deceleration processing is a common setting for all acceleration/deceleration times, so individual setting is not possible. (Refer to the section "12.6.7 Acceleration/deceleration process function".)	13
	The machine starts and stops suddenly when carrying out JOG operations and positioning operations. (Using an MR-J2S servo amplifier.)	Review the parameter settings for acceleration/deceleration time, speed limit value, JOG speed limit value, JOG acceleration/deceleration time, etc.	14
	How can a value higher than "65536ms" be set in the acceleration/deceleration time?	A value up to "8388608ms" can be set when the "[Pr.25] Size selection for acceleration/deceleration time" is set to "1".	15
Positional deviation	The physical position deviates from the commanded position, although the positioning is complete (and the monitored current position is correct).	If the deviation counter value is not "0", the servo side is still moving. Increase the torque.	16
	When positioning to "6300mm" is commanded with 1-axis direct control (ABS type), the machine position is "6299mm" when the positioning is complete.	Depending on the "Movement amount per pulse" setting, the positioning may be insufficient by the error amount when positioning is attempted to an address for which the No. of pulses was generated. This is because the movement is controlled so as not to exceed the designated address when the error amount movement amount is generated to the AD75. In this situation, adjust the "Movement amount per pulse" setting so the positioning completes at the correct position.	17
Electronic gear	A setting of "1 $\mu$ m = 1pulse" is required in the following system. <ul style="list-style-type: none"> <li>Ball screw pitch = 10mm</li> <li>No. of feedback pulses = 8192 pulse</li> </ul>	In this case, the following values will result. <ul style="list-style-type: none"> <li>No. of pulses per rotation = 8192</li> <li>Movement amount per rotation = 10000</li> <li>Unit magnification = 10</li> </ul> Therefore, the "Movement amount per pulse" will become "1.2207 $\mu$ m". This value is fixed by the machine system, so it cannot be changed. Thus, the setting "1 $\mu$ m = 1 pulse" cannot be achieved.	18

Trouble type	Questions/Trouble	Remedy	No.
Error compensation	<p>The machine only moves to "10081230", although positioning with a command value of "10081234" carried out.</p> <p>How can the error be compensated?</p> <p>The following values are currently set.</p> <ul style="list-style-type: none"> <li>Pr.2 No. of pulses per rotation = 8192</li> <li>Pr.3 Movement amount per rotation = 8000</li> </ul>	<p>Reset Pr.3 and Pr.2 in the following order.</p> <ol style="list-style-type: none"> <li>1) Calculate "8192/8000 × 10081230/10081234".</li> <li>2) Obtain the reduced value.</li> <li>3) Set the numerator in "Pr.3 Movement amount per rotation", and the denominator in "Pr.2 No. of pulses per rotation".</li> </ol>	19
Zero point return	<p>When carrying out a count method machine zero point return, the message "Leave Sufficient Distance From The Zero Point Position To The Near-Point Dog OFF." appears. Is there a problem if the distance is short?</p>	<p>The near-point dog must be set to turn OFF at a position after the zero point is passed. (When the machine zero point return is started on the near-point dog ON in a count method machine zero point return, the machine enters a normal zero point return operation after returning to the near-point dog OFF region.) (If the near-point dog is turned OFF before the zero point, and the machine zero point return is started between the near-point dog OFF position and the zero point, the machine will mistakenly interpret that its current position is before the near-point dog ON position, and it will pass over the zero point and continue moving.)</p>	20
	<p>In the near-point dog method machine zero point returns, the stop positions are not uniform.</p>	<p>Carry out the following measures.</p> <ol style="list-style-type: none"> <li>1) Separate the near-point dog signal detection position and zero point.</li> <li>2) Lower the values in "Pr.48 Zero point return speed" and "Pr.49 Creep speed".</li> <li>3) Confirm whether the near-point dog signal turn ON normally.</li> <li>4) Check that there is no play (backlash) in the machine system.</li> </ol>	21
	<p>Can the machine zero point return be carried out with the zero point return retry function when it is started with the near-point dog ON and the upper/lower limit OFF?</p>	<p>A "Hardware stroke limit error" will occur and the operation will not be carried out. (The machine will interpret any position where the near-point dog is ON as being within the working range, and that the upper/lower limit is ON.)</p>	22
	<p>Are ABS and INC positioning possible without carrying out a zero point return?</p>	<p>They are possible. In this case, the position where the power is turned ON is handled as the current feed position "0".</p>	23
	<p>After a zero point return, the zero point return request flag sometimes turns ON for no apparent reason.</p>	<p>The zero point return request flag turns ON in the following cases.</p> <ol style="list-style-type: none"> <li>1) When the power is turned ON.</li> <li>2) When the PLC READY signal turns from OFF to ON.</li> <li>3) When a machine zero point return is carried out.</li> <li>4) When the servo amplifier power is turned OFF.</li> </ol> <p>If no problem is found when the above are checked, then it is possible that the communication is being interrupted by "a fault in the SSCNET cable", "noise influence", etc.</p>	24
	<p>The zero point return complete flag (Md.40 Status: b4) sometimes turns ON when it shouldn't be ON.</p>	<p>Check whether the power supply is unstable.</p>	25

Trouble type	Questions/Trouble	Remedy	No.
Start	The positioning start signal [Y10] is kept ON until the BUSY signal is OFF, but is there any problem with turning it OFF before the BUSY signal turns OFF?	After the BUSY signal turns ON, there is no problem with turning [Y10] OFF before the BUSY signal turns OFF. (The AD75 detects the rising edge (OFF → ON) of the positioning start signal [Y10].)	26
	The operation will not start even when the start signal is turned ON.	Check the "[Md.35] axis operation status" and "[Md.33] axis error No". Review the sequence program and normalize the start timing.	27
Stop	How many ms should the axis stop signal [Y13] be turned ON for?	The signal should be turned ON at 4ms or more. (If possible, set the signal so it does not turn ON only momentarily, but instead stays ON until the BUSY signal turns OFF. This will keep the stop signal from skipping.)	28
	How can a sudden stop be selected?	Set "1: Sudden stop" in the parameter from [Pr.38] to [Pr.40] corresponding to the stop group, and reduce the setting value of "[Pr.37] Sudden stop deceleration time".	29
	"Normal deceleration stop" was selected in "[Pr.40] Stop group 3 sudden stop selection", and Y stop was turned ON. If the [Pr.40] setting is changed to "sudden stop" during a deceleration stop, and the Y stop signal turns from OFF to ON, will the operation change to a sudden stop from that point?	The operation will not change. Even if the same stop factor is input again during the deceleration stop, it will be ignored. The same deceleration stop process used when the stop signal was first input will be continued. (This also applies for [Pr.38] and [Pr.39].)	30
Circular interpolation	ABS type circular interpolation operates normally, but a vertically oblong circle results when INC type circular interpolation is carried out.	The address designation may be incorrect. When carrying out INC type circular interpolation, designate the relative addresses from the starting point of both the center point and end point.	31
Speed/position changeover control	Can the speed be changed during speed control and position control by speed/position changeover control?	The speed during speed control and position control cannot be set separately, but a speed change is possible if executed after the speed/position changeover signal turns ON.	32
JOG operation	Even if the JOG start signal is turned ON, the response until it turns ON is sometimes slow.	Either of the following is possible. 1) The sequence program may be incorrect. Check by creating a test program in which the JOG start signal is turned ON only. 2) If the machine is hitting something when the torque setting is low, it may be trying to move by JOG operation in the opposite direction. In this case, the machine will start moving only after the internal droop pulses have been reached 0 in the counter, even if the JOG start signal has been turned ON. This makes it seem that the response is slow.	33
	The operation is not carried out at the set JOG speed, although the speed limit value has not been reached.	Either of the following is possible. 1) The JOG start signal may be chattering. Monitor the JOG start signal to confirm whether it is chattering. 2) The "[Pr.32] JOG speed limit value" may not be appropriate. Review the setting value and carry out the JOG operation again.	34
	When a JOG operation is attempted, an error results and the machine does not move.	The "[Pr.32] JOG speed limit value" may be larger than the "[Pr.7] Speed limit value". Review the parameters and carry out the JOG operation again.	35

Trouble type	Questions/Trouble	Remedy	No.
Manual pulse generator operation	Is it possible to count the pulses when the B phase is set to "1", and only A phase pulses are input?	Not possible. (The AD75 counts 1, 0, 1, 0.)	36
	Can a manual pulse generator other than the Mitsubishi MR-HDP01 be used?	Other manual pulse generators can be used if they conform to section "3.5 Specifications of interfaces with external devices."	37
	Can one manual pulse generator be operated connected to several AD75 modules?	This is possible if the system conforms to the electrical specifications.	38
Current value change	The BUSY signal is not canceled by the current value change. How can it be canceled?	The BUSY signal may remain if the scan time is long. Use a complete signal to check whether the new value has been executed.	39
AD75 READY signal	The AD75 READY signal does not turn OFF even when the PLC READY signal [Y1D] is turned ON.	"A parameter error" has occurred. Confirm the error No. in the error history, and correct the parameter.	40
M code ON signal	Is there any problem with setting an M code ON signal OFF request in the next scan after the M code ON signal ON?	The AD75 checks the M code ON signal OFF request every "56.8ms", so there is a possibility that the M code ON signal OFF may be delayed by a maximum of "56.8ms" after the M code ON signal ON, even if an M code ON signal OFF request is set.	41
Module	Where is the current version of the AD75 written?	The version is shown on the label on the front of the module. (Refer to section "4.1.2 Names of each part".)	42
	Is it possible that the delivered module is a different version than the version delivered 1 year ago?	That is possible.	43
	Error 537 (PLC READY OFF start) occurred when the new module was connected. (The sequence program is the same.)	The parameters in the module may differ. Check if the AD75 READY signal [X0] turns OFF when the PLC READY signal [Y1D] turns ON. When the PLC READY signal is ON but the AD75 READY signal is ON, the parameter error has occurred. Check the error code and modify the parameter with the error.	44
Motor	The motor only rotates in one direction.	The parameter settings on the AD75 side may not match those on the servo side. Check the parameter settings.	45
	Can the current motor speed be monitored?	The speed shown on the AD75 monitor is calculated from the No. of pulses output from the module. Thus, the actual motor speed cannot be monitored. ("Md.31 Feedrate" monitors the commanded speed. It does not show the actual speed.)	46
AD75 software package	Can AD75M□ models be used by SW0IVD-AD75P-E models?	No.	47
Block transmission	How can it be judged that the block transmission was carried out normally?	If the transfer is carried out normally, "0" will be stored in buffer memory "5103". If the transfer ended abnormally, a warning will be stored in the "Md.34 Axis warning No".	48
Writing from the computer link module	How can the address be designated when writing data from the computer link module to the AD75?	Designate an address in the AD75 buffer memory address "0" that will be interpreted as the computer link module buffer memory address "800H". (Refer to the User's Manual for the module being used for details.)	49

Trouble type	Questions/Trouble	Remedy	No.
Error/warning	Error 938 (backlash compensation amount error 2) occurs even when the backlash compensation value is set to "1".	$0 \leq \frac{\text{Backlash compensation value}}{\text{Movement amount per pulse}} \leq 255$ Setting is not possible if the above equation is not satisfied. Adjust by setting "[Pr.4] Unit magnification" to 10-fold (or 100-fold, or 1000-fold), and setting "[Pr.3] Movement amount per rotation" to 1/10 (or 1/100, or 1/1000).	50
	When a JOG operation is attempted, errors such as error 104 (hardware stroke limit+) or error 105 (hardware stroke limit-) occur and the machine does not move.	The hardware stroke limit wiring has probably not been carried out. Refer to section "12.4.4 Hardware stroke limit function" for details, and wire accordingly.	51
	Error 971 (tracking control mode error) occurs. What could be causing the error?	A value besides "0" or "1" may be set in the "[Pr.44] Near pass mode selection for path control". Review the set sequence program, and reset the correct parameters.	52
	Error 997 (speed selection at zero point shift error) appears when the PLC READY signal [Y1D] turns from OFF to ON.	A value besides "0" or "1" may be set in the "[Pr.57] Speed designation during zero point shift". Review the set sequence program, and reset the correct parameters.	53
	When the start signal was turned ON immediately after the stop signal ON, warning 100 (start during operation) was detected, and the start was ignored.	The AD75 starts the deceleration stop process when the stop signal ON is detected. Thus, the machine interprets that "positioning is still being executed" immediately after the stop signal ON. Even if the start signal is turned ON at that time, the start request will be ignored and warning 100 will occur.	54
	Does warning 500 (deceleration and stop speed change) occur only during "stop deceleration" and "automatically deceleration"? Is there any problem if the operation is continued in that state without resetting the error?	The warning occurs only at those times mentioned at the left. Because this is a warning, there is no problem if the operation can be continued without resetting the error. (When the speed is changed using the override, the new value will not be reflected on the data being executed, but will be reflected from the next start.)	55
Positioning complete signal	Position control was performed but positioning complete signal does not turn ON.	Positioning may not have been completed normally due to occurrence of a stop cause. Check the axis monitor "[Md.35] Axis operation status" after the BUSY signal has turned OFF. During stop: The stop signal has turned ON during positioning. Check the condition under which the stop signal (Y stop, external stop) turns ON. During error occurrence: An error occurred during positioning. Confirm the error occurrence cause from "[Md.33] Axis error No.".	56
		The setting of detailed parameter 2 "Positioning completion signal output time" is 0 or shorter than the scan time. Set the time that can be detected securely in the sequence program.	57

## Appendix 7 List of buffer memory addresses

The following shows the relation between the buffer memory addresses and the various items.

(Any address not given in the list must not be used. If used, the system may not operate correctly.)

Buffer memory address			Item	Memory area
Axis 1	Axis 2	Axis 3		
0	150	300	Pr.1 Unit setting	Basic parameters 1
1	151	301	Pr.2 No. of pulses per rotation (Ap)	
2	152	302	Pr.3 Movement amount per rotation (Al)	
3	153	303	Pr.4 Unit magnification (Am)	
6	156	306	Pr.7 Speed limit value	Basic parameters 2
7	157	307		
8	158	308	Pr.8 Acceleration time 0	
9	159	309		
10	160	310	Pr.9 Deceleration time 0	
11	161	311		
12	162	312	Pr.10 Bias speed at start	
13	163	313		
15	165	315	Pr.12 Backlash compensation amount	Detailed parameters 1
16	166	316	Pr.13 Software stroke limit upper limit value	
17	167	317		
18	168	318	Pr.14 Software stroke limit lower limit value	
19	169	319		
20	170	320	Pr.15 Software stroke limit selection	
21	171	321	Pr.16 Software stroke limit valid/invalid setting	
22	172	322	Pr.17 Command in-position width	
23	173	323		
24	174	324	Pr.18 Torque limit setting value	
25	175	325	Pr.19 M code ON signal output timing	
26	176	326	Pr.20 Speed changeover mode	
27	177	327	Pr.21 Interpolation speed designation method	
28	178	328	Pr.22 Current feed value during speed control	
29	179	329	Pr.23 Manual pulse generator selection	
31	181	331	Pr.25 Size selection for acceleration/deceleration time	
36	186	336	Pr.26 Acceleration time 1	Detailed parameters 2
37	187	337		
38	188	338	Pr.27 Acceleration time 2	
39	189	339		
40	190	340	Pr.28 Acceleration time 3	
41	191	341		
42	192	342	Pr.29 Deceleration time 1	
43	193	343		
44	194	344	Pr.30 Deceleration time 2	
45	195	345		
46	196	346	Pr.31 Deceleration time 3	
47	197	347		
48	198	348	Pr.32 JOG speed limit value	
49	199	349		
50	200	350	Pr.33 JOG operation acceleration time selection	

Buffer memory address			Item	Memory area
Axis 1	Axis 2	Axis 3		
51	201	351	Pr.34 JOG operation deceleration time selection	Detailed parameters 2 Positioning parameters
52	202	352	Pr.35 Acceleration/deceleration process selection	
53	203	353	Pr.36 S-curve ratio	
54	204	354	Pr.37 Sudden stop deceleration time	
55	205	353		
56	206	356	Pr.38 Stop group 1 sudden stop selection	
57	207	357	Pr.39 Stop group 2 sudden stop selection	
58	208	358	Pr.40 Stop group 3 sudden stop selection	
59	209	359	Pr.41 Positioning complete signal output time	
60	210	360	Pr.42 Allowable circular interpolation error width	
61	211	361		
62	212	362	Pr.43 External start function selection	
64	214	364	Pr.150 Setting for the restart allowable range when servo OFF to ON	
65	215	365		
66	216	366	Pr.44 Near pass mode selection for path control	
70	220	370	Pr.45 Zero point return method	Zero point return basic parameters
71	221	371	Pr.46 Zero point return direction	
72	222	372	Pr.47 Zero point address	
73	223	373		
74	224	374	Pr.48 Zero point return speed	
75	225	375		
76	226	376	Pr.49 Creep speed	
77	227	377		
78	228	378	Pr.50 Zero point return retry	
80	230	380	Pr.52 Setting for the movement amount after near-point dog ON	
81	231	381		
82	232	382	Pr.53 Zero point return acceleration time selection	
83	233	383	Pr.54 Zero point return deceleration time selection	
84	234	384	Pr.55 Zero point shift amount	
85	235	385		
86	236	386	Pr.56 Zero point return torque limit value	
88	238	388	Pr.57 Speed designation during zero point shift	
89	239	389	Pr.58 Dwell time during zero point return retry	
91	241	391	Pr.59 Absolute position restoration selection	Zero point return parameters

Buffer memory address			Item	Memory area
Axis 1	Axis 2	Axis 3		
100	250	400	Pr.100 Servo series	Servo basic parameters
101	251	401	Pr.101 Amplifier setting	
102	252	402	Pr.102 Regenerative brake resistor	
103	253	403	Pr.103 Motor type	
104	254	404	Pr.104 Motor capacity	
105	255	405	Pr.105 Motor speed	
106	256	406	Pr.106 Feedback pulse	
107	257	407	Pr.107 Rotation direction	
108	258	408	Pr.108 Auto tuning	
109	259	409	Pr.109 Servo response setting	
112	262	412	Pr.112 Load inertia ratio	Servo adjustment parameters
113	263	413	Pr.113 Position loop gain 1	
114	264	414	Pr.114 Speed loop gain 1	
115	265	415	Pr.115 Position loop gain 2	
116	266	416	Pr.116 Speed loop gain 2	
117	267	417	Pr.117 Speed integral compensation	
118	268	418	Pr.118 Notch filter selection *1	
119	269	419	Pr.119 Feed forward gain	
120	270	420	Pr.120 In-position range	
121	271	421	Pr.121 Solenoid brake output	
122	272	422	Pr.122 Monitor output mode selection	
123	273	423	Pr.123 Option function 1	
124	274	424	Pr.124 Option function 2	
125	275	425	Pr.125 Low pass filter/adaptive vibration suppression control	
127	277	427	Pr.127 Monitor output 1 offset	
128	278	428	Pr.128 Monitor output 2 offset	
129	279	429	Pr.129 Pre-alarm data selection	
130	280	430	Pr.130 Zero speed	
131	281	431	Pr.131 Error excessive alarm level	
132	282	432	Pr.132 Option function 5	
133	283	433	Pr.133 Option function 6	
134	284	434	Pr.134 PI-PID switching position droop	
136	286	436	Pr.136 Speed differential compensation	
138	288	438	Pr.138 Encoder output pulses	
149	299	449	Pr.149 Servo parameter transmission setting	

\*1: Called "Machine resonance suppression filter 1" in the MR-J2S-B.

\*2: Some of the servo parameters do not exist depending on the servo amplifier. For details, refer to section "5.1.4 Setting items for servo parameters".



Buffer memory address																Item	Memory area	
Common for axis 1, axis 2, and axis 3																		
450																Md.1	In test mode flag	System monitor data Monitor data
451																Md.2	Module name	
452 453 454 455																Md.3	OS type	
456 457																Md.4	OS version	
460																Md.5	Clock data (hour: minute)	
461																Md.6	Clock data (second: 100 ms)	
(0)	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)	(13)	(14)	(15)	(pointer No.)		
462	467	472	477	482	487	492	497	502	507	512	517	522	527	532	537	Md.7	Start axis	
463	468	473	478	483	488	493	498	503	508	513	518	523	528	533	538	Md.8	Operation type	
464	469	474	479	484	489	494	499	504	509	514	519	524	529	534	539	Md.9	Start time (Hour: minute)	
465	470	475	480	485	490	495	500	505	510	515	520	525	530	535	540	Md.10	Start time (Second: 100 ms)	
466	471	476	481	486	491	496	501	506	511	516	521	526	531	536	541	Md.11	Error judgment	
542																Md.12	Start history pointer	
(0)	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)	(13)	(14)	(15)	(pointer No.)		
533	548	553	558	563	568	573	578	583	588	593	598	603	608	613	618	Md.13	Start axis	
534	549	554	559	564	569	574	579	584	589	594	599	604	609	614	619	Md.14	Operation type	
535	550	555	560	565	570	575	580	585	590	595	600	605	610	615	620	Md.15	Start time (Hour: minute)	
536	551	556	561	566	571	576	581	586	591	596	601	606	611	616	621	Md.16	Start time (Second: 100 ms)	
537	552	557	562	567	572	577	582	587	592	597	602	607	612	617	622	Md.17	Error judgment	
623																Md.18	Start history pointer at error	
(0)	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)	(13)	(14)	(15)	(pointer No.)		
624	628	632	636	640	644	648	652	656	660	664	668	672	676	680	684	Md.19	Axis in which the error occurred	
625	629	633	637	641	645	649	653	657	661	665	669	673	677	681	685	Md.20	Axis error No.	
626	630	634	638	642	646	650	654	658	662	666	670	674	678	682	686	Md.21	Axis error occurrence time (Hour: minute)	
627	631	635	639	643	647	651	655	659	663	667	671	675	679	683	687	Md.22	Axis error occurrence time (Second: 100ms)	
688																Md.23	Error history pointer	
(0)	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)	(13)	(14)	(15)	(pointer No.)		
689	693	697	701	705	709	713	717	721	725	729	733	737	741	745	749	Md.24	Axis in which the warning occurred	
690	694	698	702	706	710	714	718	722	726	730	734	738	742	746	750	Md.25	Axis warning No.	
691	695	699	703	707	711	715	719	723	727	731	735	739	743	747	751	Md.26	Axis warning occurrence time (Hour: minute)	
692	696	700	704	708	712	716	720	724	728	732	736	740	744	748	752	Md.27	Axis warning occurrence time (Second: 100ms)	
753																Md.28	Warning history pointer	

Buffer memory address			Item	Memory area
Axis 1	Axis 2	Axis 3		
800	900	1000	Md.29	Axis monitor data Monitor data
801	901	1001		
802	902	1002	Md.30	
803	903	1003		
804	904	1004	Md.31	
805	905	1005		
806	906	1006	Md.32	
807	907	1007	Md.33	
808	908	1008	Md.34	
809	909	1009	Md.35	
810	910	1010	Md.36	
811	911	1011		
812	912	1012	Md.37	
813	913	1013		
814	914	1014	Md.38	
815	915	1015		
816	916	1016	Md.39	
817	917	1017	Md.40	
818	918	1018	Md.41	
819	919	1019		
820	920	1020	Md.42	
821	921	1021		
822	922	1022	Md.43	
823	923	1023		
824	924	1024	Md.44	
825	925	1025		
826	926	1026	Md.45	
827	927	1027	Md.46	
828	928	1028	Md.47	
829	929	1029	Md.48	
830	930	1030	Md.49	
831	931	1031	Md.50	
832	932	1032	Md.51	
833	933	1033	Md.52	
834	934	1034	Md.53	
835	935	1035	Md.54	
836	936	1036	Md.55	
838 to 847	938 to 947	1038 to 1047	Md.56	

Buffer memory address			Item	Memory area
Axis 1	Axis 2	Axis 3		
848	948	1048	Md.100 Zero point return re-movement amount	Axis monitor data Monitor data
849	949	1049		
850	950	1050	Md.101 Real current value	
851	951	1051		
852	952	1052	Md.102 Deviation counter value	
853	953	1053		
854	954	1054	Md.103 Motor speed	
855	955	1055		
856	956	1056	Md.104 Motor current	
857	957	1057	Md.105 Auto tuning	
858	958	1058	Md.106 Load inertia ratio	
859	959	1059	Md.107 Position loop gain 1	
860	960	1060	Md.108 Speed loop gain 1	
861	961	1061	Md.109 Position loop gain 2	
862	962	1062	Md.110 Speed loop gain 2	
863	963	1063	Md.111 Speed integral compensation	
864 to 869	964 to 969	1064 to 1069	Md.112 Servo amplifier software No.	
870	970	1070	Md.113 Parameter error (No. 1 to 15)	
871	971	1071	Md.114 Parameter error (No. 16 to 31)	
872	972	1072	Md.115 Parameter error (No. 32 to 36)	
873	973	1073	Md.116 Servo status	
876	976	1076	Md.117 Regenerative load ratio	
877	977	1077	Md.118 Effective load ratio	
878	978	1078	Md.119 Peak load ratio	
879	979	1079	Md.121 Absolute position restoration mode	
880 to 883	980 to 983	1080 to 1083	Md.120 FeRAM access count	

Buffer memory address			Item	Memory area
Axis 1	Axis 2	Axis 3		
	1100		Cd.1 Clock data setting (hour)	System control data
	1101		Cd.2 Clock data setting (minute, second)	
	1102		Cd.3 Clock data writing	
	1103		Cd.4 Target axis	
	1104		Cd.5 Positioning data No.	
	1105		Cd.6 Write pattern	
	1106		Cd.7 Read/write request	
	1108 to 1137		Cd.8 Read/write positioning data I/F	
	1138		Cd.9 Flash ROM write request	
	1139		Cd.10 Parameter initialization request	
1150	1200	1250	Cd.11 Positioning start No.	Control data
1151	1201	1251	Cd.12 Axis error reset	
1152	1202	1252	Cd.13 Restart command	
1153	1203	1253	Cd.14 M code OFF request	
1154	1204	1254	Cd.15 New current value	
1155	1205	1255		
1156	1206	1256	Cd.16 New speed value	
1157	1207	1257		
1158	1208	1258	Cd.17 Speed change request	
1159	1209	1259	Cd.18 Positioning operation speed override	
1160	1210	1260	Cd.19 JOG speed	
1161	1211	1261		
1163	1213	1253	Cd.20 Speed/position changeover enable flag	
1164	1214	1264	Cd.21 Speed/position changeover control movement amount change register	
1165	1215	1265		
1167	1217	1267	Cd.22 Manual pulse generator enable flag	
1168	1218	1268	Cd.23 Manual pulse generator 1 pulse input magnification	
1169	1219	1269		
1170	1220	1270	Cd.24 Zero point return request flag OFF request	
1171	1221	1271	Cd.25 External start valid	
1172	1222	1272	Cd.26 Step valid flag	
1173	1223	1273	Cd.27 Step mode	
1174	1224	1274	Cd.28 Step start information	
1175	1225	1275	Cd.29 Skip command	
1176	1226	1276	Cd.30 New torque value	
1178	1228	1278	Cd.31 Positioning starting point No.	
1179	1229	1279	Cd.100 Servo OFF command	
1180	1230	1280	Cd.101 Torque output setting value	
1181	1231	1281	Cd.32 Interrupt request during continuous operation	
1184	1234	1284	Cd.33 New acceleration time value	
1185	1235	1285		
1186	1236	1286	Cd.34 New deceleration time value	
1187	1237	1287		
1188	1238	1288	Cd.35 Acceleration/deceleration time change during speed change, enable/disable selection	

Buffer memory address						Item	Memory area
Axis 1		Axis 2		Axis 3			
1300		2300		3300		Da.1 Operation pattern Da.2 Control method Da.3 Acceleration time No. Da.4 Deceleration time No.	No.1 Positioning data
1301		2301		3301		Da.9 M code/condition data No.	
1302		2302		3302		Da.8 Dwell time/JUMP destination positioning data No.	
1303		2303		3303		Not used	
1304 1305		2304 2305		3304 3305		Da.7 Command speed	
1306 1307		2306 2307		3306 3307		Da.5 Positioning address/movement amount	
1308 1309		2308 2309		3308 3309		Da.6 Arc address	
1310 to 1319		2310 to 1219		3310 to 3319		No. 2	
1320 to 1329		2320 to 2329		3320 to 3329		No. 3	
↓		↓		↓		↓	
2290 to 2299		3290 to 3299		4290 to 3299		No. 100	
4300	4350	4550	4600	4800	4850	Da.10 Shape Da.11 Start data No. Da.12 Special start command Da.13 Parameter	1st point Start block data
4301	4351	4551	4601	4801	4851	2nd point	
4302	4352	4552	4602	4802	4852	3rd point	
↓	↓	↓	↓	↓	↓	↓	
4349	4399	4599	4649	4849	4899	50th point	
4400		4650		4900		Da.14 Condition target Da.15 Condition operator	No.1 Condition data Positioning start information
4402 4403		4652 4653		4902 4903		Da.16 Address	
4404 4405		4654 4655		4904 4905		Da.17 Parameter 1	
4406 4407		4656 4657		4906 4907		Da.18 Parameter 2	
4410 to 4419		4660 to 4669		4910 to 4919		No.2	
4420 to 4429		4670 to 4679		4920 to 4929		No.3	
↓		↓		↓		↓	
4490 to 4499		4740 to 4749		4990 to 4999		No.10	

Buffer memory address			Item	Memory area		
Axis 1	Axis 2	Axis 3		Indirectly specification data	Positioning start information	Positioning data
4500	5750	5000	Start No. 8001			
4501	4751	5001	Start No. 8002			
↓	↓	↓	↓			
4549	4799	5049	Start No. 8001			
5050			Condition judgment target data of the condition data	PLC CPU memo area		
↓						
5099						
5100			Target axis	Block transmission area		
5101			Head positioning data No.			
5102			No. of read/write data			
5103			Read/write request			
5110 to 6109			Read/write block			

## INDEX

### [Number]

1-axis fixed-dimension feed control .....	9-29
1-axis linear control (ABS linear 1) .....	9-23
1-axis linear control (INC linear 1) .....	9-24
17-segment LED .....	4-3
2-SPEED TRAPEZOIDAL CONTROL (explanation of terms) .....	Appendix-32
2-axis circular interpolation control with auxiliary point designation (ABS circular interpolation) .....	9-34
2-axis circular interpolation control with auxiliary point designation (INC circular interpolation) .....	9-37
2-axis circular interpolation control with center point designation (ABS right arc, ABS left arc) .....	9-42
2-axis circular interpolation control with center point designation (INC right arc, INC left arc) .....	9-44
2-axis fixed-dimension feed control (interpolation) .....	9-31
2-axis linear interpolation control (ABS linear 2) .....	9-25
2-axis linear interpolation control (INC linear 2) .....	9-27

### [A]

ABSOLUTE ENCODER (explanation of terms) .....	Appendix-32
ABSOLUTE POSITION DETECTION SYSTEM (explanation of terms) .....	Appendix-32
ABSOLUTE SYSTEM (explanation of terms) .....	Appendix-32
ACCELERATION TIME (explanation of terms) .....	Appendix-32
Actual acceleration/deceleration time .....	5-27
AD75 .....	A-18
AD75 READY signal .....	3-13
AD75 software package .....	A-18, 2-4
ADDRESS (explanation of terms) ...	Appendix-33
AFTER mode .....	12-79
AFTER mode (explanation of terms) .....	Appendix-33
AUTO TUNING (explanation of terms) .....	Appendix-33

AUTOMATIC TRAPEZOIDAL ACCELERATION/ DECELERATION (explanation of terms) .....	Appendix-33
Absolute position restoration function .....	12-58
Absolute position restoration mode ...	9-18, 12-65
Absolute position restoration mode ( [Md.121] ) .....	5-164
Absolute position restoration mode switching function .....	12-65
Absolute position restoration selection ( [Pr.59] ) .....	5-55
Absolute system .....	9-13
Acceleration / deceleration time change program .....	6-17
Acceleration time 0 ( [Pr.8] ) .....	5-26
Acceleration time 1 ( [Pr.26] ) .....	5-36
Acceleration time 2 ( [Pr.27] ) .....	5-36
Acceleration time 3 ( [Pr.28] ) .....	5-36
Acceleration time No. ( [Da.3] ) .....	5-113
Acceleration/deceleration process selection ( [Pr.35] ) .....	5-38
Acceleration/deceleration processing function .....	12-95
Acceleration/deceleration time change during speed change, enable/disable selection ( [Cd.35] ) .....	5-182
Acceleration/deceleration time change function .....	12-53
Address ( [Da.16] ) .....	5-132
Advanced positioning control .....	10-2
Allowable circular interpolation error width ( [Pr.42] ) .....	5-42
Amplifier setting ( [Pr.101] ) ..	5-57, 66, 76, 87, 102
Applicable system .....	2-6
Applicable wire size .....	3-3
Arc address ( [Da.6] ) .....	5-118
Assembling the connector section .....	4-15
Automatic trapezoidal acceleration/deceleration processing method .....	12-96
Auto tuning ( [Md.105] ) .....	5-158
Auto tuning ( [Pr.108] ) .....	5-59, 69, 78, 89, 105
Auxiliary functions .....	12-2
Auxiliary functions specifically for machine zero point returns .....	12-4
Axis display LED .....	4-4

Axis error No. ( [Md.20] [Md.33] )	5-140, 144
Axis error occurrence time (Hour: minute)	
( [Md.21] )	5-140
Axis error occurrence time (Second: 100 ms)	
( [Md.22] )	5-140
Axis error reset ( [Cd.12] )	5-172
Axis feedrate ( [Md.37] )	5-148
Axis in which the error occurred ( [Md.19] )	5-140
Axis in which the warning occurred ( [Md.24] )	
	5-142
Axis monitor data	5-144
Axis operation status ( [Md.35] )	5-146
Axis stop signal	3-14
Axis warning No. ( [Md.25] [Md.34] )	5-142, 146
Axis warning detection	5-150
Axis warning occurrence time (Hour: minute)	
( [Md.26] )	5-142
Axis warning occurrence time (Second: 100 ms)	
( [Md.27] )	5-142

[B]

BACKLASH COMPENSATION

(explanation of terms) ..... Appendix-33

BACKUP FUNCTION (explanation of terms)

..... Appendix-33

BALL SCREW (explanation of terms)

..... Appendix-34

BIAS SPEED AT START (explanation of terms)

..... Appendix-34

BUSY (explanation of terms) ..... Appendix-34

BUSY signal ..... 3-13

Backlash compensation amount ( [Pr.12] ) ... 5-28

Backlash compensation function ..... 12-13

Basic parameters 1 ..... 5-22

Basic parameters 2 ..... 5-26

Bias speed at start ( [Pr.10] ) ..... 5-27

Block ..... 10-8

Block No. being executed ( [Md.55] ) ..... 5-156

Block start (normal start) ..... 10-8

Block transmission ..... 7-18

Block transmission area ..... 7-3

Buffer memory ..... 7-2

Buffer memory area configuration ..... 7-5

[C]

CCW (explanation of terms) ..... Appendix-34

CHANGE signal (explanation of terms)

..... Appendix-34

CIRCULAR INTERPOLATION

(explanation of terms) ..... Appendix-34

COMPOSITE SPEED (explanation of terms)

..... Appendix-34

CONTINUOUS POSITIONING CONTROL

(explanation of terms) ..... Appendix-34

CONTROL UNIT (explanation of terms)

..... Appendix-34

CP CONTROL (explanation of terms)

..... Appendix-34

CPU module ..... 2-6

CREEP SPEED (explanation of terms)

..... Appendix-35

CURRENT FEED VALUE (explanation of terms)

..... Appendix-35

CURRENT LOOP MODE (explanation of terms)

..... Appendix-35

CURRENT VALUE (explanation of terms)

..... Appendix-35

CURRENT VALUE CHANGE

(explanation of terms) ..... Appendix-35

CW (explanation of terms) ..... Appendix-35

Cable clamp ..... 4-10

Cable fixture ..... 4-12

Clock data (hour: minute) ( [Md.5] ) ..... 5-134

Clock data (second: 100 ms) ( [Md.6] ) ..... 5-134

Clock data function ..... 13-11

Clock data setting (hour) ( [Cd.1] ) ..... 5-166

Clock data setting (minute, second) ( [Cd.2] )

..... 5-166

Clock data setting program ..... 6-14

Clock data writing ( [Cd.3] ) ..... 5-166

Combination of AD75 functions ..... 3-10

Combination of main functions and auxiliary

functions ..... 3-10

Command in-position flag ..... 5-150

Command in-position function ..... 12-92

Command in-position width ( [Pr.17] ) ..... 5-30

Command speed ( [Da.7] ) ..... 5-122

Command speed ..... 1-11

Common functions ..... 3-9, 13-1

Communicating signals between AD75 and each

module ..... 1-12

Composite speed ..... 5-34

Condition data ..... 10-17

Condition operator ..... 10-18

Condition operator ( [Da.15] ) ..... 5-132

Condition start ..... 10-10



Condition target ( [Da.14] )	5-132
Conditional JUMP	9-62
Configuration and roles of AD75 memory	7-2
Confirming the current value	9-14
Confirming the installation and wiring	4-16
Compliance with EMC and Low Voltage Directives	A-14
Connecting the connector and wire	4-13
Connection connector	3-3
Connector	4-12
Connector cover	4-12
Continuous operation interrupt program	6-19
Continuous path control	9-7
Continuous positioning control	9-6
Control data area	7-3
Control functions	3-4
Control method ( [Da.2] )	5-113
Count method 1) machine zero point return	8-11
Count method 2) machine zero point return	8-14
Count method 3) machine zero point return	8-16
Creep speed ( [Pr.49] )	5-50
Current feed value	9-14
Current feed value ( [Md.29] )	5-144
Current feed value during speed control ( [Pr.22] )	5-34
Current speed ( [Md.36] )	5-146
Current value change	9-57

[D]

DATA NO. (explanation of terms)	Appendix-35
DECELERATION RATIO (explanation of terms)	Appendix-35
DECELERATION TIME (explanation of terms)	Appendix-35
DEVIATION COUNTER (explanation of terms)	Appendix-36
DOG SIGNAL (explanation of terms)	Appendix-36
DOS/V personal computer	A-18
DROOP PULSE (explanation of terms)	Appendix-36
DWELL TIME (explanation of terms)	Appendix-36
DYNAMIC BRAKE (explanation of terms)	Appendix-36

Data link system	A-18
Data setting method machine zero point return	8-18
Data transmission process	7-6
Deceleration stop	6-37
Deceleration time 0 ( [Pr.9] )	5-26
Deceleration time 1 ( [Pr.29] )	5-36
Deceleration time 2 ( [Pr.30] )	5-36
Deceleration time 3 ( [Pr.31] )	5-36
Deceleration time No. ( [Da.4] )	5-113
Detailed parameters 1	5-28
Detailed parameters 2	5-36
Details of input signals (AD75 → Programmable controller CPU)	3-13
Details of output signals (Programmable controller CPU → AD75)	3-15
Deviation counter droop pulse amount	1-11
Deviation counter value ( [Md.102] )	5-158
Disassembling the connector section	4-12
Disposal instructions	4-20
Dwell time/JUMP designation positioning data No. ( [Da.8] )	5-124
Dwell time during zero point return retry ( [Pr.58] )	5-55

[E]

ELECTROMAGNETIC BRAKE (explanation of terms)	Appendix-36
EMERGENCY STOP (explanation of terms)	Appendix-36
ENCODER (explanation of terms)	Appendix-37
ERROR CORRECTION (explanation of terms)	Appendix-37
ERROR RESET (explanation of terms)	Appendix-37
EXTERNAL REGENERATIVE BRAKE RESISTOR (explanation of terms)	Appendix-37
Effective load ratio ( [Md.118] )	5-164
Electrical specifications	3-16
Electronic gear function	12-15
Emergency stop	6-36
Encoder output pulses ( [Pr.138] )	5-100
Error and warning details	14-2
Error codes	
Detected by AD75	14-6
Detected by MR-H-B (MR-H-BN)	14-26
Detected by MR-J-B	14-34
Detected by MR-J2-03B5	14-58

Detected by MR-J2-B .....	14-42
Detected by MR-J2S-B .....	14-50
Error compensation method .....	12-15
Error detection signal .....	3-13
Error excessive alarm level ( [Pr.131] ) .....	5-65,74,85,99,109
Error history pointer ( [Md.23] ) .....	5-140
Error judgment ( [Md.11], [Md.17] ).....	5-136,138
Error reset program.....	6-20
Execution data backup function.....	13-5
External device connection connector.....	4-4
External dimension drawing.....	Appendix-2
External input signal ( [Md.39] ).....	5-148
External start signal.....	3-18
External start function selection ( [Pr.43] ).....	5-44
External start function valid setting program .....	6-14
External start valid ( [Cd.25] ).....	5-178

[F]

F (explanation of terms) .....	Appendix-37
FEEDBACK PULSE (explanation of terms) .....	Appendix-37
FIXED-DIMENSION FEED (explanation of terms) .....	Appendix-37
FLASH MEMORY (explanation of terms) .....	Appendix-37
FLS SIGNAL (explanation of terms) .....	Appendix-38
Fatal stop .....	6-36
Features of AD75 .....	1-2
Feedback pulse ( [Pr.106] ).....	5-58, 68, 88
Feedrate ( [Md.31] ) .....	5-144
FeRAM access count ( [Md.120] ).....	5-164
Flash ROM .....	7-2
Flash ROM write program.....	6-19
Flash ROM write request ( [Cd.9] ).....	5-170
Flow of all processes.....	1-14
Flow of system operation .....	1-14
Follow up process .....	12-24
Forced stop.....	6-36
Front-loading speed changeover mode .....	9-11
Functions for compensating the control .....	12-13
Functions to change the control details.....	12-43
Functions to limit the control .....	12-25

[G]

GAIN (explanation of terms) .....	Appendix-38
-----------------------------------	-------------

General configuration of program .....	6-8
General image of system.....	2-2
General specifications .....	3-2

[H]

HIGH-SPEED MACHINE ZERO POINT RETURN (explanation of terms).....	Appendix-38
High-speed machine zero point return.....	8-21
HIGH-SPEED ZERO POINT RETURN (explanation of terms).....	Appendix-38
Handling precautions .....	4-5
Hardware stroke limit function .....	12-36
High-speed zero point return.....	8-19

[I]

I/F .....	A-18
INCREMENT SYSTEM (explanation of terms) .....	Appendix-38
INCREMENTAL ENCODER (explanation of terms).....	Appendix-39
INERTIA (explanation of terms) .....	Appendix-39
INPUT TERMINAL (explanation of terms) .....	Appendix-39
INTERLOCK (explanation of terms) .....	Appendix-39
INTERPOLATION OPERATION (explanation of terms).....	Appendix-39
INVERTER (explanation of terms) .....	Appendix-39
Immediate stop .....	6-37
In speed change processing flag ( [Md.50] ) .....	5-154
In speed control flag .....	5-150
In speed limit flag ( [Md.49] ).....	5-154
In test mode flag ( [Md.1] ) .....	5-134
In-position range ( [Pr.120] ) .....	5-61, 71, 81, 93, 107
Increment system.....	9-13
Independent positioning control .....	9-5
Indirectly specification data .....	12-99
Indirectly specification function.....	12-99
Initialization program.....	6-21
Input information n .....	13-9
Input interface internal circuit.....	3-18
Intentional stop.....	6-36
Internal circuit.....	3-19
Internal current consumption .....	3-3
Internal information 1 .....	13-8

Internal information 2 .....	13-8
Interpolation axis .....	9-19
Interpolation control.....	9-19
Interpolation speed designation method ( [Pr.21] ) .....	5-34
Interrupt request during continuous operation ( [Cd.32] ).....	5-182

[J]

JOG (explanation of terms).....	Appendix-39
JOG operation .....	11-4
JOG operation acceleration time selection ( [Pr.33] ).....	5-37
JOG operation deceleration time selection ( [Pr.34] ).....	5-37
JOG operation program .....	6-16
JOG operation start time chart.....	11-11
JOG operation timing and processing times .....	11-6
JOG speed ( [Cd.19] ).....	5-176
JOG speed limit value ( [Pr.32] ).....	5-37
JOG start signal.....	3-15
JUMP command.....	9-62

[K]

kPPS (explanation of terms).....	Appendix-39
----------------------------------	-------------

[L]

LED display function .....	13-7
LIMIT SWITCH (explanation of terms) .....	Appendix-40
LINEAR INTERPOLATION (explanation of terms) .....	Appendix-40
LOW-INERTIA MOTOR (explanation of terms) .....	Appendix-40
Last executed positioning data No. ( [Md.52] ) .....	5-156
List of condition data .....	5-129
List of configuration devices.....	2-4
List of control data .....	5-166
List of devices.....	6-4
List of errors.....	14-6
List of functions.....	3-4
List of input/output signals .....	3-12
List of monitor data.....	5-134
List of parameters.....	5-22
List of positioning data .....	5-110
List of start block data .....	5-125

List of warnings .....	14-64
Load inertia ratio ( [Md.106] ).....	5-160
Load inertia ratio ( [Pr.112] ) .....	5-61, 71, 81, 90, 107
Lower limit signal .....	3-18
Low pass filter/adaptive vibration suppression control ( [Pr.125] ).....	5-97

[M]

M CODE (explanation of terms).....	Appendix-40
M code OFF request.....	12-79
M code OFF request ( [Cd.14] ).....	5-172
M code ON signal .....	3-13
M code ON signal output timing ( [Pr.19] ).....	5-32
M code ON/OFF timing.....	12-78
M code output function .....	12-78
M code/condition data No. ( [Da.9] ).....	5-122
MACHINE FEED VALUE (explanation of terms) .....	Appendix-40
MANUAL PULSE GENERATOR (explanation of terms).....	Appendix-40
MASTER AXIS (explanation of terms) .....	Appendix-41
MOVEMENT AMOUNT PER PULSE (explanation of terms).....	Appendix-41
MULTIPLYING RATE SETTING (explanation of terms).....	Appendix-41
Machine feed value.....	9-14
Machine feed value ( [Md.30] ).....	5-144
Machine resonance suppression filter 1 ( [Pr.118] ) .....	5-92
Machine zero point return .....	8-4
Machine zero point return method .....	8-5
Main functions .....	3-6
Main positioning control .....	9-2
Manual control .....	11-2
Manual pulse generator .....	A-18, 2-4
Manual pulse generator 1 pulse input magnification ( [Cd.23] ).....	5-178
Manual pulse generator enable flag ( [Cd.22] ) .....	5-178
Manual pulse generator operation .....	11-17
Manual pulse generator operation program .....	6-16
Manual pulse generator operation start time chart .....	11-24
Manual pulse generator operation timing and processing times.....	11-19

Manual pulse generator selection ( [Pr.23] )	5-35
Max. connection distance	3-3
Max. output command speed	3-3
Mechanism of positioning control	1-8
Mode switch	4-4
Module name ( [Md.2] )	5-134
Module version label	4-4
Monitor data area	7-3
Monitor output 1 offset ( [Pr.127] )	5-65, 74, 85, 98
Monitor output 2 offset ( [Pr.128] )	5-65, 85, 99
Monitor output mode selection ( [Pr.122] )	5-62, 72, 82, 95
Motor capacity ( [Pr.104] )	5-57, 67, 77, 87, 103
Motor current ( [Md.104] )	5-158
Motor speed ( [Md.103] )	5-158
Motor speed ( [Pr.105] )	5-58, 68
Motor type ( [Pr.103] )	5-57, 67, 77, 87, 102
Movement amount after near-point dog ON ( [Md.44] )	5-152
Movement amount per pulse ( [Pr.2] to [Pr.4] )	5-23
Movement amount per rotation ( [Pr.3] )	5-24
MR-H-B (MR-H-BN)	
Error codes detected by	14-26
Servo parameters for	5-56
Warning codes detected by	14-70
MR-J-B	
Error codes detected by	14-34
Servo parameters for	5-66
Warning codes detected by	14-72
MR-J2-03B5	
Error codes detected by	14-58
Precautions for using	2-9
Servo parameters for	5-102
Warning codes detected by	14-78
MR-J2-B	
Error codes detected by	14-42
Servo parameters for	5-76
Warning codes detected by	14-74
MR-J2S-B	
Error codes detected by	14-50
Precautions for using	2-9
Servo parameters for	5-86
Warning codes detected by	14-76

## [N]

NEAR-POINT DOG (explanation of terms)	Appendix-41
NEXT start	10-16
Names of each part	4-3
Near pass mode	12-20
Near pass mode function	12-20
Near pass mode selection for path control ( [Pr.44] )	5-44
Near-point dog method machine zero point return	8-7
Near-point dog method 2) machine zero point return	8-9
Near-point dog signal	3-18
Network system	A-16
New acceleration time value ( [Cd.33] )	5-182
New current value ( [Cd.15] )	5-174
New deceleration time value ( [Cd.34] )	5-182
New speed value ( [Cd.16] )	5-174
New torque value ( [Cd.30] )	5-180
No. of control axes	3-3
No. of mounted modules	2-7
No. of occupied input/output points	3-3
No. of pulses per rotation ( [Pr.2] )	5-23
No. of slots	2-7
Normal start	10-8
Notch filter selection ( [Pr.118] )	5-61, 71, 81, 107

## [O]

OPERATION PATTERN (explanation of terms)	Appendix-41
OS memory	7-2
OS type ( [Md.3] )	5-134
OS version ( [Md.4] )	5-134
OVERRIDE FUNCTION (explanation of terms)	Appendix-41
Operation monitor 1	13-8
Operation monitor 2	13-8
Operation pattern ( [Da.1] )	5-113
Operation patterns	9-4
Operation timing and processing time during speed/position changeover control	9-52
Operation timing and processing time of high-speed zero point returns	8-20
Operation type ( [Md.8], [Md.14] )	5-136, 138
Order of priority for stop process	6-38
Outline design of positioning system	1-10
Outline for restarting	1-19

Outline of installation, wiring and maintenance	4-2	Parameter error (No. 32 to 36) (Md.115)	5-162
Outline of starting	1-16	Parameter initialization program	6-19
Outline of stopping	1-18	Parameter initialization request (Cd.10)	5-170
Outline of zero point return control	8-2	Parameter setting program	6-12
Override function	12-50	Performance specifications	3-3
Override program	6-17	Peak load ratio (Md.119)	5-164
[P]		Peripheral device connection connector	4-4
P RATE (explanation of terms)	Appendix-41	Personal computer	A-18
PANCAKE MOTOR (explanation of terms)	Appendix-41	Position loop gain 1 (Md.107)	5-160
PARAMETER (explanation of terms)	Appendix-42	Position loop gain 1 (Pr.113)	5-61, 71, 81, 91, 107
PI-PID switching position droop (Pr.134)	5-65, 85, 99, 109	Position loop gain 2 (Md.109)	5-160
Programmable controller CPU	A-18	Position loop gain 2 (Pr.115)	5-61, 71, 81, 91, 107
PLC CPU memo area	7-3	Positioning address pass mode	12-20
PLC READY signal	3-15	Positioning address/movement amount (Da.5)	5-114
PLC READY signal [Y1D] ON program	6-14	Positioning complete	9-5
POSITION CONTROL (explanation of terms)	Appendix-42	Positioning complete signal	3-13
POSITION LOOP GAIN (explanation of terms)	Appendix-42	Positioning complete signal output time (Pr.41)	5-42
POSITION LOOP MODE (explanation of terms)	Appendix-42	Positioning control operation program	6-9
POSITIONING (explanation of terms)	Appendix-42	Positioning data No. (Cd.5)	5-170
POSITIONING COMPLETE SIGNAL (explanation of terms)	Appendix-42	Positioning data No. 101 to 600 setting	7-9, 18
POSITIONING DATA (explanation of terms)	Appendix-42	Positioning data No. being executed (Md.54)	5-156
POSITIONING PARAMETER (explanation of terms)	Appendix-42	Positioning data area (No. 1 to 100)	7-3
POSITIONING START (explanation of terms)	Appendix-43	Positioning data area (No. 101 to 600)	7-3
PTP Control (explanation of terms)	Appendix-43	Positioning data being executed (Md.56)	5-156
PU (explanation of terms)	Appendix-43	Positioning data setting program	6-12
PULSE (explanation of terms)	Appendix-43	Positioning operation speed override (Cd.18)	5-174
Parameter (Da.13)	5-128	Positioning program examples	6-12
Parameter 1 (Da.17)	5-133	Positioning start No. (Cd.11)	5-172
Parameter 2 (Da.18)	5-133	Positioning start No. setting program	6-14
Parameter area	7-3	Positioning start information area (No.7000)	7-3
Parameter error (No. 1 to 15) (Md.113)	5-162	Positioning start information area (No.7001 to 7010)	7-3
Parameter error (No. 16 to 31) (Md.114)	5-162	Positioning start information setting program	6-13
		Positioning start signal	3-15
		Positioning start signal input program	6-15
		Positioning starting point No. (Cd.31)	5-180

Positioning to the zero point.....	8-21
Pre-alarm data selection ( Pr.129 ).....	5-65
Precautions according to module version .....	2-7
Precautions for configuring absolute position detection system .....	2-8
Precautions for configuring system .....	2-7
Precautions for creating program .....	6-2
Precautions for installation.....	4-7
Precautions for maintenance .....	4-20
Precautions for mounting .....	4-7
Precautions for mounting base unit.....	2-7
Precautions for using 3-axis module .....	2-8
Precautions for wiring.....	4-8
Precautions	
Disposal instructions .....	4-20
according to module version .....	2-7
for creating program .....	6-2
for configuring absolute position detection system.....	2-8
for installation.....	4-7
for machine zero point return control in absolute position detection system.....	2-8
for maintenance .....	4-20
for mounting.....	4-7
for mounting base unit.....	2-7
for using 3-axis module .....	2-8
for using MR-J2-03B5 .....	2-9
for using MR-J2S-B .....	2-9
for wiring .....	4-8
Handling.....	4-5
Principle of operation .....	1-9
Process time	
JOG operation timing and processing times .....	11-6
Machine zero point return operation timing and process time .....	6-28
Manual pulse generator operation timing and processing times.....	11-19
Operation timing and processing time during speed/position changeover control .....	9-52
Operation timing and processing time of high- speed zero point returns .....	8-20
Position control operation timing and process time .....	6-29
Program details .....	6-21
Program examples	
Acceleration / deceleration time change program.....	6-17
Clock data setting program .....	6-14

Continuous operation interrupt program ...	6-19
Error reset program.....	6-20
External start function valid starting program .....	6-14
Flash ROM write program.....	6-19
JOG operation program .....	6-16
Manual pulse generator operation program .....	6-16
Override program .....	6-17
PLC READY signal [Y1D] ON program ...	6-14
Parameter initialization program.....	6-19
Parameter setting program.....	6-12
Positioning start information setting program .....	6-13
Positioning data setting program .....	6-12
Positioning start No. setting program .....	6-14
Positioning start signal input program .....	6-15
Reset program .....	6-16
Restart program .....	6-19
Servo ON/OFF program .....	6-14
Skip program .....	6-18
Speed change program .....	6-17
Step operation program .....	6-18
Stop program.....	6-20
Teaching program .....	6-18
Torque change program .....	6-17
Zero point return request OFF program ...	6-13
Pulse encoder .....	1-11
Purpose and applications of positioning control .....	1-6
[R]	
REAL-TIME AUTO TUNING (explanation of terms).....	Appendix-43
REFERENCE AXIS SPEED (explanation of terms).....	Appendix-43
REGENERATIVE BRAKE OPTION (explanation of terms).....	Appendix-43
RLS SIGNAL (explanation of terms) .....	Appendix-43
ROTARY TABLE (explanation of terms) .....	Appendix-43
RS-422 cable .....	2-4
Read/write positioning data I/F ( Cd.8 ).....	5-170
Read/write request ( Cd.7 ) .....	5-168
Real current value ( Md.101 ).....	5-158
Reference axis .....	9-19
Reference axis speed .....	5-34
Regenerative brake resistor ( Pr.102 )	

.....	5-57, 67, 77, 87
Regenerative load ratio (Md.117).....	5-164
Relatively safe stop .....	6-36
Remote I/O station .....	2-6
Repeat counter (Md.53).....	5-156
Repeated start (FOR condition).....	10-15
Repeated start (FOR loop).....	10-14
Reset program.....	6-16
Restart command (Cd.13).....	5-172
Restart operation.....	6-33
Restart program .....	6-19
Rotation direction (Pr.107)	
.....	5-59, 68, 78, 89, 104
<b>[S]</b>	
S-CURVE ACCELERATION/DECELERATION (explanation of terms) .....	Appendix-43
S-curve acceleration/deceleration processing method.....	12-97
S-curve ratio (Pr.36).....	5-39
SERVO LOCK (explanation of terms) .....	Appendix-44
SERVO ON (explanation of terms) .....	Appendix-44
SERVOMOTOR (explanation of terms) .....	Appendix-44
SETTING UNIT (explanation of terms) .....	Appendix-44
SKIP FUNCTION (explanation of terms) .....	Appendix-44
SLAVE AXIS (explanation of terms) .....	Appendix-44
SPEED CHANGEOVER CONTROL (explanation of terms) .....	Appendix-44
SPEED CONTROL (explanation of terms) .....	Appendix-44
SPEED INTEGRAL COMPENSATION (explanation of terms) .....	Appendix-44
SPEED LIMIT VALUE (explanation of terms) .....	Appendix-44
SPEED LOOP GAIN (explanation of terms) .....	Appendix-45
SPEED LOOP MODE (explanation of terms) .....	Appendix-45
SPEED/POSITION CONTROL CHANGEOVER MODE (explanation of terms) .....	Appendix-45
SSCNET .....	A-18, 2-4
START COMPLETE (explanation of terms)	

.....	Appendix-45
STARTING AXIS .....	Appendix-45
STATUS (explanation of terms) .....	Appendix-45
STEP FUNCTION (explanation of terms) .....	Appendix-45
STOP SETTling TIME (explanation of terms) .....	Appendix-45
STOP SIGNAL (explanation of terms) .....	Appendix-45
STROKE (explanation of terms).....	Appendix-45
STROKE LIMIT (explanation of terms) .....	Appendix-43
SUDDEN STOP (explanation of terms) .....	Appendix-46
Servo OFF command (Cd.100).....	5-182
Servo ON/OFF function .....	12-38
Servo amplifier corresponding SSCNET .....	1-10, 2-4
Servo amplifier software No. (Md.112) .....	5-160
Servo parameters	
for MR-H-B (MR-H-BN).....	5-56
for MR-J-B .....	5-66
for MR-J2-03B5 .....	5-102
for MR-J2-B .....	5-76
for MR-J2S-B.....	5-86
Servo parameter transmission setting (Pr.149) .....	5-100
Servo response setting (Pr.109) .....	5-59, 69, 79, 89, 105
Servo series (Pr.100).....	5-57, 66, 76, 87, 102
Servo starting up.....	4-16
Servo status (Md.116).....	5-162
Servo System Controller.....	A-18
Setting data .....	5-2
Setting for the movement amount after near-point dog ON (Pr.52).....	5-52
Setting for the restart allowable range when servo OFF to ON (Pr.150) .....	5-44
Setting items for condition data .....	5-13
Setting items for positioning data .....	5-10
Setting items for positioning parameters.....	5-5
Setting items for start block data.....	5-12
Setting items for zero point return parameters .....	5-7
Setting positioning data No.101 to 600 data .....	7-9, 18
Setting the positioning data .....	9-22
Setting the torque limit function .....	12-29

Shape (Da.10) .....	5-128	.....	5-61, 71, 81, 91, 107
Signal layout for connector .....	3-16	Speed loop gain 2 (Md.110) .....	5-160
Signal name.....	3-13	Speed loop gain 2 (Pr.116)	.....
Signal		.....	5-61, 71, 81, 91, 107
AD75 READY signal.....	3-13	Speed integral compensation (Md.111).....	5-160
Axis stop signal.....	3-15	Speed integral compensation (Pr.117)	.....
BUSY signal.....	3-13	.....	5-61, 71, 81, 91, 107
Error detection signal .....	3-13	Speed limit function .....	12-25
JOG start signal .....	3-15	Speed limit value (Pr.7) .....	5-26
M code ON signal.....	3-13	Speed/position changeover control.....	9-50
PLC READY signal.....	3-15	Speed/position changeover control movement	
Positioning complete signal.....	3-13	amount change register (Cd.21).....	5-176
Positioning start signal .....	3-15	Speed/position changeover control positioning	
Start complete signal .....	3-13	amount (Md.38) .....	5-148
Simultaneous start.....	10-12	Speed/position changeover enable flag (Cd.20)	.....
Single module test.....	4-17	.....	5-176
Size selection for acceleration/deceleration time		Speed/position changeover latch flag .....	5-150
(Pr.25) .....	5-35	Speed/position changeover signal .....	3-19
Skip command (Cd.29) .....	5-180	Spiral interpolation .....	9-41
Skip function .....	12-75	Standard speed changeover mode.....	9-10
Skip program .....	6-18	Start axis (Md.7, Md.13) .....	5-136, 138
Software stroke limit lower limit value (Pr.14)		Start block data .....	10-7
.....	5-29	Start complete signal .....	3-13
Software stroke limit selection (Pr.15).....	5-30	Start data No. (Da.11).....	5-128
Software stroke limit upper limit value (Pr.13)		Start data pointer being executed (Md.51)	.....
.....	5-29	.....	5-156
Software stroke limit valid/invalid setting (Pr.16)		Start details setting program.....	6-22
.....	5-30	Start during error history .....	14-80
Solenoid brake output (Pr.121)		Start positioning data No. setting value (Md.48)	.....
.....	5-61, 81, 93, 107	.....	5-154
Special start command (Da.12) .....	5-128	Start program .....	6-23
Special start data command code setting value		Start program for advanced positioning control	
(Md.46) .....	5-154	.....	10-20
Special start data command parameter setting		Start time (Hour: minute) (Md.9, Md.15)	.....
value (Md.47) .....	5-154	.....	5-136, 138
Specifications of input/output signals .....	3-12	Start time (Second:100 ms) (Md.10, Md.16)	.....
Speed change 0 flag .....	5-150	.....	5-136, 138
Speed change function .....	12-43	Start time chart for positioning control using	
Speed change program .....	6-17	indirectly specification function .....	12-103
Speed change request (Cd.17).....	5-174	Start time chart for positioning to the zero point	
Speed changeover mode (Pr.20) .....	5-33	.....	8-22
Speed control .....	9-47	Starting history pointer (Md.12).....	5-136
Speed designation during zero point shift		Starting history pointer at error (Md.18).....	5-138
(Pr.57) .....	5-55	Status (Md.40) .....	5-150
Speed differential compensation (Pr.136)		Step function .....	12-70
.....	5-65, 74, 85, 99, 109	Step mode.....	12-71
Speed loop gain 1 (Md.108) .....	5-160	Step mode (Cd.27).....	5-180
Speed loop gain 1 (Pr.114)		Step operation program.....	6-18



Step start information .....	12-71
Step start information ( [Cd.28] ) .....	5-180
Step valid flag ( [Cd.26] ) .....	5-178
Stop .....	10-13
Stop cause .....	6-36
Stop group 1 sudden stop selection ( [Pr.38] ) .....	5-41
Stop group 2 sudden stop selection ( [Pr.39] ) .....	5-41
Stop group 3 sudden stop selection ( [Pr.40] ) .....	5-41
Stop process .....	6-36
Stop program .....	6-20
Stop signal .....	3-18
Sudden stop .....	6-37
Sudden stop deceleration time ( [Pr.37] ) .....	5-40
System control data .....	5-166
System monitor data .....	5-134
[T]	
TEACHING (explanation of terms) .....	Appendix-46
TEACHING UNIT (explanation of terms) .....	Appendix-46
TORQUE CONTROL (explanation of terms) .....	Appendix-46
TORQUE LOOP MODE (explanation of terms) .....	Appendix-46
TORQUE RIPPLE (explanation of terms) .....	Appendix-46
TURNTABLE (explanation of terms) .....	Appendix-46
Target axis ( [Cd.4] ) .....	5-166
Target speed ( [Md.42] ) .....	5-152
Target value ( [Md.41] ) .....	5-150
Teaching function .....	12-82
Teaching program .....	6-18
Teaching unit .....	2-4
Time chart for changing the speed from the programmable controller CPU .....	12-46
Time chart for changing the speed using an external start signal .....	12-48
Time chart for changing the speed using the override function .....	12-51
Time chart for restarting .....	6-35
Time chart for starting high-speed zero point return .....	6-26

Time chart for starting machine zero point return .....	6-25
Time chart for starting main positioning control .....	6-27
Time chart for starting speed/position changeover control .....	6-27
Time chart for starting with external start signal .....	6-30
Time chart	
for positioning control using indirectly specification function .....	12-103
for positioning to the zero point .....	8-22
for restarting .....	6-35
for starting high-speed zero point return ...	6-26
for starting machine zero point return .....	6-25
for starting main positioning control .....	6-27
for starting speed/position changeover control .....	6-27
for starting with external start signal .....	6-30
Torque change function .....	12-56
Torque change program .....	6-17
Torque limit function .....	12-27
Torque limit setting value ( [Pr.18] ) .....	5-31
Torque limit stored value ( [Md.45] ) .....	5-152
Torque output setting value ( [Cd.101] ) .....	5-182
Types and roles of control data .....	5-18
Types and roles of monitor data .....	5-14
Types of data .....	5-2
Types of errors .....	14-2
Types of stop processes .....	6-37
Types of warnings .....	14-4
[U]	
UNIT SETTING (explanation of terms) .....	Appendix-46
Unconditional JUMP .....	9-62
Unit magnification ( [Pr.4] ) .....	5-24
Unit setting ( [Pr.1] ) .....	5-22
Upper limit signal .....	3-18
[V]	
Valid M code ( [Md.32] ) .....	5-144
[W]	
WARNING (explanation of terms) .....	Appendix-46
WITH MODE (explanation of terms) .....	Appendix-46

WITH mode .....	12-78	Zero point return method (2): Near-point dog method 2) .....	8-9
WORM GEAR (explanation of terms) .....	Appendix-47	Zero point return method (3): Count method 1) .....	8-11
Wait start.....	10-11	Zero point return method (4): Count method 2) .....	8-14
Warning codes		Zero point return method (5): Count method 3) .....	8-16
Detected by AD75 .....	14-64	Zero point return method (6): Data setting method .....	8-18
Detected by MR-H-B (MR-H-BN).....	14-70	Zero point return method (Pr.45).....	5-45
Detected by MR-J-B .....	14-72	Zero point return re-movement amount (Md.100) .....	5-158
Detected by MR-J2-03B5.....	14-78	Zero point return request .....	8-2
Detected by MR-J2-B .....	14-74	Zero point return request OFF program.....	6-13
Detected by MR-J2S-B .....	14-76	Zero point return request flag .....	5-150
Warning history pointer (Md.28).....	5-142	Zero point return request flag OFF request (Cd.24).....	5-178
Wiring the external device connection connector pins .....	4-12	Zero point return retry (Pr.50).....	5-51
Workpiece.....	A-18	Zero point return retry function .....	12-4
Write pattern (Cd.6).....	5-168	Zero point return speed (Pr.48) .....	5-49
Writing to the flash ROM.....	13-6	Zero point return torque limit value (Pr.56) .....	5-55
[X]		Zero point shift amount (Pr.55).....	5-54
XY TABLE (explanation of terms)....	Appendix-47	Zero point shift function .....	12-10
[Z]		Zero speed (Pr.130).....	5-65, 74, 85, 99, 109
ZERO POINT (explanation of terms) .....	Appendix-47		
ZERO POINT RETURN METHOD (explanation of terms) .....	Appendix-47		
ZERO POINT RETURN PARAMETER (explanation of terms) .....	Appendix-47		
ZERO POINT RETURN REQUEST (explanation of terms) .....	Appendix-47		
ZERO POINT SHIFT FUNCTION (explanation of terms) .....	Appendix-47		
ZERO POINT SIGNAL (explanation of terms) .....	Appendix-47		
Zero point absolute position (Md.43) .....	5-152		
Zero point absolute position overflow/underflow flag .....	5-150		
Zero point address (Pr.47).....	5-49		
Zero point return acceleration time selection (Pr.53).....	5-53		
Zero point return basic parameters .....	5-45		
Zero point return complete flag.....	5-150		
Zero point return deceleration time selection (Pr.54).....	5-53		
Zero point return detailed parameters .....	5-52		
Zero point return direction (Pr.46).....	5-48		
Zero point return method (1): Near-point dog method.....	8-7		

# WARRANTY

Please confirm the following product warranty details before using this product.

## 1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

### **[Gratis Warranty Term]**

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place.

Note that after manufacture and shipment from Mitsubishi, the maximum distribution

period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months.

The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

### **[Gratis Warranty Range]**

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
  1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
  2. Failure caused by unapproved modifications, etc., to the product by the user.
  3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
  4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
  5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
  6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
  7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

## 2. Onerous repair term after discontinuation of production

(1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued.

Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.

(2) Product supply (including repair parts) is not available after production is discontinued.

## 3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

## 4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation of damages caused by any cause found not to be the responsibility of Mitsubishi, loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products, special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products, replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

## 5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

Microsoft Windows, Windows NT are registered trademarks of Microsoft Corporation in the United States and other countries.  
Other company and product names herein may be either trademarks or registered trademarks of their respective owners.



# A1SD75M1/M2/M3, AD75M1/M2/M3 Positioning Module

## User's Manual

MODEL	A1SD75M/AD75M-U-E
MODEL CODE	13J870
IB(NA)-66715-J(1109)MEE	



HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.